




6900005

**Assembly
instructions**

**LANGLEY PU
HIGH BACK
OFFICE CHAIR**

Hardware Identification



X5


Part Identification



X1




X1




X1


1

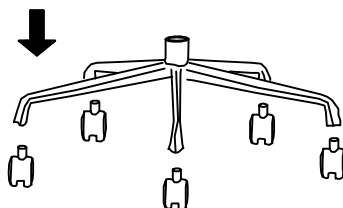

2

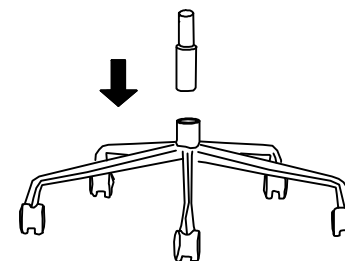

3

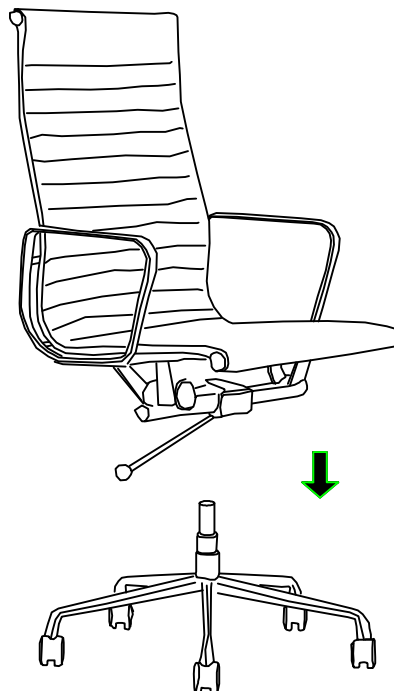

4

