
For Style 1103P40-36 Assembly Instruction Sheet #IS-1103P40-36


I Requirect: Flathead screwdhver, Pfallips screwdhver, pilers, wire outliers, wire afrippers, electrical tops, eating glasses.
Sourrect (86) (20V LED *66W DIMANSLE (4000K)
satisf Assentibly Times: 20-50 minuties
refiler to flathead to the proof of parts before beginning installation. Check package content list and diagrams below to be sure all parts are refully and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are refully and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are


Marnings and Cautions

Turn off electricity at circuit breaker or main tuee box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the focuse. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

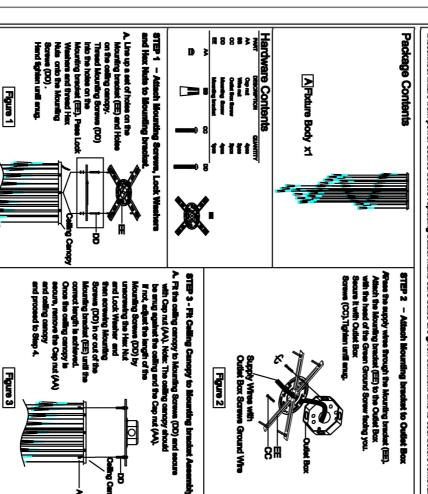



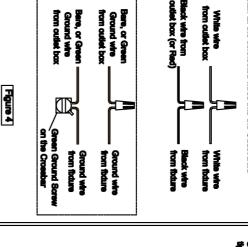



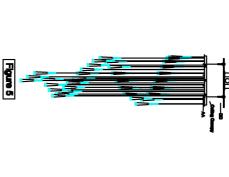

℥

2 of 2