




Assembly Intruction

INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING


NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

1

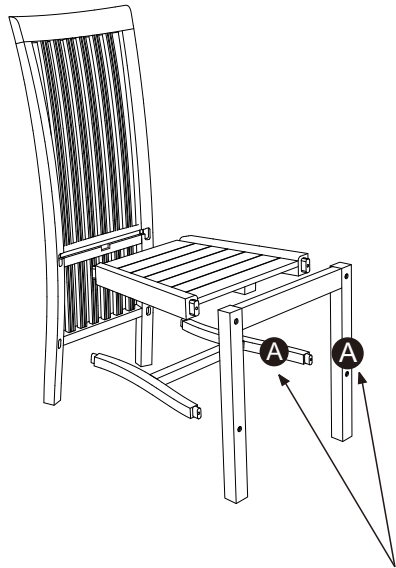


**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

2

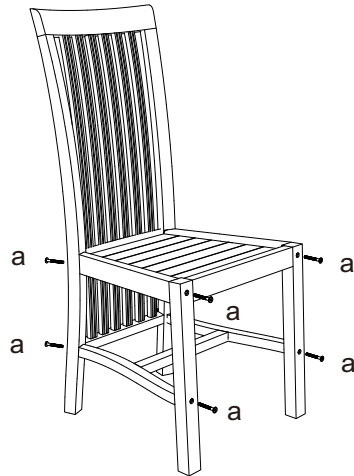

3

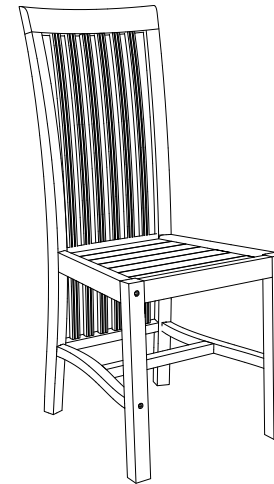


Code

KBA1DC

Hardware

a



BOLT 2' (8 pcs)

Tool



Socket Wrench 4mm

Total Section

4 Section

Make sure to use Gorilla Glue (Included)
on all wood joints before assembly