





Item # : C24SPSTRW  
Assembly Instructions

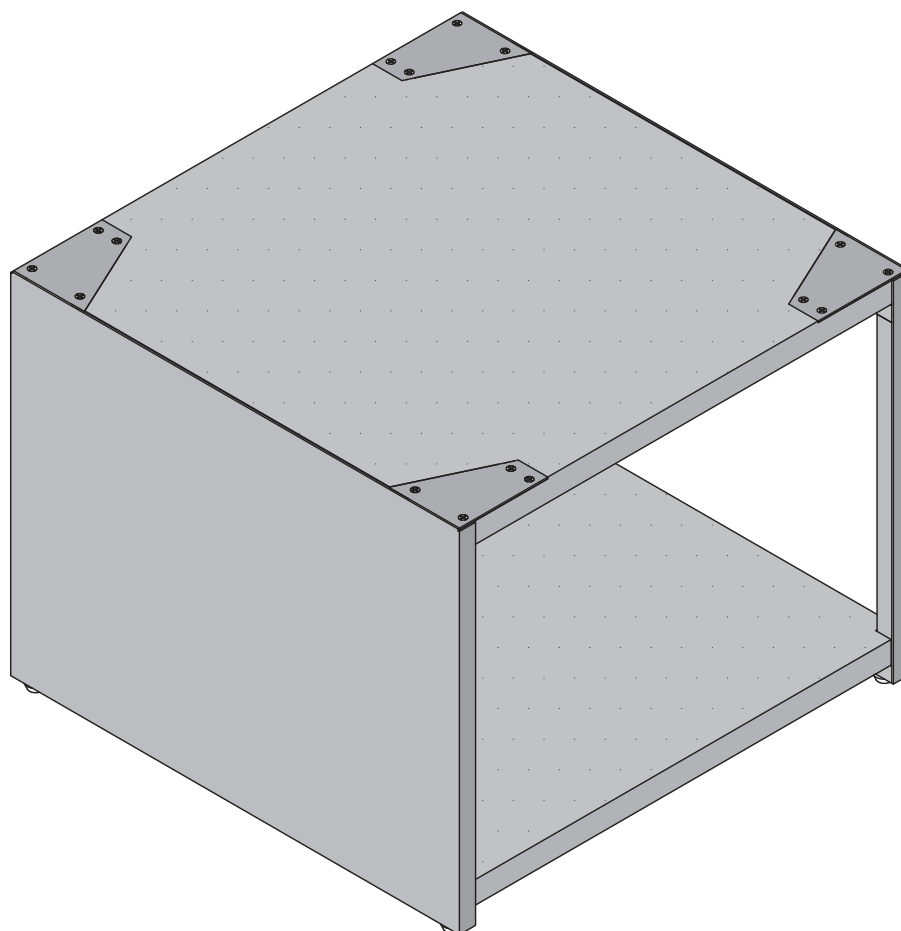







*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **[www.walkeredison.com](http://www.walkeredison.com)***


Revised 03/2017

# Parts List

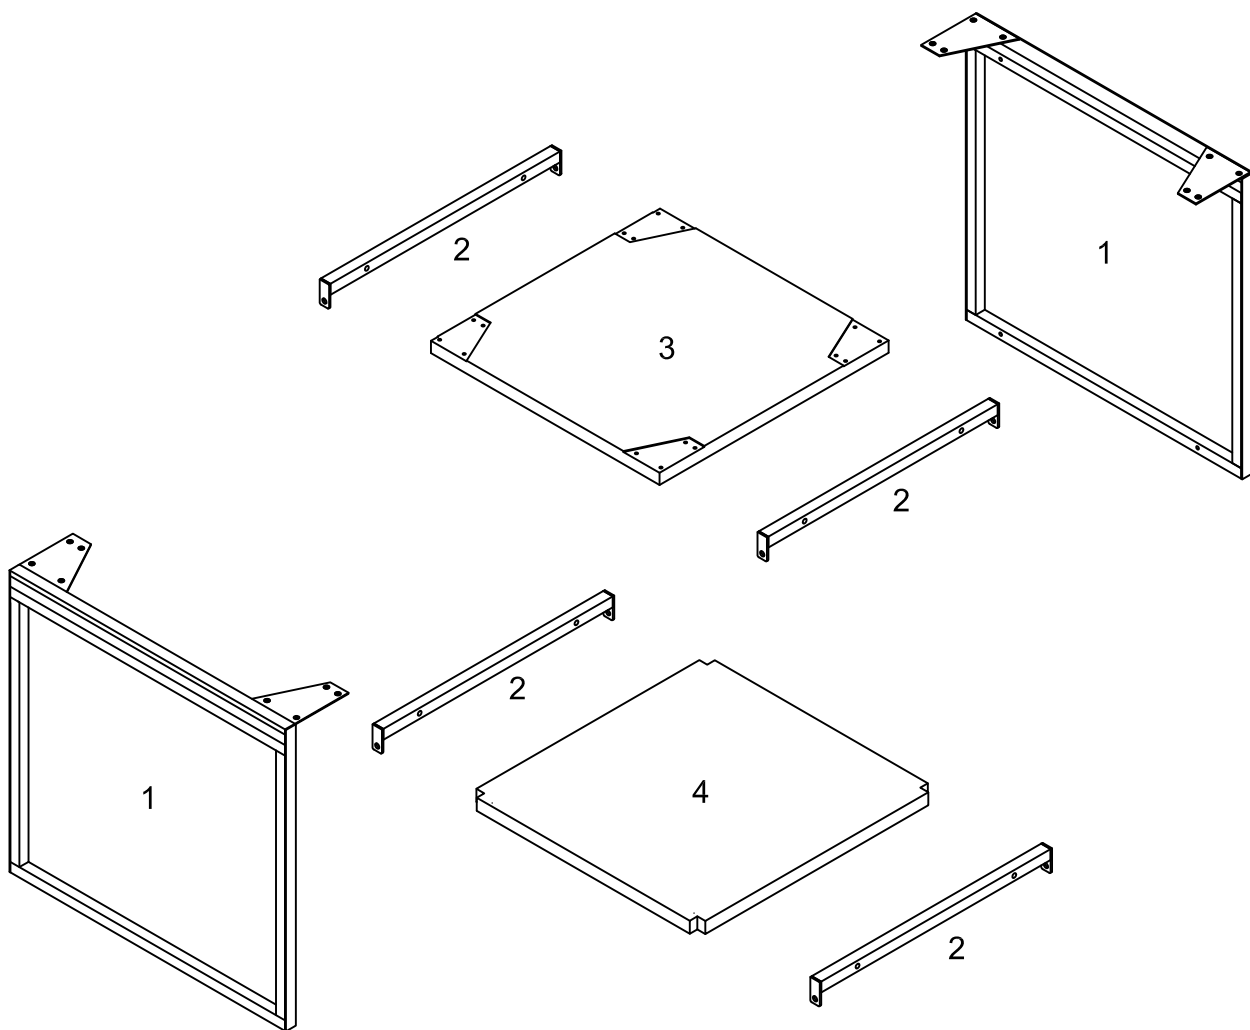

# Hardware List


A		Ø1/4"*5/8"	Bolt	8 pcs
B		Ø1/4"*1-1/4"	Bolt	8 pcs
C		M4*13mm	Screw	16 pcs
D		Ø16	Washer	16 pcs
E		Ø1/4"	Feet	4 pcs
F		M4*4mm	Wrench	1 pc

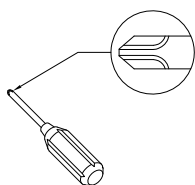

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

## Step 1

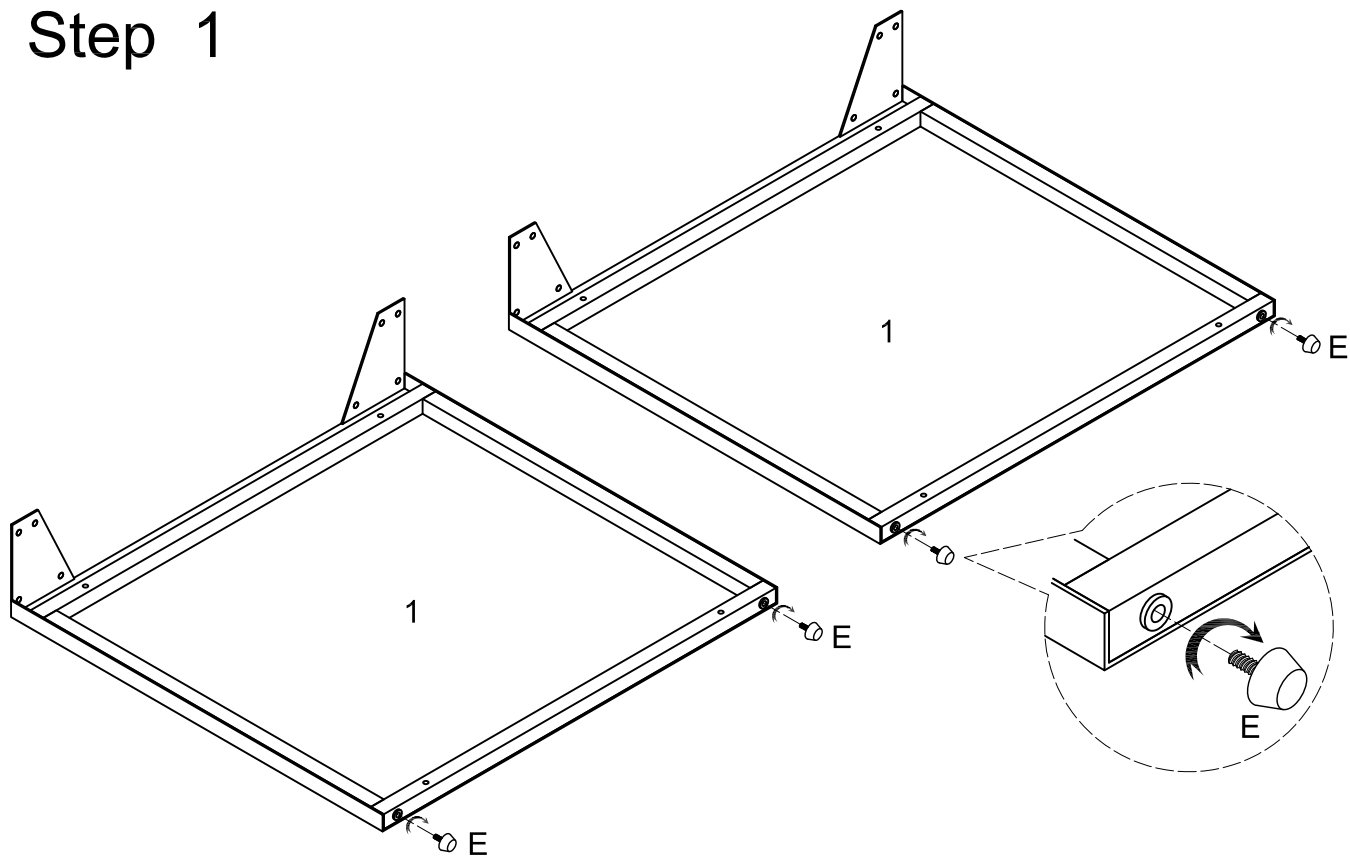


Screw foot pads (E) into frames (1) as shown in the diagram.

## Step 2

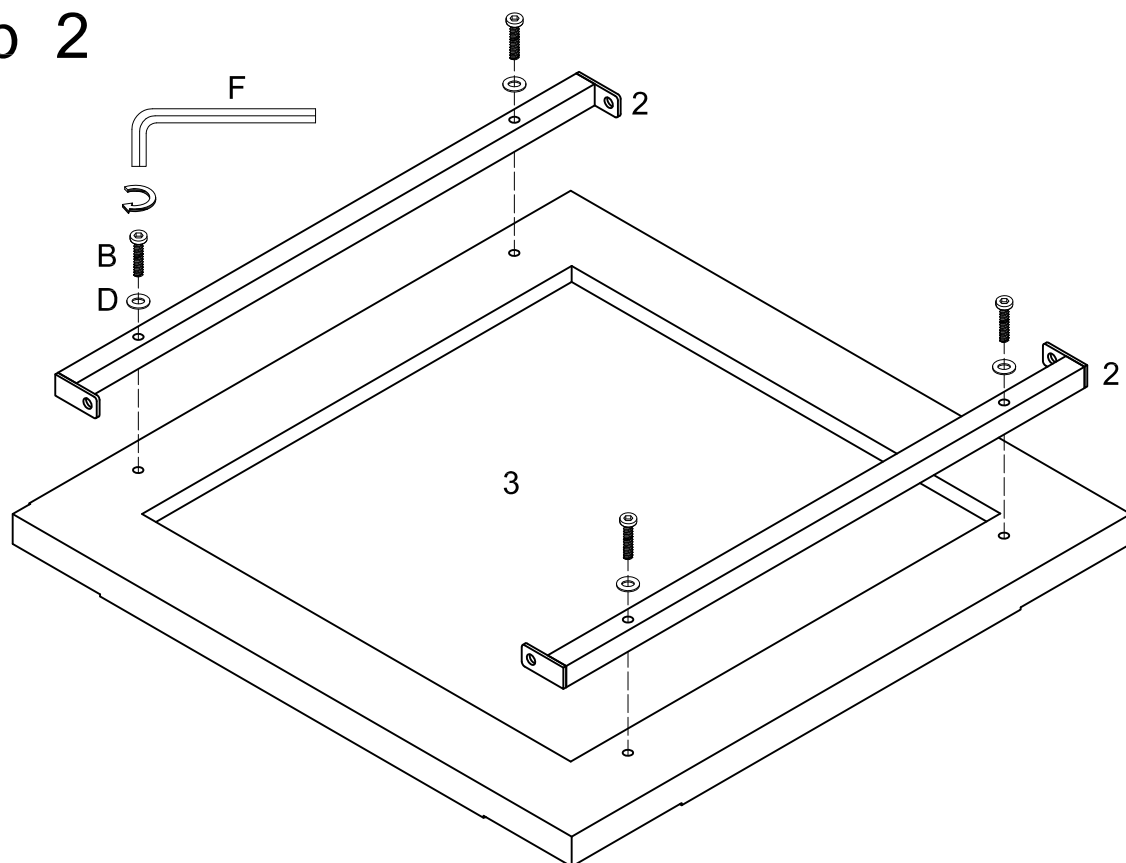


Attach part (2) to part (3) using bolts (B) and washers (D) as shown.

## Step 3

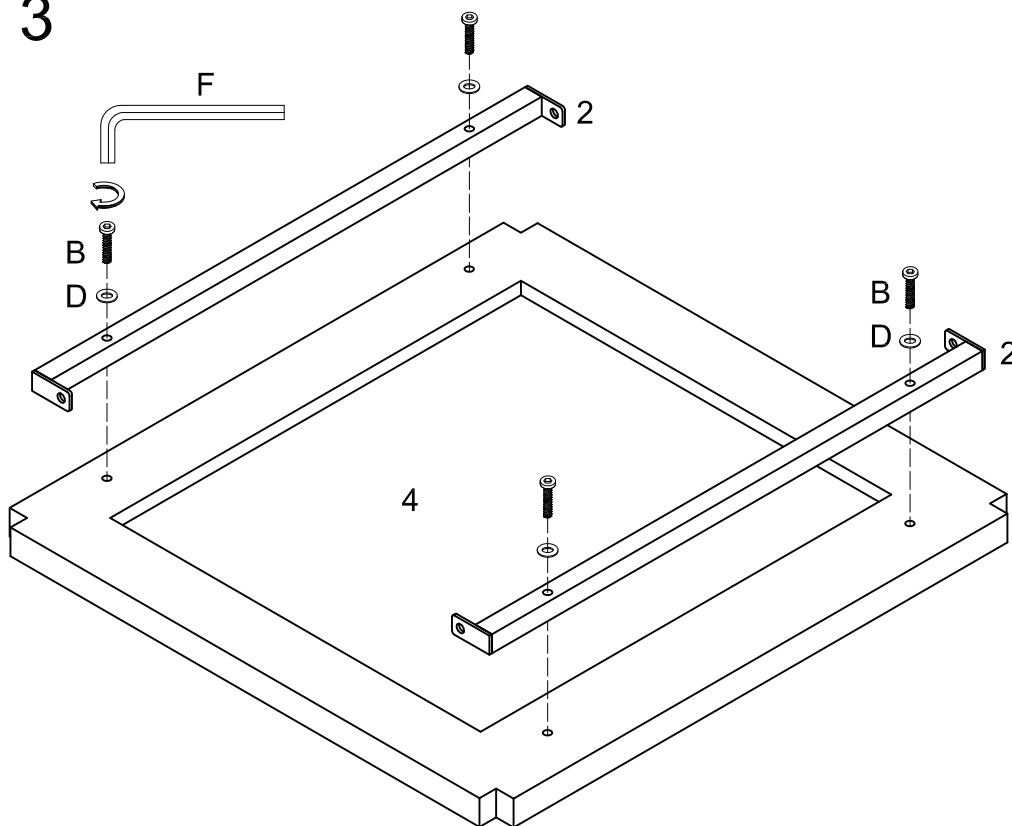


Attach part (2) to part (4) using bolts (B) and washers (D) as shown.

## Step 4

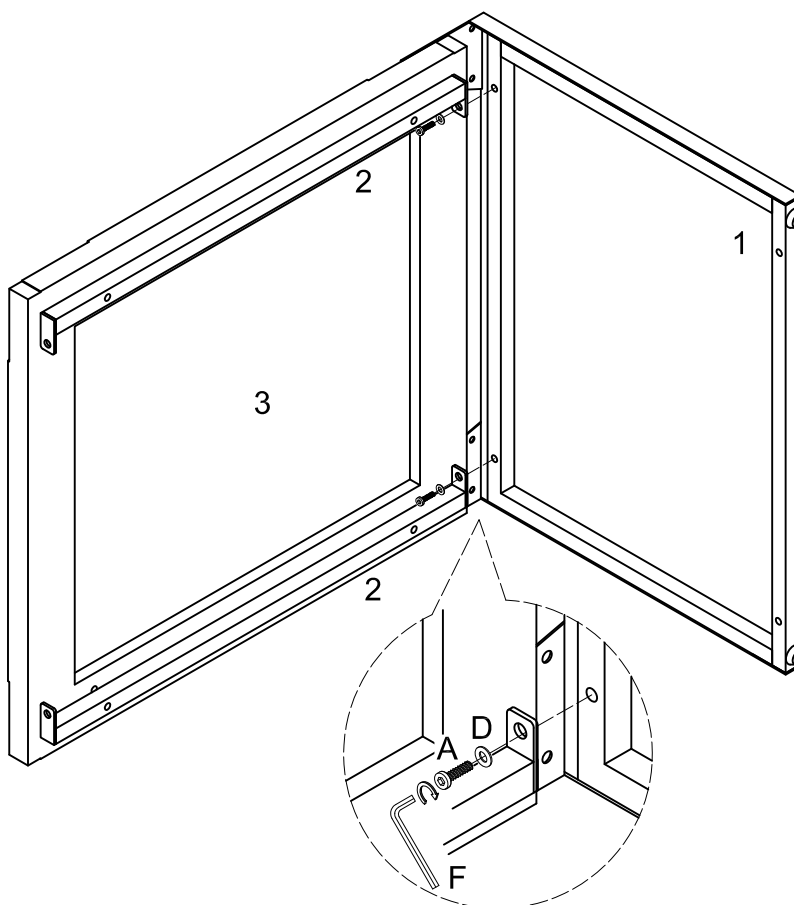


Join top panel (3) to part (1) using bolts (A) and washers (D).

## Step 5

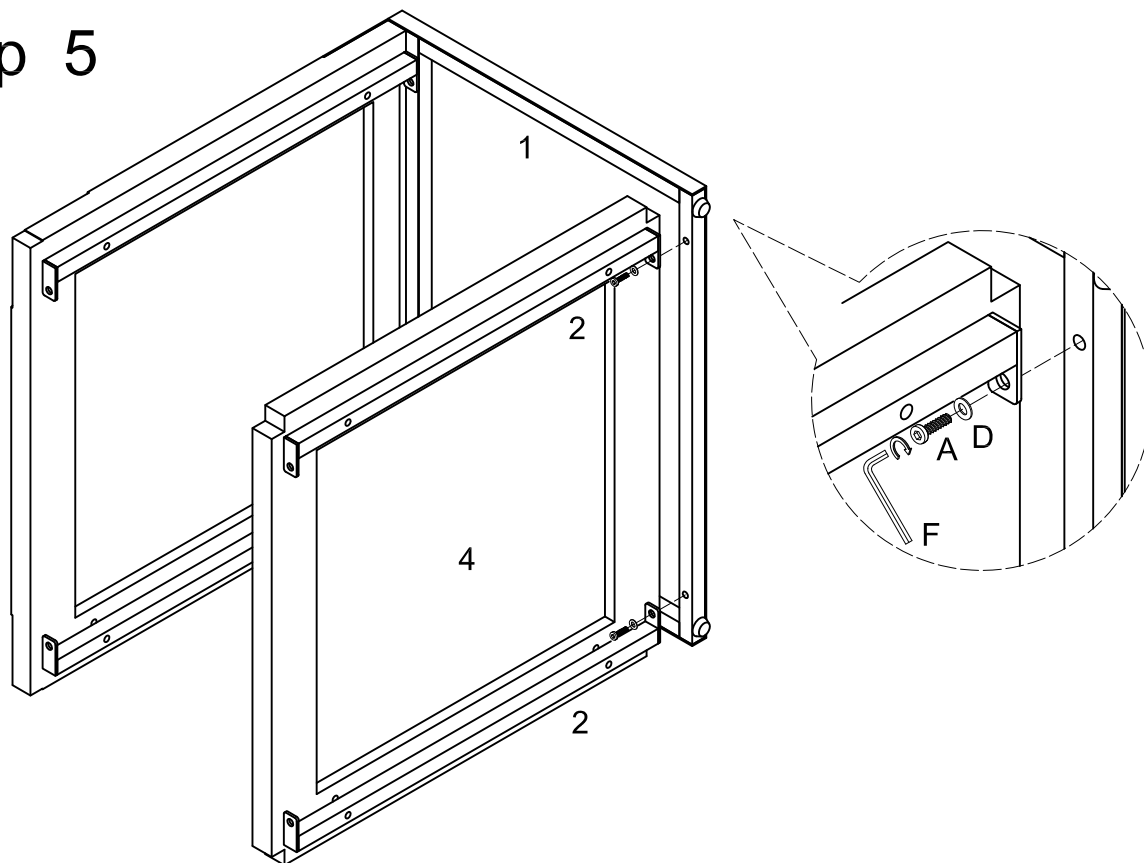


Join lower panel (4) to part (1) using bolts (A) and washers (D).

## Step 6

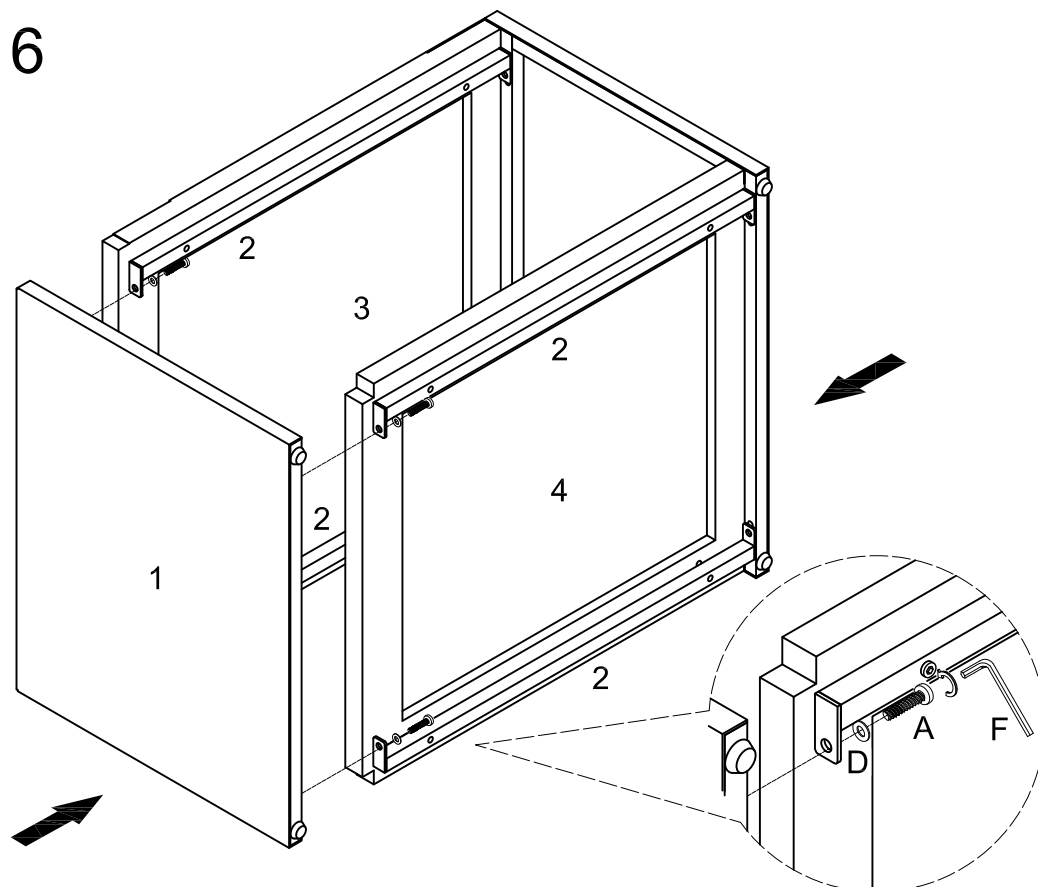


Attach part (1) to frame assembly using bolts (A) and washers (D).

## Step 7

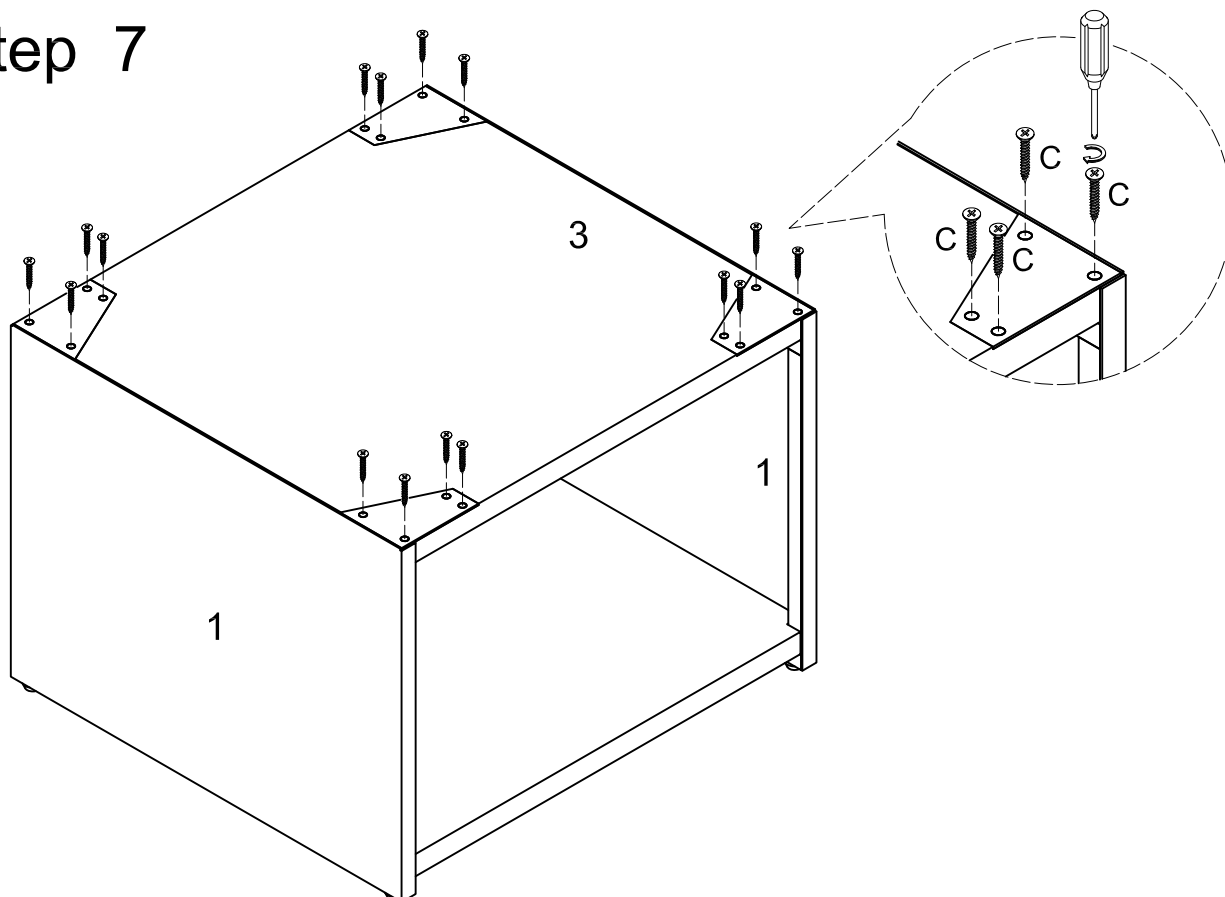

Secure top panel (3) at the metal caps using screws (C) as shown in the diagram

## Step 8

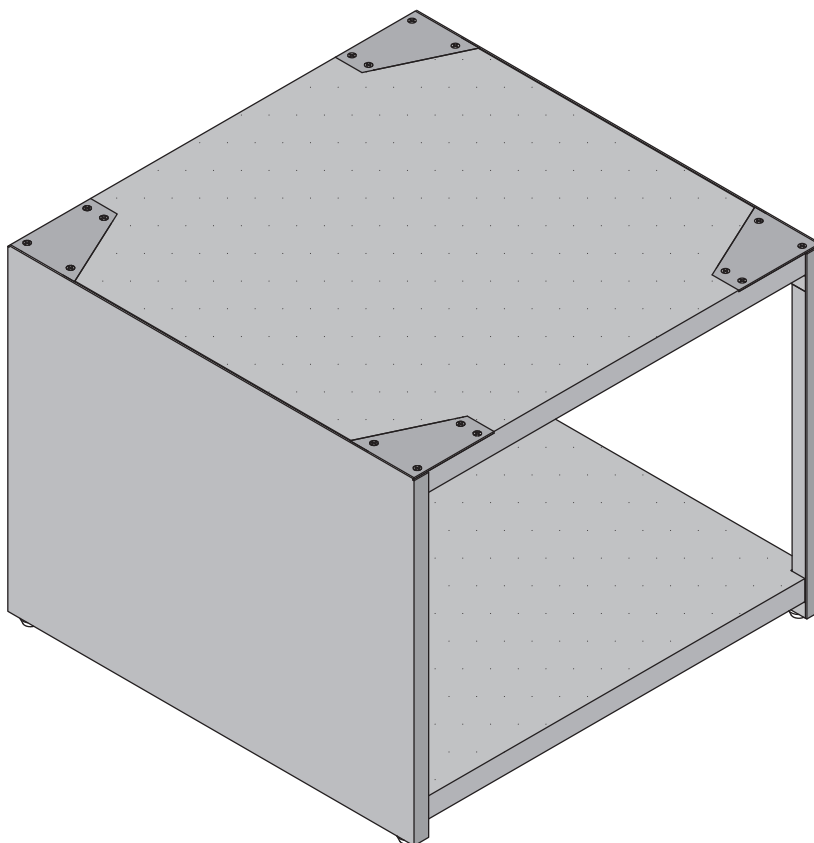

## Final Assembly