


ASSEMBLY INSTRUCTIONS FOR LOUISE FLOOR LAMP

6285-01 1.0

Model # 6285-01

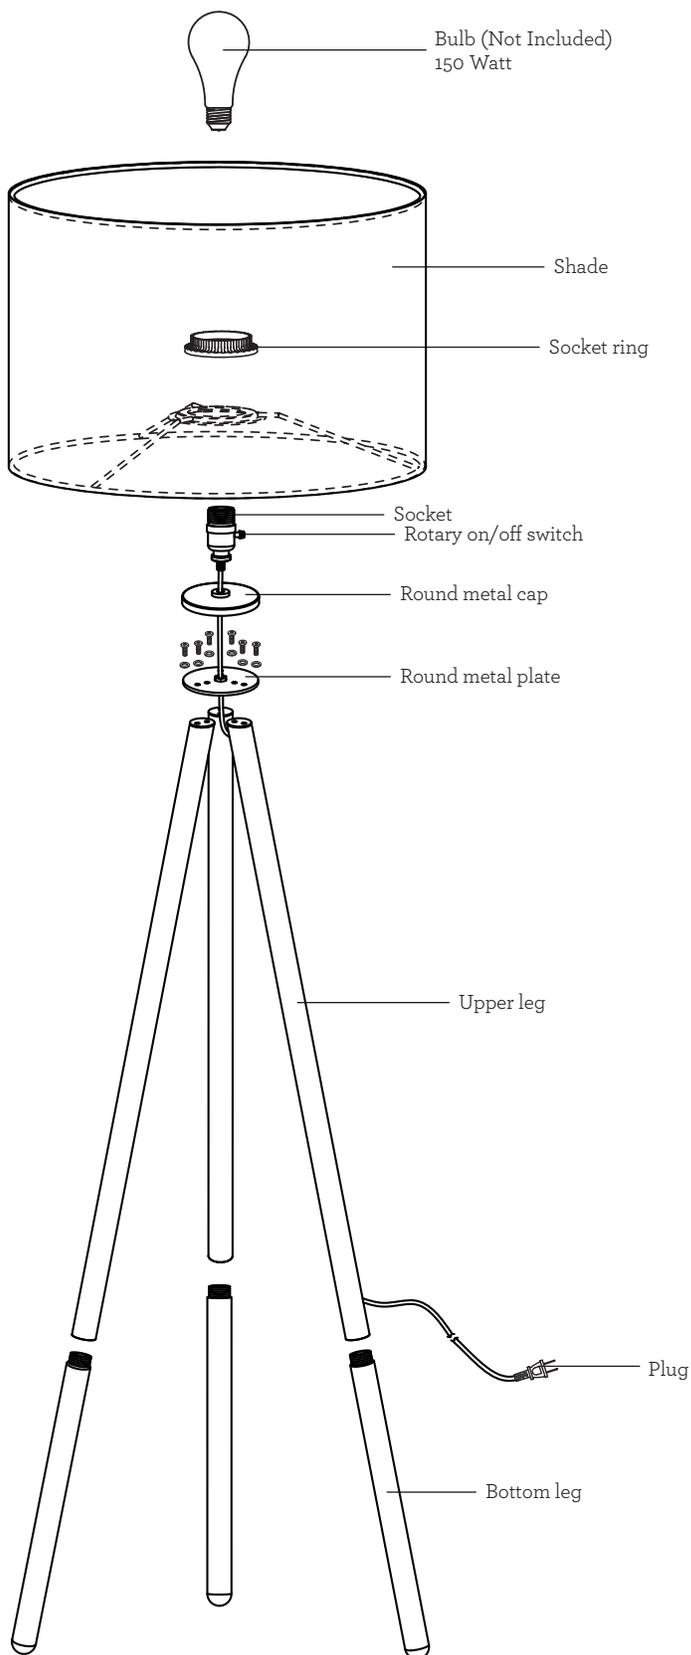

1. Assemble the round metal plate and upper leg with two screws and two washers then screw the bottom leg into the upper leg. Do the same to other two legs.
2. After three legs are fixed with round metal plate, use the round metal cap to cover the round metal plate.
3. Screw the socket into the round metal cap.
4. Place the uno on socket then screw on socket ring to fix the shade.
5. Install the bulb (Not Included) by screwing it into the socket. Refer to the label on the lamp socket for maximum wattage information.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 150Watt

PARTS DIAGRAM:

- (6) Screws
- (6) Washers
- (1) Allen key

ADESSO®

21 Penn Plaza Suite 909 New York, NY 10001
Tel: (212) 736 4440 Fax: (212) 736 4806
www.adessohome.com