





ASSEMBLY INSTRUCTIONS


NO.	PARTS	QTY	NO.	PARTS	QTY	NO.	PARTS	QTY
a	 M8*65	8	b	 Φ8	8	c	 Φ8	8
A		1	F		2	E		1
B		8	R		2			

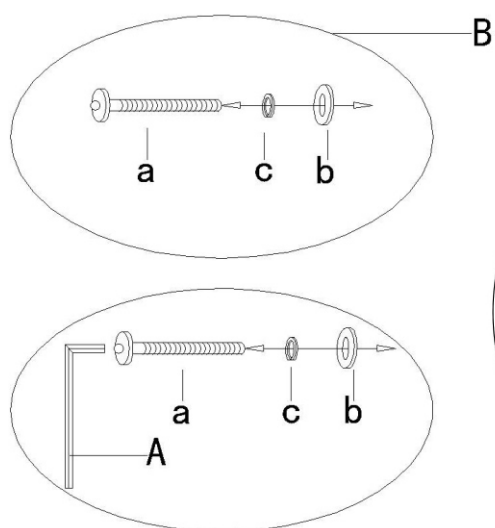

STEP 1

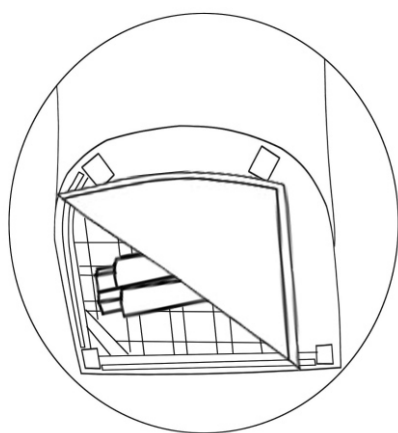


STEP 2

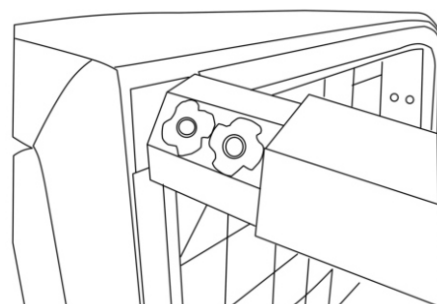


T-nut need to face the corner


STEP 3

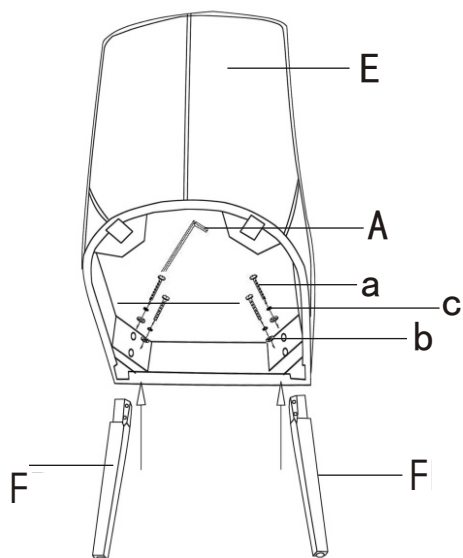

STEP 4

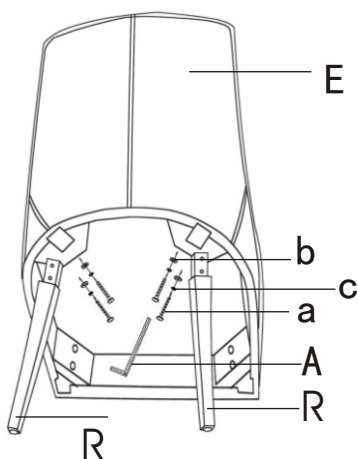

STEP 5

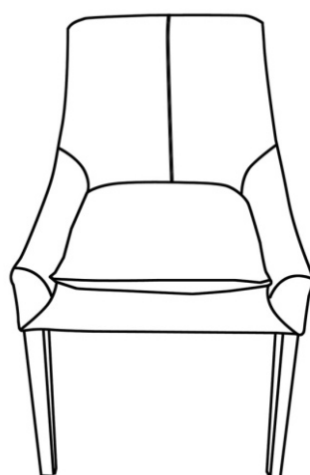

STEP 6