
## DAYBED

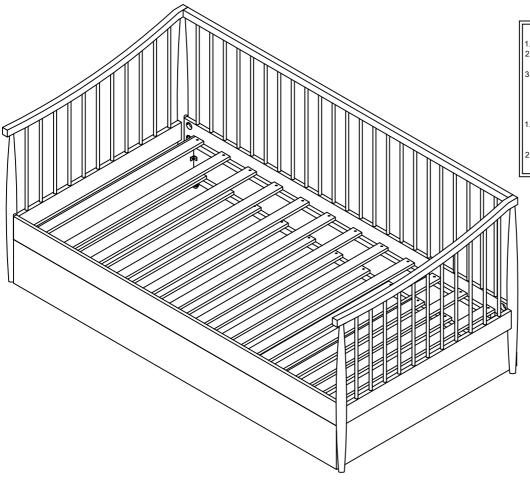

## ASSEMBLY TIPS

- Remove hardware from box and sort by size. Please ensure that all hardware and parts are presented prior start of assembly.
- Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.


- WARNING!

  Don't attempt to repair or modify part that are broken or defective. Please contact with the
- store immediately.


  This product is for home use only and not intended for commercial establishment.

NO	HARDWARE LIST	QTY	NO	HARDWARE LIST	QTY
1	MINI FIX	2	5	HEX NUT	8
2	HOUSING	2	6	SPANNER	1
3	FULL THREAD STUD	8	7	CSK M4 x 25 mm	24
4	PLASTIC WASHER	8			


NO	DAYBED	OTV
NO	PART LIST	QTY
A	HEADBOARD PANEL	1
В	FOOTBOARD PANEL	1
С	BACK PANEL	1
D	SIDE RAIL (Right)	1
E	BED SLAT	12

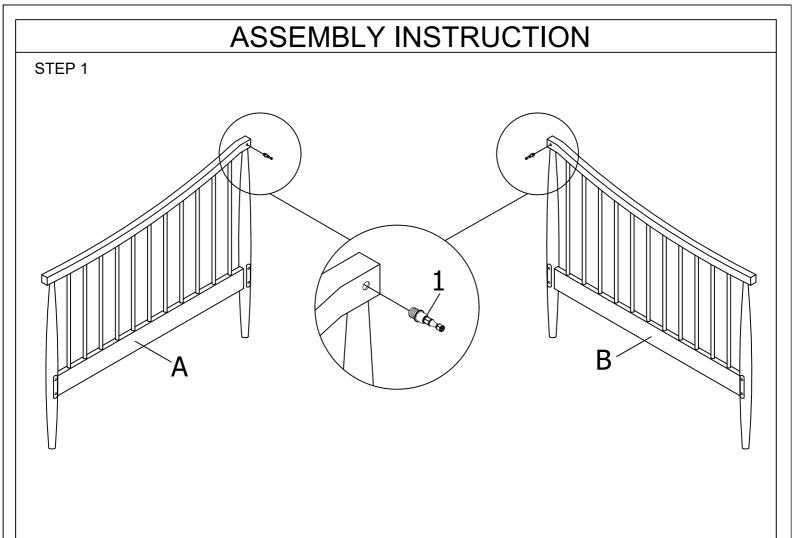


• Insert the Mini fix (1) into the Headboard (A) and Footboard (B).

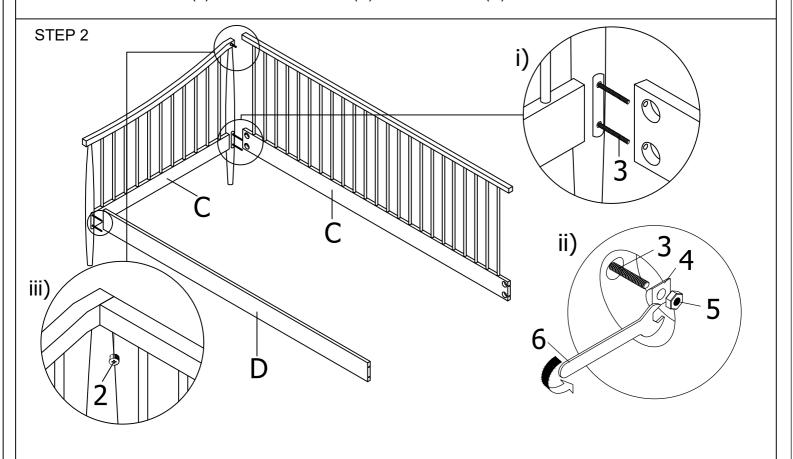

- Attach the Back panel (C) and side rail (D) to Headboard (A) by inserting Full Thread Stud M6 X 70mm (3) into the holes and tightening with Plastic washer(4) and Hex nut M6(5).
- Insert the housing (2) into hole under the Back Panel (C) then tightening securely.

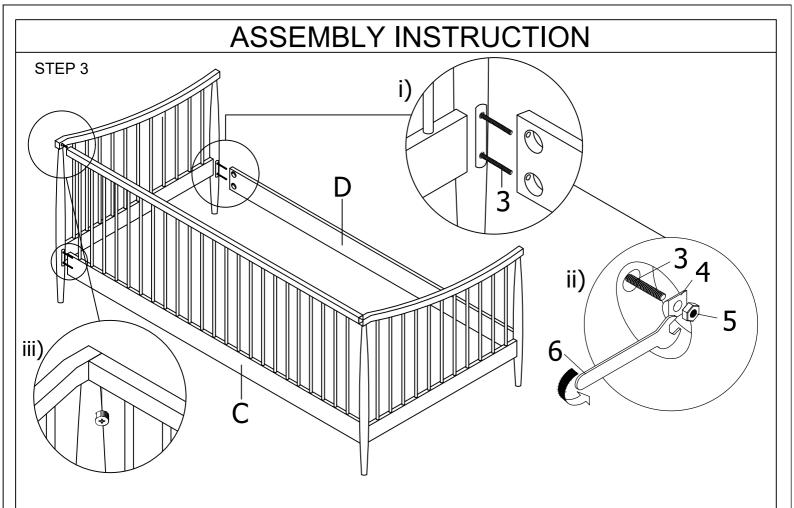

- Attach the Back panel (C) and side rail (D) to Footboard (B) by inserting Full Thread Stud M6 X 70mm (3) into the holes and tightening with Plastic washer (4) and Hex nut M6 (5).
- Insert the housing (2) into hole under the Back Panel (C) then tightening securely.

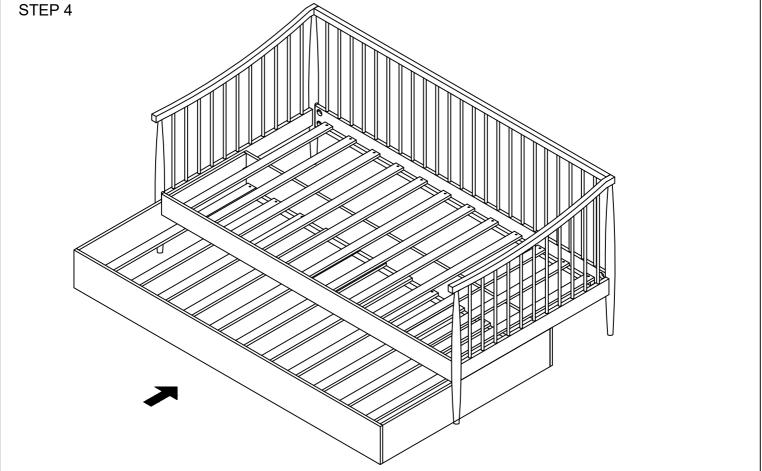

- Insert the Renata Trundle under the bed carefully.
- REMARK: Please reefer to Assembly Instruction for the Trundle Bed assemble.

