


ITEM NO. TVSBSD0505

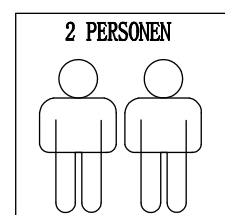

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE

AND WARNING


- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.




Weight Limitation

80LBS


PARTS LIST




① x1

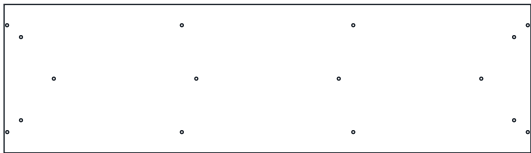


② x1

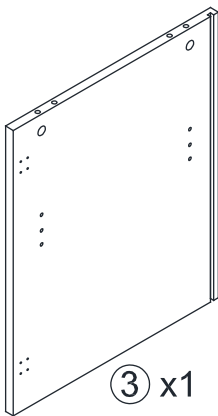


③ x1

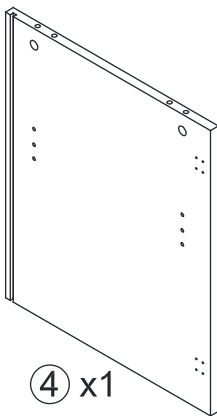


④ x1

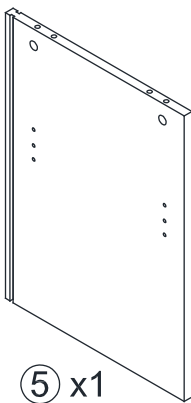

⑤ x1

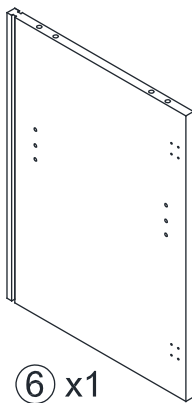


⑥ x1




⑦ x2




⑧ x1




⑨ x2



⑩ x1

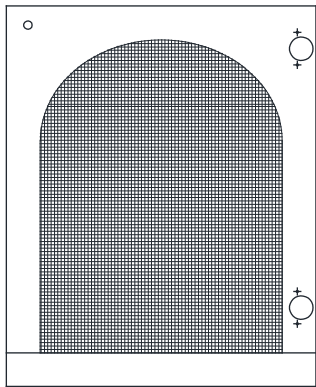

⑪ x1

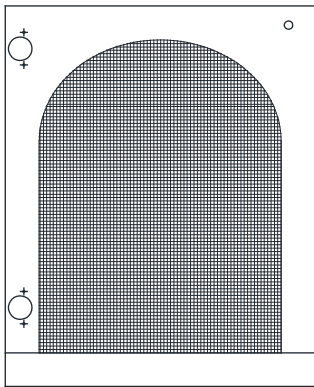

⑫ x2




⑬ x2



⑭ x2





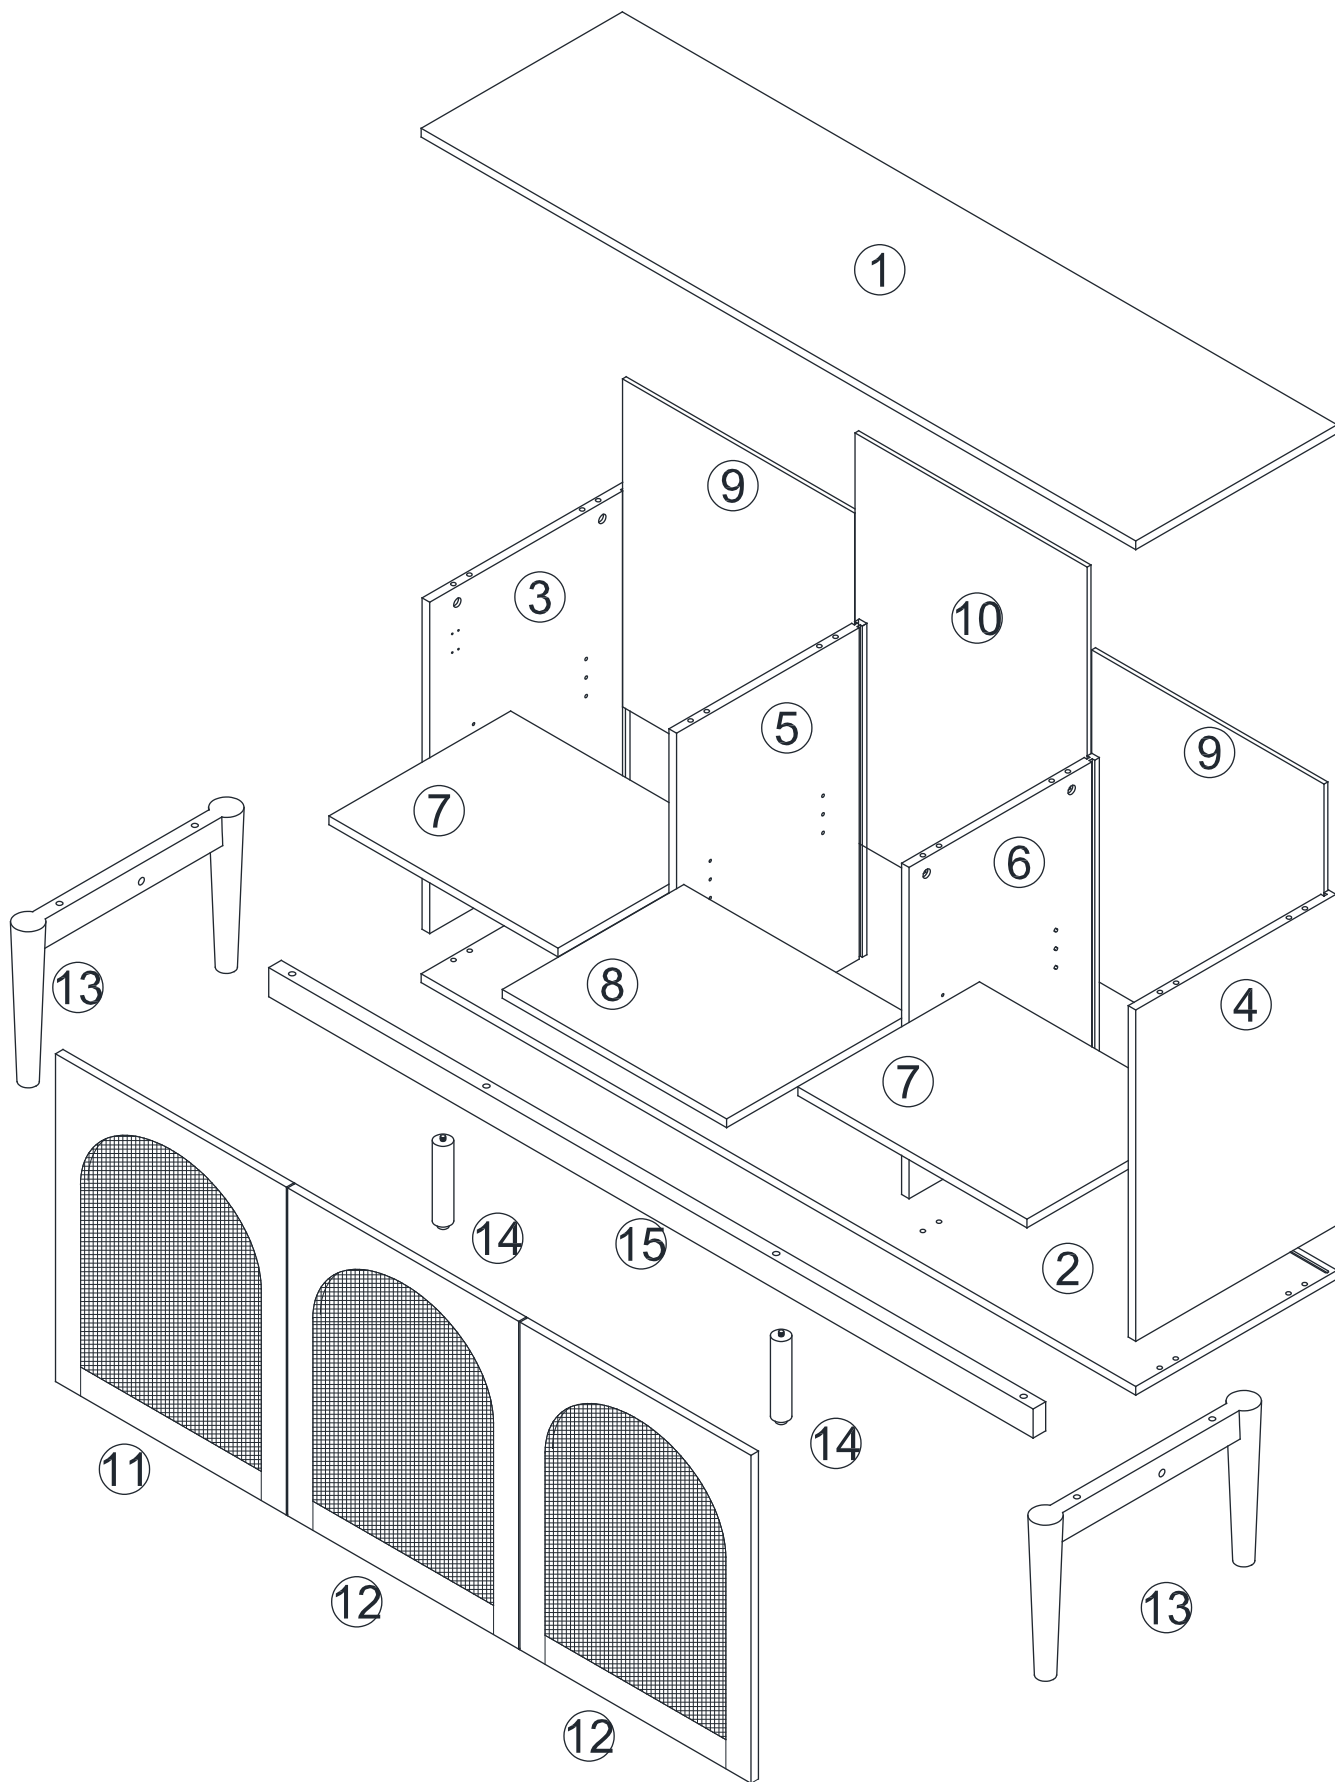


















⑮ x1










Explosive View

HARDWARE

LIST

A	x8	B	x8	C	x8	D	x16	E	x67	F	x4	G	x2	H	x18
															
M6*35mm		Ø15mm		M7*50mm		Ø8*30mm		Ø3.5*14mm							
I	x12	J	x3	K	x3	L	x8	M	x1	N	x4	O	x4	P	x2
															
								M4		Ø4*35mm					
Q	x4	R	x2	S	x8	T	x1	U	x2						
															
		M6*40mm		M6*50mm				M6*30mm							


SPARE

A	x1	C	x1	E	x6	N	x1	R	x1	S	x1	U	x1
													
M6*35mm		M7*50mm		Ø3.5*14mm		Ø4*35mm		M6*40mm		M6*50mm		M6*30mm	


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

ASSEMBLY INSTRUCTIONS

STEP 1

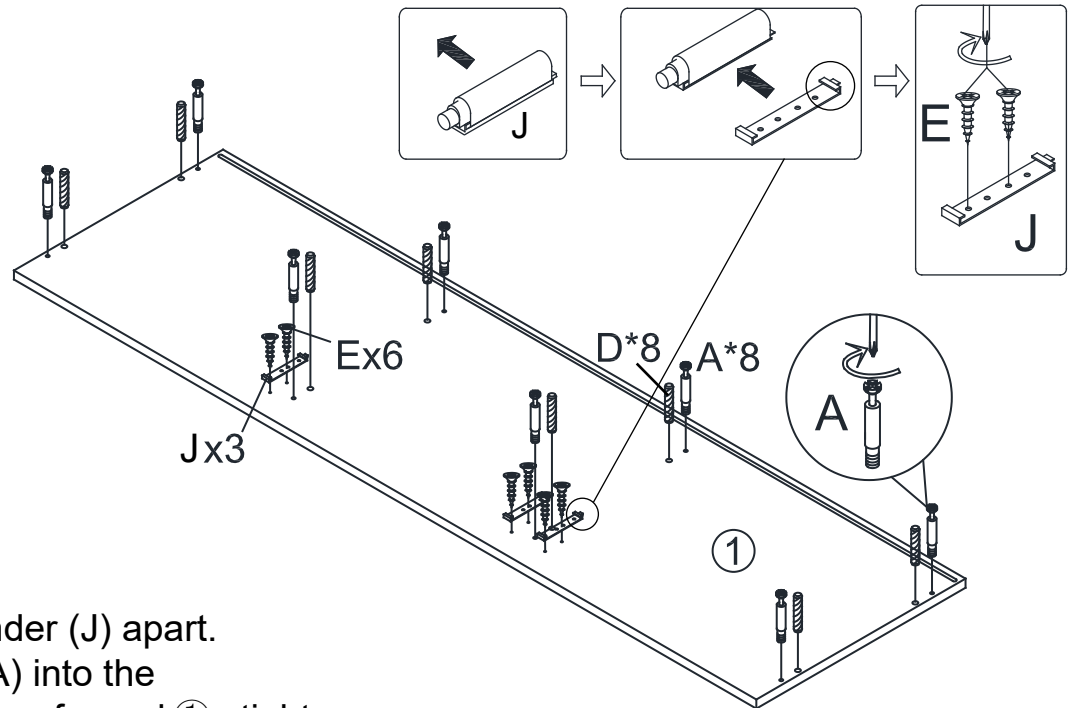


1. Take the rebounder (J) apart.
2. Screw the bolt(A) into the corresponding hole of panel ①, tighten bolt(A) with screwdriver(T).
3. Use screw(E) to attach the rebounder base(J) to panel ①, tighten screw(E) with screwdriver(T).
4. Insert wooden dowel (D) into the corresponding hole of panel ①, finally slide the rebounder(J) into the rebounder base(J).

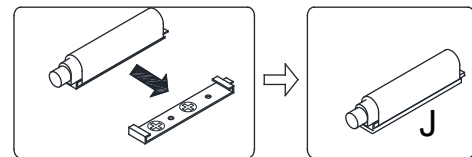

J	x3	A	x8	D	x8	E	x6
		M6*35mm		Ø8*30mm		Ø3.5*14mm	


STEP 2

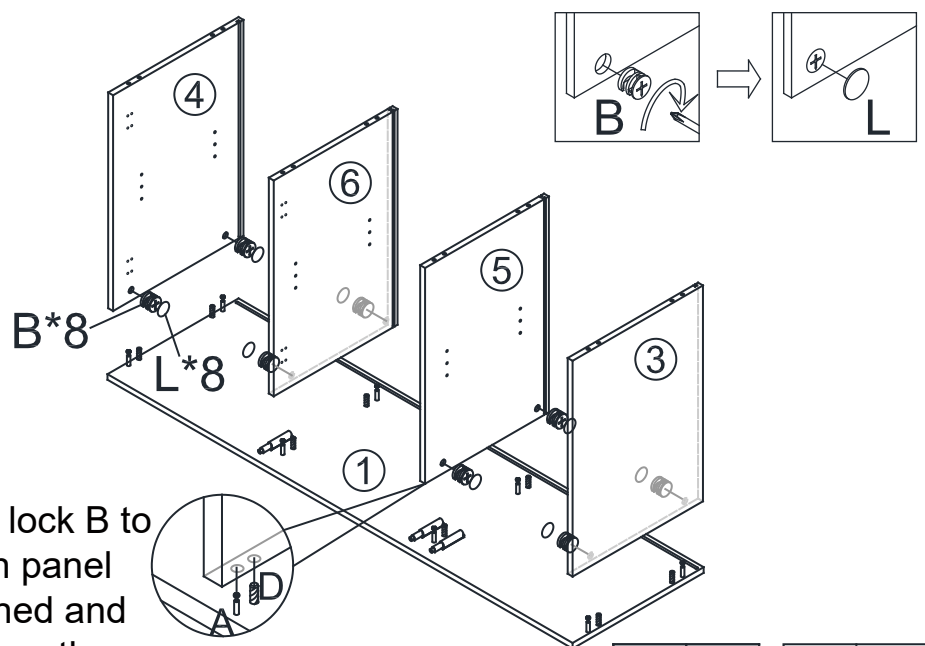


Use screwdriver and cam lock B to connect panel 3,5,6,4 with panel 1, make sure all parts aligned and fasten all cam lock to secure, then cover the cam lock B with sticker L.

L	x8	B	x8
		Ø15mm	


STEP 3

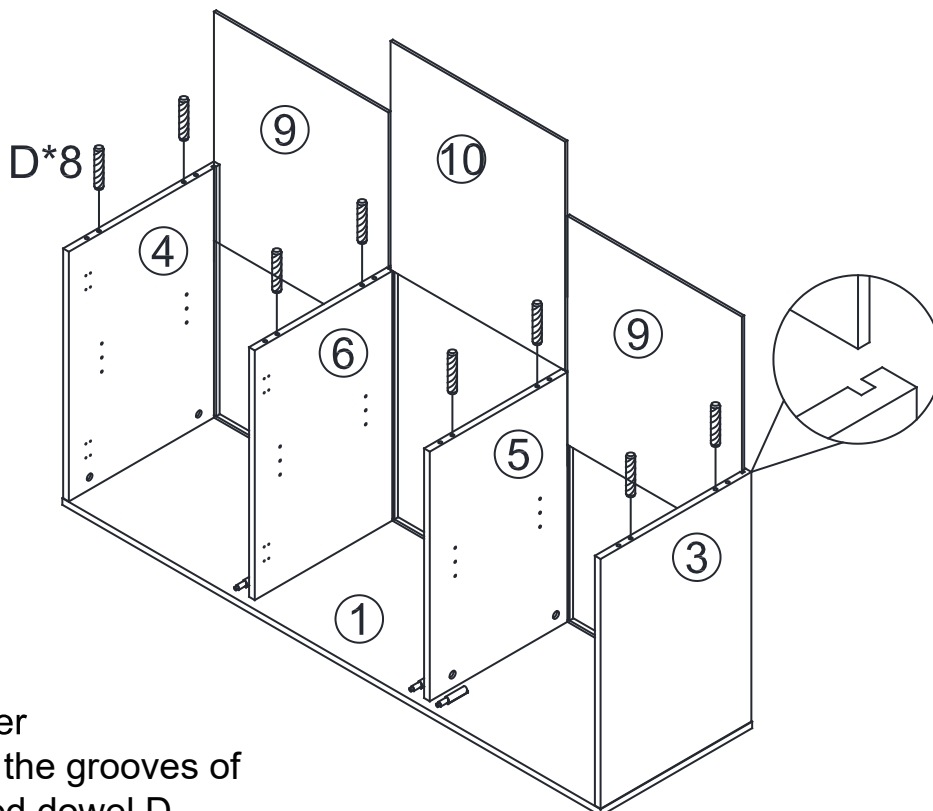


With help of adult partner
Insert panel 9 & 10 into the grooves of
panel 4,6,5,3,insert wood dowel D
into panel 3,5,6,4,make sure panel
9&10 properly set into grooves on
panel 4,6,5,3,1.


D	x8
	
Ø8*30mm	

STEP 4

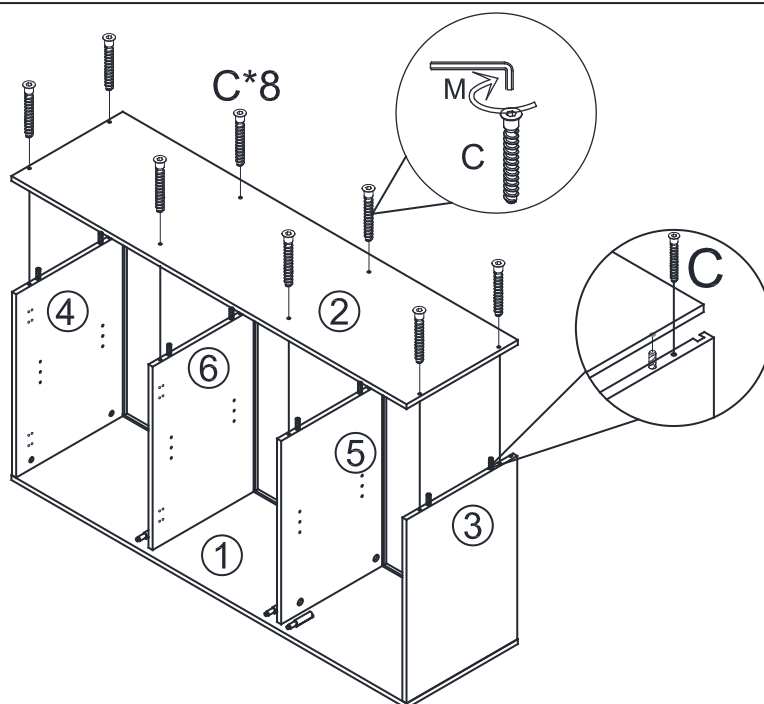


Use allen key M and bolt C to
connect panel 2 with assembled
unit 1,3,5,6,4,make sure all parts
properly aligned and fasten all bolts
to secure.

M	x1
	
M4	

C	x8
	
M7*50mm	


STEP 5

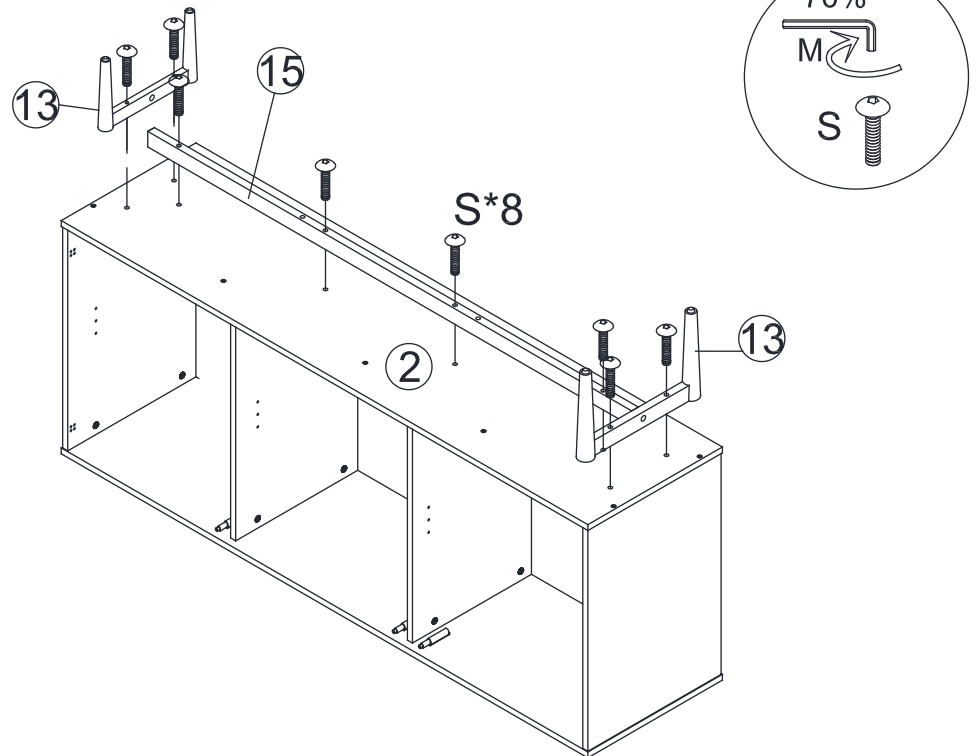

Use bolt(S) to attach leg 13 & rail 15 to the preassemble unit at step 4, make sure all holes aligned and lock bolt(S) to 70% with allen key(M).

M	x1	S	x8
M4		M6*50mm	

STEP 6

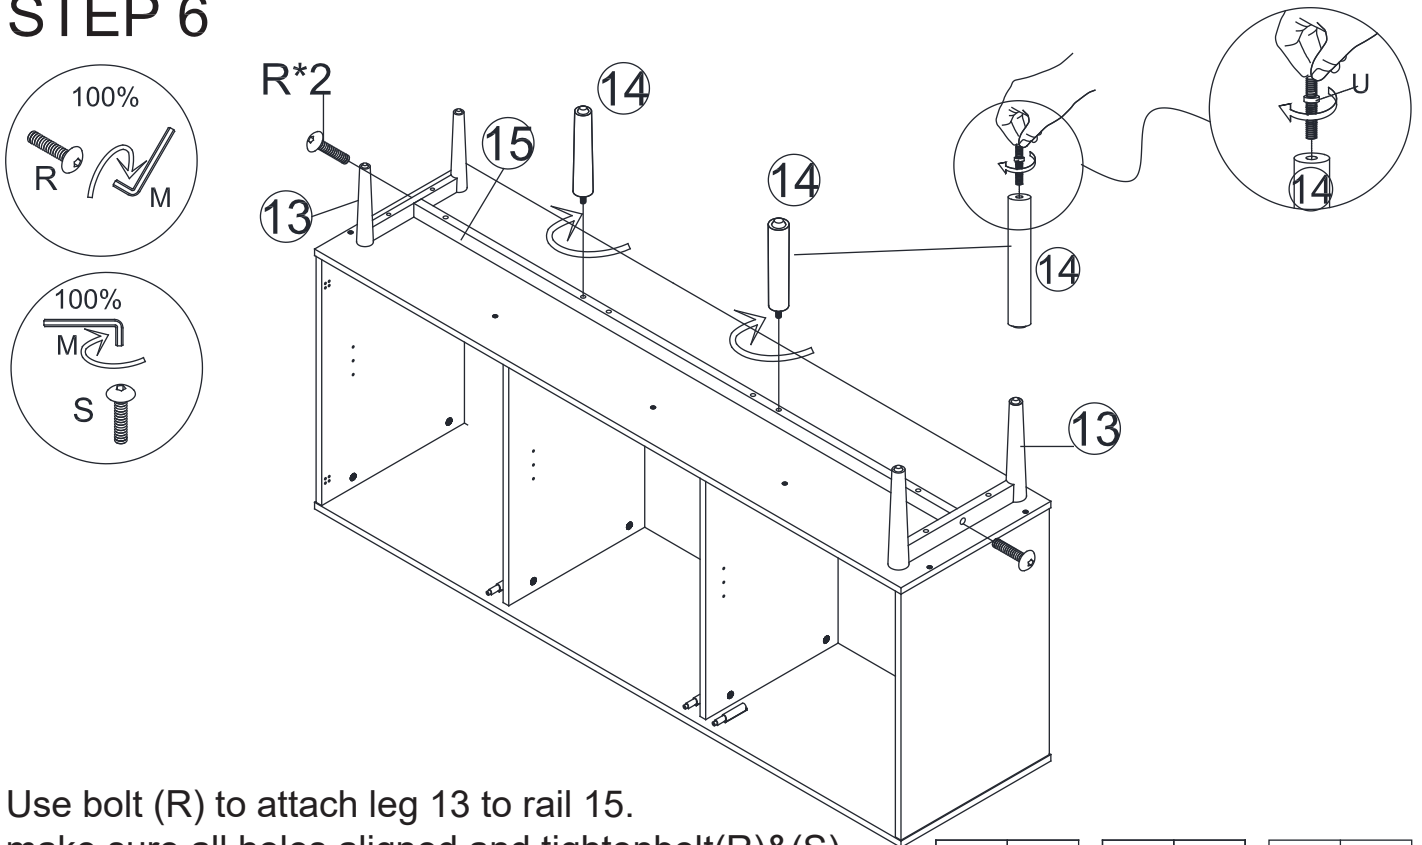


Use bolt (R) to attach leg 13 to rail 15. make sure all holes aligned and tighten bolt(R)&(S) with allen key(M). Screw one end of bolt U into foot 14, then screw foot 14 into metal rod 15 with hand


U	x2	M	x1	R	x2
M6*30mm		M4		M6*40mm	

STEP 7

Turn the assembled unit upright.
Use screwdriver to connect screw E and plastic connector H with back panel 9 & 10, fasten to secure.

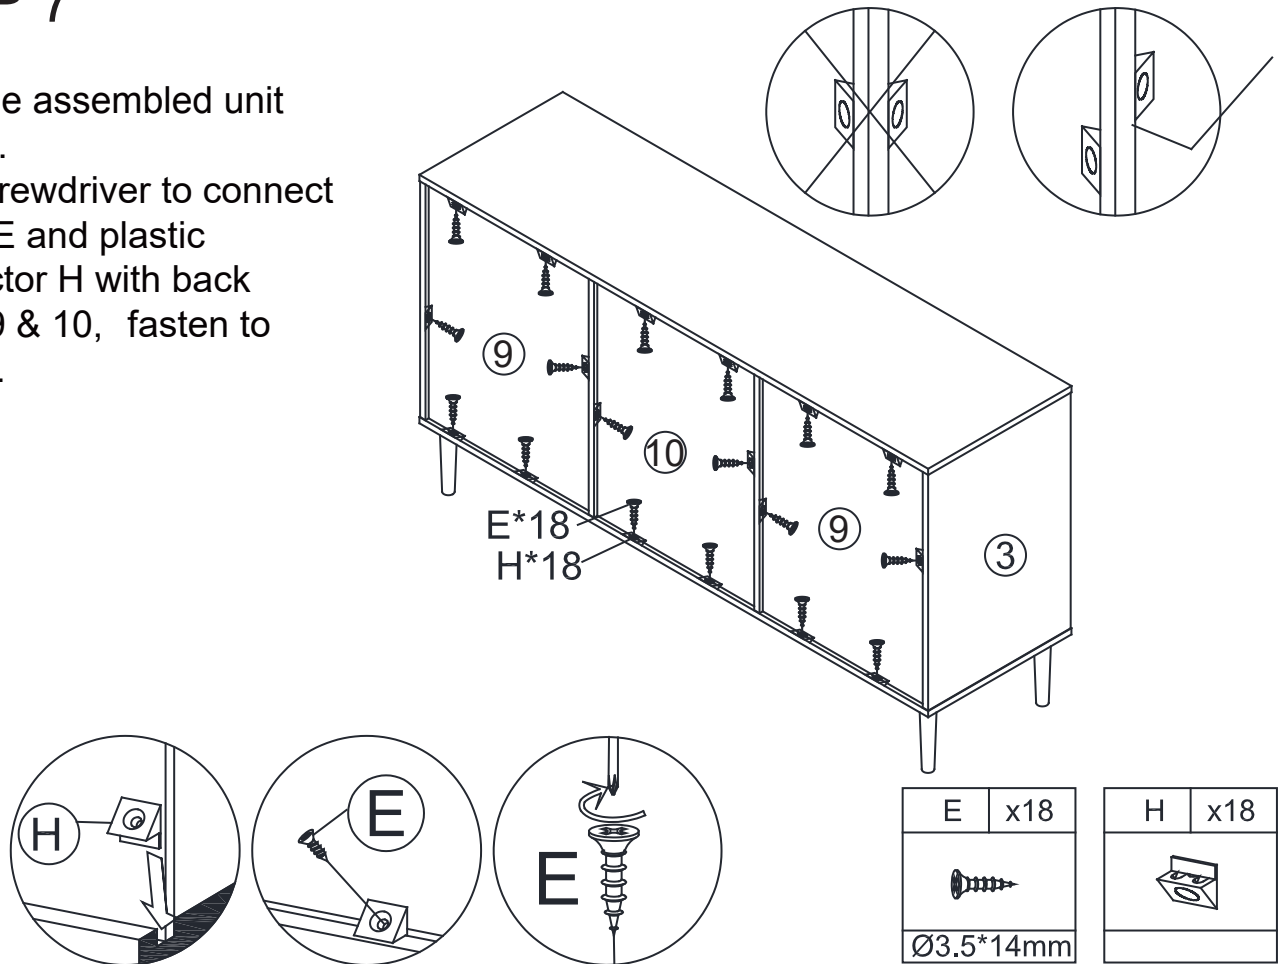


STEP 8

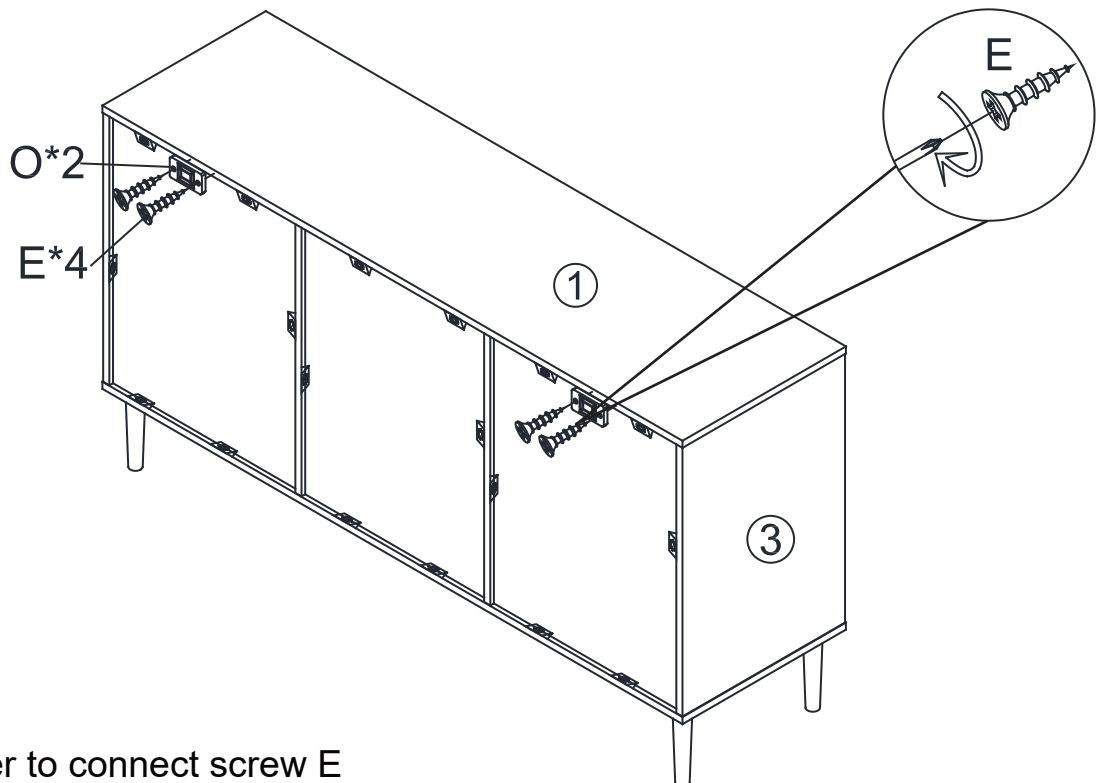

Use screwdriver to connect screw E with tipping kits O on rear edge of top panel 1, then fasten to secure.

STEP 9

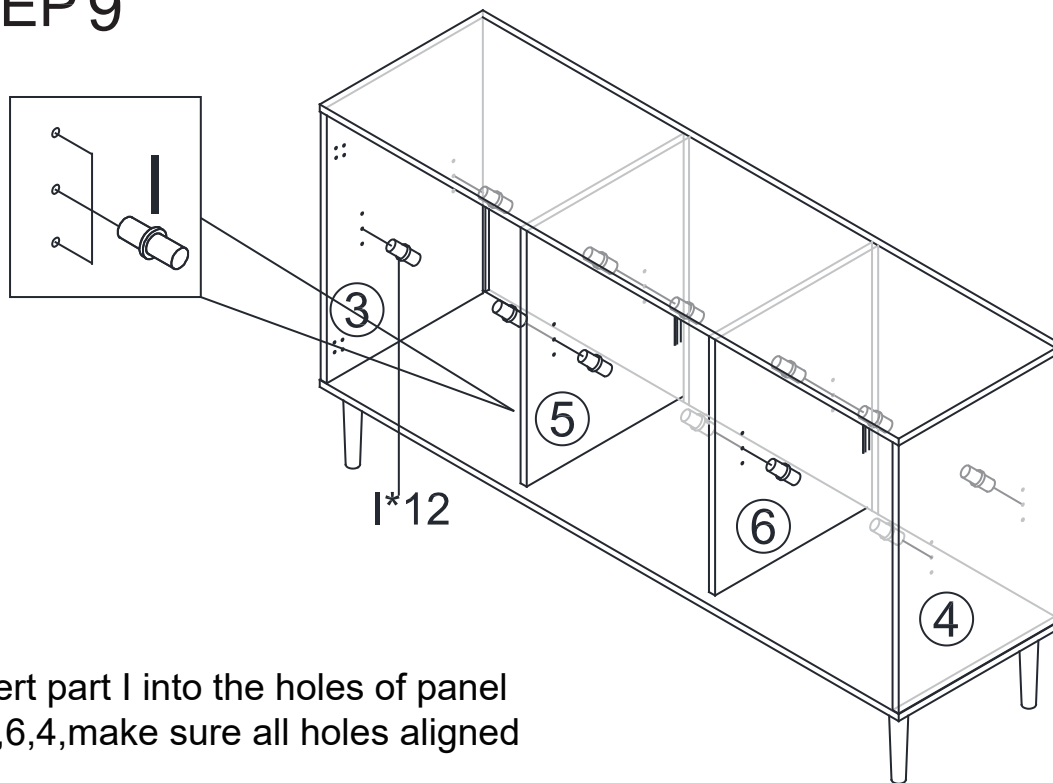


Insert part I into the holes of panel
3,5,6,4, make sure all holes aligned

Insert shelf pin I into desired level on part 3,5,6,4


I	x12

STEP 10

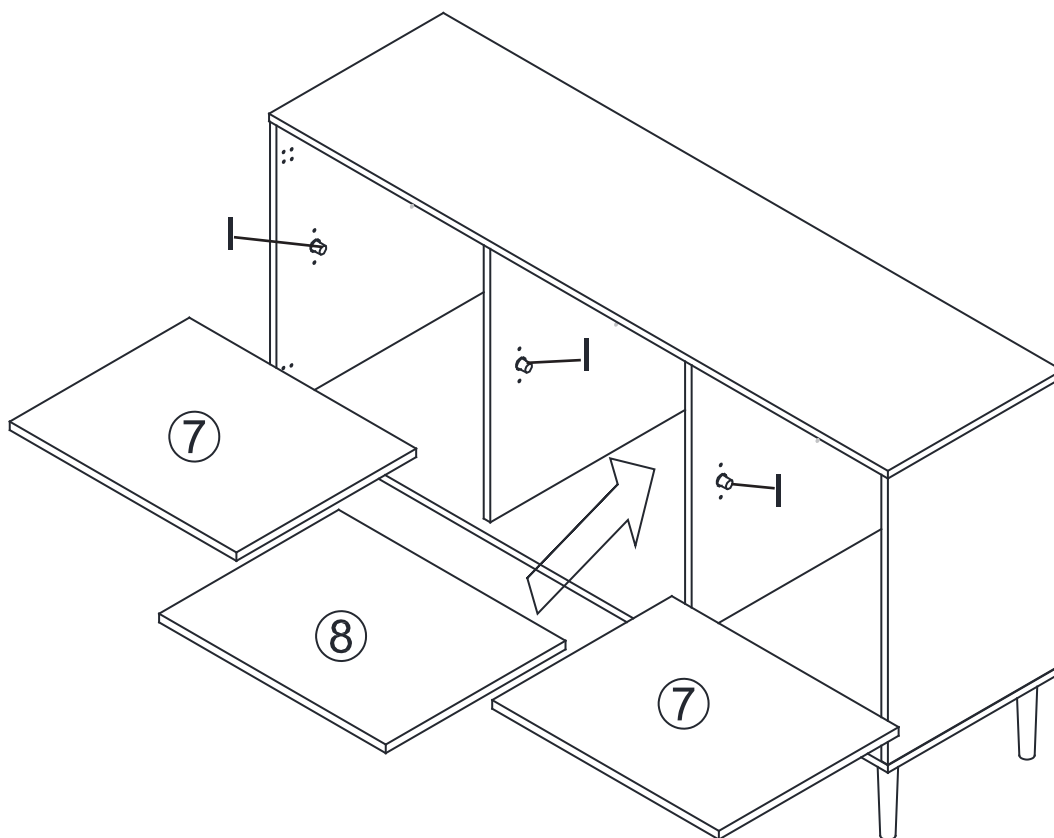




Slide shelf 7 & 8 into place on part I.

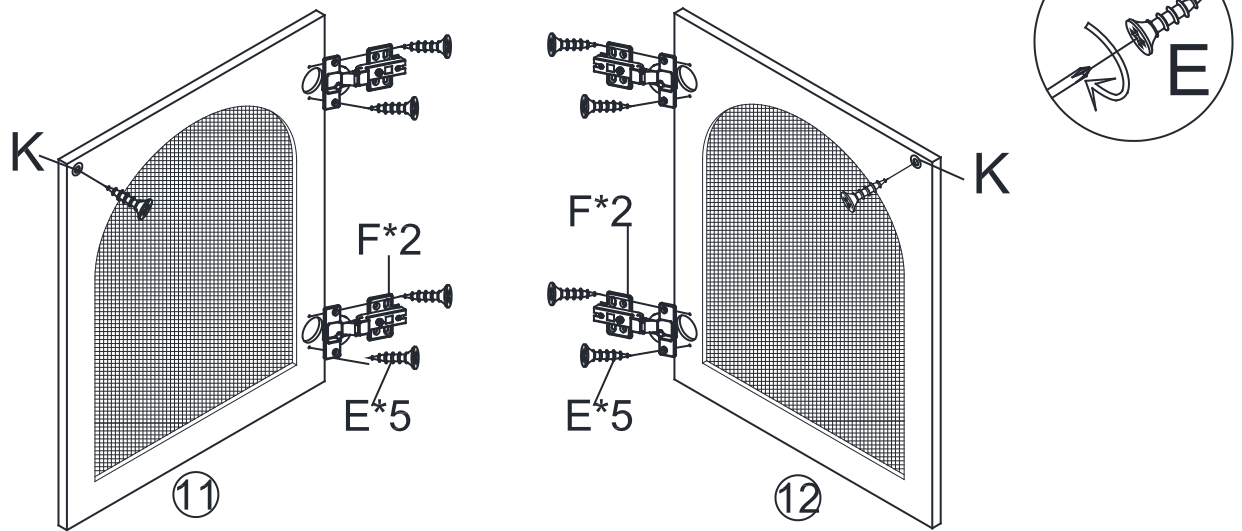
STEP 11




Use screw E to attach hinge (F) to door 11 & 12 ,
and then use screw(E) to attach plate washer (K)
to door 11 & 12 , tighten screw(E) with screwdriver(T).

K	x2	E	x10	F	x4
					
		Ø3.5*14mm			


STEP 12

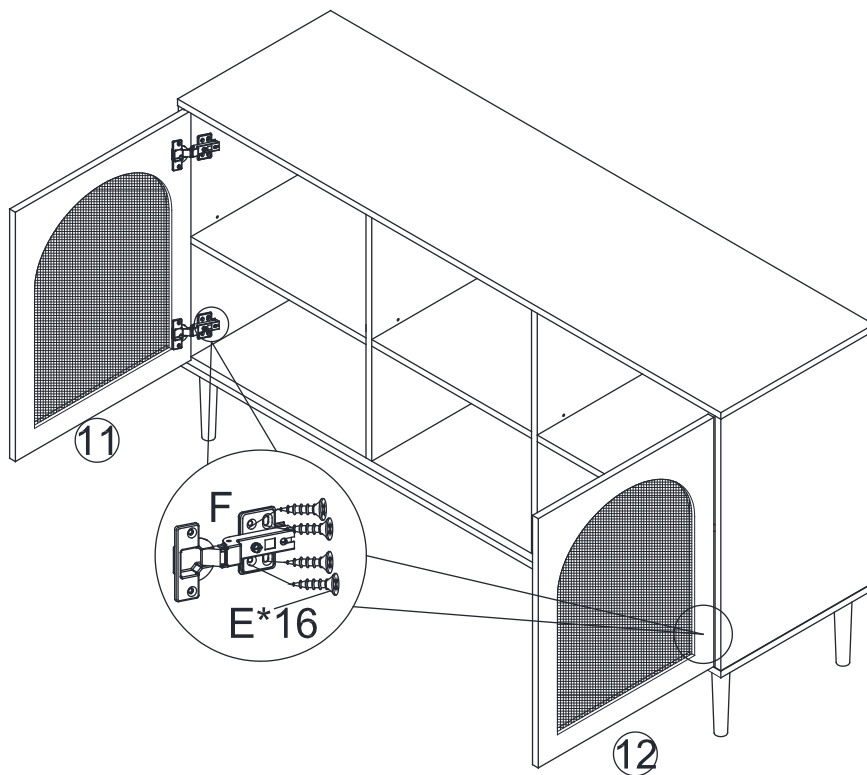

Use screw(E) to attach preassembly door 11 & 12
to preassembly unit at step 10 , tighten screw(E) with
screwdriver(T).

E	x16
	
Ø3.5*14mm	

STEP 13

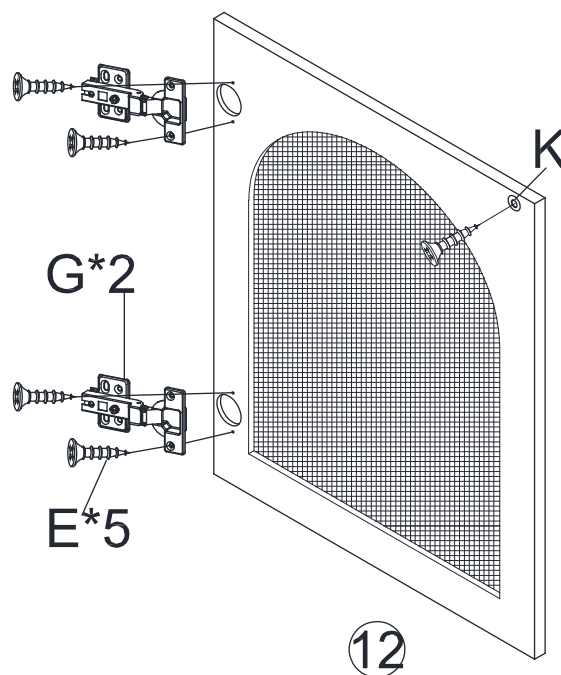


Use screw(E) to attach hinge (G) to door 12, and then use screw(E) to attach plate washer(K) to door 12, tighten screw(E) with screwdriver(T).

K	x1

E	x5
Ø3.5*14mm	

G	x2

STEP 14

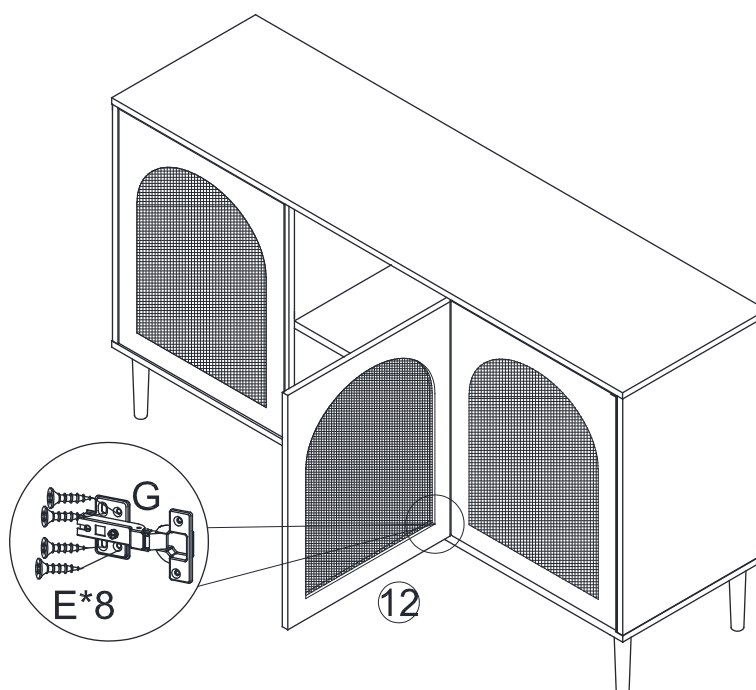


Use screw(E) to attach preassemble door 12 to the preassemble unit at step 12, make sure all holes aligned and tighten screw(E) with screwdriver(T).


E	x8
Ø3.5*14mm	

STEP 15


Concealed hinges are three-way adjustable:

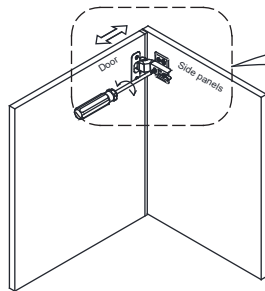


Horizontal
by screw adjustment!

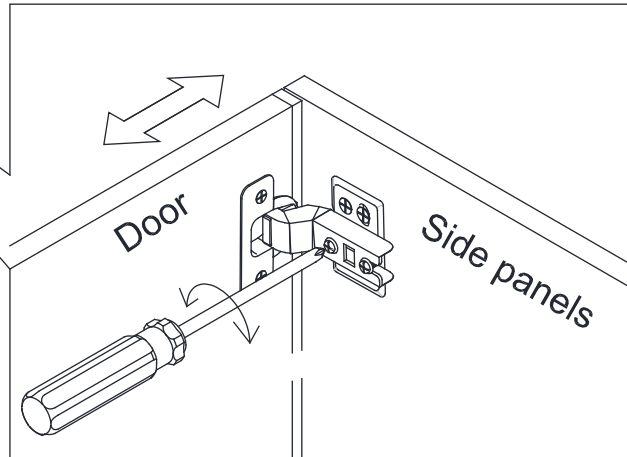


Concealed hinges are three-way adjustable:

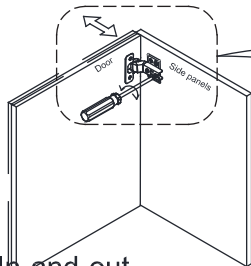


In-and-out
by loosening the hinge arm
mounting screw or via cam
adjustment!

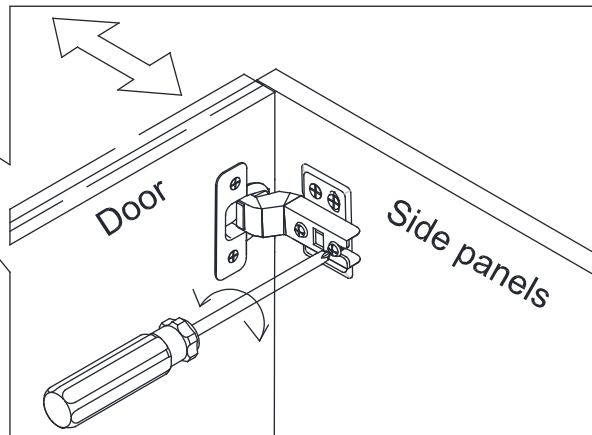

Concealed hinges are three-way adjustable:

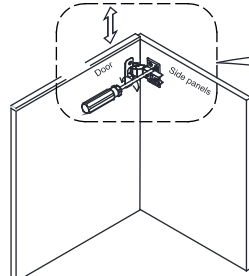


Vertical via slots in
the mounting plate
or via cam adjustment!

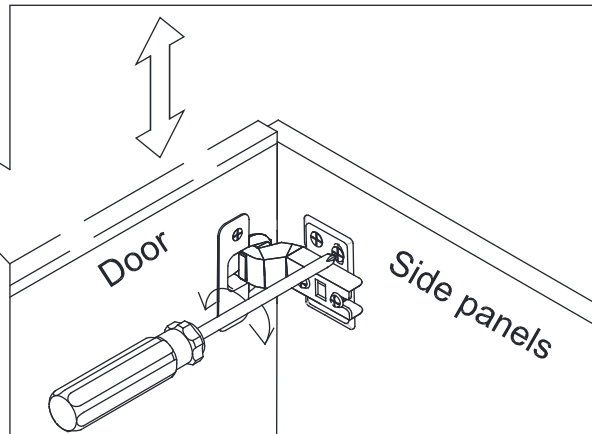

Hinge adjustment method



STEP 16

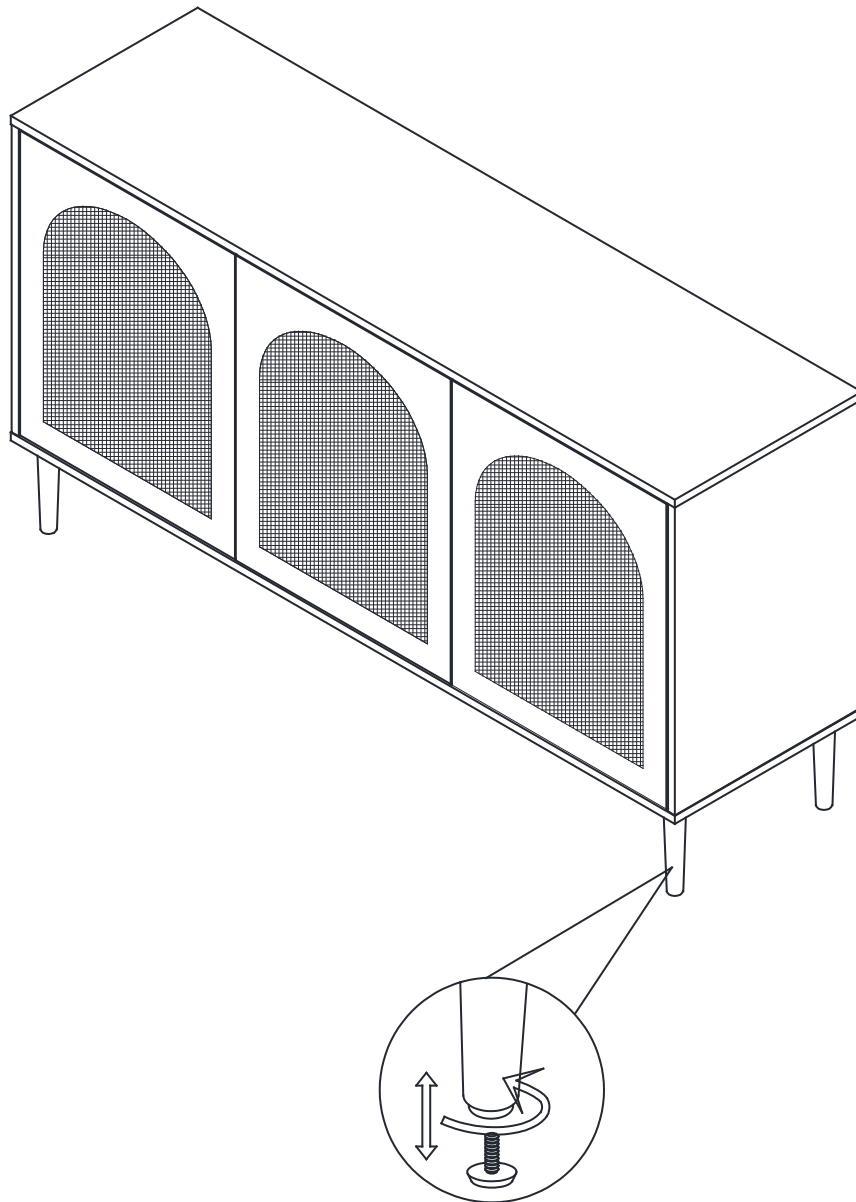

Please adjust the levelers to keep the cabinet in balance.

STEP 17


Install the tipping kits.

1. Mark the position on the wall, this should be same as the position of O where are on rear edge of panel 1; Drilled and insert the plastic insert Q by hammer;


2. Assemble the part O on the wall. Align the hole in the part O to the expandable screw Q, screw N in and tighten by screwdriver S;


3. let the plastic belt P go through the both O and pull to tighten.


Fail to use tipping kits may leads to cabinet tip over or injuries

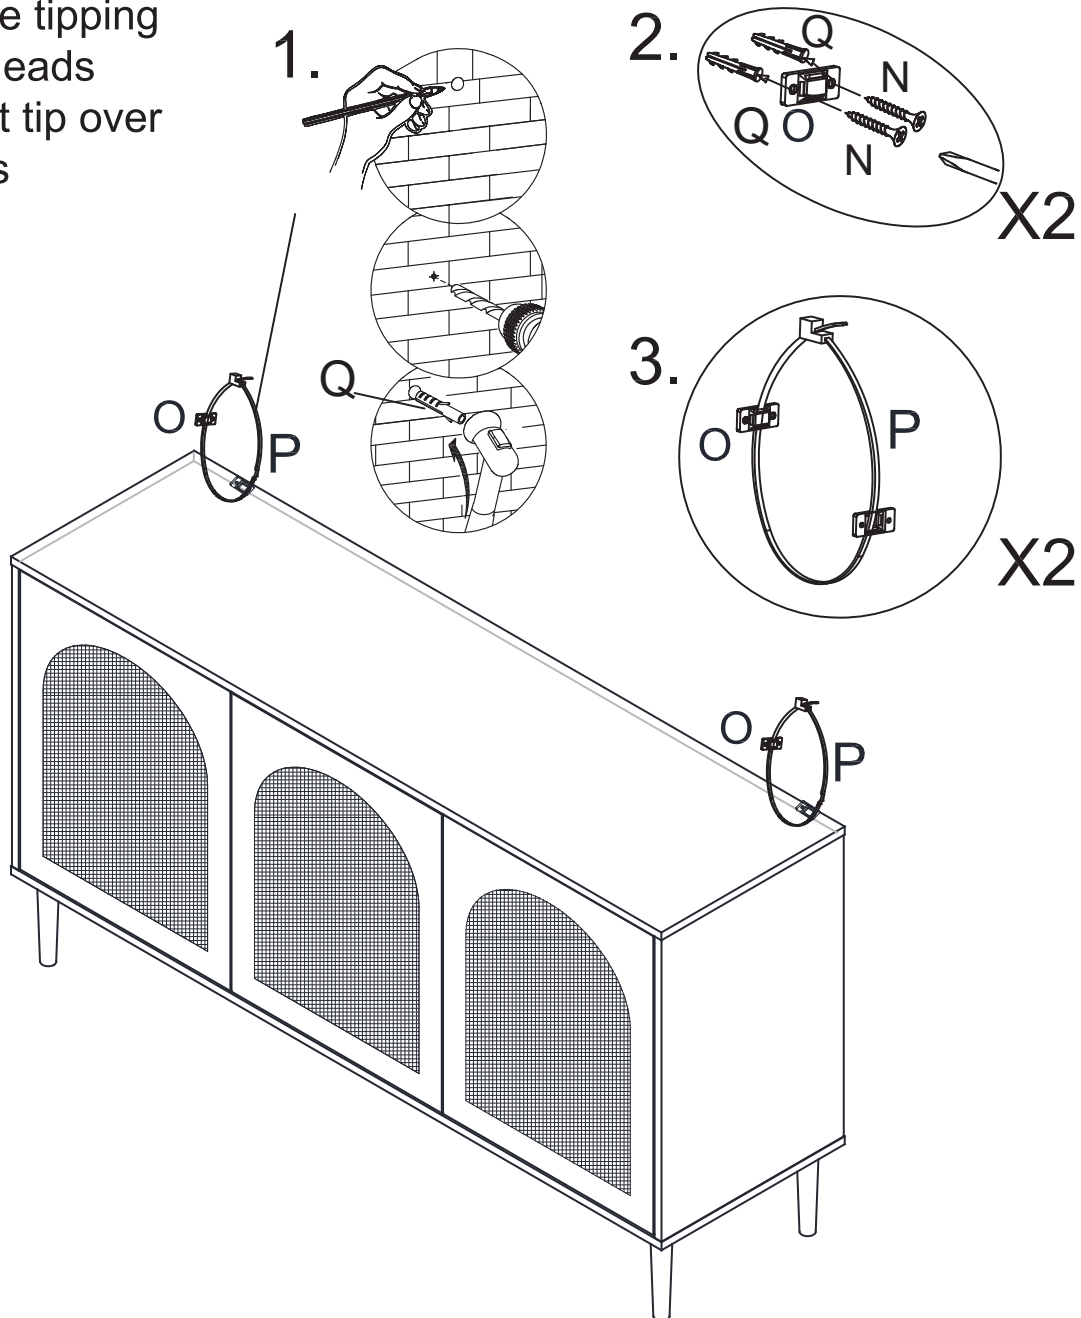


Assembly completed

Q	x4
	

N	x4
	
Ø4*35mm	

O	x2
	

P	x2
	

WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

**Are you having difficulty
with assembly? Missing parts?**

Please send email with your order No

customerservice@hulalahome.com

**For return, Please check the return policy with
the retailer or MarketPlace you bought from.**

**Appreciated your purchasing from us.
Pop up your life by our furniture piece!**