


## ASSEMBLY INSTRUCTIONS

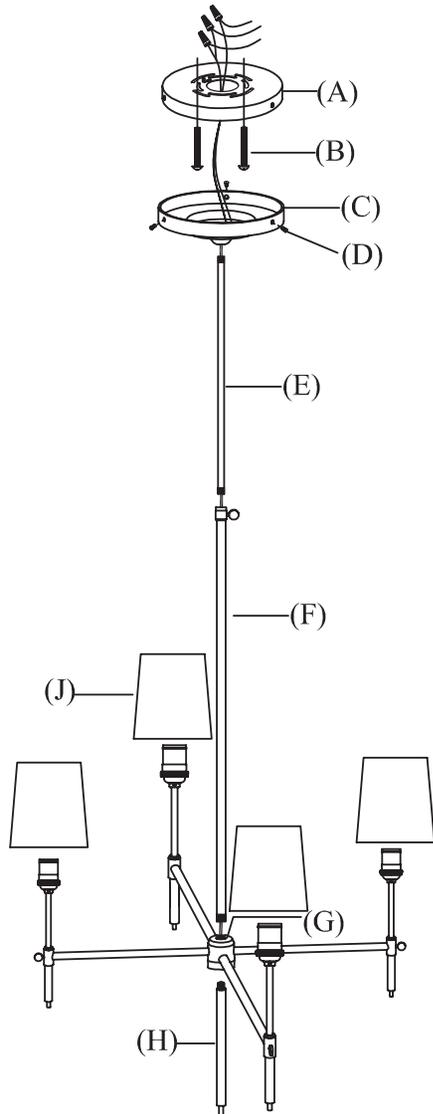

## Bryant Small Chandelier

Item # TOB5002

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Thread pole (H) into bottom threaded opening of fixture body (G).
2. Thread pole (F) into top opening of fixture body (G).
3. Thread pole (E) into top threaded opening of pole (F).
4. Remove back plate (A) from canopy base (C) by unscrewing base screws (D) and set aside.
5. Affix back plate (A) to ceiling outlet box with back plate screws (B) provided.
6. Attach ground (copper in color) fixture wire to ground wire from ceiling outlet box (usually green or copper in color), and fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

7. Connect the neutral (RIBBED, without any marking) fixture wire to the neutral (usually white) wire from ceiling outlet box. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
8. Repeat the procedure with the hot (ROUND, with UL marking on) wires. Always make sure that no wire strands are left outside the connectors. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. Attach canopy base (C) to back plate (A) and tighten with base screws (D).
10. Insert light bulbs into sockets.
11. Clip lamp shades (J) onto the light bulbs.



VISUAL COMFORT & Co. Est. 1987