
## **ASSEMBLY INSTRUCTIONS**

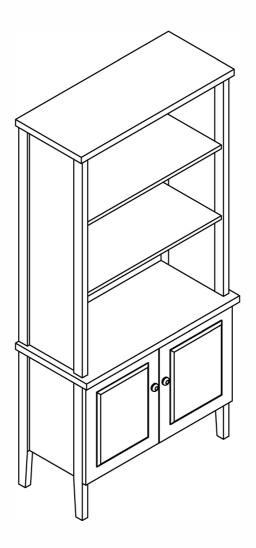

#### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

# Part list: A2. Top Panel Qty: 1 A3. Top Shelf A1. Top Side panel(L&R) Qty: 2 Qty: 2 A5. Divider Panel A6. Bottom Panel Qty: 1 A4. Low side panel(L&R) Qty:2 Qty: 1 A7. Top Back Panel A8. Middle Back Panel Qty: 1 Qty: 1 A9. Door Qty: 2 Qty: 1 A11. Low Back Panel A10. Low shelf Qty: 1

### Hardware list:

				(x))mmp>	
B1. Camlock	Qty: 20	B2. Wood <b>Dowel</b>	Qty: 12	B3. Screw	Qty: 32
			)		
B4. Knob with bolt	Qty: 2	B5.Wood Dowel	Qty: 4	B6. Metal plate with screw	Qty: 2
B7. Hinge with screw	Qty: 4	B8. Shelf support	Qty: 4	B9. Magnet with screw	Qty: 1
B10. Glue	Qty: 1				


#### Note:

- Read these instructions carefully before assembling.
- Tools required: Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


#### To use Dowels:

- 1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
- 2. Insert the Dowel(s) and join boards.
- 3. Wipe excess glue with a damp paper towel.


#### To use Cam Locks:

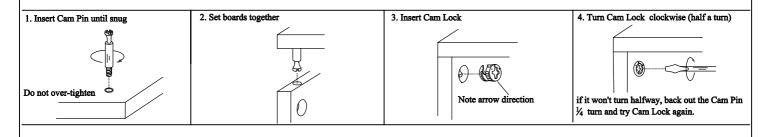


## Assembly instructions

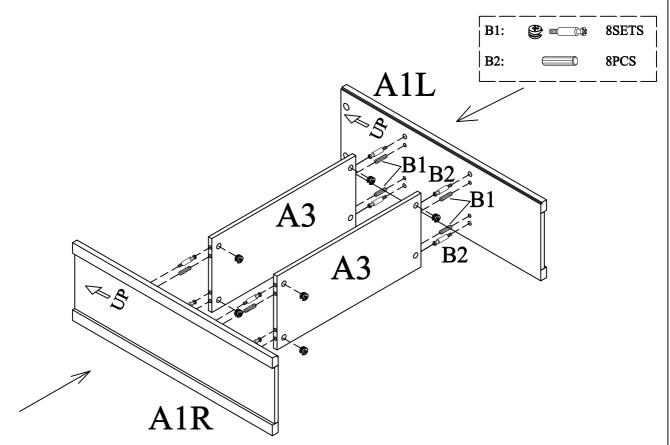


Step 1: Assemble Top Side Panel A1L to Top Shelves A3 using Camlocks B1 and Wood Dowels B2. Step 2: Repeat Step 1 to assmble Top Side Panel A1R.

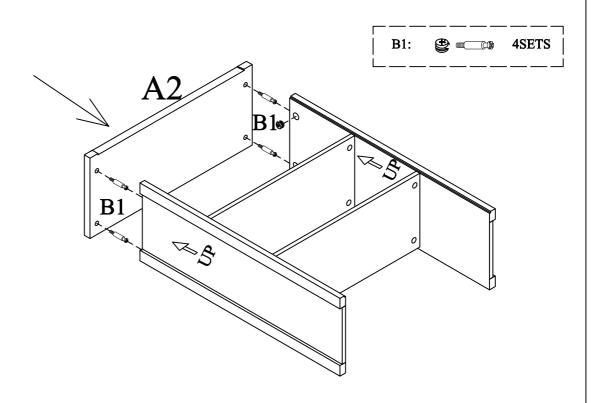


Step 3: Assemble Top Panel A2 to Top Side Panels A1(L&R) using Camlocks B1.

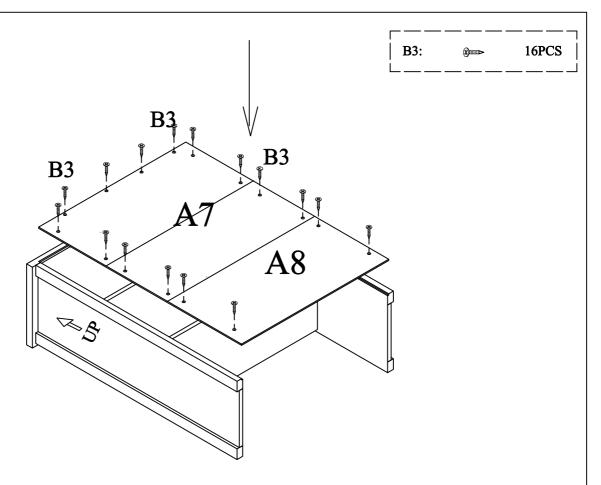

Step 4: Attach Top Back Panel A7 and Middle Back Panel A8 to this unit using Screws B3.

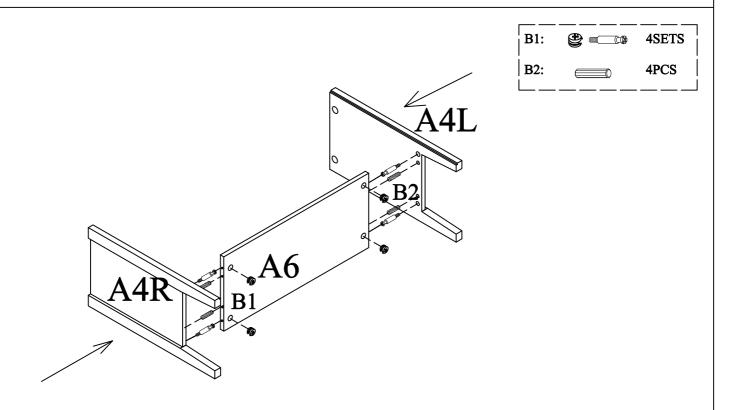


Step 5: Assemble Low Side Panel A4L to Bottom Panel A6 using Camlocks B1 and Wood Dowels B2. Step 6: Repeat Step 5 to assemble Low Side Panel A4R.

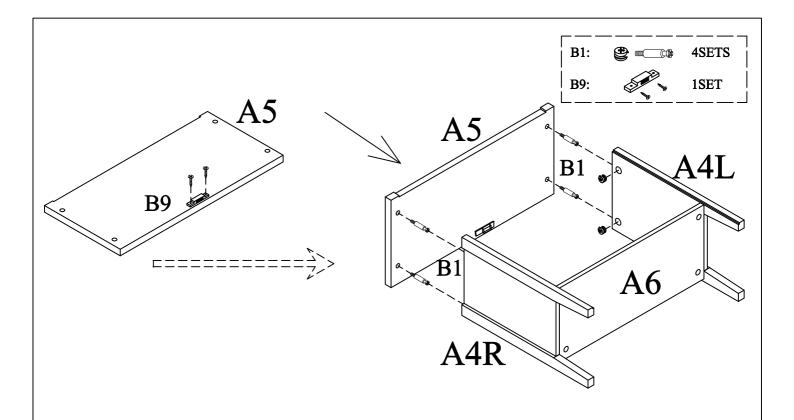


Step 7: Attach Magnet B9 to the bottom of Divider Panel A5 by included screws.

Step 8: Assemble Divider Panel A5 to Low Side Panels A4(L&R) using Camlocks B1.

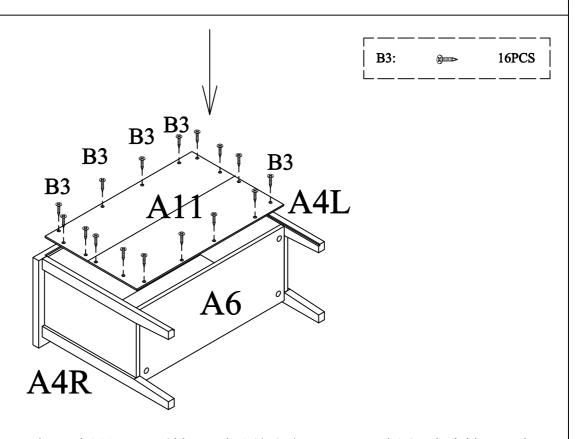

Step 9: Attach Low Back Panel A11 to Low Side Panels A4(L&R) ,Bottom Panel A6 and Divider Panel A5 by screws B3.

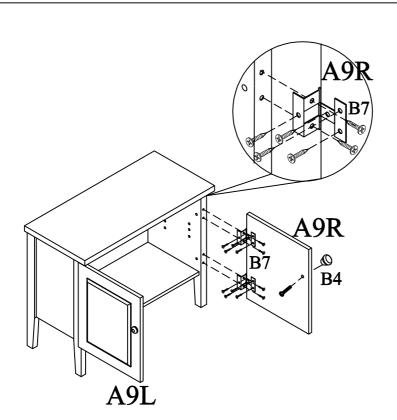

B7: E 4SETS


B4: © 2SETS

Step 10: Attach Knobs B4 to Doors A9(R&L) using included bolts.

Step 11: Attach Hinges B7 to Door A9R by included screws.


Step 12: Assemble Door A9R to Low Side Panel A4R by screwing assembled Hinges B7 using included screws.

Step 13: Repeat Step 11&12 to assemble Door A9L.

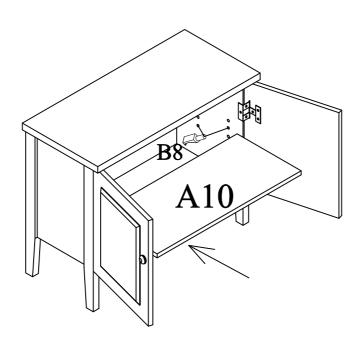

B8: 4PCS

Step 14: Insert Shelf Supports B8 into holes on Low Side Panels A4(L&R), then put Low Shelf A10 onto Shelf Supports B8.

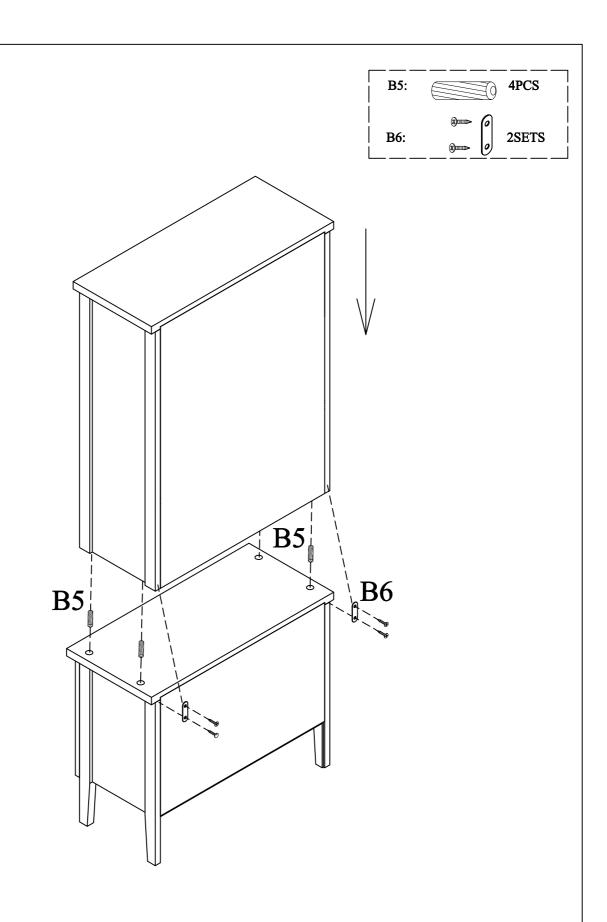

Step 15: Assemble the top part to the low part by Wood Dowels B5 and Metal Plates B6 with included screws.

NOTE: Maximum load capacity of each shelf is 20 LBS.