

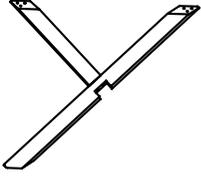
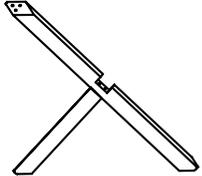
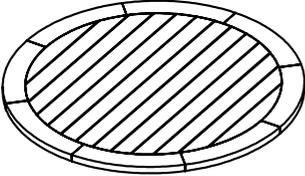



# ASSEMBLY INSTRUCTIONS

## BOCA OUTDOOR 63" ROUND DINING TABLE


HARDWARE LIST			
A		ALLEN WRENCH	1 PC
B		FLAT BRACKET	3 PCS
C		JF BOLT M6 x 25MM SS	21 PCS
D		FLAT WASHER M6 x Ø18MM SS	12 PCS
E		SPRING WASHER M6 x Ø11MM SS	12 PCS


COMPONENT LIST			
①		LEG 1	1 PC
②		LEG 2	1 PC
③		TABLE TOP	1 PC

### STEP 1

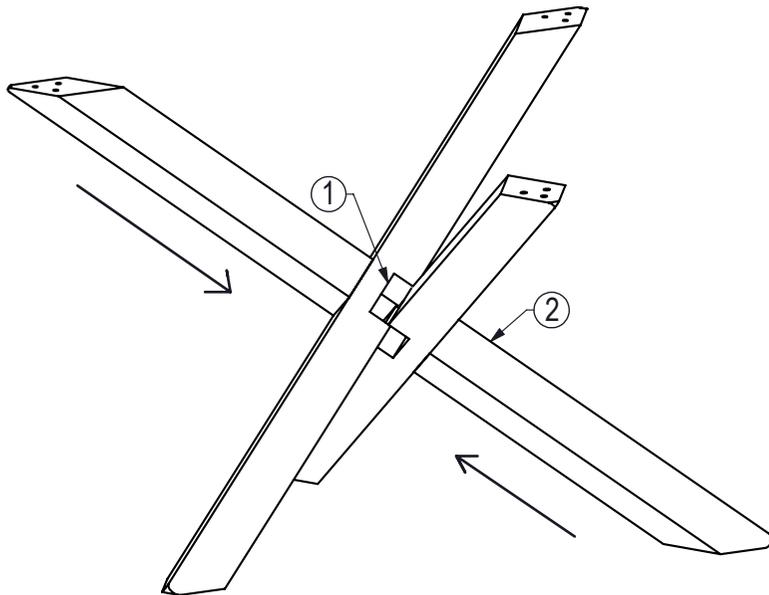


### STEP 2

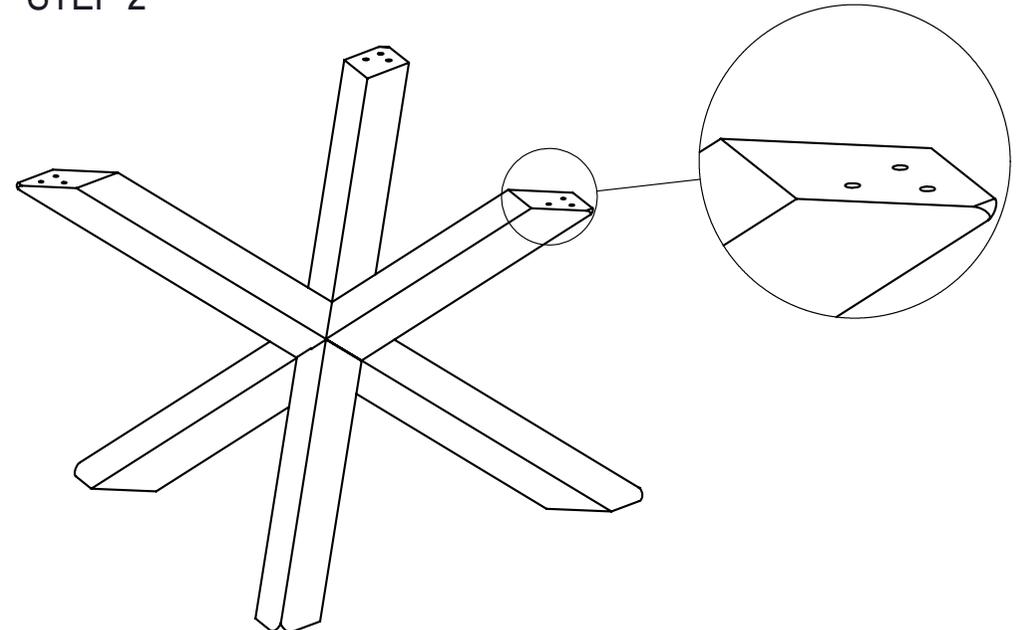


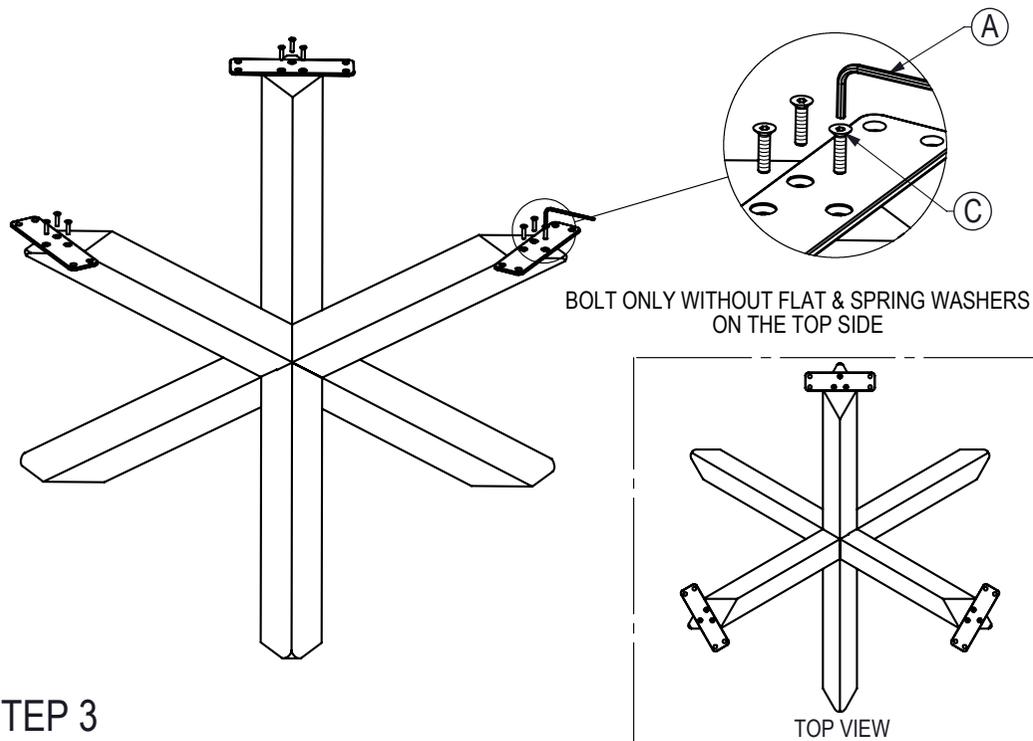

STEP 3

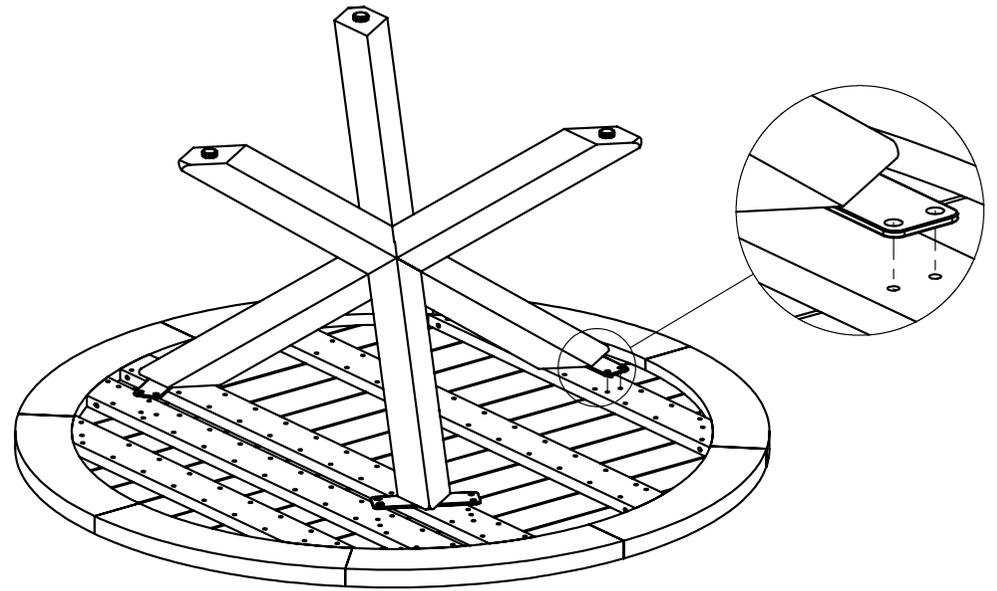


STEP 4

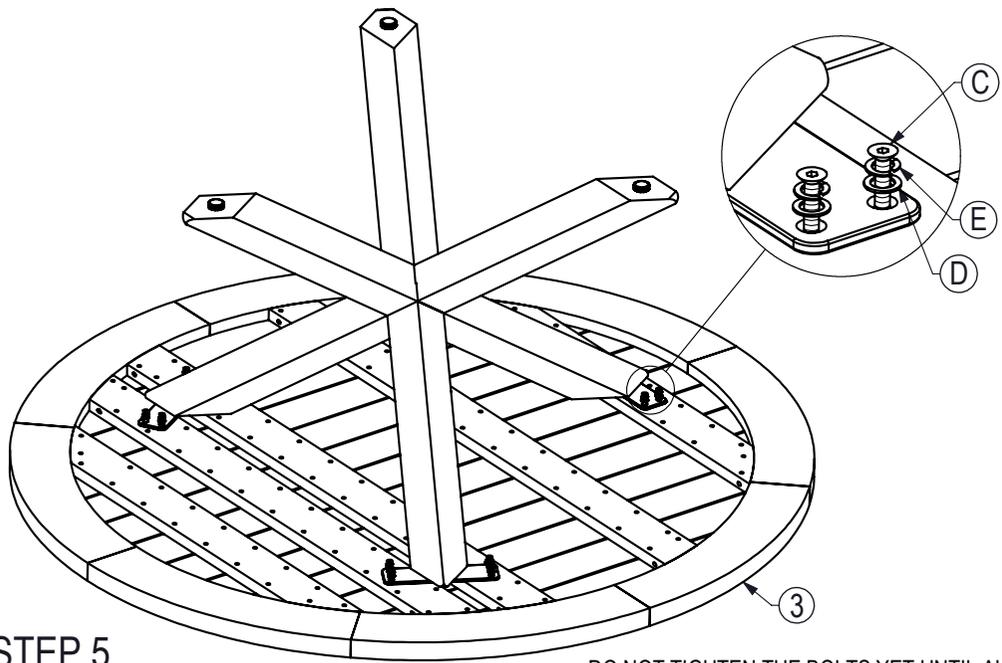




STEP 5

DO NOT TIGHTEN THE BOLTS YET UNTIL ALL THE BOLTS ARE CONNECTED

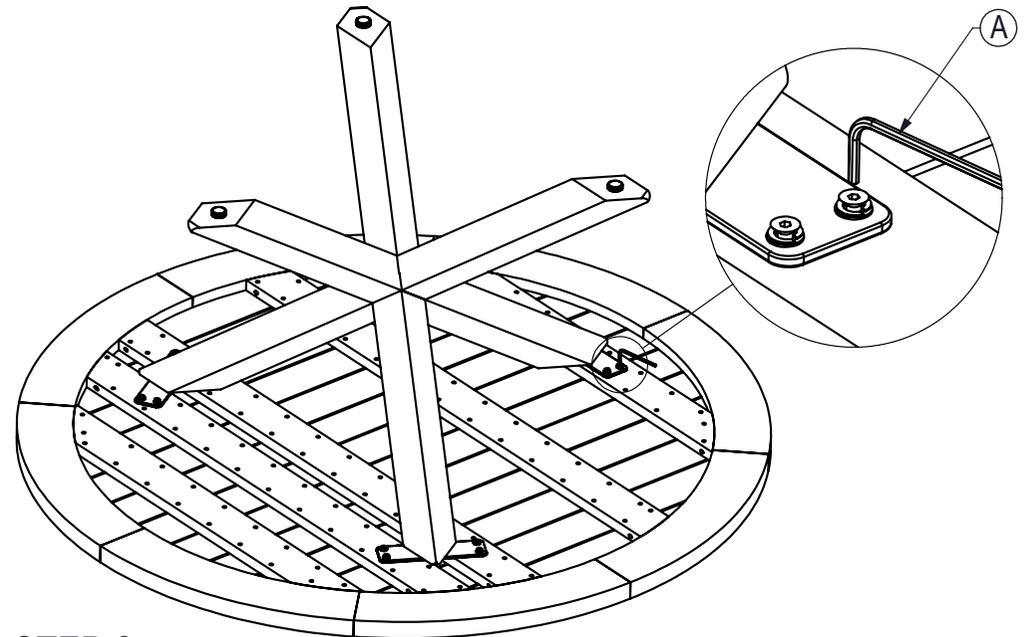


STEP 6

TIGHTEN THE BOLT AFTER ALL SET ON THE SCREW HOLES

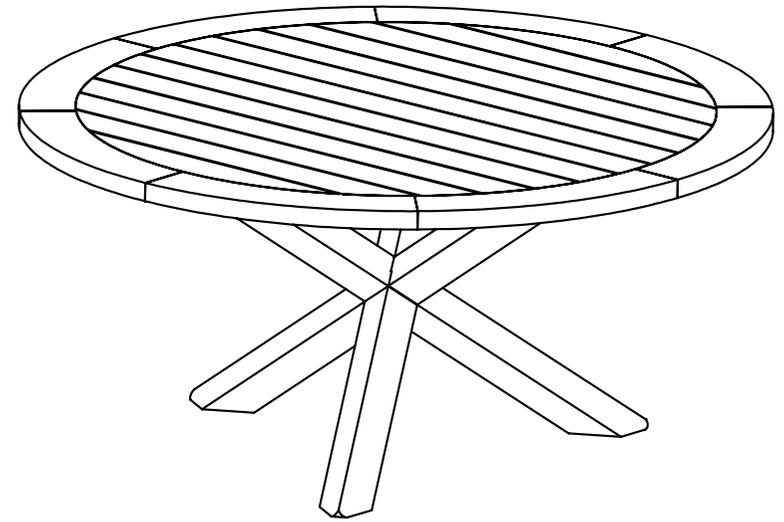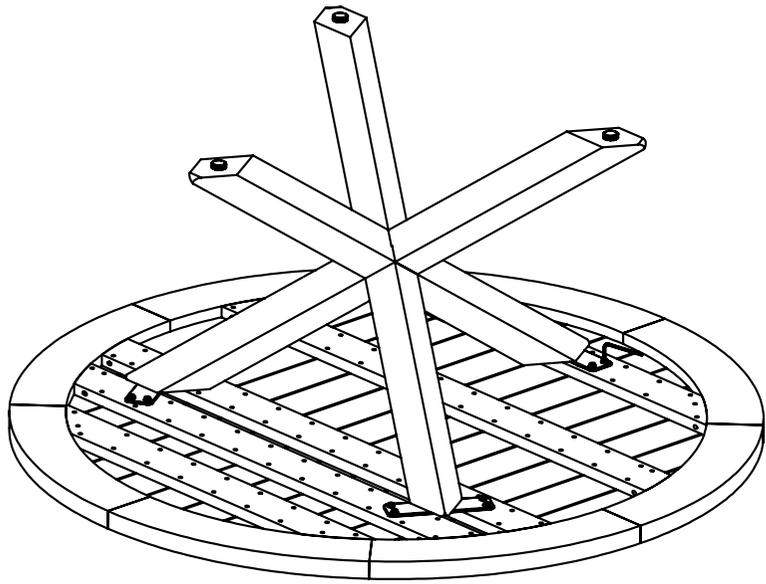

STEP 7

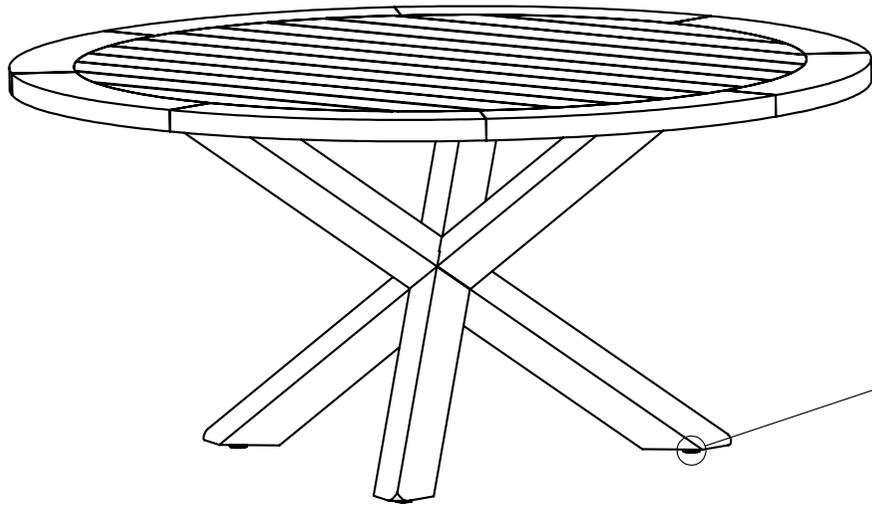

ADJUST FEET LEVERS  
FINISHED

STEP 8