

MAKE SURE THE LETTERS

Assembly Instruction

INSTRUCTION DE MONTÂGE MONTÂGEÂNLEITUNG SÂMLEVEJLEDNING Code

WJ115T

Hardware



1. F. Bolt (6 Pcs)

(Deliner-

2. Screw (4 Pcs)


Tool



Socket Wrench 4m/m Ht

Total Section

4 Section

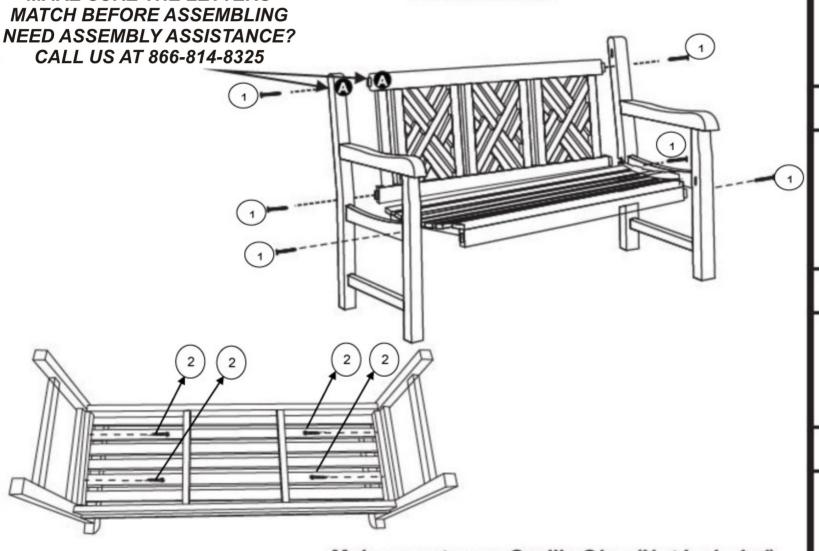

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly