


Assembly Instructions

3500034\3500035\3500036


Etude KD Accent Chair

List	Picture	Description	Qty	List	Picture	Description	Qty
a		BOLT Ø M8*75MM	8	A		BODY	1
b		LOCK WASHER	8				
c		FLAT WASHER	8	B		FRONT LEG	2
d		ALLEN KEY	1	C		BACK LEG	2

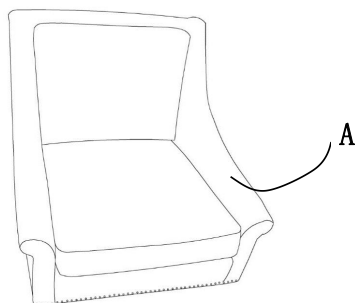


STEP 1

Open the dust cover to find the legs.

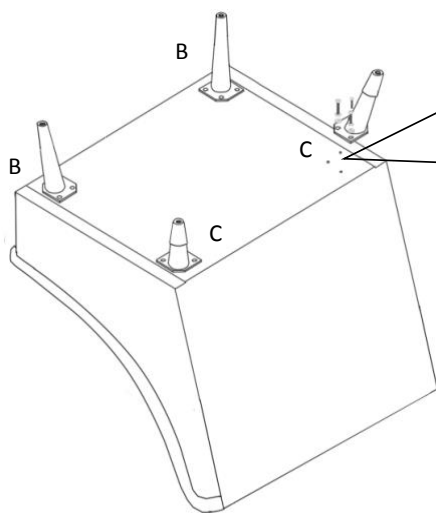


STEP 3

Fix each leg at the bottom of the chair

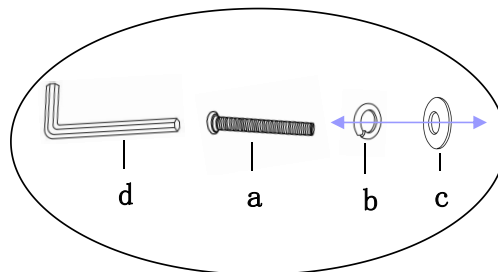

STEP 2

Insert the lock washer (b) and plat washer (c) over the bolt (a).

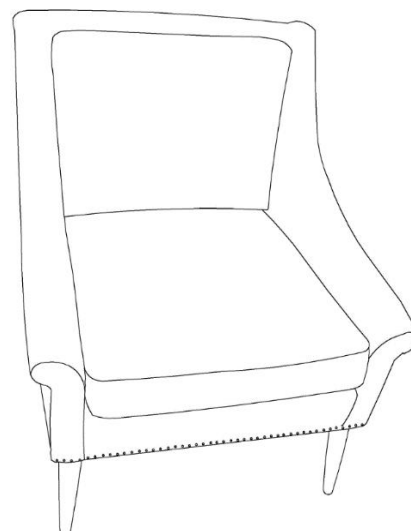

STEP 4