





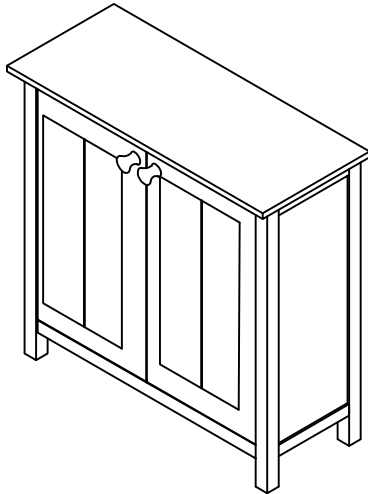
















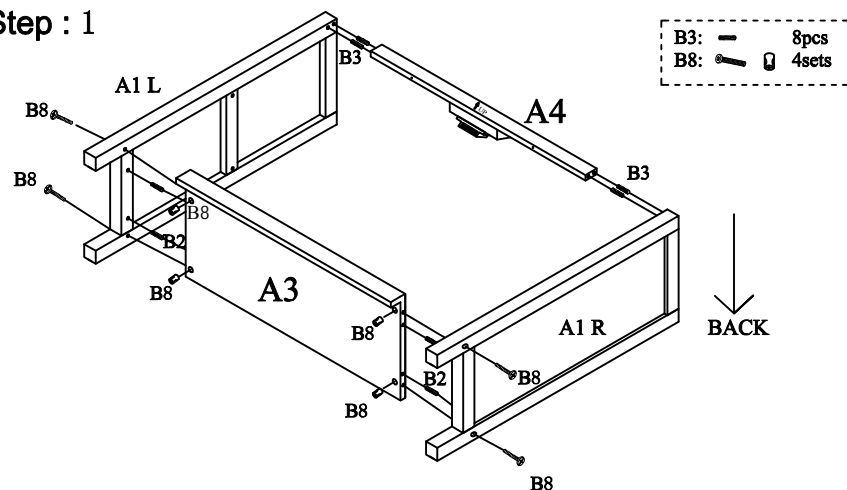



Assembly Instructions	Tools Required	Hardware Provided		
<div></div> <div>Please read carefully the instructions sheet before assembling this item. It is recommended that this item should be assembled by two adults.</div>	<div></div> <div>ALLEN WRENCH INCLUDED</div> <div></div> <div>Phillips screwdriver</div>	<div><div>B1</div><div></div><div> cam lock bolts with nut</div><div>4SETS</div></div> <div><div>B2</div><div></div><div>wood dowel</div><div>8PCS</div></div> <div><div>B3</div><div></div><div>Small wood dowel</div><div>4PCS</div></div> <div><div>B4</div><div></div><div>Shelf Peg</div><div>4PCS</div></div> <div><div>B5</div><div></div><div>Wood screw</div><div>2PCS</div></div> <div><div>B6</div><div></div><div>small wood screw</div><div>16PCS</div></div> <div><div>B7</div><div></div><div>Knob with machine screw</div><div>2SETS</div></div> <div><div>B8</div><div></div><div>Machine bolt with nut</div><div>4SETS</div></div> <div><div>B9</div><div></div><div>Wood Button</div><div>4PCS</div></div> <div><div>B10</div><div></div><div>Magent hardware</div><div>1SET</div></div> <div><div>B11</div><div></div><div>Small wood screw</div><div>8PCS</div></div>		
	<div></div> <div>Note: Please don't over tighten the cam screws. Assure the cam screws properly fits into the plastic threaded insert. Otherwise the cam nut might not be able to catch the cam screws.</div>			
Furniture Parts				
<div></div> <div>A1 L&R 2PCS Side Panel</div>	<div></div> <div>A2 1PCS Middle Shelf</div>	<div></div> <div>A3 1PCS Bottom Panel</div>	<div></div> <div>A4 1PCS Front Bar</div>	<div></div> <div>A5 1PCS Top Panel</div>
<div></div> <div>A6 1PCS Back Panel</div>	<div></div> <div>A7 L&R 2PCS Door</div>			

Step : 1




- 1). Attach A3 bottom panel to A1 left side panel using B8 machine screws and nuts & B2 wood dowels as shown.
- 2). Attach A4 front bar to A1 left side panel using B3 small wood dowels.
- 3). Repeat above (1) & (2) with A1 right side panel.

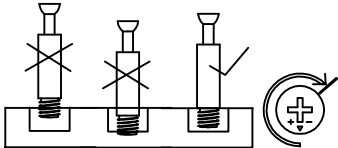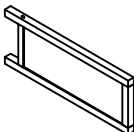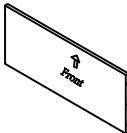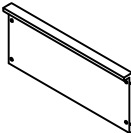Step : 2

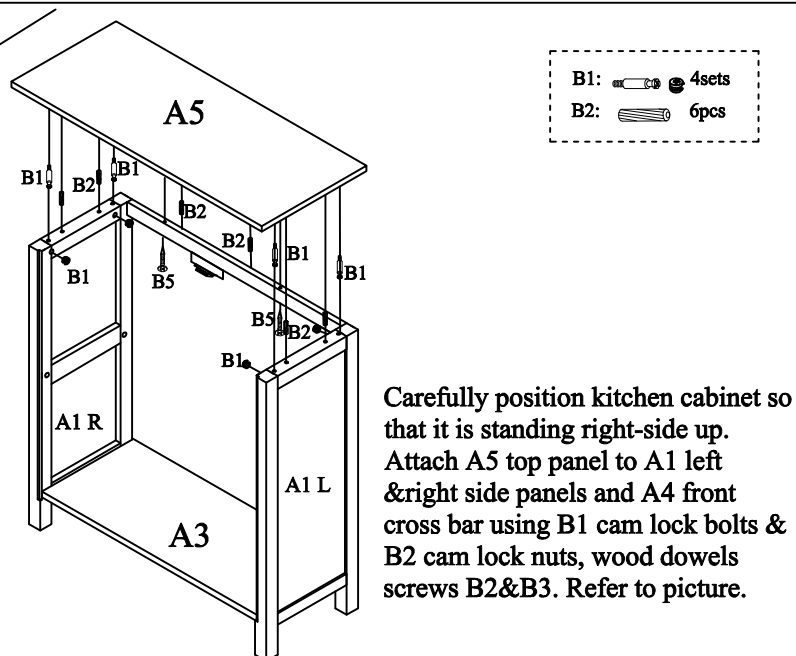


Carefully position kitchen cabinet so that it is standing right-side up. Attach A5 top panel to A1 left & right side panels and A4 front cross bar using B1 cam lock bolts & B2 cam lock nuts, wood dowels screws B2&B3. Refer to picture.

Step : 3

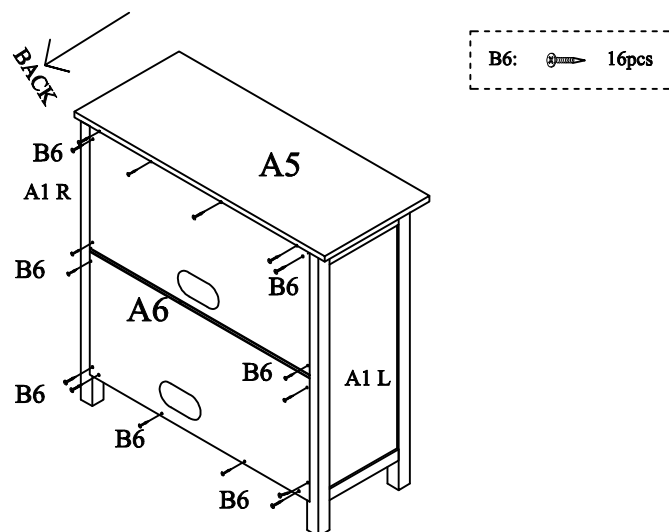

Attach A6 back panel to A1 left & right side panels using B6 small wood screw.


Step : 4

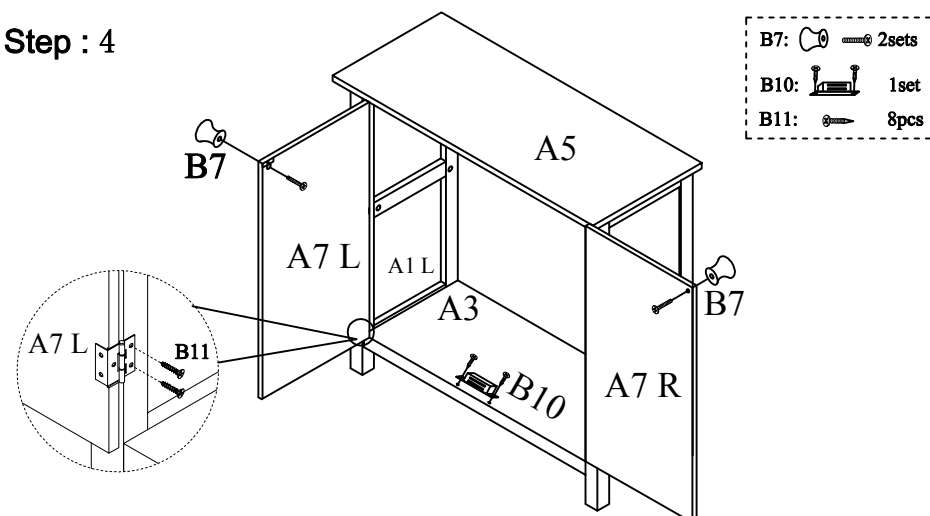

- 1). Attach A7 left & right doors to A1 left & right side panels using B11 small wood screws.
- 2). Attach B7 knobs to A7 doors using the machine screw included in the set.
- 3). Attach B10 magnet hardware to A3 bottom panel using the screws included in the set. For placement, refer to picture.

Step : 5


B4:  4pcs

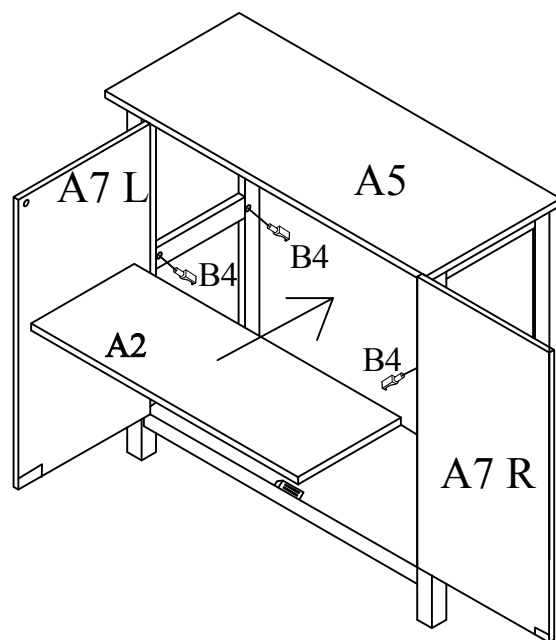

Insert B4 shelf pegs in pre-drilled holes on the inside of A1 left & right side panels. Carefully slide A2 middle shelf into the stand so that it rests level on B4 shelf pegs.

Step : 6

B9:  4pcs

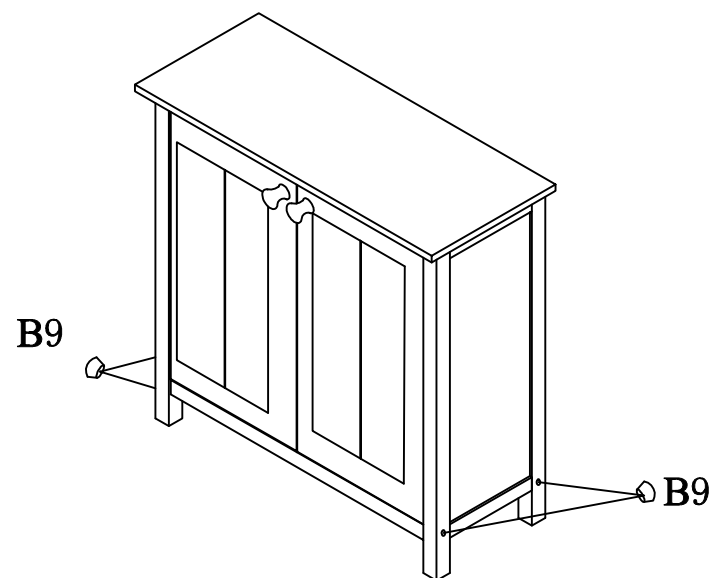

Carefully hammer B9 wood buttons on to A1 left & right side panels to cover up hardware.

Note : Too much force can cause damage to the wood button or kitchen cabinet.