





Item # : OAW4BS
Assembly Instructions

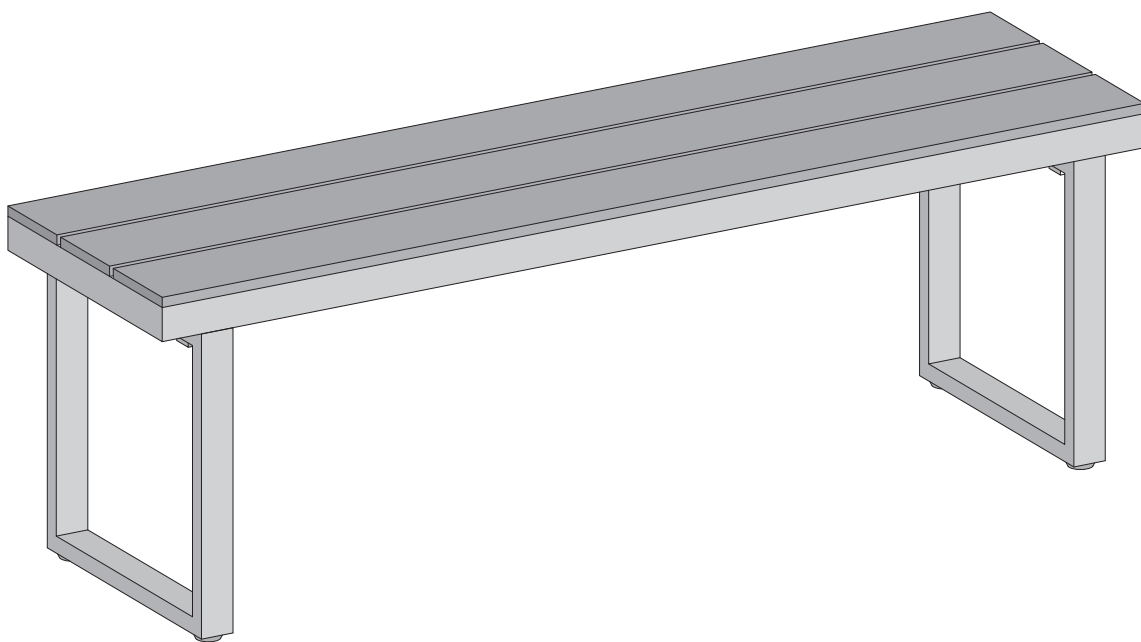





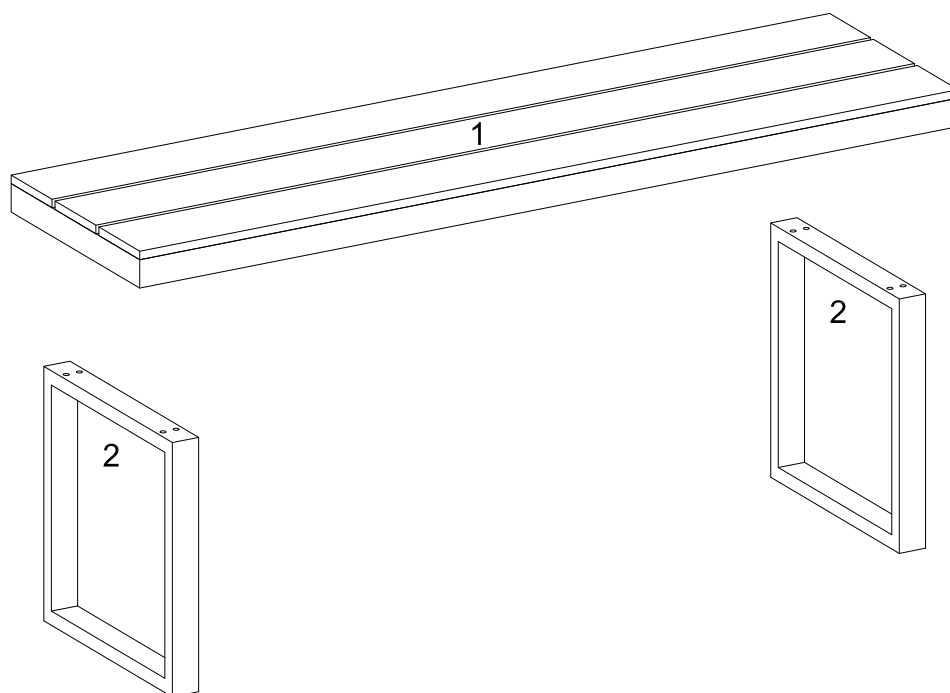

*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **www.walkeredison.com***

Revised 03/2017

Parts List




Hardware List

A		M6*42	Bolt	8 pcs
B			Spring washer	8 pcs
C			Washer	8 pcs
D			Aluminum plate	4 pcs
E			Plastic cap	8 pcs
F		M4	Wrench	1 pc


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

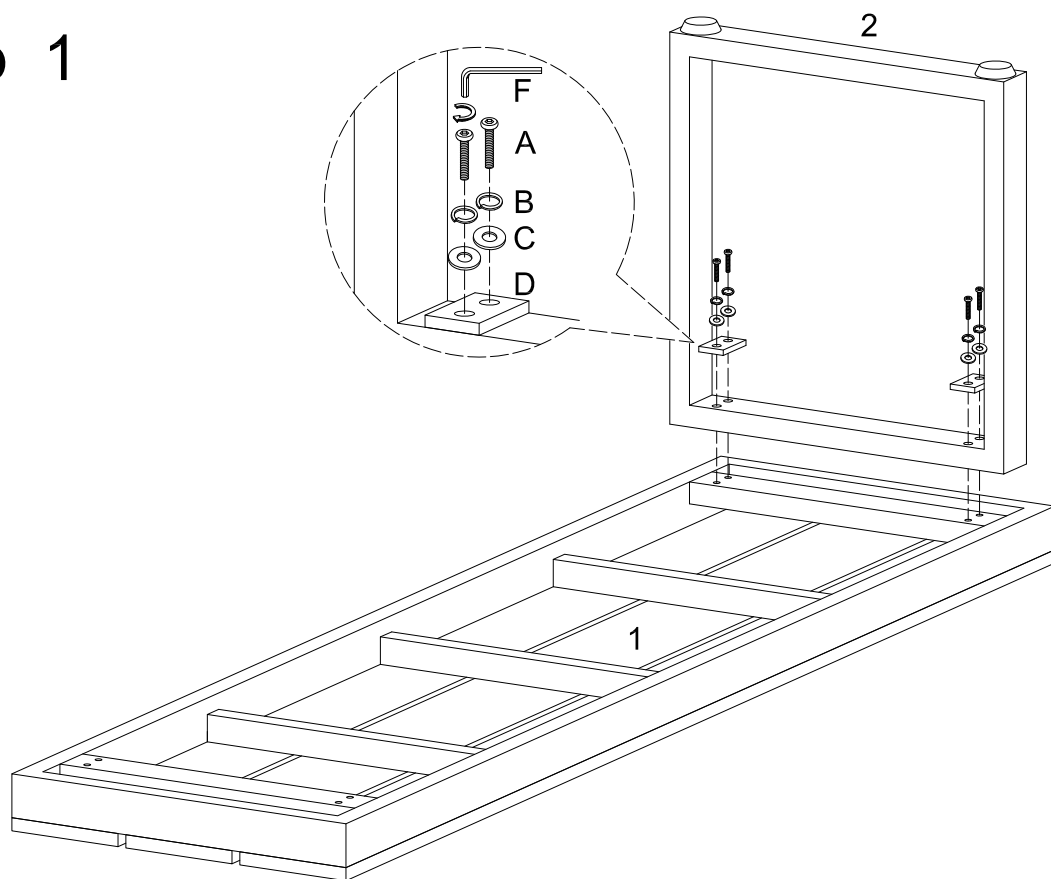


Assemble the side frame (2) to the bench (1) by using aluminum plate (D), washer (C), spring washer (B), bolts (A) and wrench (F).

Step 2

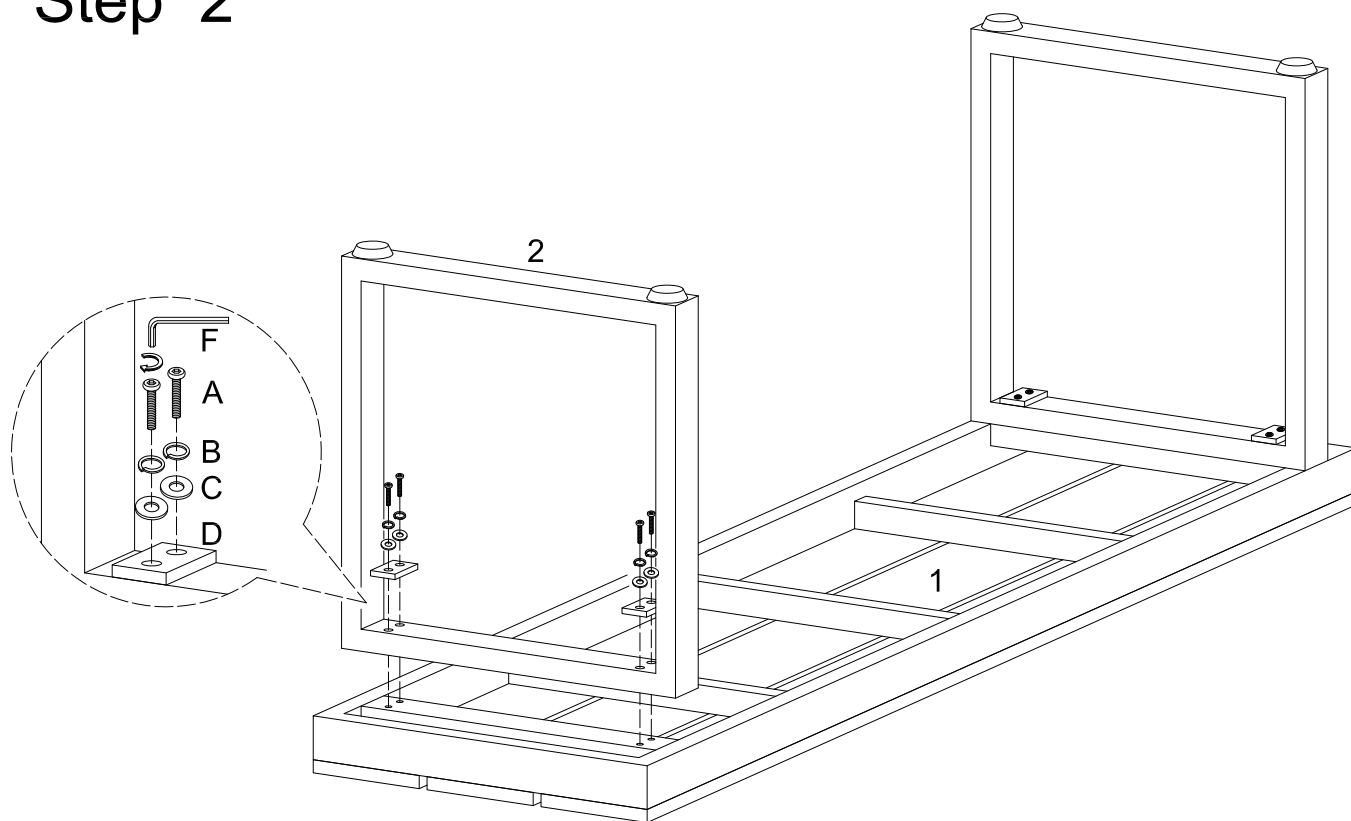


Repeat step #1 for the other side.

Step 3

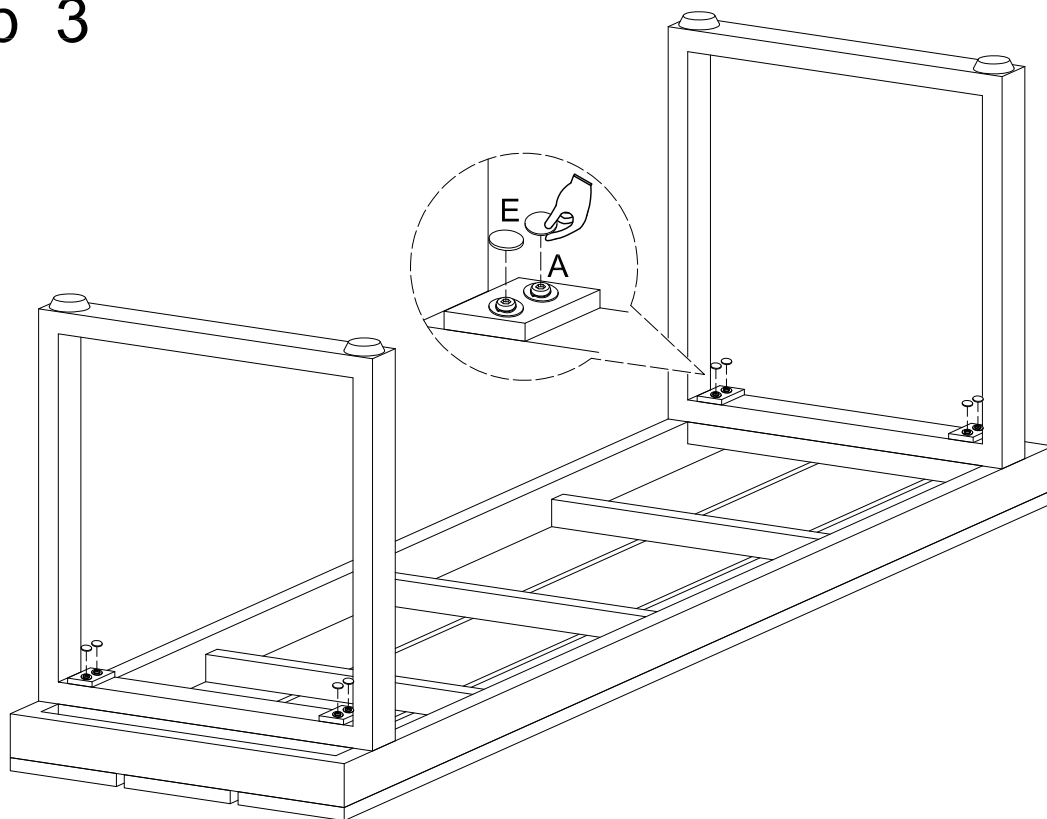

Cover all the bolts by plastic cover (F).

Step 4

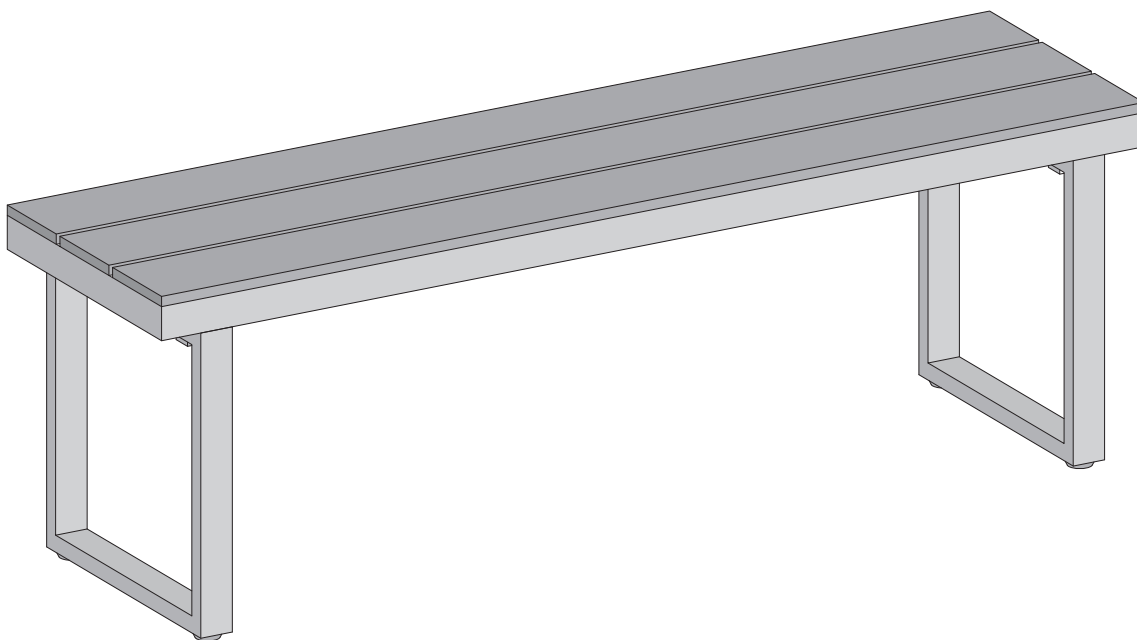

Final Assembly