


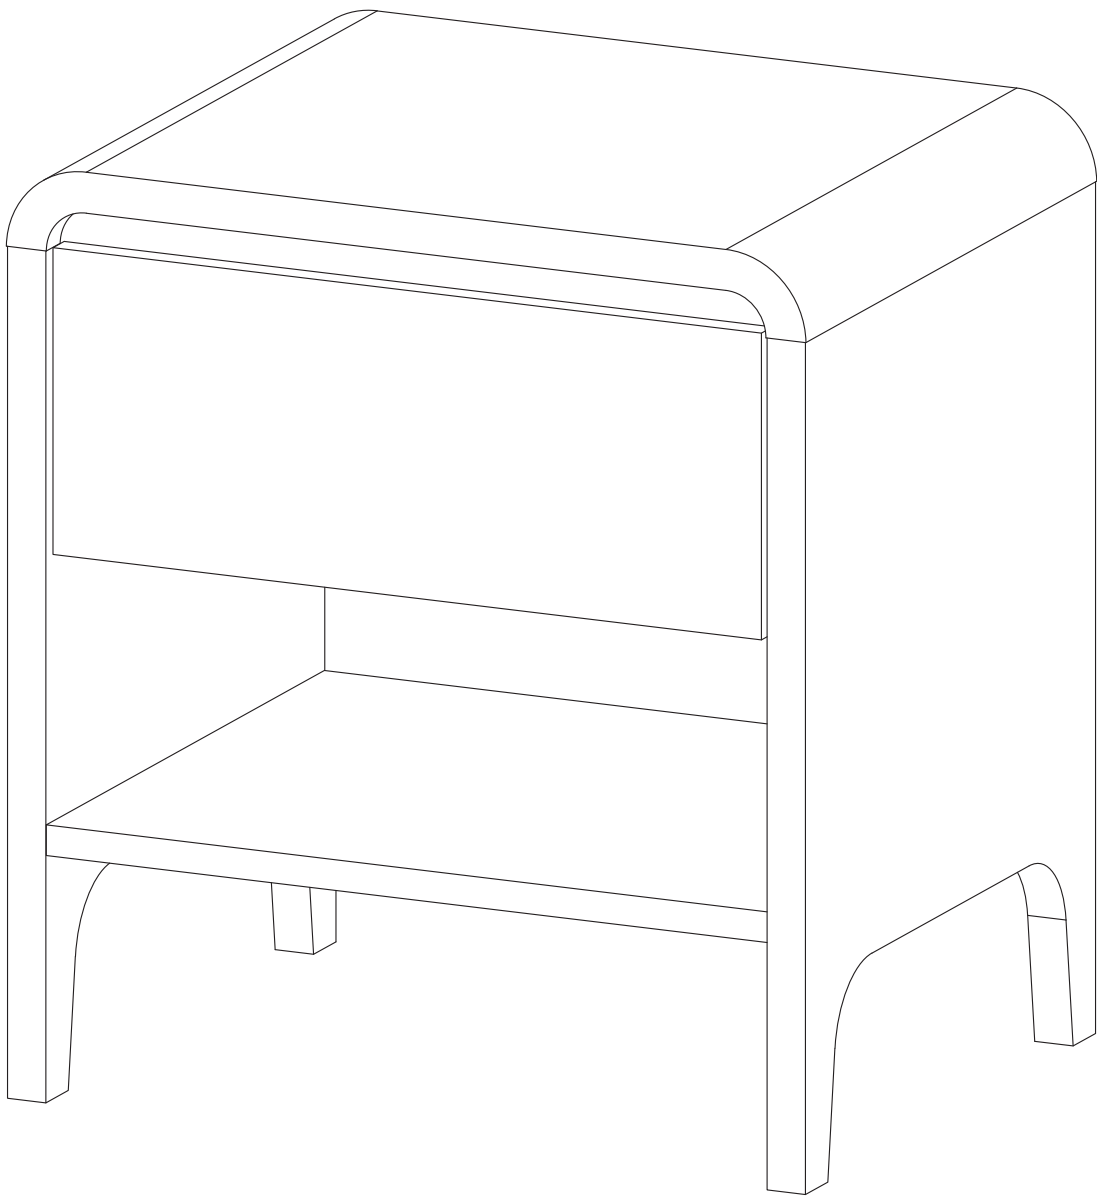


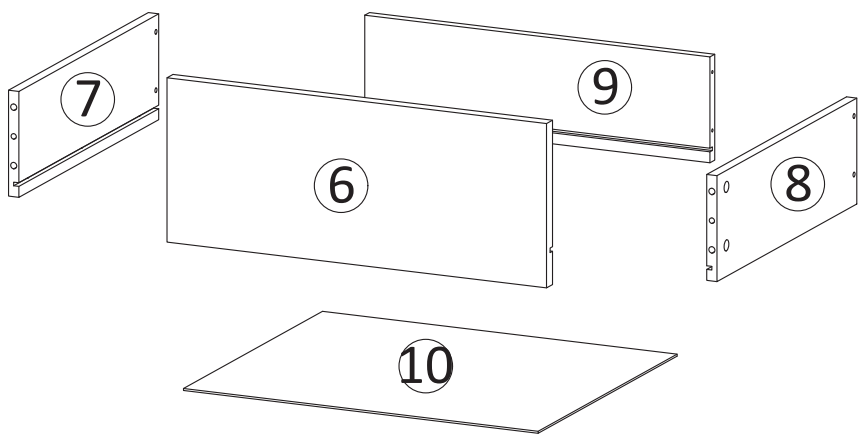

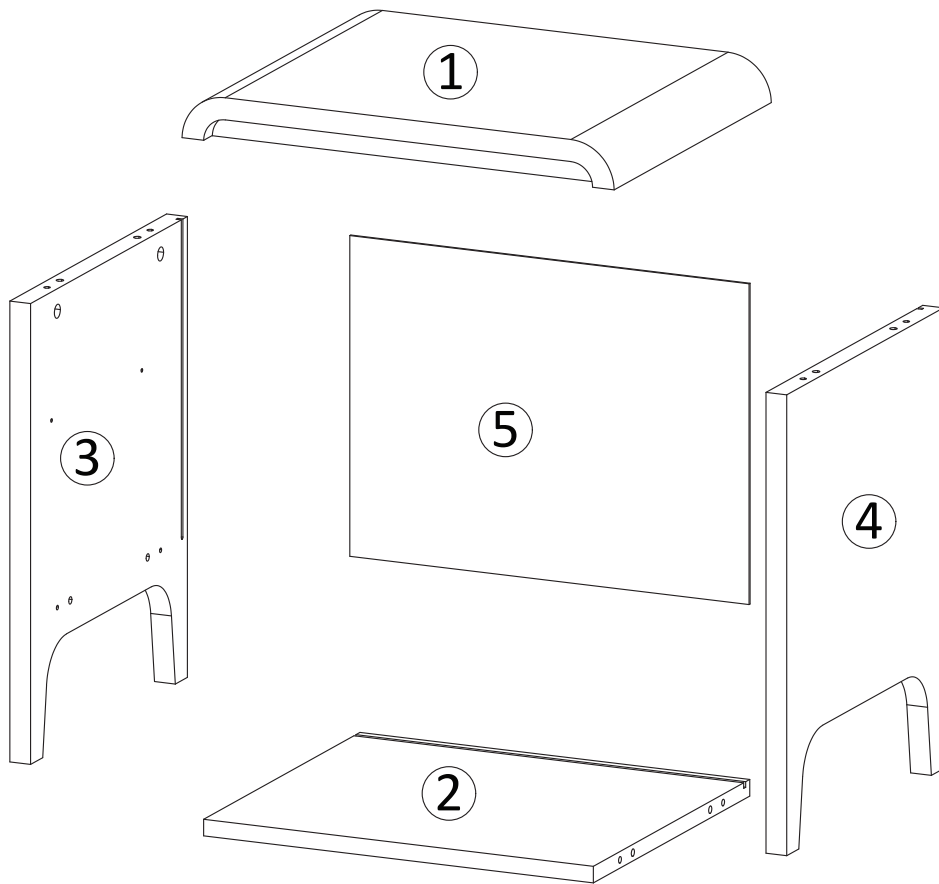








ASSEMBLY INSTRUCTION








Hardware




<p>A x 12</p>  <p>∅ 6 x 35 mm</p>	<p>B x 8</p>  <p>∅ 15 mm</p>	<p>C x 4</p>  <p>∅ 12 mm</p>	<p>D x 8</p>  <p>∅ 8 x 30 mm</p>
<p>E x 2</p>  <p>∅ 6 x 30 mm</p>	<p>F x 8</p>  <p>M 3.5 x 15.5 mm</p>	<p>G x 8</p> 	<p>H x 4</p>  <p>M 8 x 39 mm</p>
<p>I x 6</p>  <p>M 3.5 x 13 mm</p>	<p>J x 4</p>  <p>M 6 x 10.5 mm</p>	<p>K x 4</p> 	<p>RM35A x 1</p>  <p>350 mm</p>

 <p>SET-UP TIME : 45 MINUTES</p>	 <p>NUMBER OF PERSONS : 01</p>	 <p>TOOLS :</p>
---	--	---


1

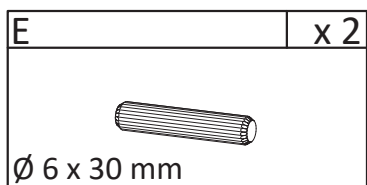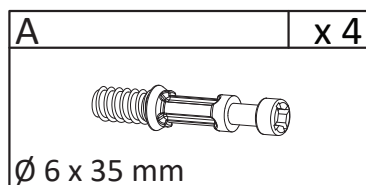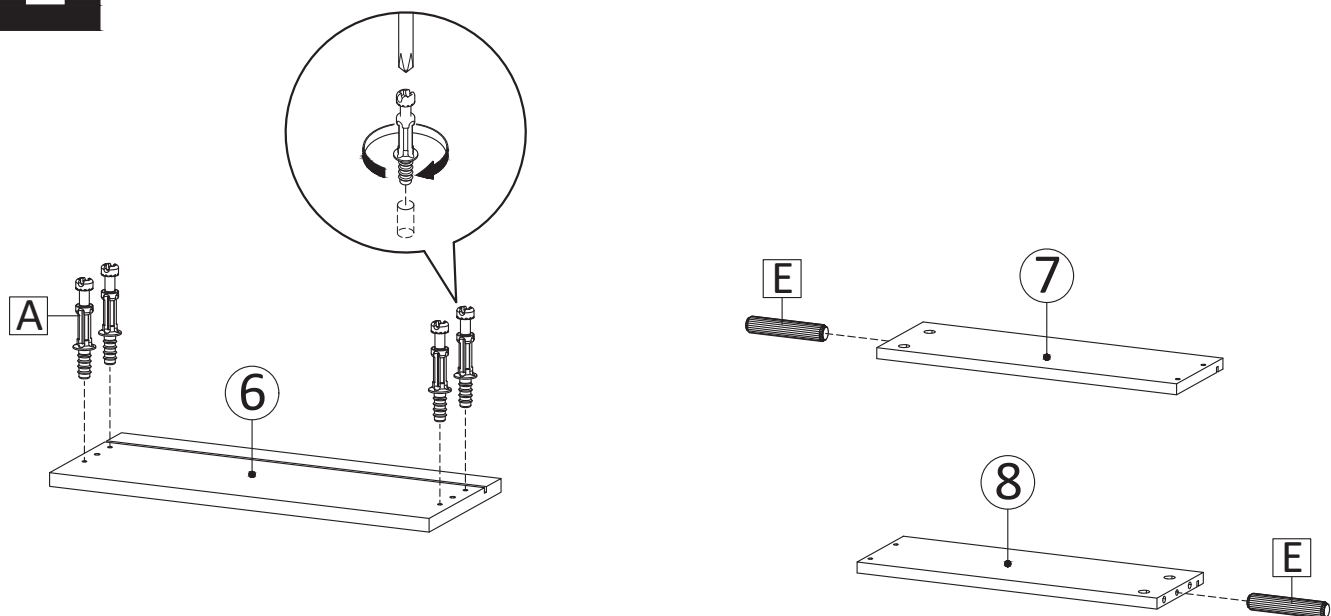





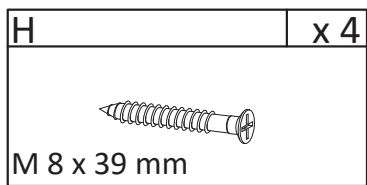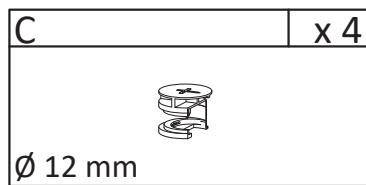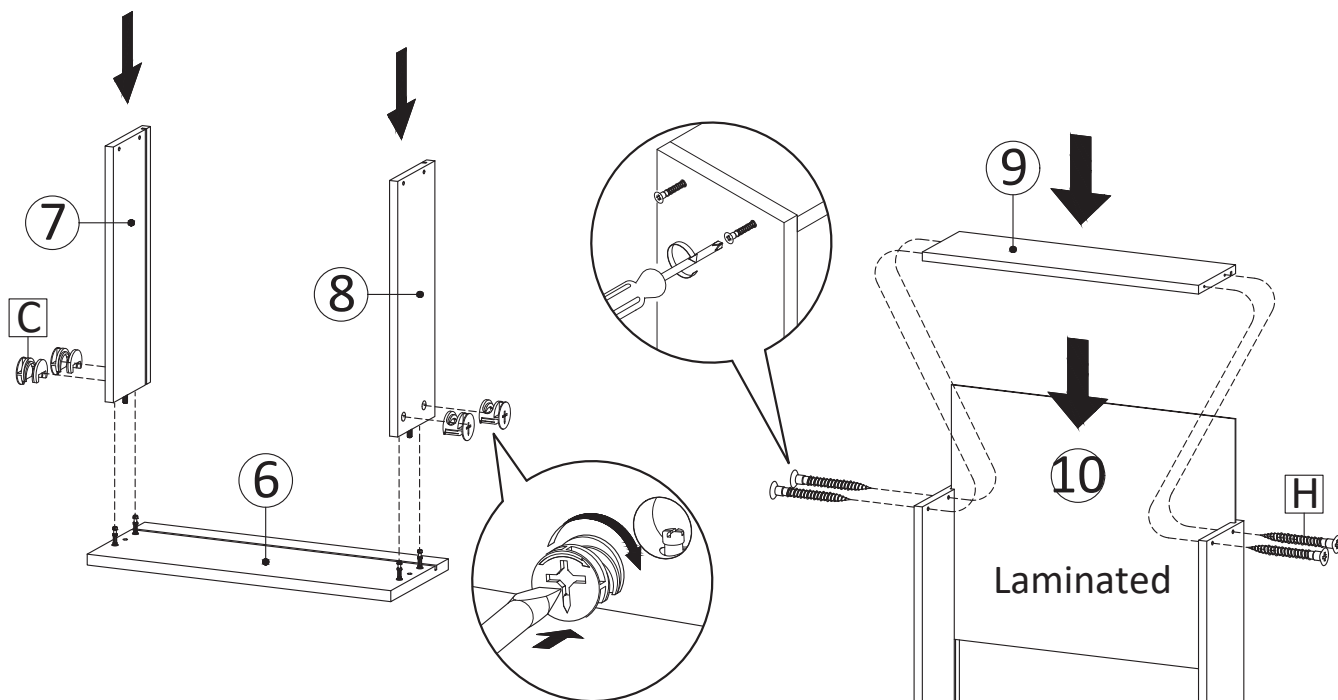2

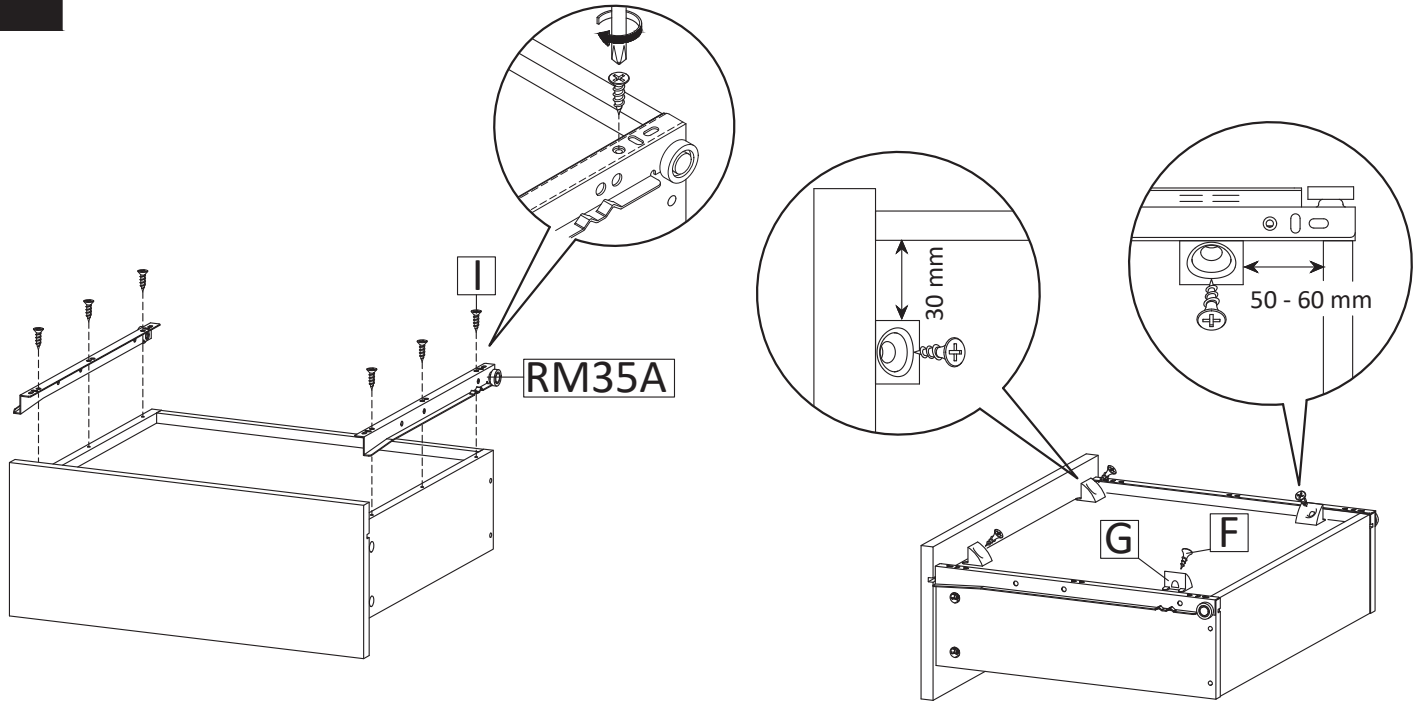






3





I	x 6	F	x 4	G	x 4	RM35A	x 1
 M 3.5 x 13 mm		 M 3.5 x 15.5 mm				 350 mm	


4

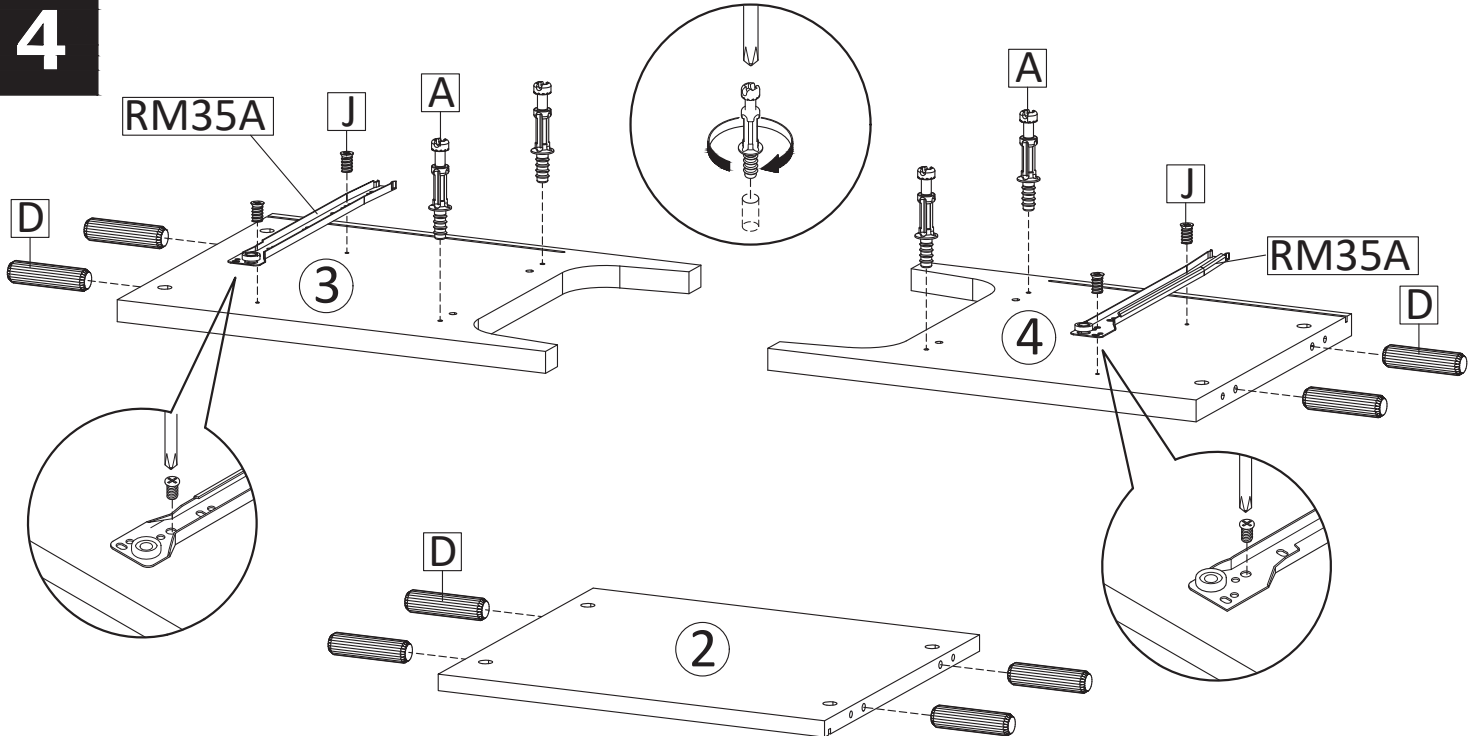


A	x 4	D	x 8	J	x 4	RM35A	x 1
 Ø 6 x 35 mm		 Ø 8 x 30 mm		 M 6 x 10.5 mm		 350 mm	



5

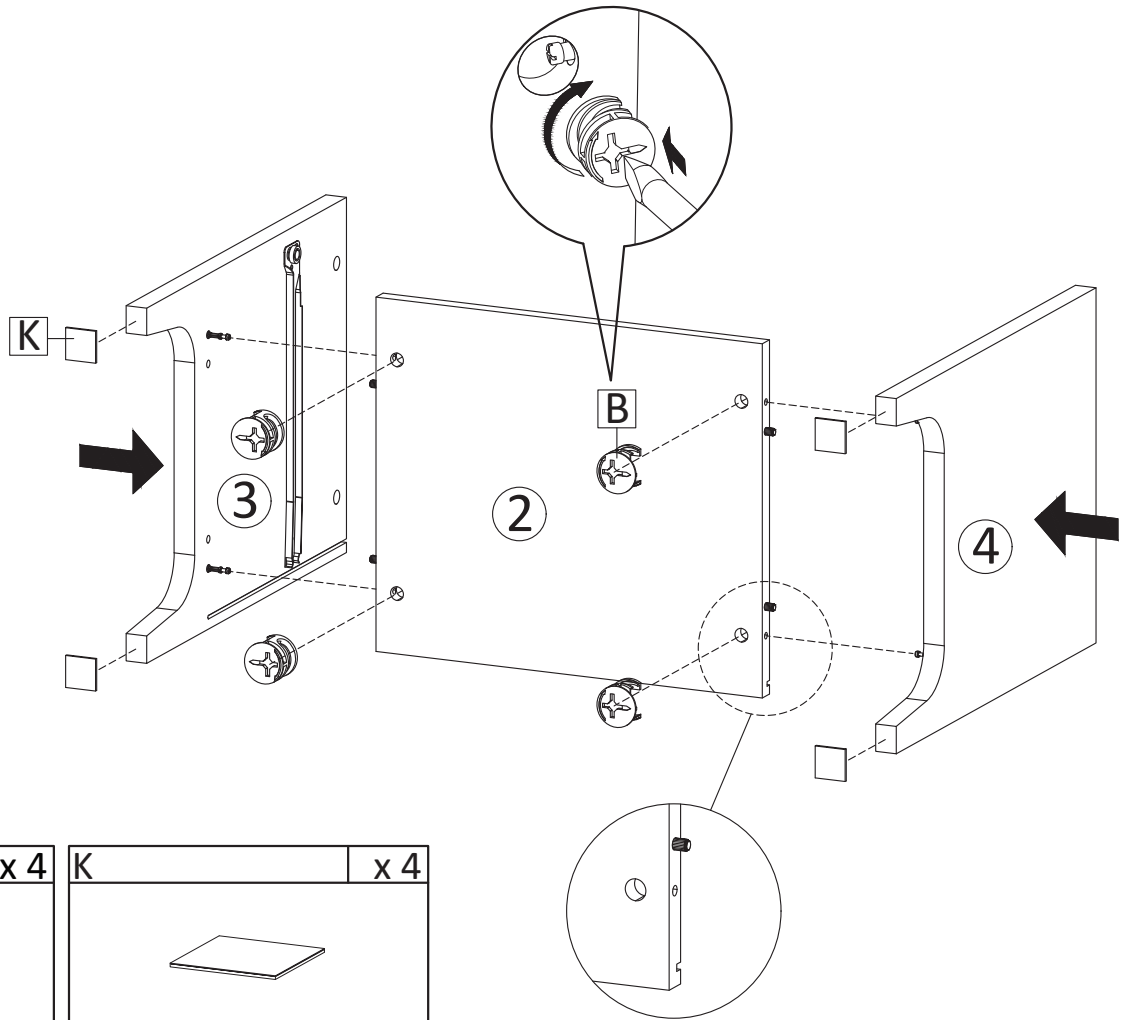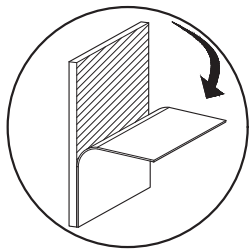


B	x 4
	
Ø 15 mm	




K	x 4
	

6

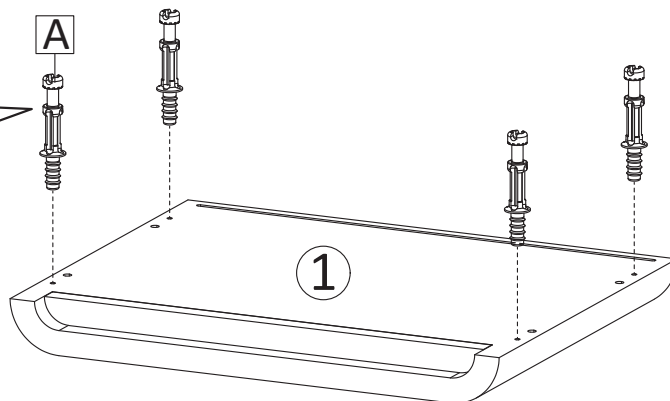
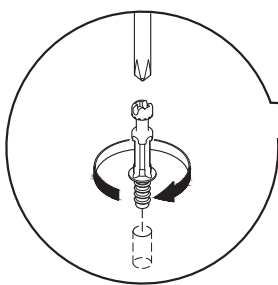


A	x 4
	
Ø 6 x 35 mm	



7

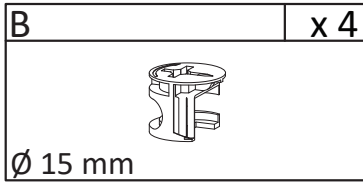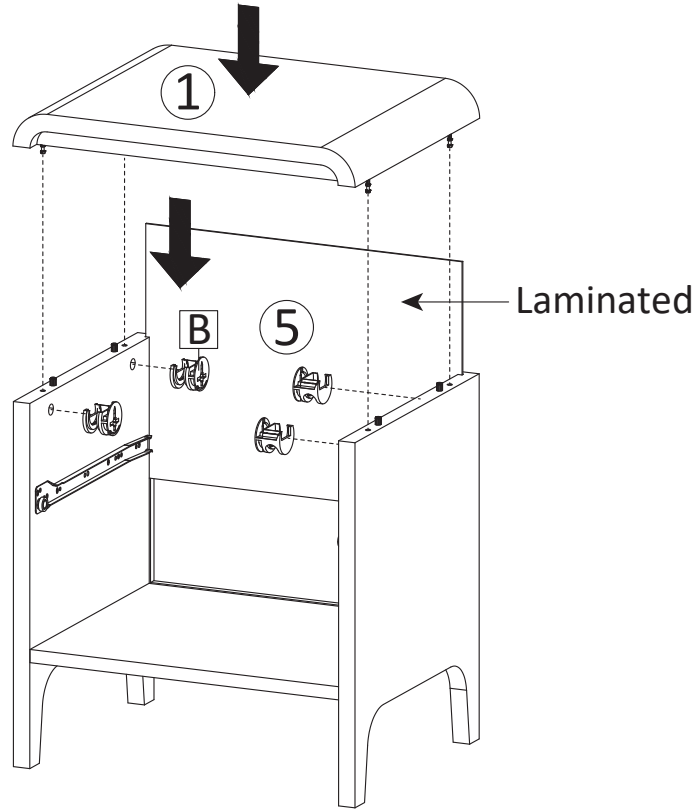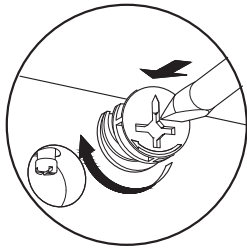

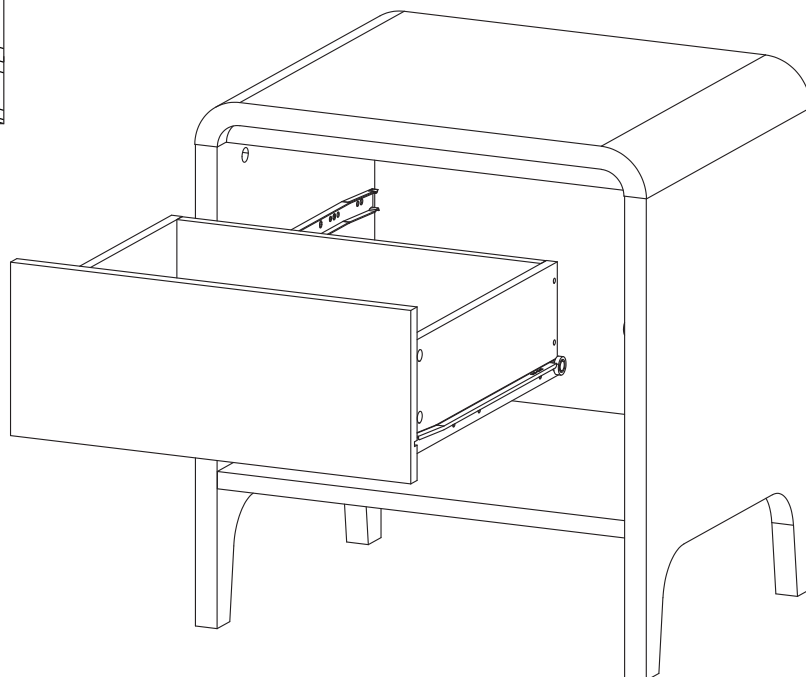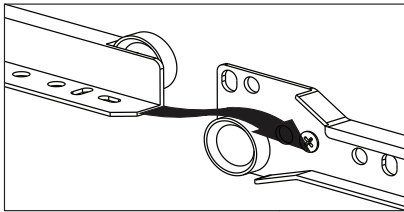

8

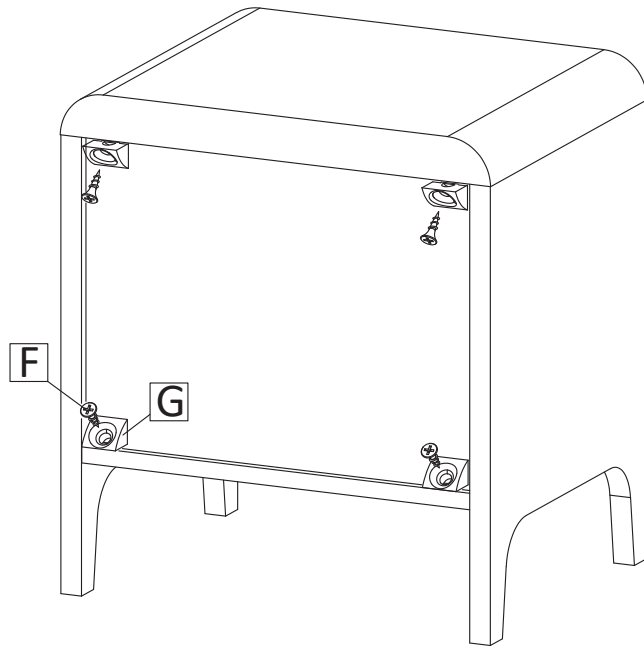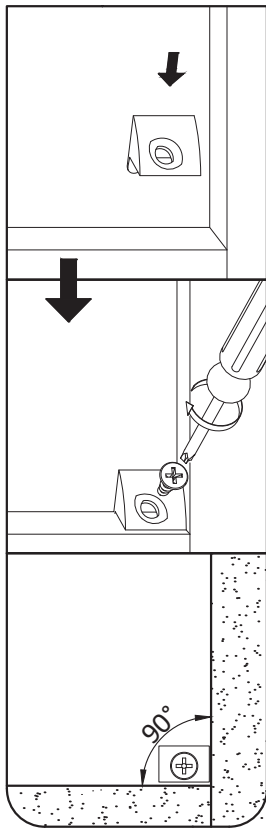

9



F	x 4
	
M 3.5 x 15.5 mm	

G	x 4
	

10

