


ASSEMBLY INSTRUCTION





RATTAN SOFA SET

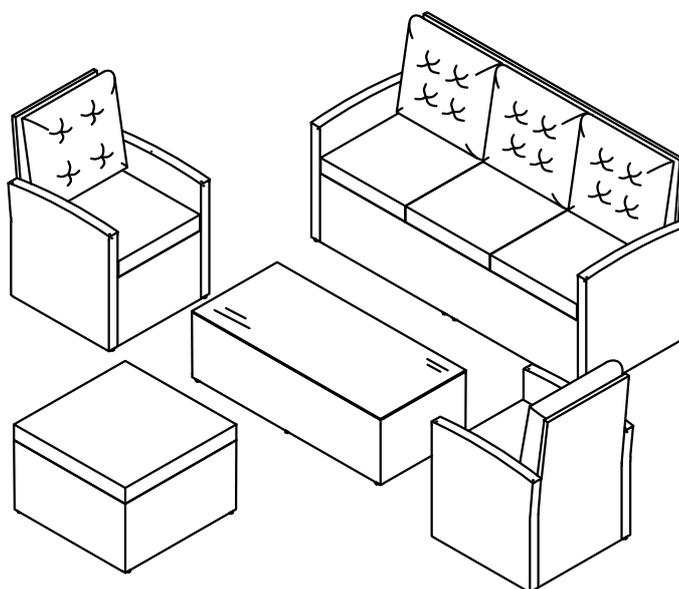


WF 299938; WF 299939

Notice

- 1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.**
- 2. Place the item on a flat ground to adjust and make sure it remains stable.**
- 3. Tighten up all screws with tools gradually.**
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**

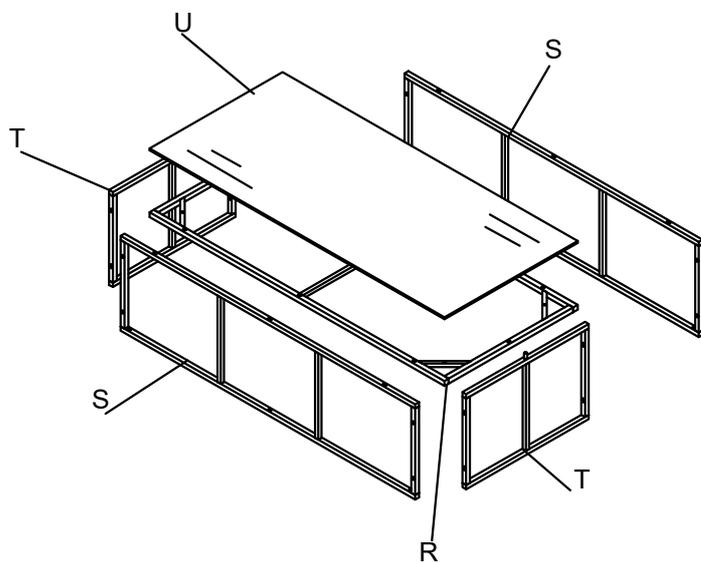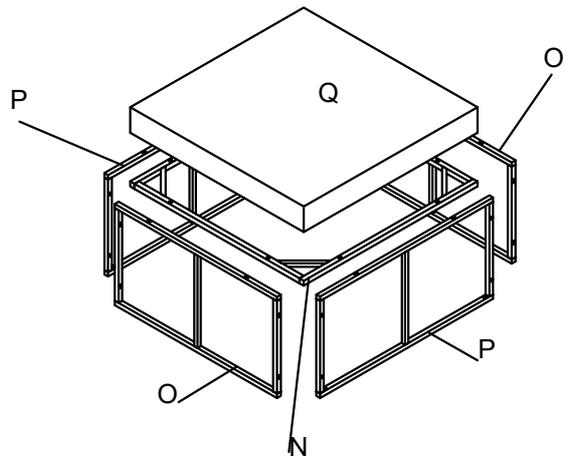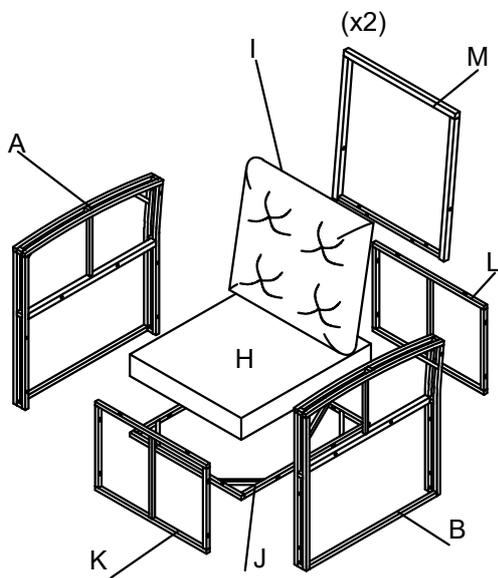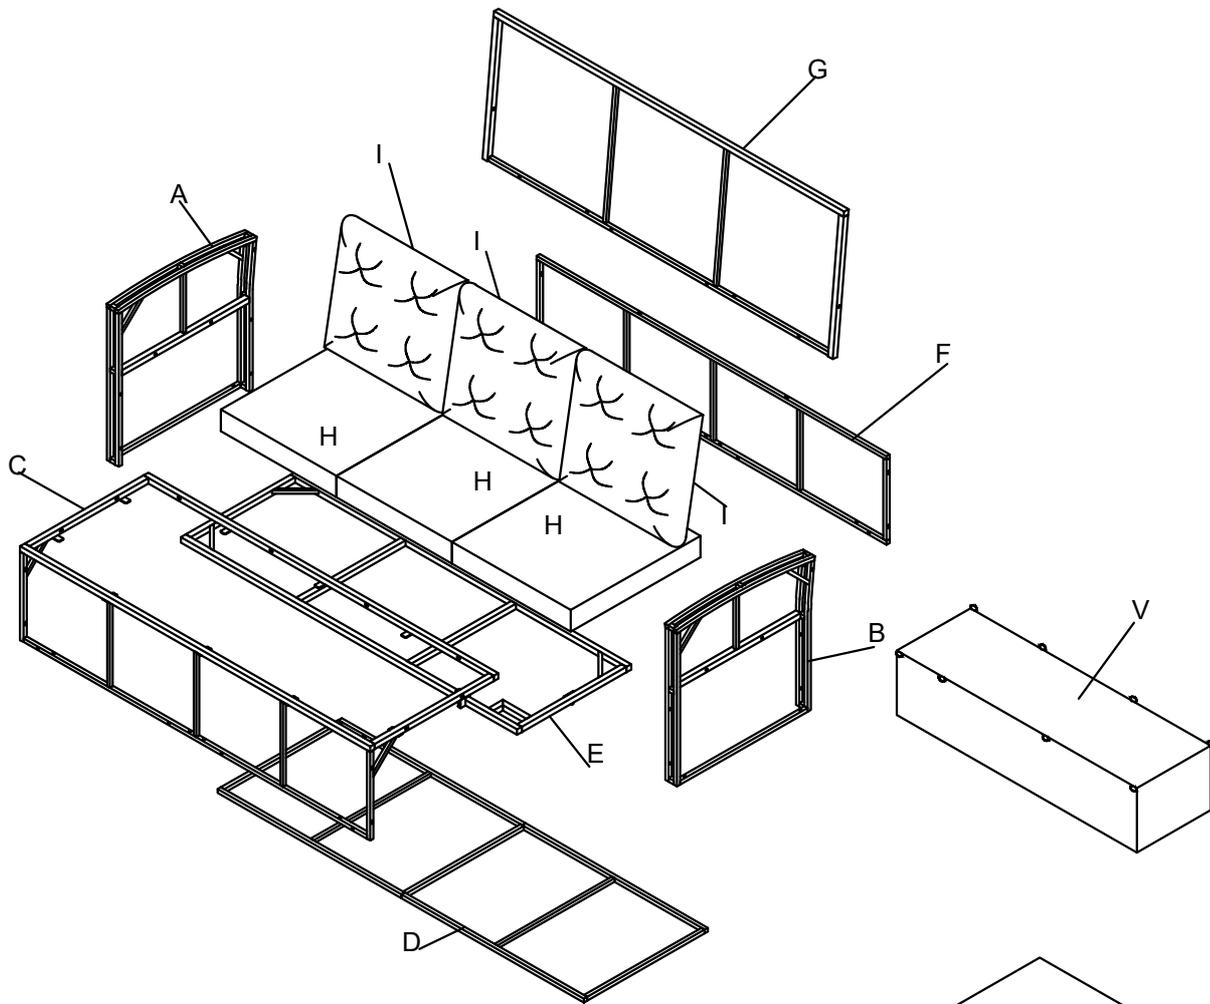


A

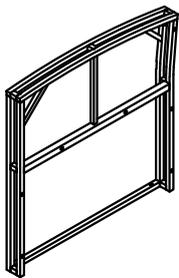


3 pcs

B

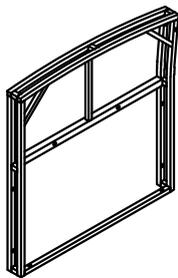


3 pcs

C

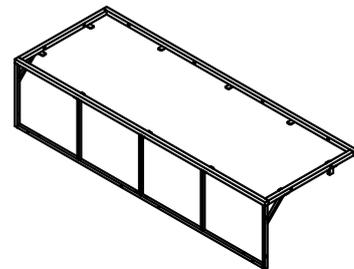


1 pc

D

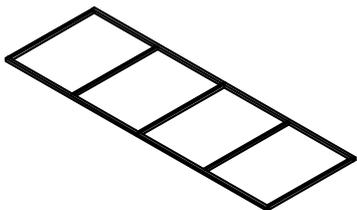


1 pc

E

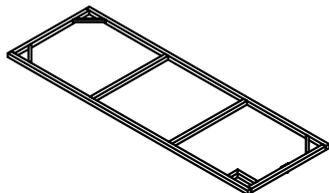


1 pc

F

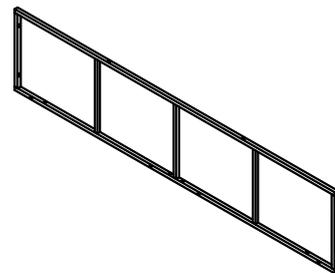


1 pc

G

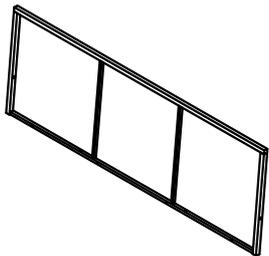


1 pc

H

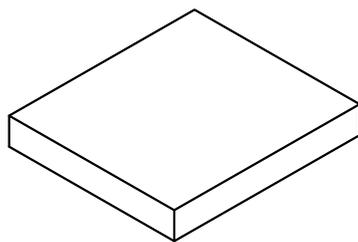


5 pcs

I

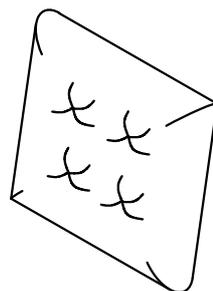


5 pcs

J

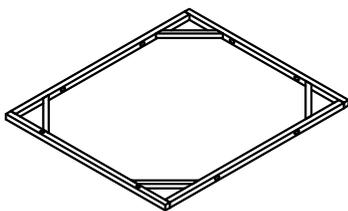


2 pcs

K

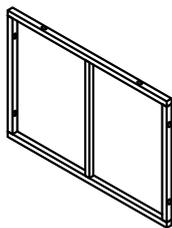


2 pcs

L

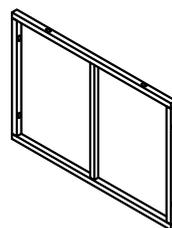


2 pcs

M

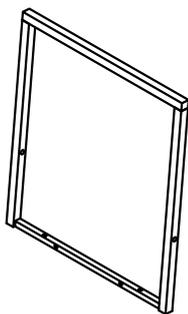


2 pcs

N

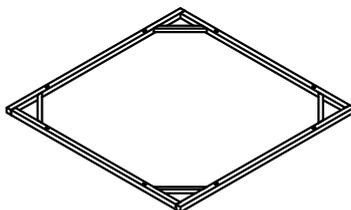


1 pc

O

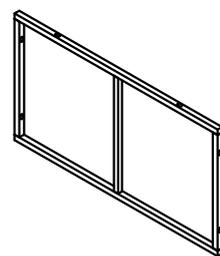


2 pcs

P

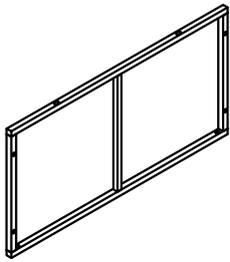


2 pcs

Q

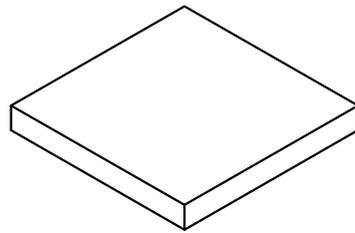


1 pc

R

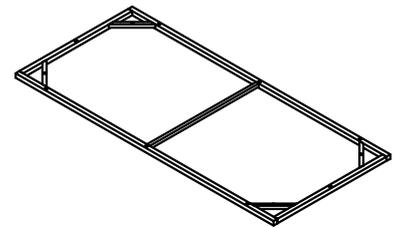


1 pc

S

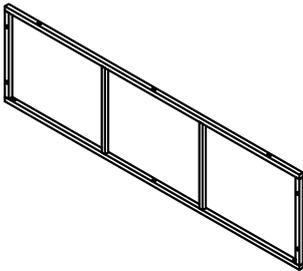


2 pcs

T

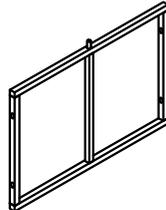


2 pcs

U

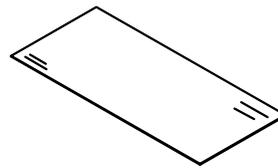


1 pc

V

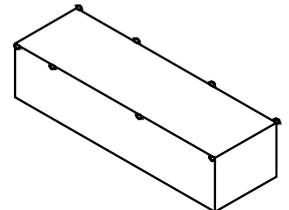

1 pc

1

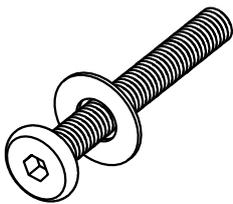

**Bolt M6x70 mm
(6 pcs)+extra 1 pc**

2



**Bolt M6x45 mm
(2 pcs)+extra 1 pc**

3



**Bolt M6x40 mm
(8 pcs)+extra 1 pc**

4




**Bolt M6x30 mm
(72 pcs)+extra 3 pcs**

5




**Bolt M6x15 mm
(8 pcs)+extra 1 pc**

6

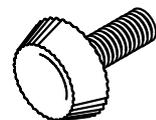

Plastic feet (26 pcs)

7

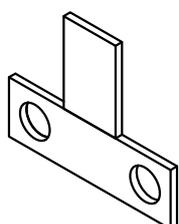

4 pcs

8




Gas spring(1 pc)

9




Plastic washer (2 pcs)

10

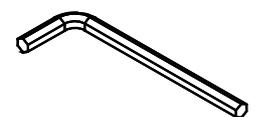


Allen key M4 (2 pcs)


WF 299938

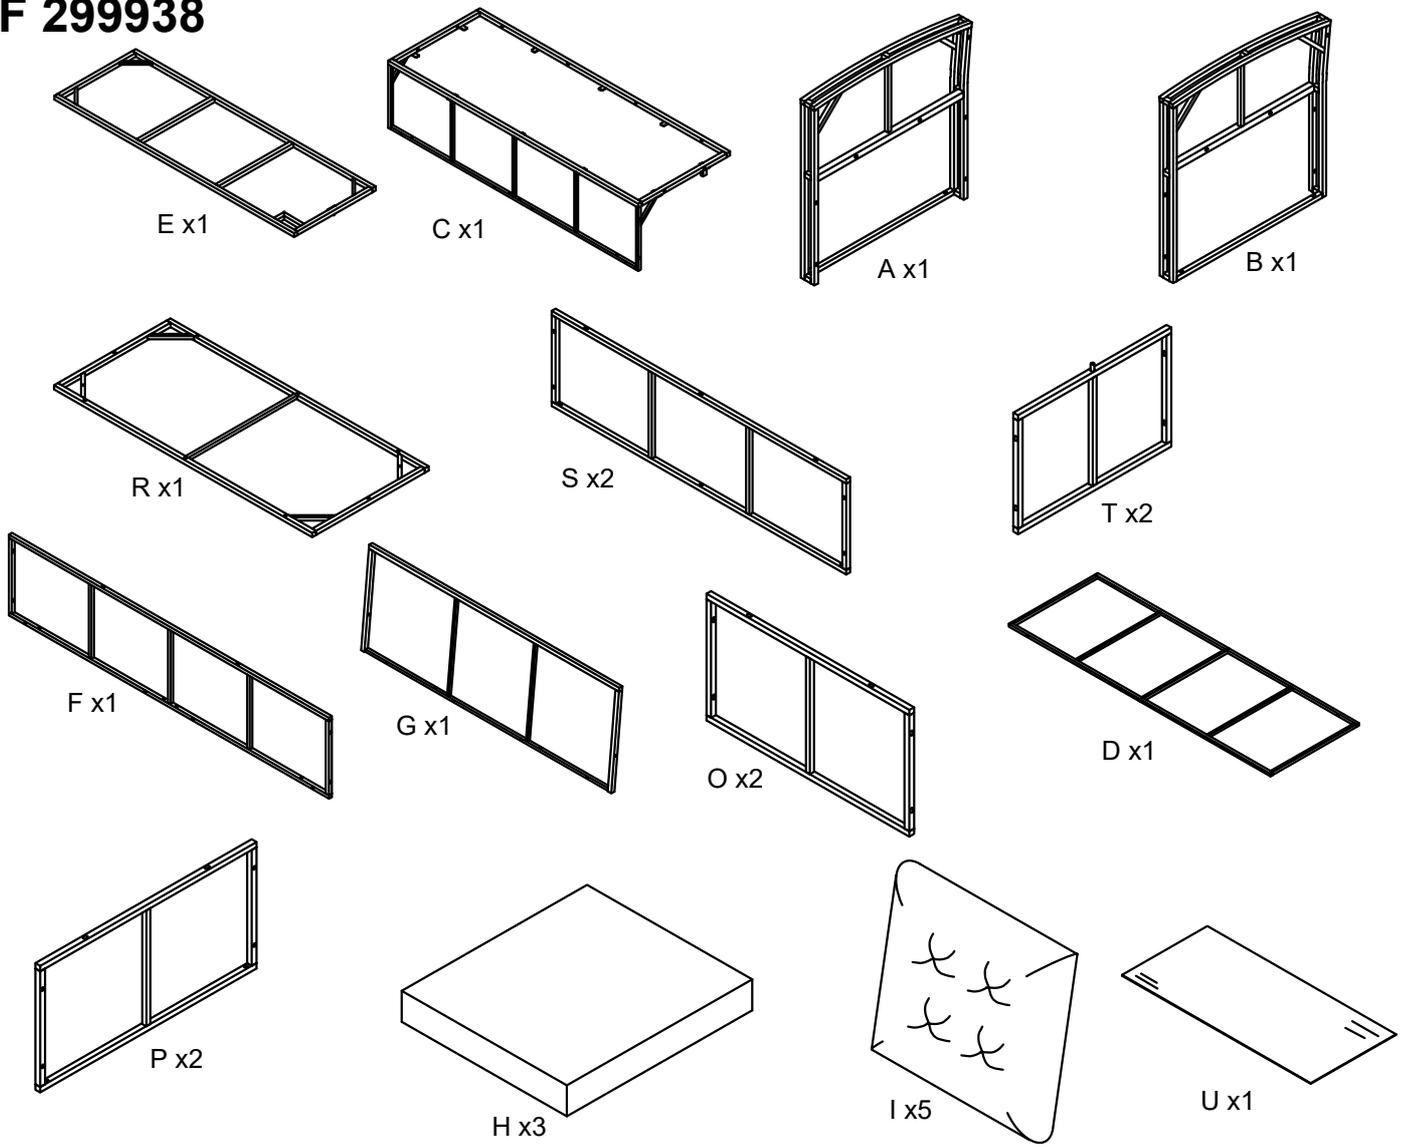

WF 299939

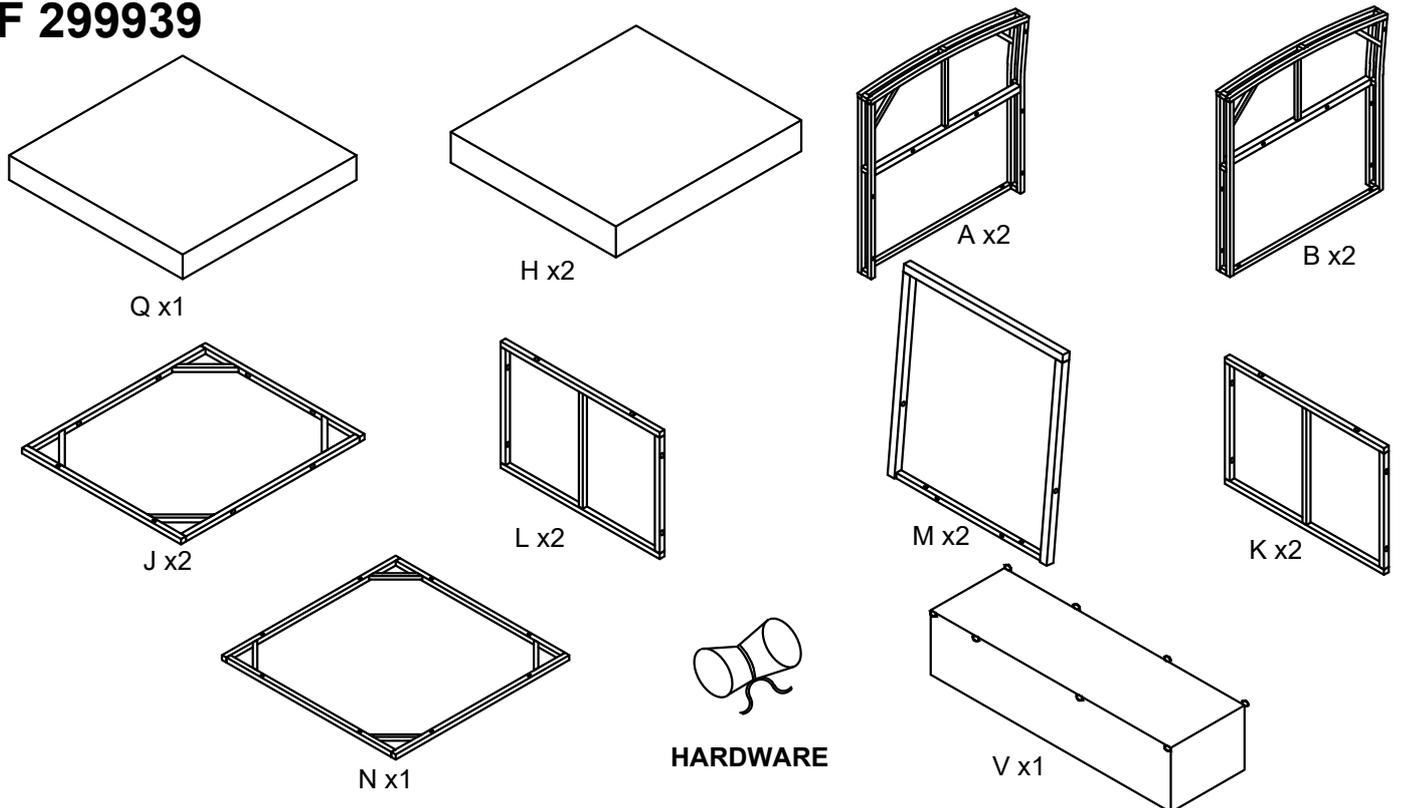


Step 1

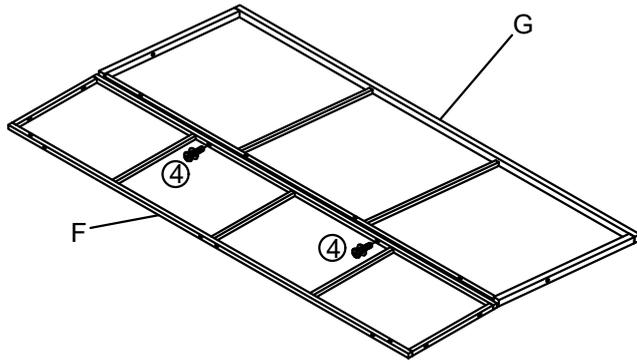


④ x2

Step 2

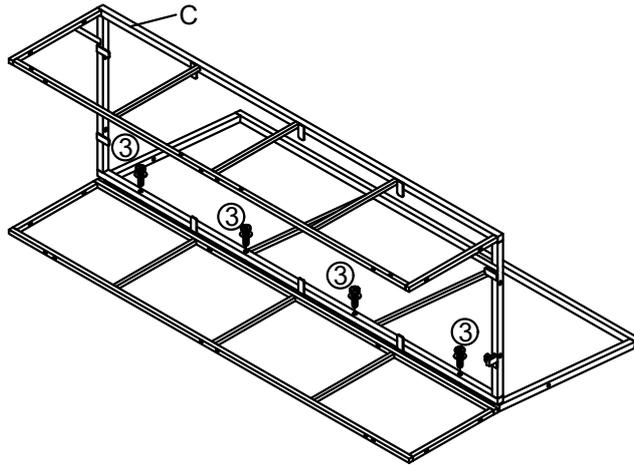


③ x4

Step 3

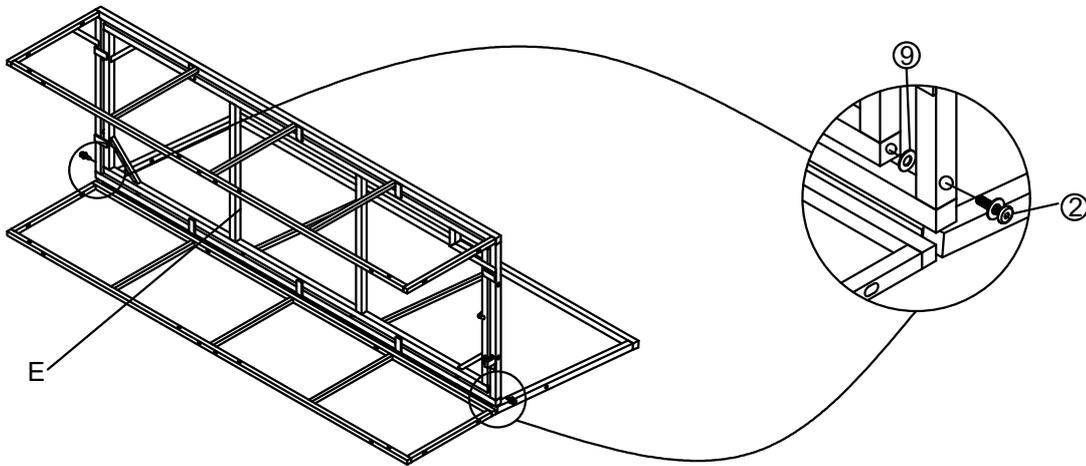


② x2 ⑨ x2

Step 4

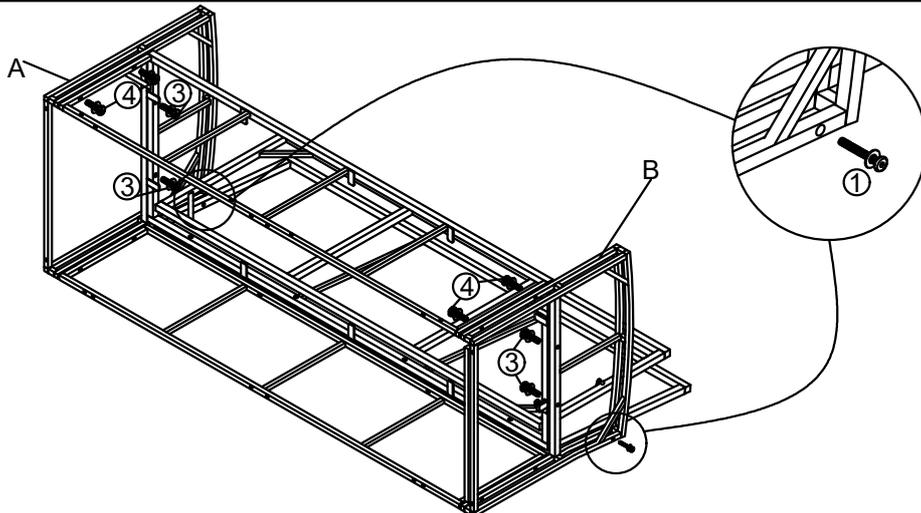

① x2 ③ x4 ④ x4


Step 5

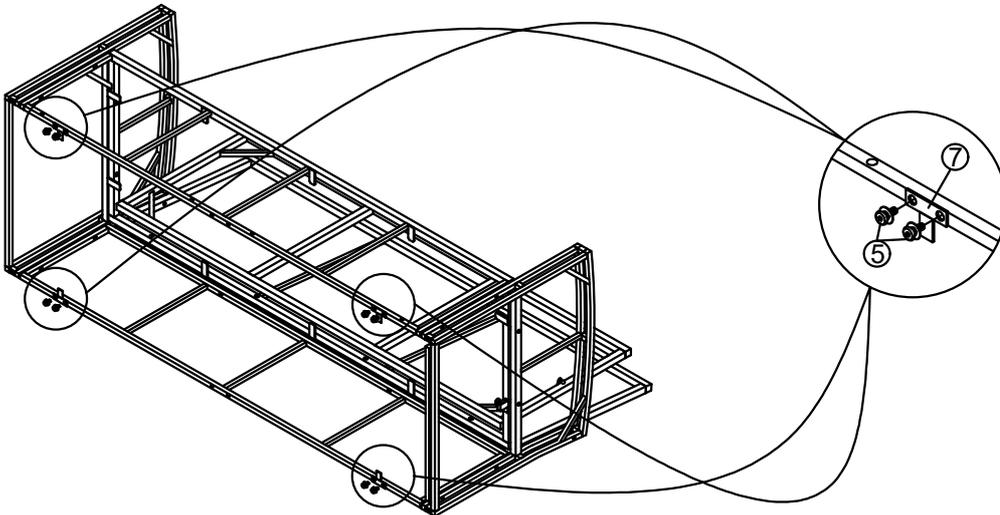

50% 

⑤ x8 ⑦ x4


Step 6

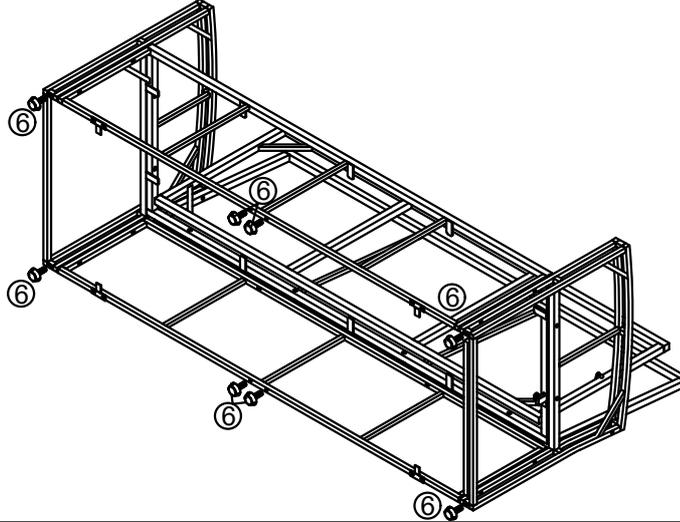

50% 


⑥ x8

Step 7

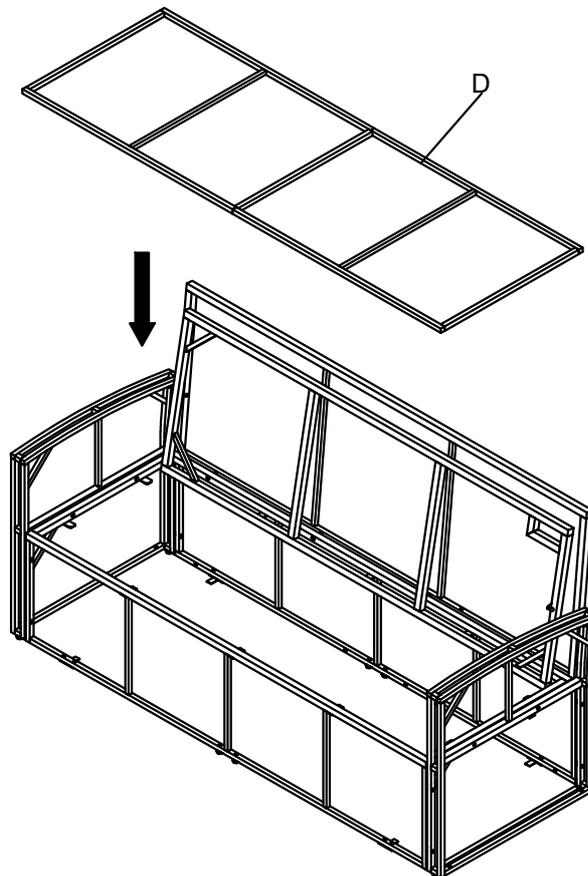


100% 

Step 8

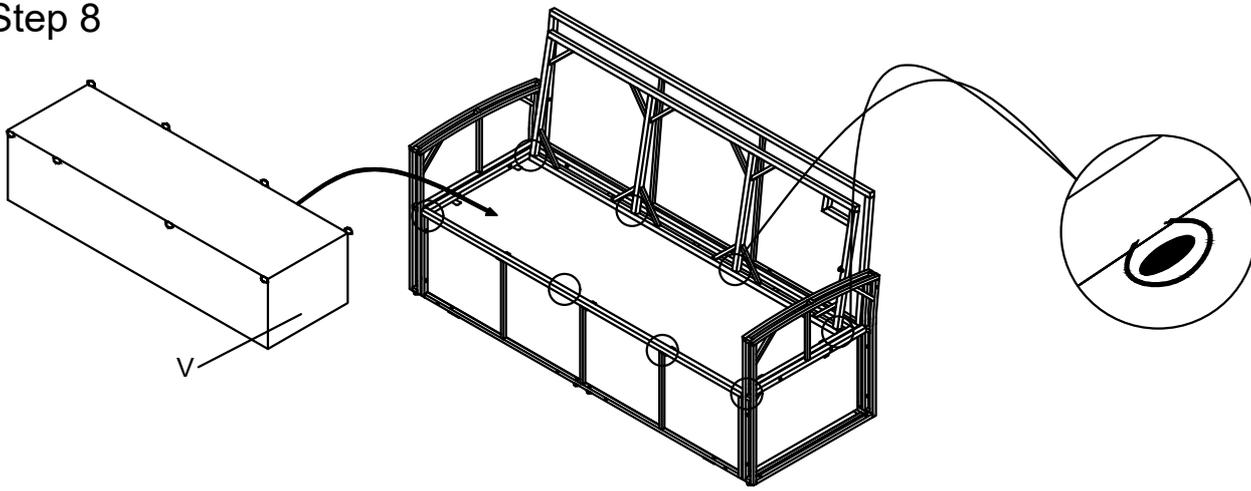


Step 9

Always keep part E sheet upward like T not \perp and click gas spring with sheet

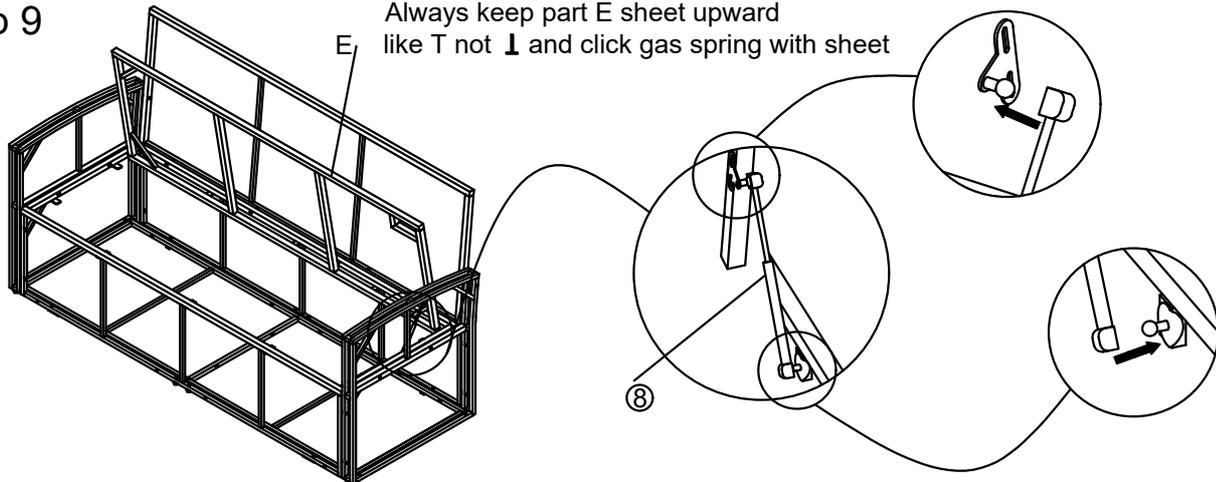


⑧ x1

Step 10

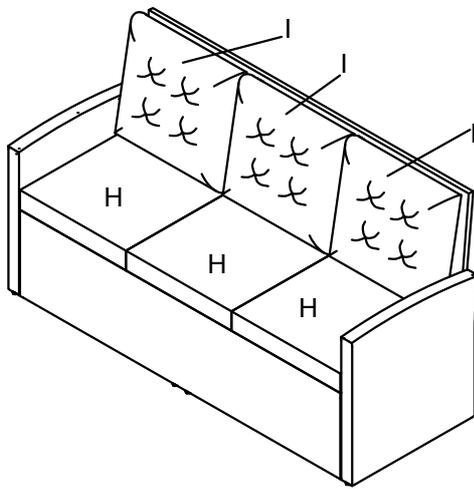


Step 11 x2

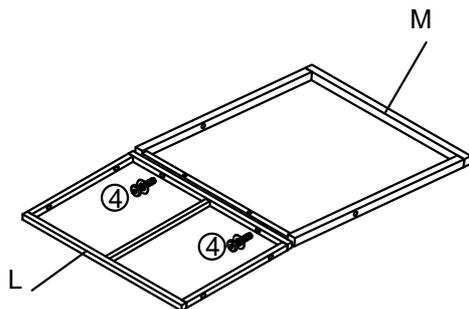


④ x2

Step 12 x2

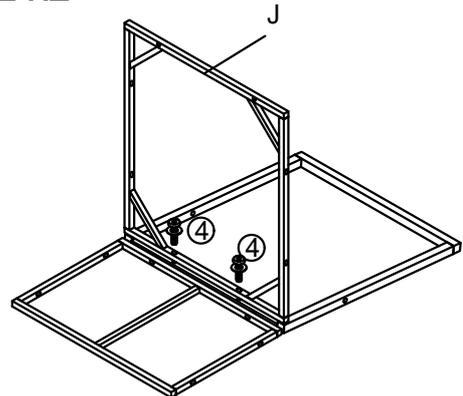


④ x2

Step 13 x2

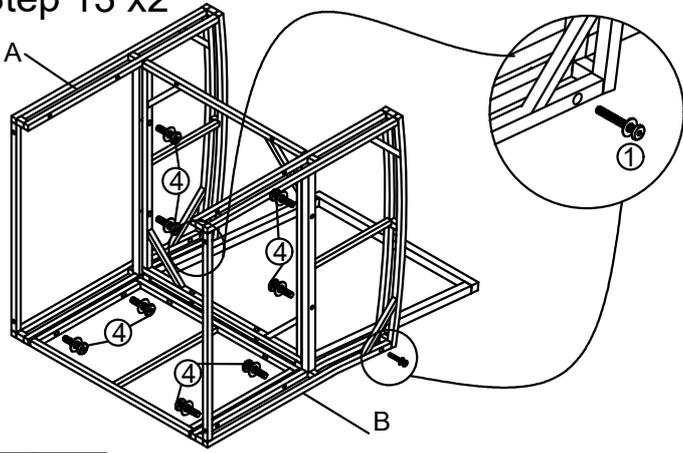

① x2 ④ x8


Step 14 x2

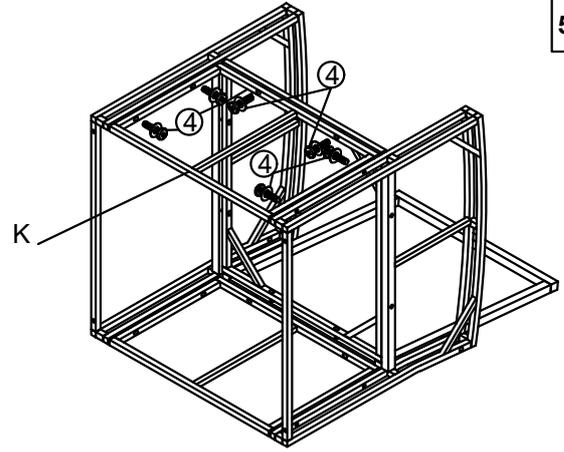

④ x6




Step 15 x2

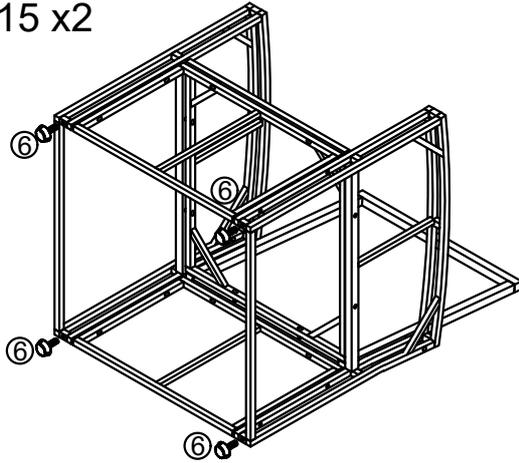


⑥ x4



Step 16 x2

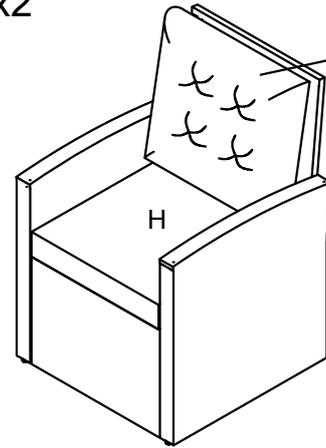


Step 17

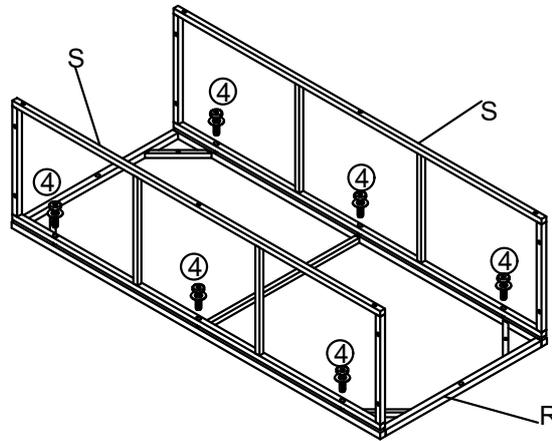

④ x6




Step 18

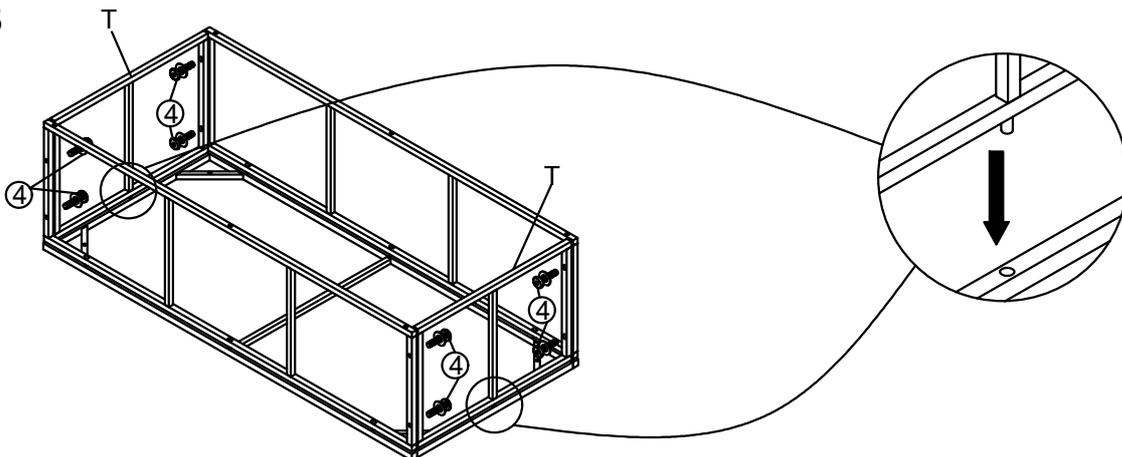

④ x8




Step 19

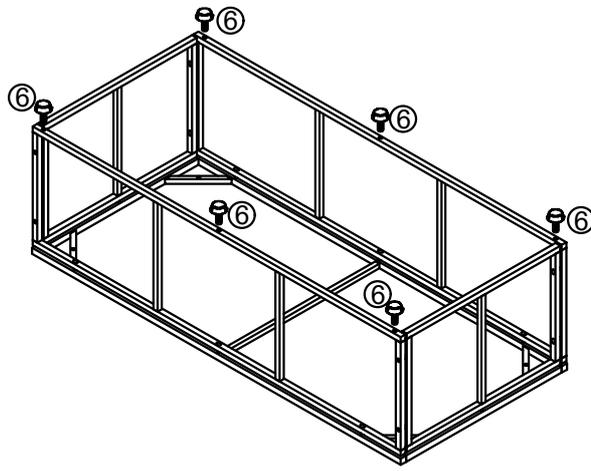


⑥ x6

Step 20

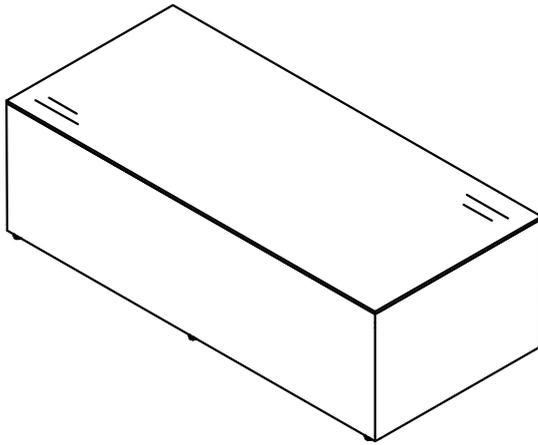


Step 21

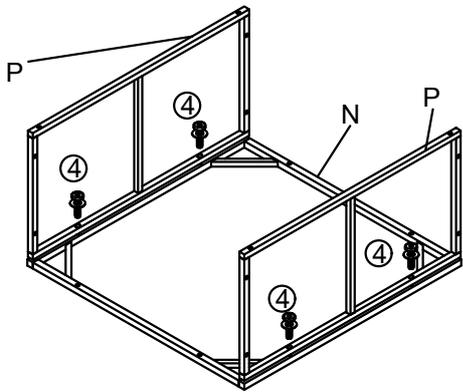


④ x4

Step 22

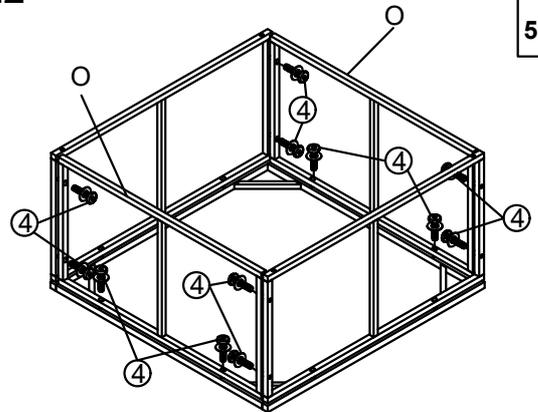


④ x12

Step 23

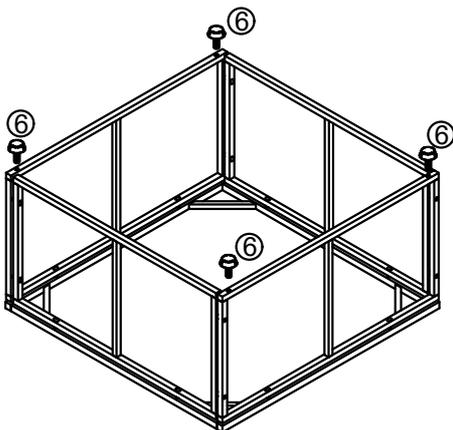

⑥ x4

Step 24

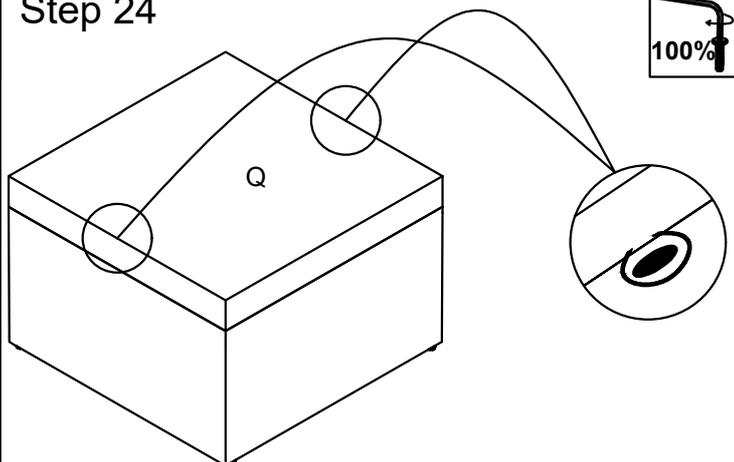

Step 25

