



# VERTICAL BLOX

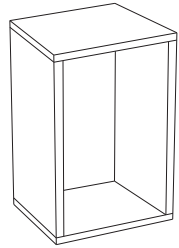


## Included




8 Pins



2 Vertical zBoards  
adhesive strips on 2 edges



1 Backer Board  
thin and has no adhesive




2 Horizontal zBoards  
with grooves



**WARNING: CHOKING HAZARD**  
Small parts NOT for children under 3 years

## Important

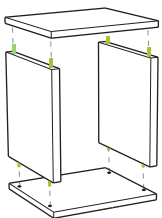

THIS SIDE UP


**Tip** Start assembly from bottom to top.

**DO NOT** place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only

- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

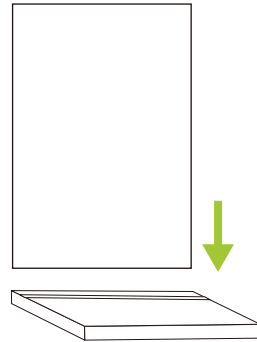


1

Fit backboard into horizontal zBoard groove.

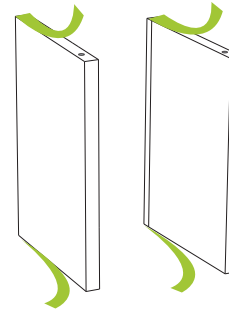


2

Carefully remove the 3M protective layer from adhesive.

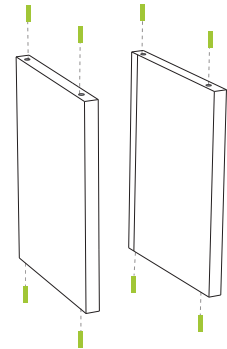


3

Place alignment pins in vertical zBoards.

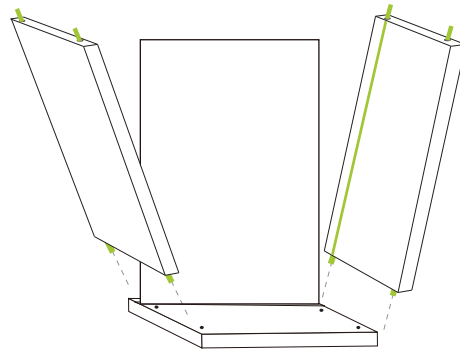


4

Arrange vertical zBoard with grooves facing backboard as shown.

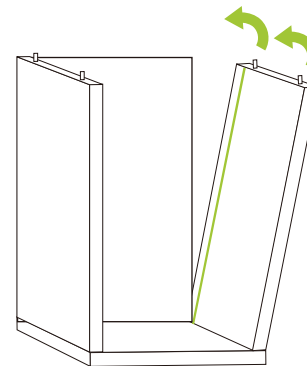

5

Align vertical zBoards to backboard.

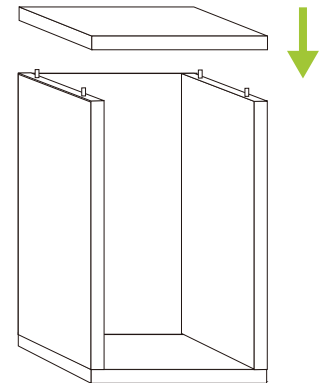

6

Align horizontal zBoard and press firmly to secure unit together.  
Visit links below for more details.

Enjoy building possibilities!



Watch and Assemble [www.waybasics.com/help-vertical-blox](http://www.waybasics.com/help-vertical-blox)



Help and Comments [www.waybasics.com/contact](http://www.waybasics.com/contact)



Share and Win [www.waybasics.com/share](http://www.waybasics.com/share)