

# **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**







## **MODEL# 77188 COVER SIDE CHAIR**

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*\*\*Do not fully tighten screws until fully assembled\*\*\***

	COMPONENT PARTS	
DESCRIPTION	PART NAME	Q'TY (PCS)
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEG	4
P4	CHAIR COVER	2

### HAREWARES REQUIRED

H1		JCBC BOLT M6 x 80MM - 8 PCS
H2		JCBC BOLT M6 x 60MM - 8 PCS
H3		JCBC BOLT M6 x 45MM - 4 PCS
H4		SPRING WASHER - 20 PCS
H5		FLAT WASHER - 20 PCS
H6		ALLEN KEY - 1 PC


### Attention:

\*\*\* Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled.


Carefully check parts and packing materials prior to ordering replacements.

## How to assemble:

### STEP 1:

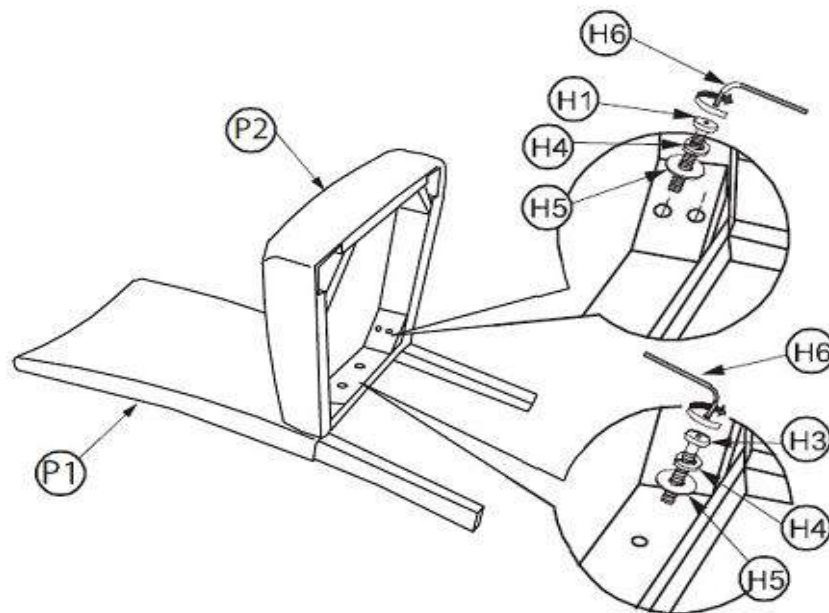

### STEP 2:

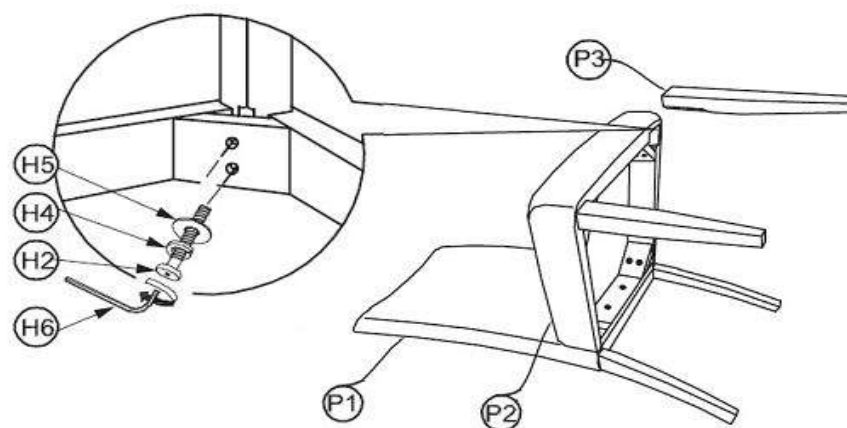

### STEP 3:

### STEP 4:

### STEP 5:

Slip on the chair cover, make sure it properly covered the seat and backrest of the chair before you tie-up the laces below the chair to make the cover tight & tidy.

