

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com












PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 15 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

- *Dust the surface of your wood furniture frequently with a clean, lint-free cloth or feather duster. This will guard against layers of dust accumulating and scratching your furniture.
- *Avoid using water to clean wood furniture. When necessary clean spots with a clean rag dipped into a solution of mild soap and clean water, wipe with clean damp rag to remove residual soap and then dry with a soft cloth.
- *Cushions: Cushions are not machine washable, and should never be placed in a washing machine. Do not tumble dry. Spot clean using cold or lukewarm water and detergent and air dry. Dry cleaning is highly recommended.
- *Removable Covers: Removable covers can be machine washed, however, we recommend hand washing. Wash the covers using cold or lukewarm water and detergent, and allow them to air dry. Avoid tumble drying.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	BACK CUSHION		1X
B	SEAT CUSHION		1X
C	BACK REST		1X
D	SEAT BASE		1X
E	ARM REST RIGHT		1X
F	ARM REST LEFT		1X
HW1	JCBC BOLT 6 x 1 x 60 MM		3X
HW2	JCBC BOLT 6 x 1 x 40 MM		2X
HW3	JCBC BOLT 6 x 1 x 20 MM		4X
HW4	STAINLESS SLEEVE 8 x 6 x 40 MM		1X
HW5	ALLEN KEY		1X


SAFAVIEH
C O U T U R E

ITEM ID : SFV9102


PRODUCT DIMENSIONS : 25.2 x 33 x 31

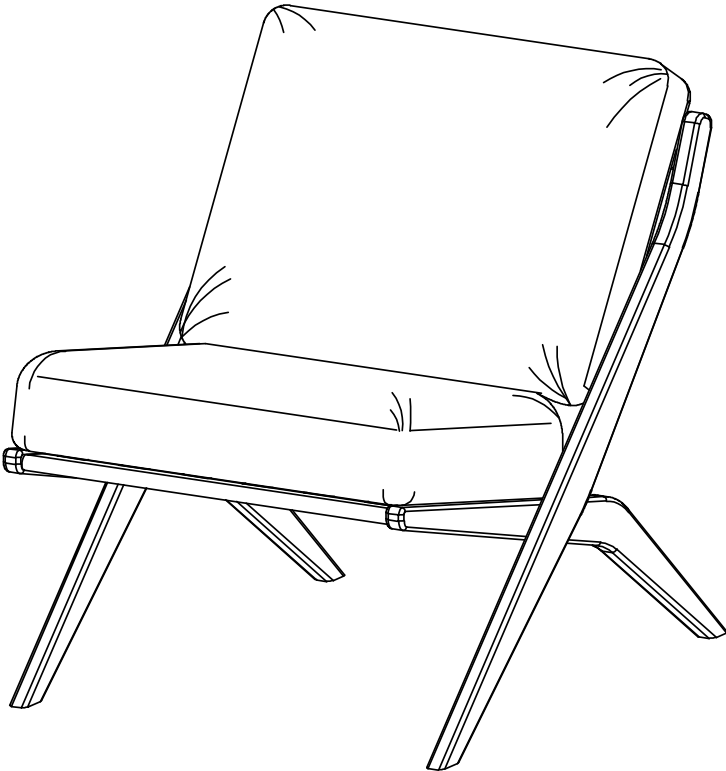


Weight Capacity 220 LBS
Warning : Do not Stand on Chair
Warning : Do not over torque bolts.

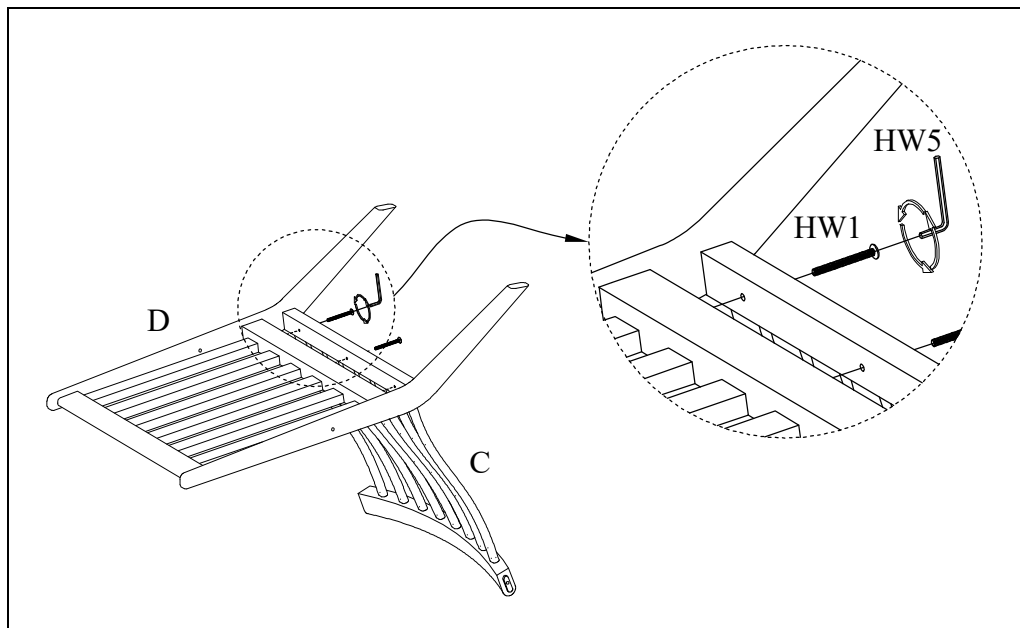


STEP 1 : INSERT THE BARREL NUT (HW1) INTO THE HOLE IN SEAT BASE (D). INSERT THE BOLT (HW2) INTO THE HOLE IN BACK REST (C) THEN SCREW IN THE BOLTS DONT TIGHTEN COMPLETELY

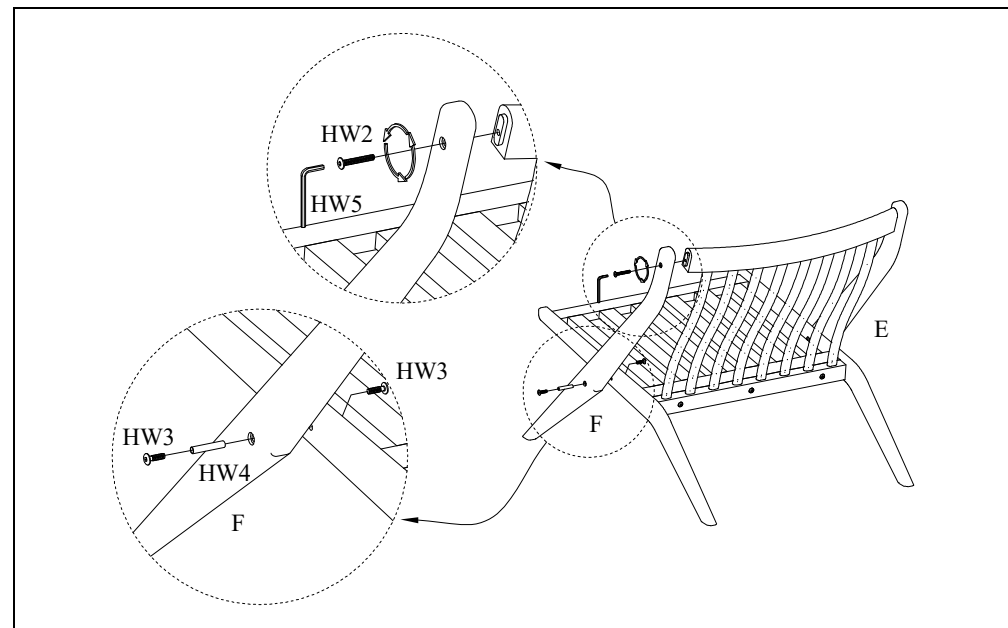

STEP 2 : INSERT THE STAINLESS SLEEVE (HW5) INTO THE ARM REST HOLE AND THE SEAT BASE HOLE AND INSERT THE BOLT (HW4) FROM THE INSIDE AND OUTSIDE OF THE LEGS AND SCREW IN THE BOLTS DONT TIGHTEN COMPLETELY INSERT THE BOLTS (HW3) AND SCREW IN THE BOLTS BUT DONT TIGHTEN COMPLETELY

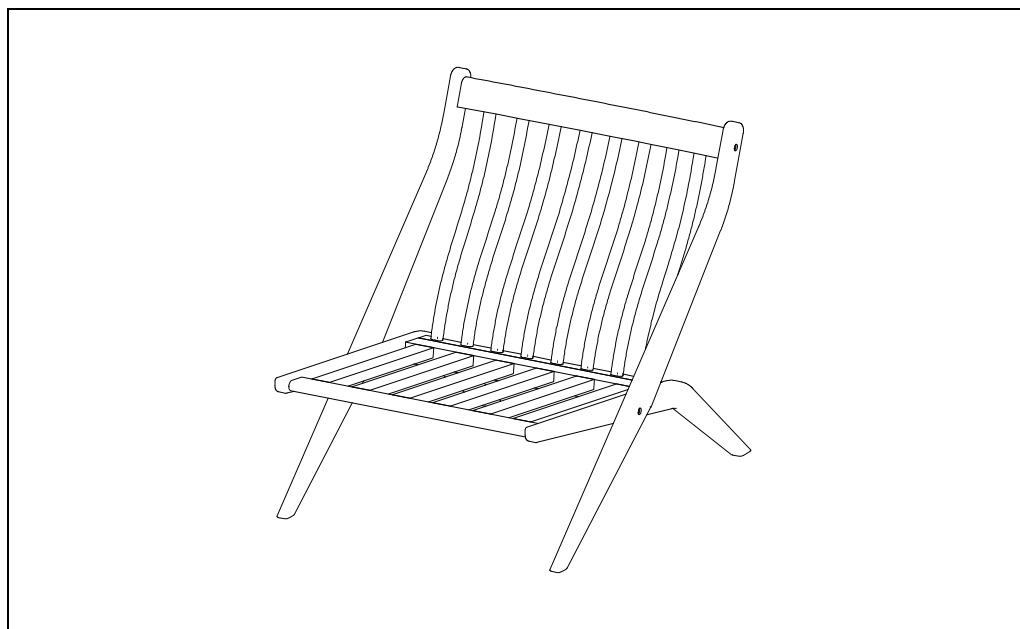

STEP 3 : PUT THE CHAIR UPRIGHT, MAKE SURE ALL LEGS ARE LEVEL AND PRESS THE TOP OF THE SEAT THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY (HW6) WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE

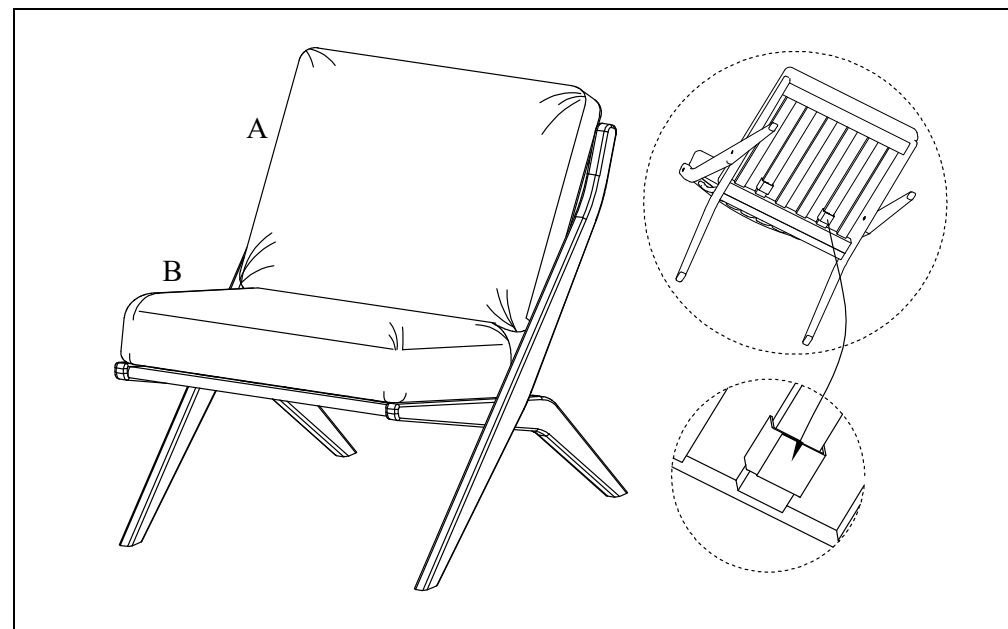

STEP 4 : PLACE THE CUSHION AS SHOWN IN THE PICTURE ABOVE AND MAKE SURE THE STRAP IS ATTACHED PERFECTLY