



HOOKER  
— FURNITURE —

# ASSEMBLY INSTRUCTION



Item: 5388-90251 Slumbr 5/0 Metal Upholstered Headboard  
 5388-90252 Slumbr 5/0 Metal Upholstered Footboard  
 5388-90253 Slumbr 5/0-6/6 Metal Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE PACK




NO	DRAWING	DESCRIPTION	SIDE	Q'TY
A		BOLT	05/16"*1"	8pcs
B		LOCK WASHER	05/16"	8pcs
C		FLAT WASHER	05/16"*22mm	8pcs
D		ALLEN WRENCH	5mm	1pc
G		BOLT	01/4"*3/4"	15pcs
H		LOCK WASHER	01/4"	15pcs
K		FLAT WASHER	01/4"*16mm	15pcs
L		ALLEN WRENCH	4mm	1pc

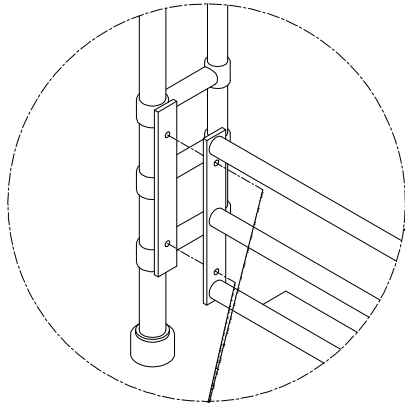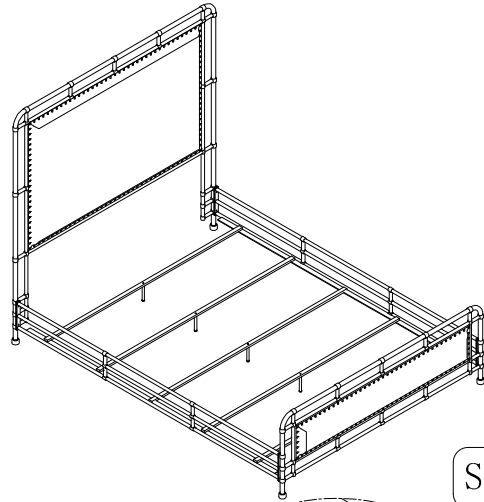

Step 1

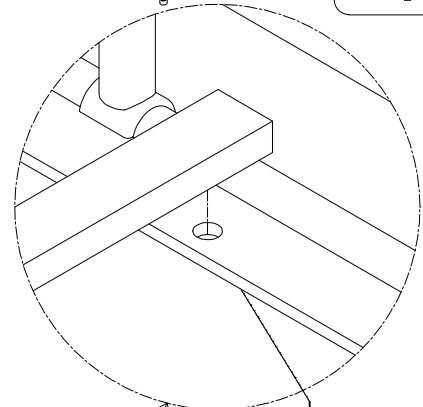

Step 2

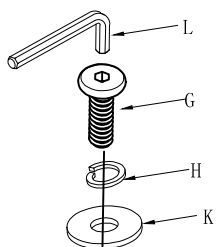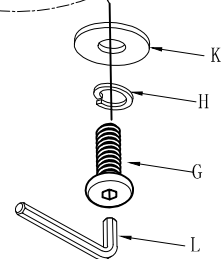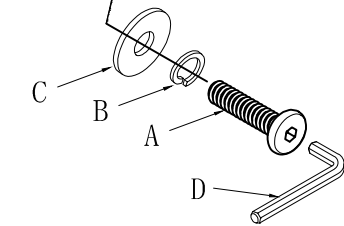

Step 3

