



INSTALLATION INSTRUCTIONS

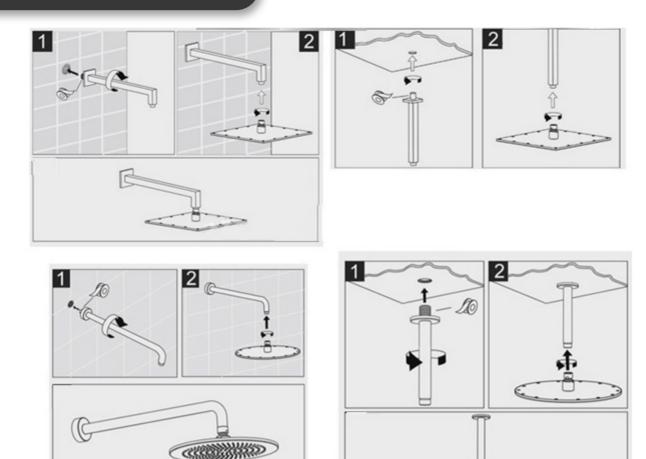

SA44-A:

Square Ceiling Shower Arm - 9.5" - Made of BRASS

Installation

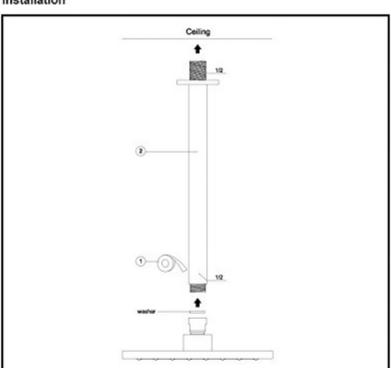

Installation Instruction:

- 1. Attach flange to strait end of shower arm.
- 2. Attach shower arm to water outlet using enclosed plumber's tape (1) to ensure connection is water tight.
- 3. Insert washer (2) into shower head fitting.
- 4. Attach shower head to shower arm.

