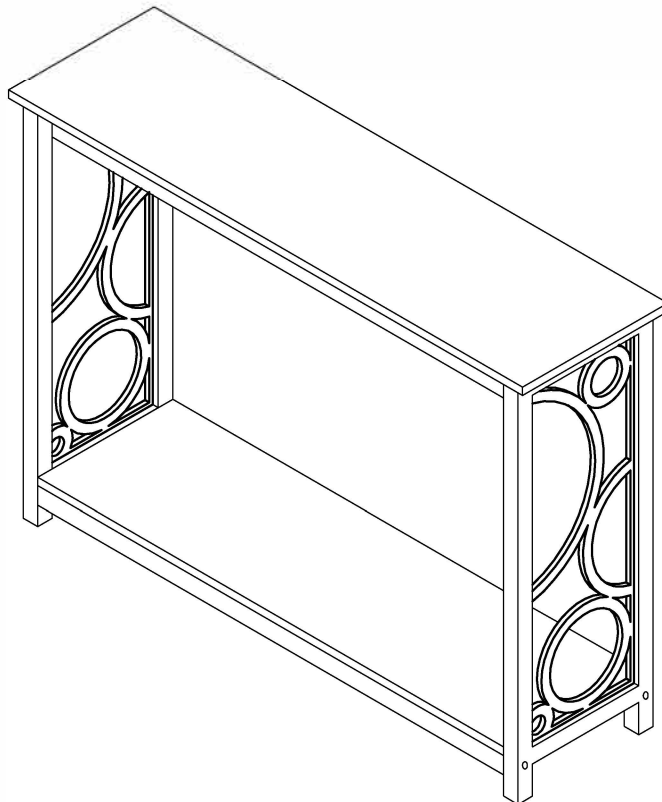


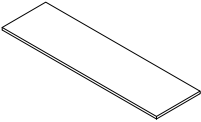



# ASSEMBLY INSTRUCTIONS








## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

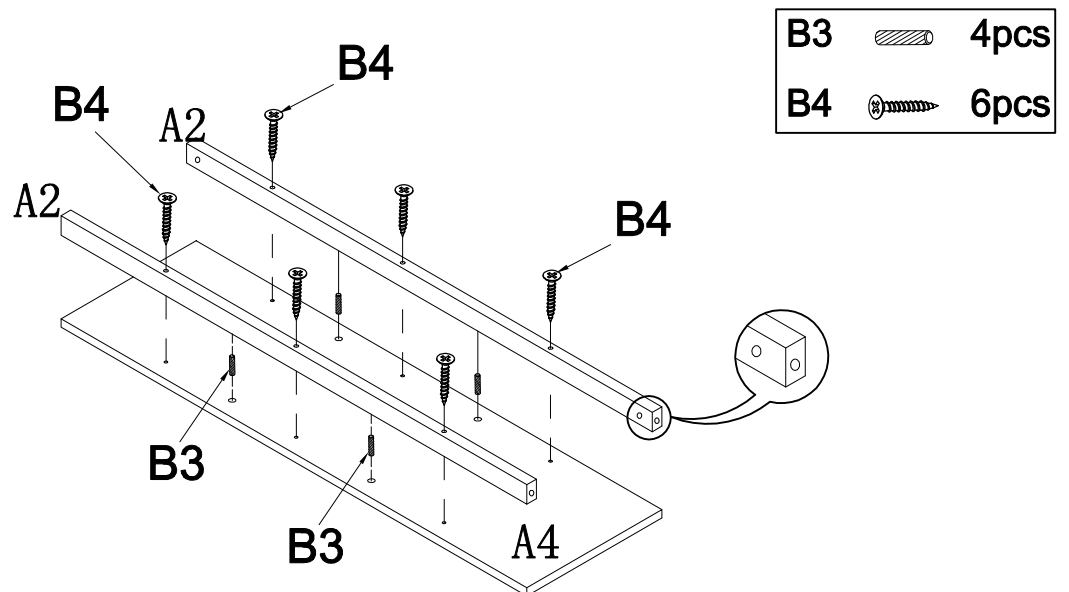
## Part List

|   |   |  |   |
|---|---|--|---|
| A1.<br>Quantity<br>of 1   | A2.<br>Quantity<br>of 4   | A3.<br>Quantity<br>of 2  | A4.<br>Quantity<br>of 1   |
|  |  |  |  |
| Top Panel   | Apron   | Side Panel (L&R)   | Bottom Panel  |

## Hardware List


|   |   |   |   |
|---|---|---|---|
| B1.<br>Quantity<br>of 8   | B2.<br>Quantity<br>of 8   | B3.<br>Quantity<br>of 8   | B4.<br>Quantity<br>of 12  |
|    |  |  |  |
| Bolt  | Nut   | Wood Dowel  | Screw   |
| B5.<br>Quantity<br>of 8   |   |   |   |
|  |   |   |   |
| Wood Cap  |   |   |   |

## STEP 1




**Assemble Aprons (A2) to Bottom Panel (A4) using Wood Dowels (B3) and Screws (B4).**
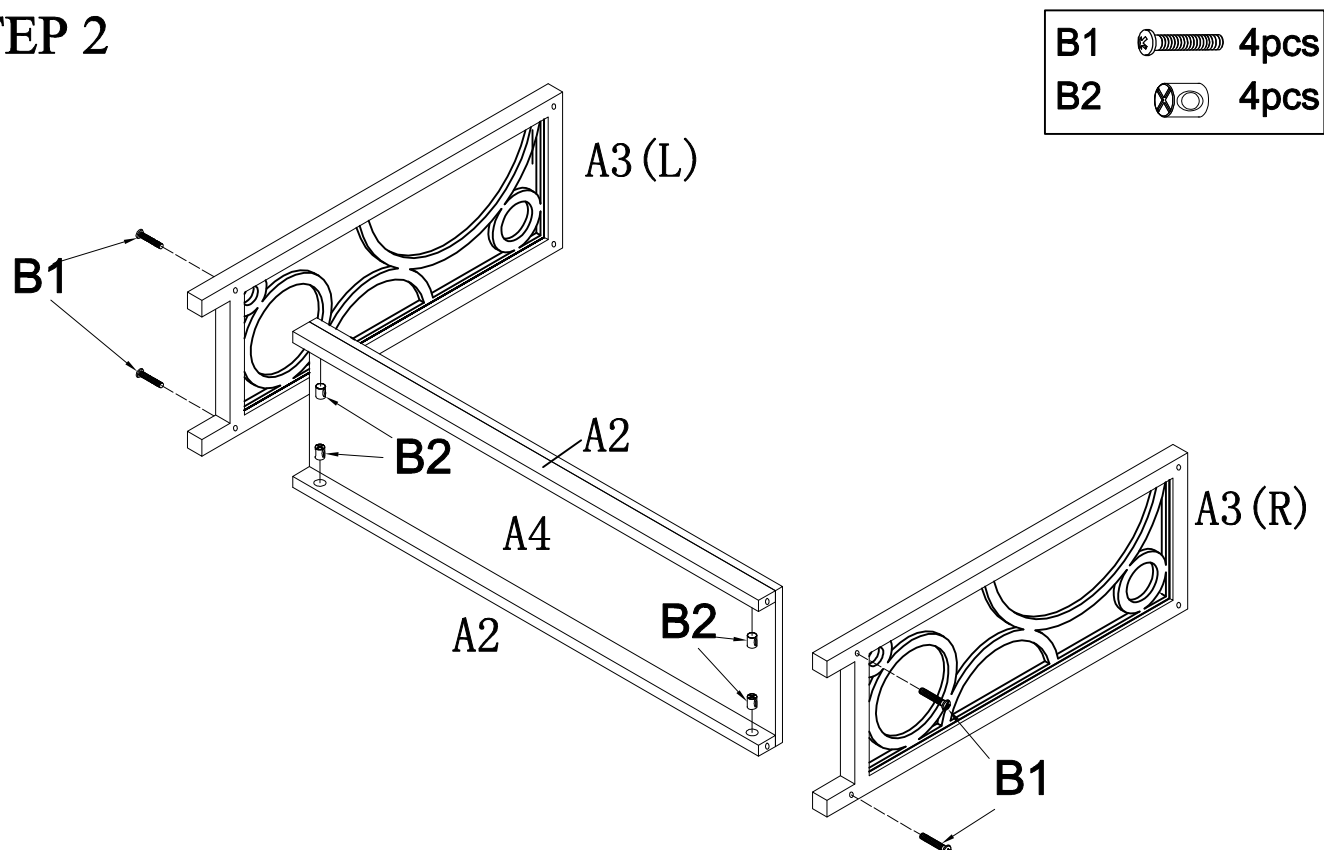
## STEP 2




Assemble Side Panels A3(L&R) to Aprons (A2) using Bolts (B1) and Nuts (B2).

## STEP 3

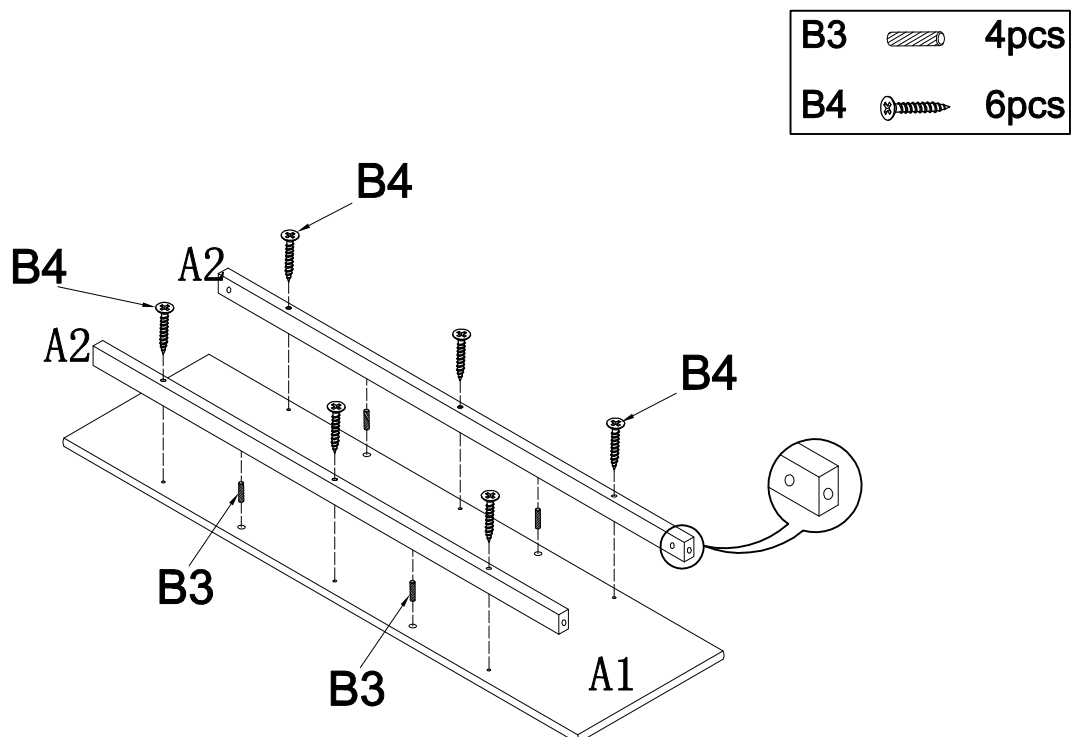





Assemble Aprons (A2) to Top Panel (A1) using Wood Dowels (B3) and Screws (B4).

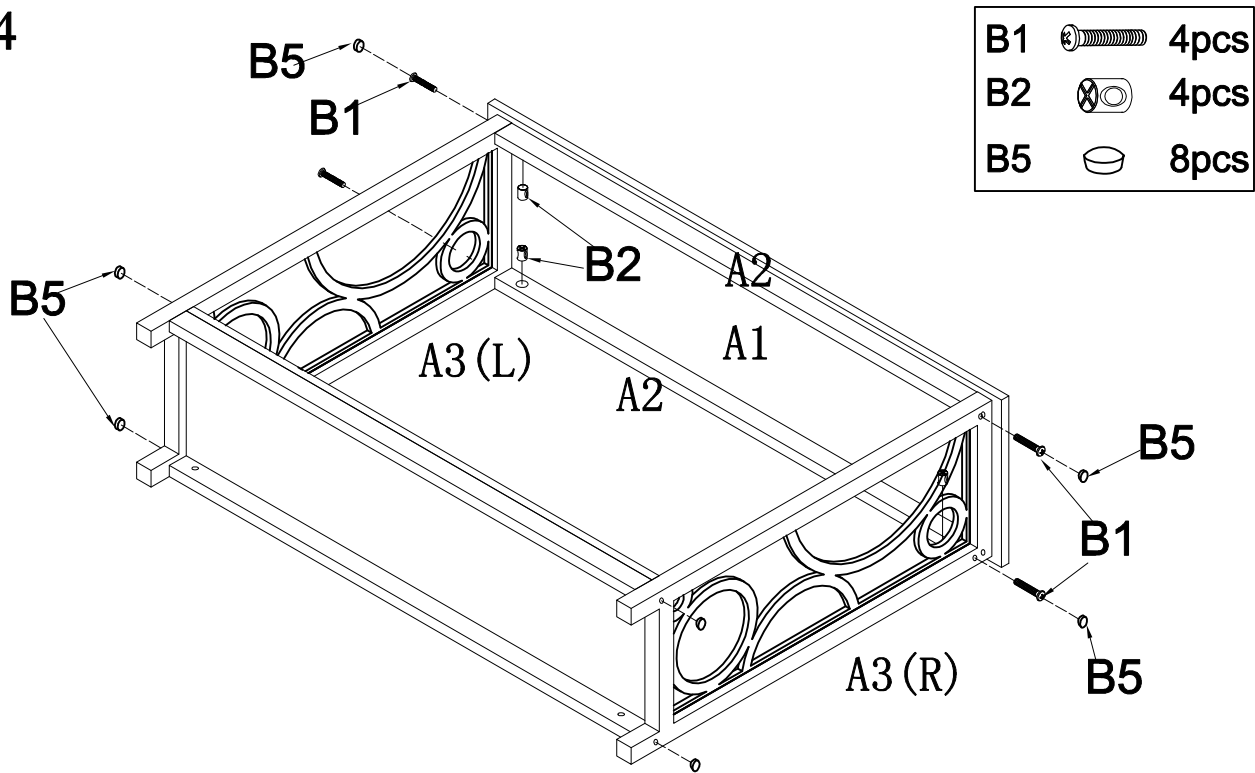STEP 4



Assemble Side Panels A3(L&R) to Aprons (A2) using Bolts (B1) and Nuts (B2). Then insert Wood Caps (B5) as shown above.

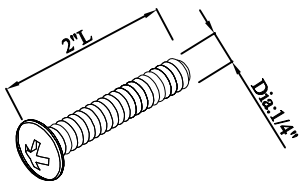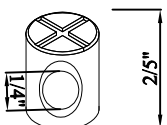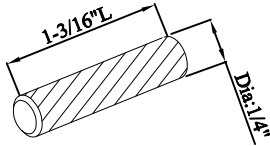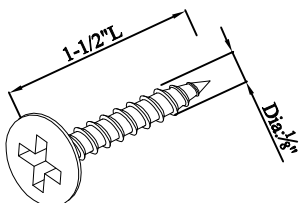APPENDIX: Dimension of Hardwares in this AI.

|   |   |  |
|---|---|--|
| <p>B1.</p>  <p>Bolt for Handle</p> | <p>B2.</p>  <p>Nut</p> | <p>B3.</p>  <p>Wood Dowel</p> |
| <p>B4.</p>  <p>Screw</p>           |   |  |