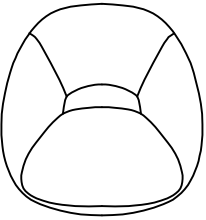

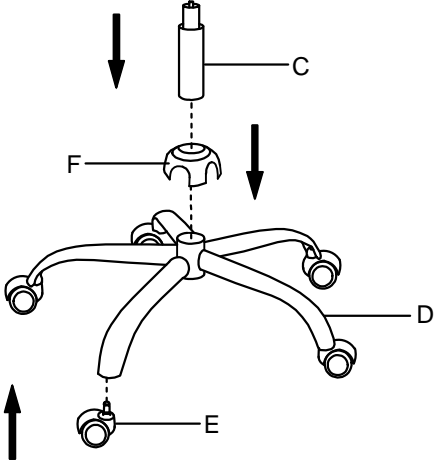
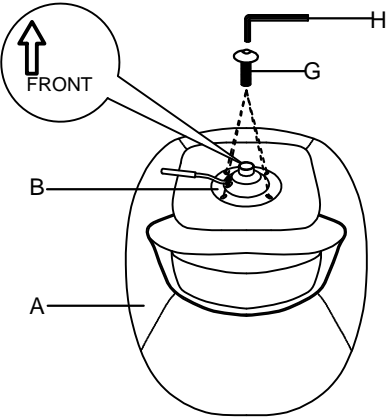




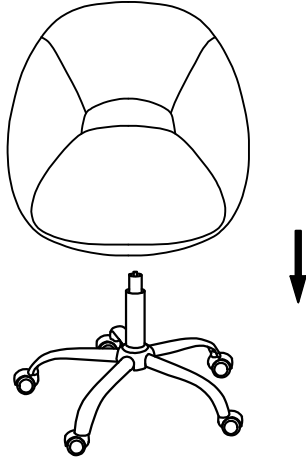
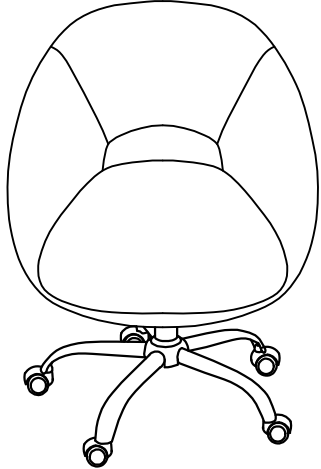

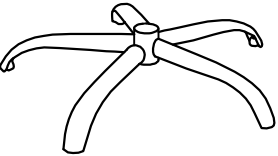




Assembly Instructions

Item No:CHM6075O

<p>A*1</p> 	<p>E*5</p> 	<p>① Insert casters E to bottom of the spider base D. Attach the metal cover F on top of the spider base D then insert the gas lift C to the center hole of the base D.</p> 	<p>② Use bolt G and allen key H to attach mechanism B to bottom of the seat A, make sure the holes on under seat align with metal plate and the arrow in front direction, then fasten bolts to secure.</p> 
<p>B*1</p> 	<p>F*1</p> 		
<p>C*1</p> 	<p>G*4 M6*18mm</p> 	<p>③ Attach the whole seat to base assembly, make sure top of gas lift align with center hole of mechanism B under seat.</p> 	<p>④ Assembly completed.</p>   <p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p>
<p>D*1</p> 	<p>H*1 M5</p> 		
<p>I*1 M6*18mm</p>  <p>EXTRA PARTS</p>			