


# FREESTANDING INSTALLATION


**Warning:** do not install this product without a complete inspection in case of rough handling on the route of shipping or on a job site.

Have a previous check first when you get the Tub. Before installation, make sure every unit of the Tub is under no damage. If there is any problem with the bathtub or piping system during the process of the pre-installation inspection and water test, do not install the unit, and contact us with no hesitation. We would offer satisfactory solutions.

All pre-installed units must be checked and retightened carefully before installation.

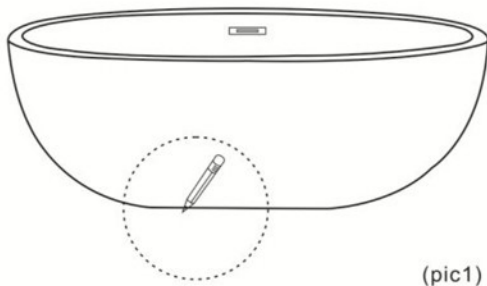

(pic1)

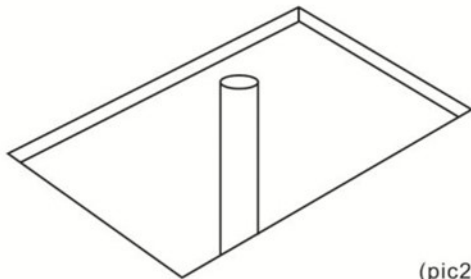

(pic2)

## PREPARATION

1. Make the floor clean, flat to prepare for installation.
2. Put the unit in the accurate installed position on the floor and remember to mark the outline of the bath with a pencil or other marking pens (pic 1 ).
3. Measure the drain and waste location underneath the unit, and decide the right position of the drain pipe(pic 2).
4. Cover the unit with a blanket, cardboard or other clean protective materials so that the unit is well protected during the process of drain installation.
5. Pop-up Drainer is pre-installed in the Tub.