



INSTALLATION GUIDE

PORCELAIN SINK

UNDERMOUNT BATHROOM SINK

IF YOU HAVE PURCHASED A **PORCELAIN SINK**, PLEASE MAKE SURE TO READ THESE INSTRUCTIONS CAREFULLY

1

Prior to installation:

Make sure that you have all necessary parts by checking the parts list. If any part is missing, please contact Stylish Customer Service at [+1-855-789-5352](tel:+1-855-789-5352) for a replacement.

Inspect the sink prior to installation to make sure that it has not been damaged during shipping.

You may use the cut-out template provided or download DXF file from www.stylishkb.com, the file is available under each porcelain sink model.

Observe all plumbing and building codes according to your state requirements.

Not recommended to be installed with laminate countertop.


2



Recommended 1/8 to 1/4 of an inch

For bathroom undermount porcelain sinks which are molded parts, the over hang installation is the most popular and recommended style, it provides the nicest look from almost every angle. The over hang distance should be 1/8 to 1/4 of an inch, depending of the countertop used.


3

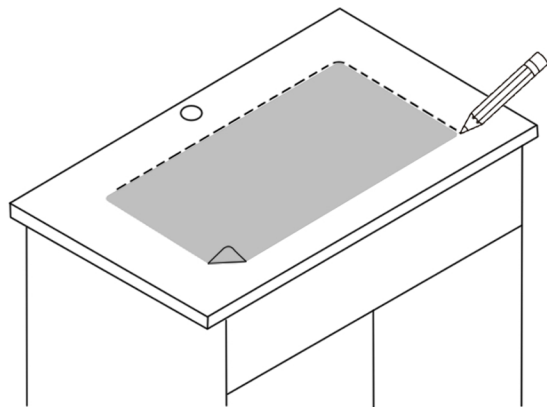

Place cut-out template in desired position on countertop locating center of the bowl over cabinet.

Note: Porcelain sink installation is normally performed by the countertop provider.

4

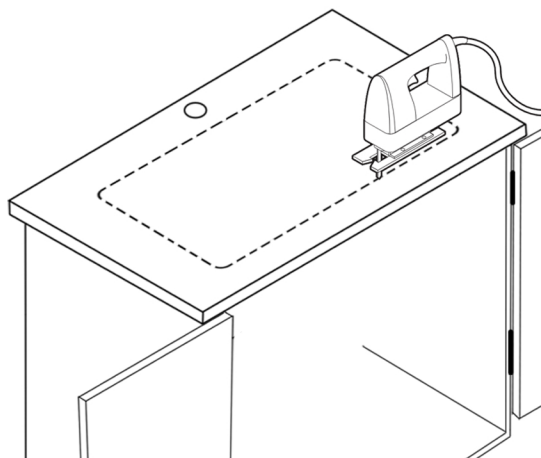

Trace the outline of the template and cut countertop according to templated outline using appropriate cutting tools. Template is for guide only. Use physical sink to ensure accurate cut-out opening. It is recommended to use the actual sink dimensions to ensure the most accurate cut out. Drawing or template are for reference.

WARRANTY

For additional technical assistance or for any questions or concerns about your sink's warranty, please contact us.

www.stylishkb.com/warranty

 www.stylishkb.com

 care@stylishkb.com

 [+1-855-789-5352](tel:+1-855-789-5352)

Stylish International Inc Follow us on Instagram! Check out and let us know your comments  [stylish.international.inc](https://www.instagram.com/stylish.international.inc)

Page 1/2

Products and specifications shown are subject to change without notice. Please contact our technical support at care@stylishkb.com for any further queries, replacement parts requests, etc. ©2019 Stylish® all right reserved.




INSTALLATION GUIDE

PORCELAIN SINK


UNDERMOUNT BATHROOM SINK

5

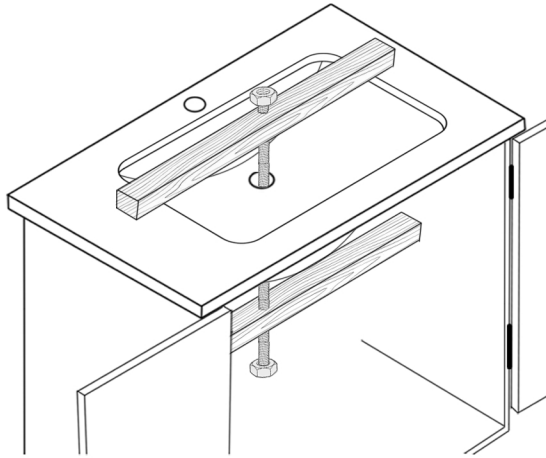


Clamp the sink and hold in place while adhesive cures. There are different methods, we suggest using a couple of pieces of wood with a threaded rod. Set one piece of wood under the sink and another over the countertop.

6

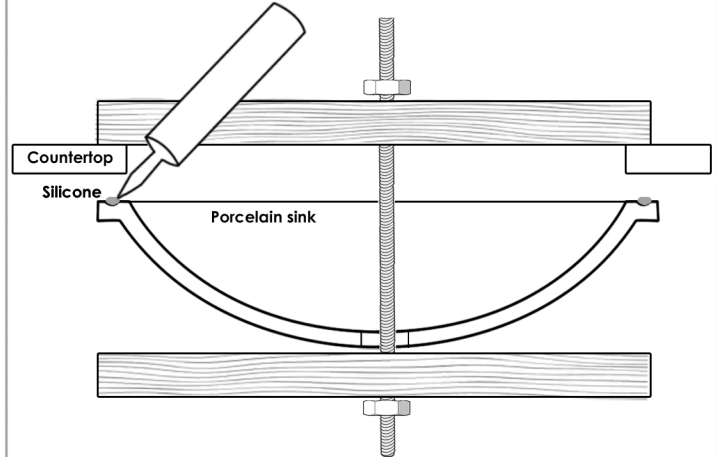


Clamp the boards so the sink stays suspended about 1 in below the countertop. Clean sink flange and underside of cut-out area of countertop, making sure that the area is smooth and free of debris. Apply continuous bead of silicone caulk evenly on top of sink flange.

7

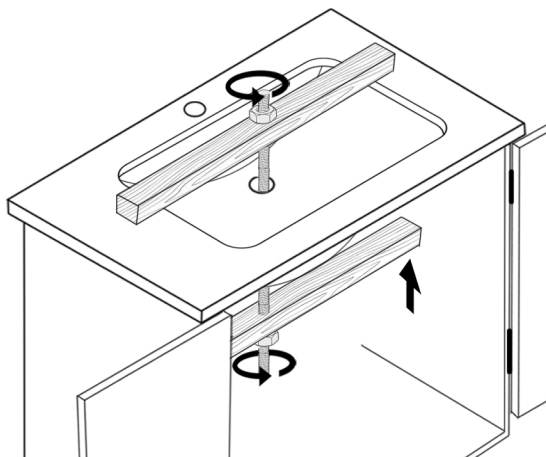

Tighten the clamps to bring the sink up to the countertop. Check the sink's positioning again. Adjust it before the caulk solidifies. When you're satisfied with the sink's placement, leave it clamped in place so the caulk has a chance to cure.

8

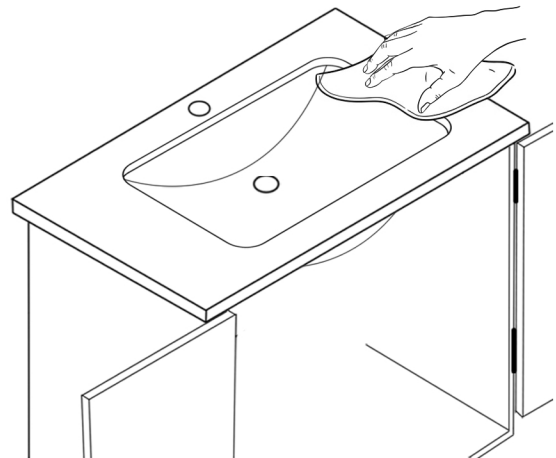

Wipe away excess silicone caulk with damp cloth. Connect drain and water supply according to manufacturer's instruction.

CARE AND CLEANING

Clean your sink every day to prevent a buildup of soap scum, grease and dirt. Use a wet sponge with liquid dishwashing. Scrub the sink's surface using a soft non-abrasive cloth or sponge. Wipe the sink dry with a dish towel or other soft cloth to eliminate water stains. For deep clean cover the sink with paper or cloth towels and pour undiluted bleach. Be sure the area is well ventilated and let the bleach-saturated towels sit for 15 to 30 minutes. Rinse thoroughly with water and wipe dry with a dish towel or other soft cloth.