




Assembly Intruction


INTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325


1

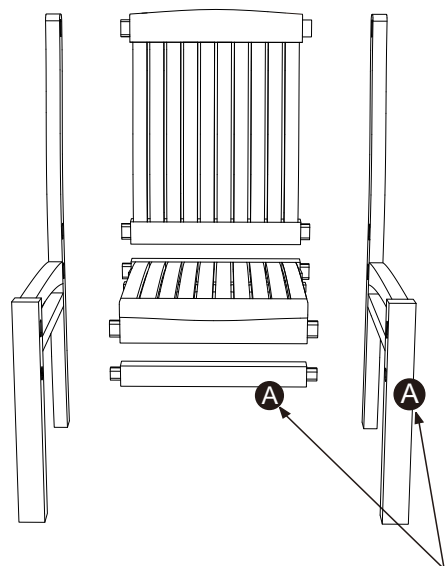

2

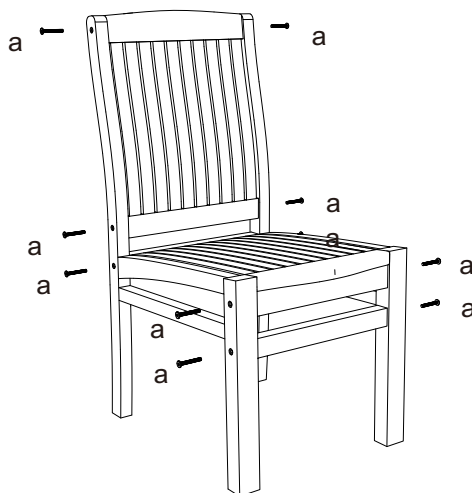

3

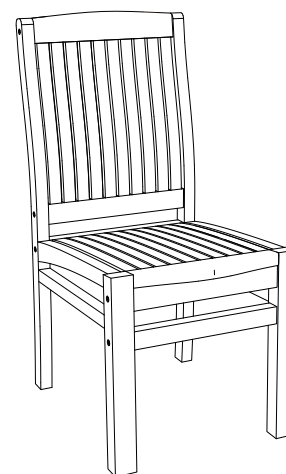

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING


Make sure to use Gorilla Glue (Included)
on all wood joints before assembly

Code

HJ002DC

Hardware

a



BOLT 2' (10 pcs)

Tool



Socket Wrench 4mm

Total Section

5 Section