


Sideboard

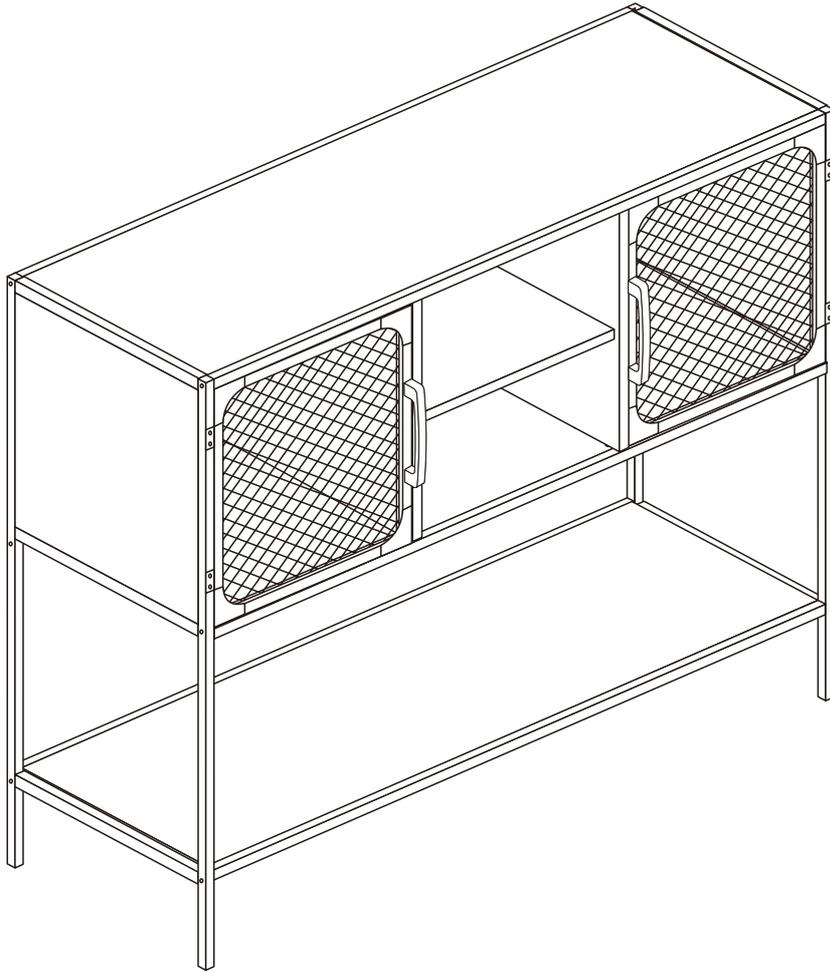


ASSEMBLY INSTRUCTION

HARDWARE LIST

A 12 PCS		B 12 PCS		C 12 PCS		D 8 PCS	 6x14mm	E 14 PCS	
F 2 PCS		G 4 PCS		H 12 PCS		I 4 PCS	 4x16mm	J 2 PCS	
K 6 PCS		L 2 PCS		M 1 PC		N 4 PCS	 3x14mm	O 2 PCS	
P 8 PCS		Q 4 PCS							




PARTS LIST

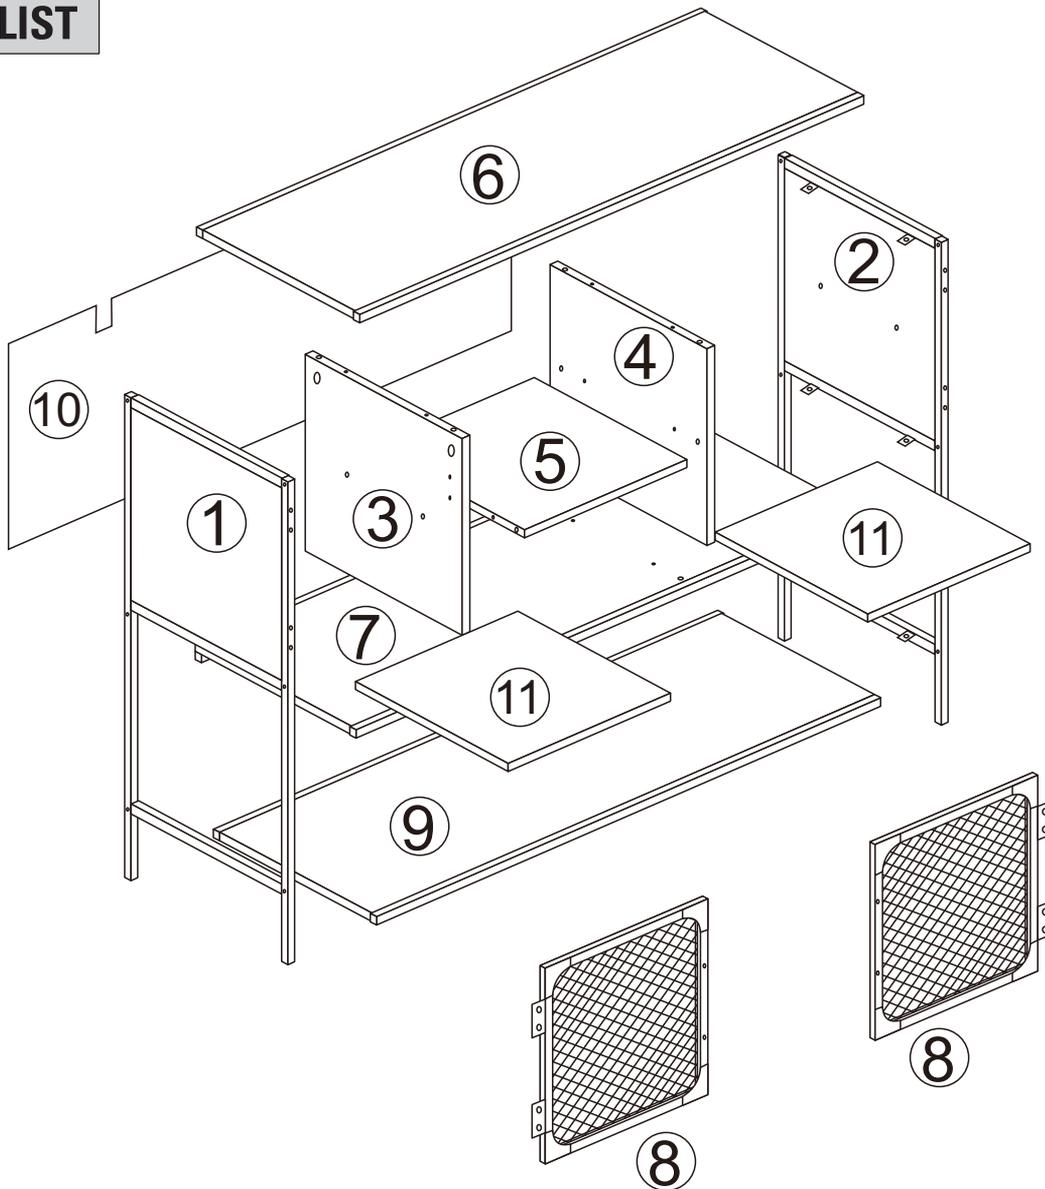

ASSEMBLY STEPS




STEP 1.

Fix magnetic door catches (O) to parts 3 and 4 using screws (N), as shown.

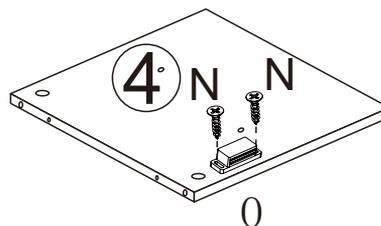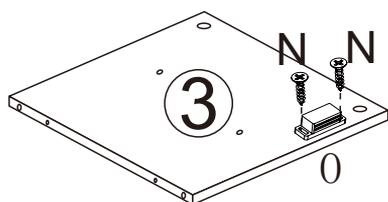

STEP 2.


Insert quickfit screws (A) into parts 3 and 4, as shown.

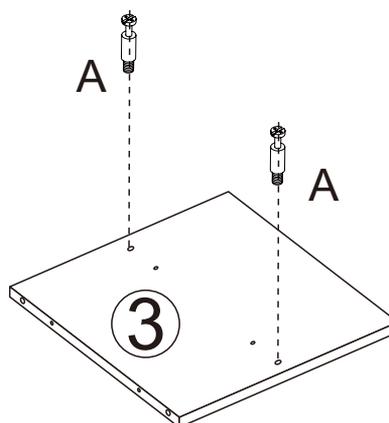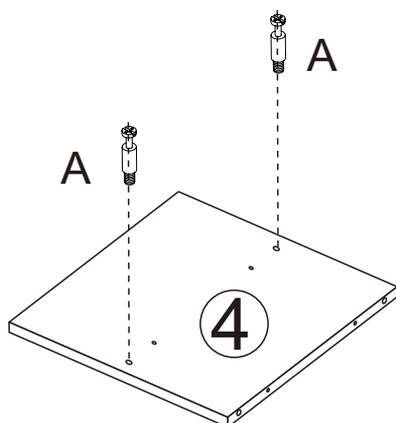

ASSEMBLY STEPS



STEP 3.

Insert cam locks (B) and wooden dowels (H) into part 5.
Fit parts 3 and 4 to part 5, as shown.
Turn cam lock clockwise to tighten.

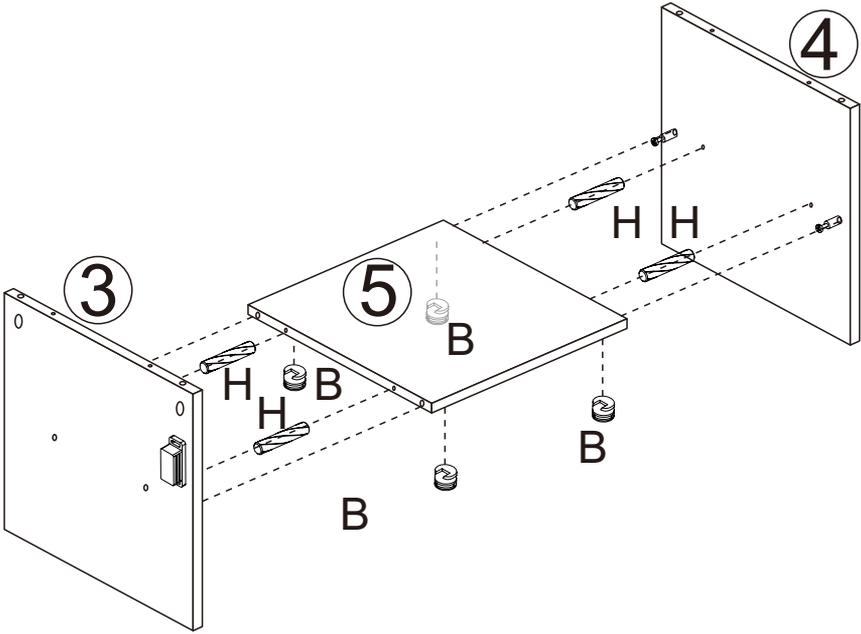

STEP 4.


Fix wall brackets (J) to part 6 using screws (E), as shown. Insert quickfit screws (A) into part 6, as shown.

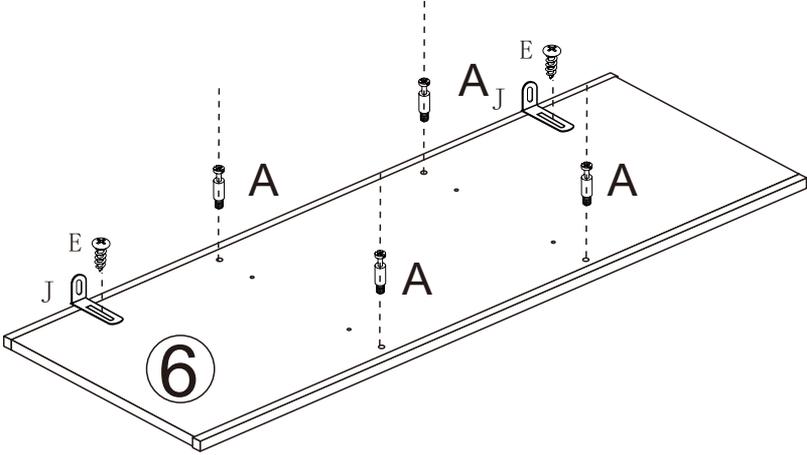

ASSEMBLY STEPS


STEP 5.

Fix part 7 to parts 3 and 4 using wooden dowels (H) and screws (K), as shown.

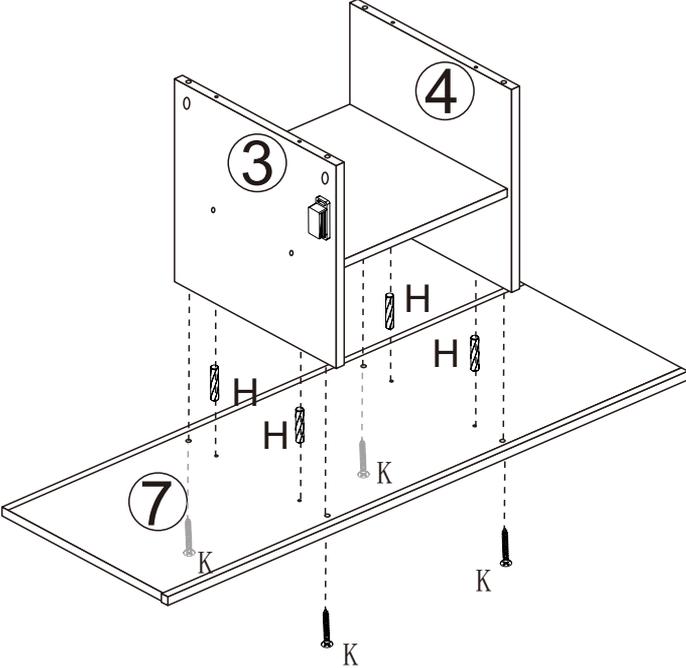

STEP 6.


Fix part 2 to parts 7 and 9 using screws (C), as shown.

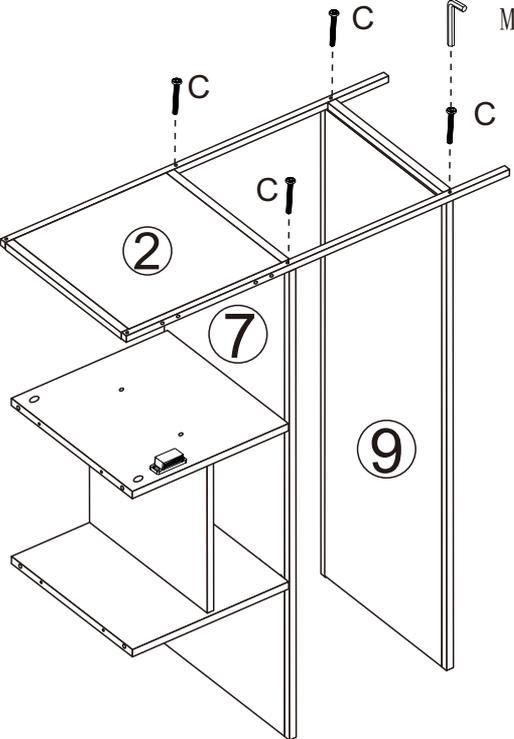

ASSEMBLY STEPS


STEP 7.

Slide part 10 into grooves between parts 2 and 7, as shown.

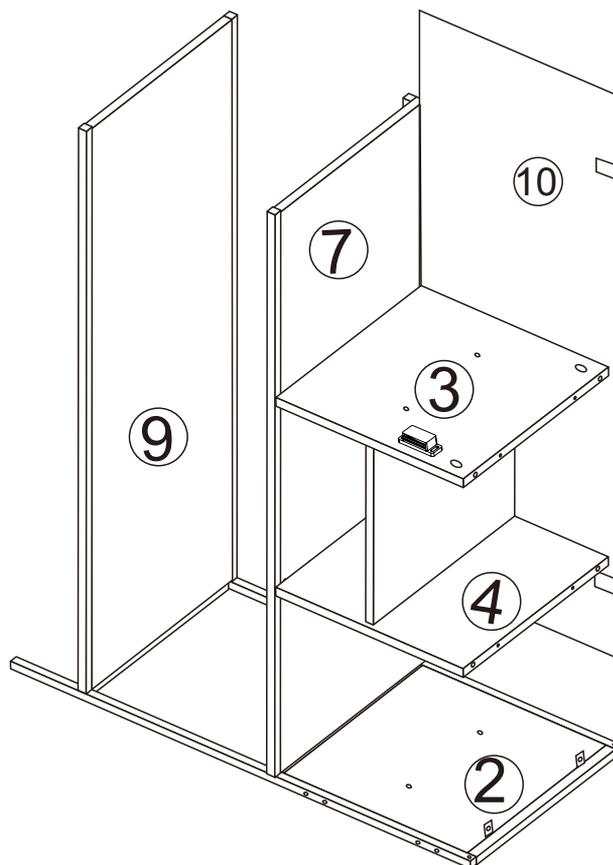

STEP 8.


Fix part 1 to assembled unit using screws (C), as shown.

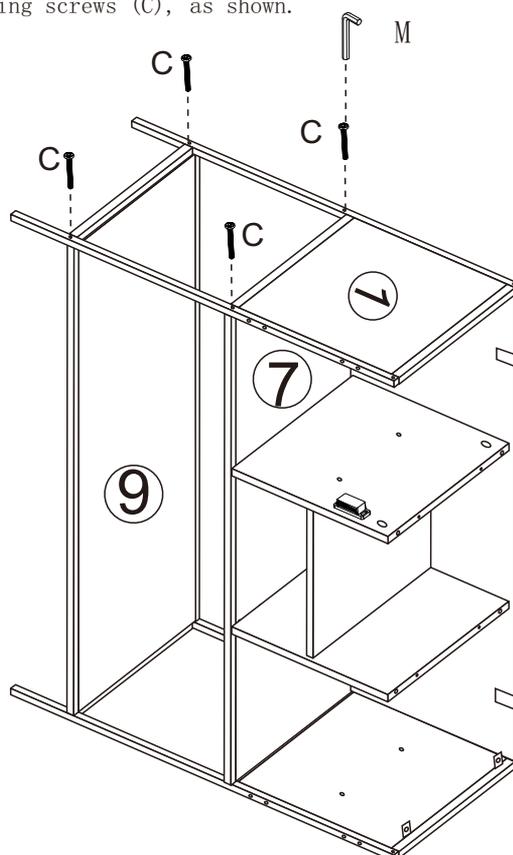

ASSEMBLY STEPS


STEP 9.

Secure parts 7 and 9 to parts 1 and 2 using screws (E), as shown.

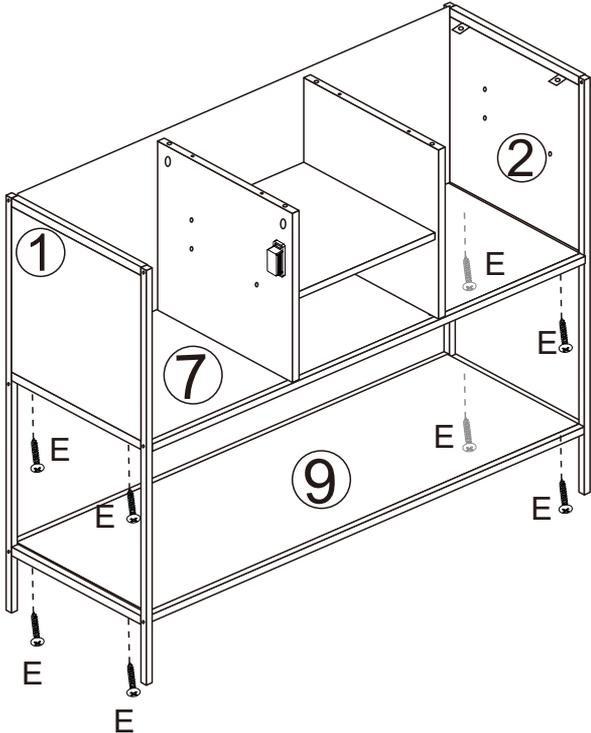

STEP 10.


Insert cam locks (B) and wooden dowels (H) into parts 3 and 4, as shown.
Fit part 6 to assembled unit.
Turn cam lock clockwise to tighten.
Secure part 6 to parts 1 and 2 using screws (E), as shown.

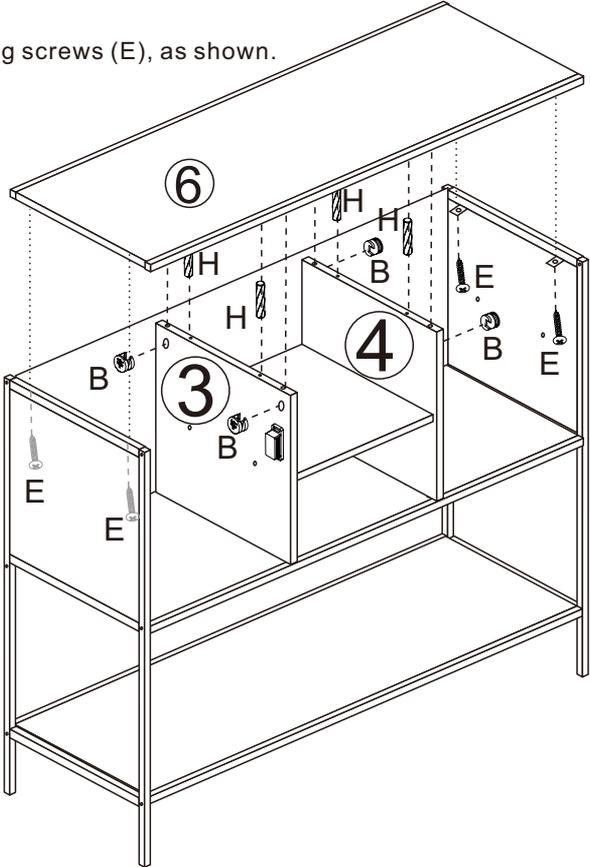

ASSEMBLY STEPS


STEP 11.

Fix corner brackets (Q) to part 10 using screws (I), as shown.
Secure parts 1 and 2 to assembled unit using screws (C) and allen key, as shown.

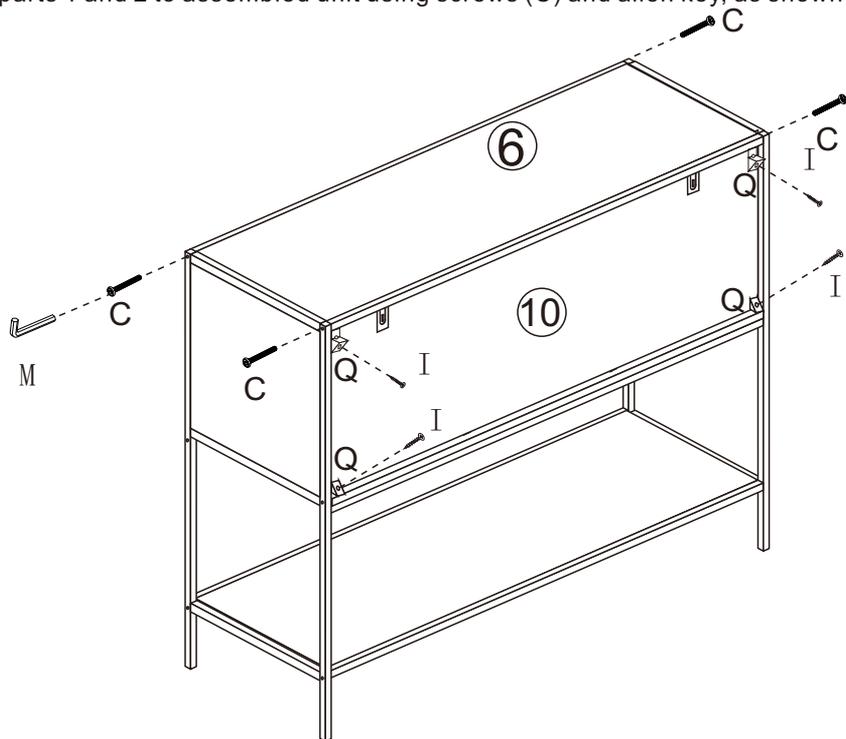

STEP 12.


Fix handles (F) to doors 8 using screws (G), as shown.

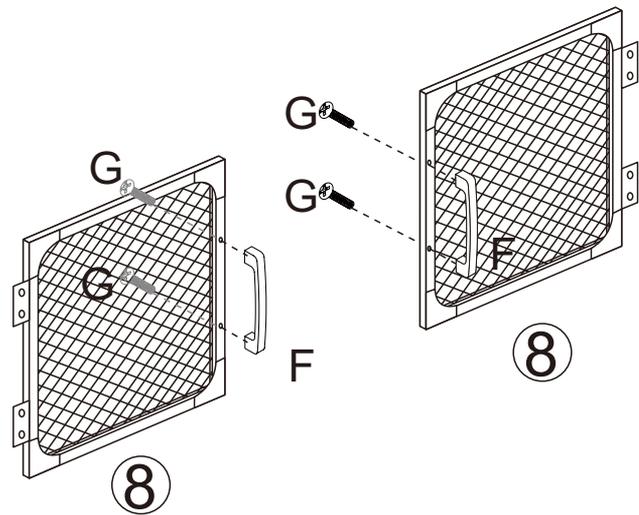

ASSEMBLY STEPS


STEP 13.

Fix doors 8 to assembled unit using screws (D), as shown.

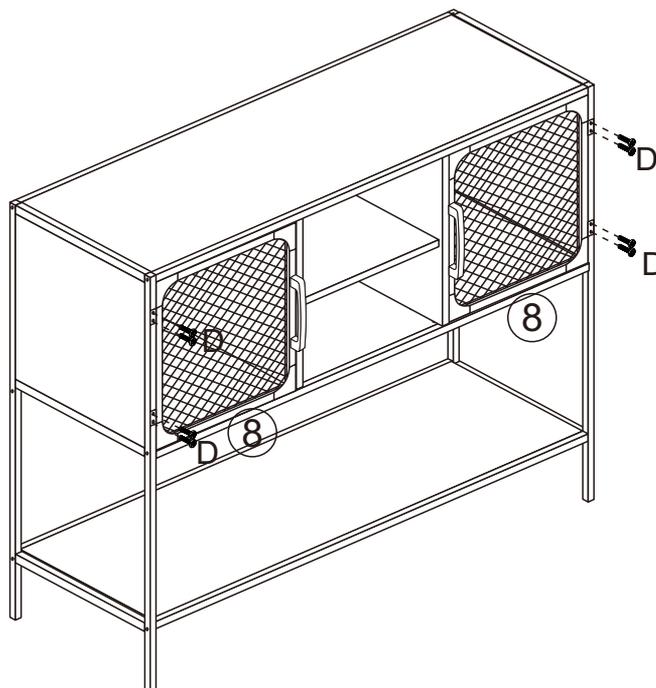

STEP 14.


Fit shelf supporters (P) to the inside of sideboard, as shown.

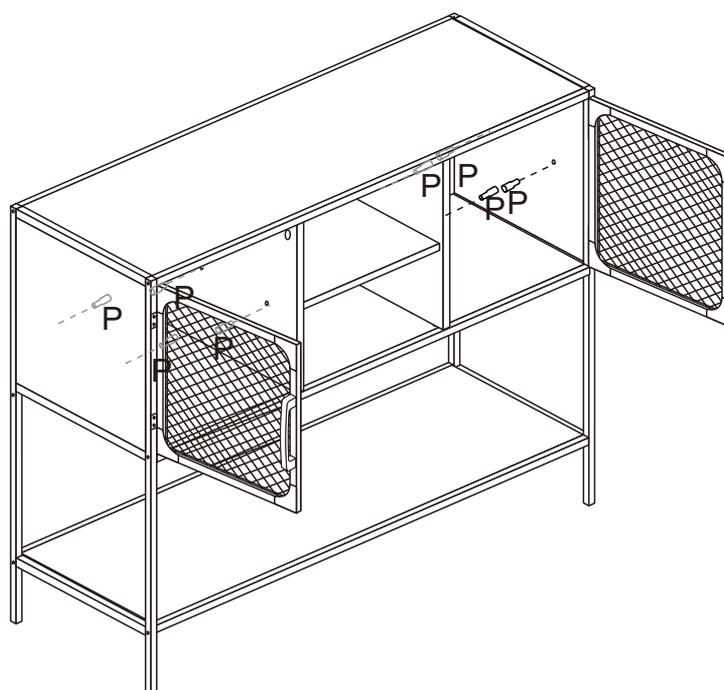

ASSEMBLY STEPS

STEP 15.

Place parts 11 on shelf supporters, as shown.

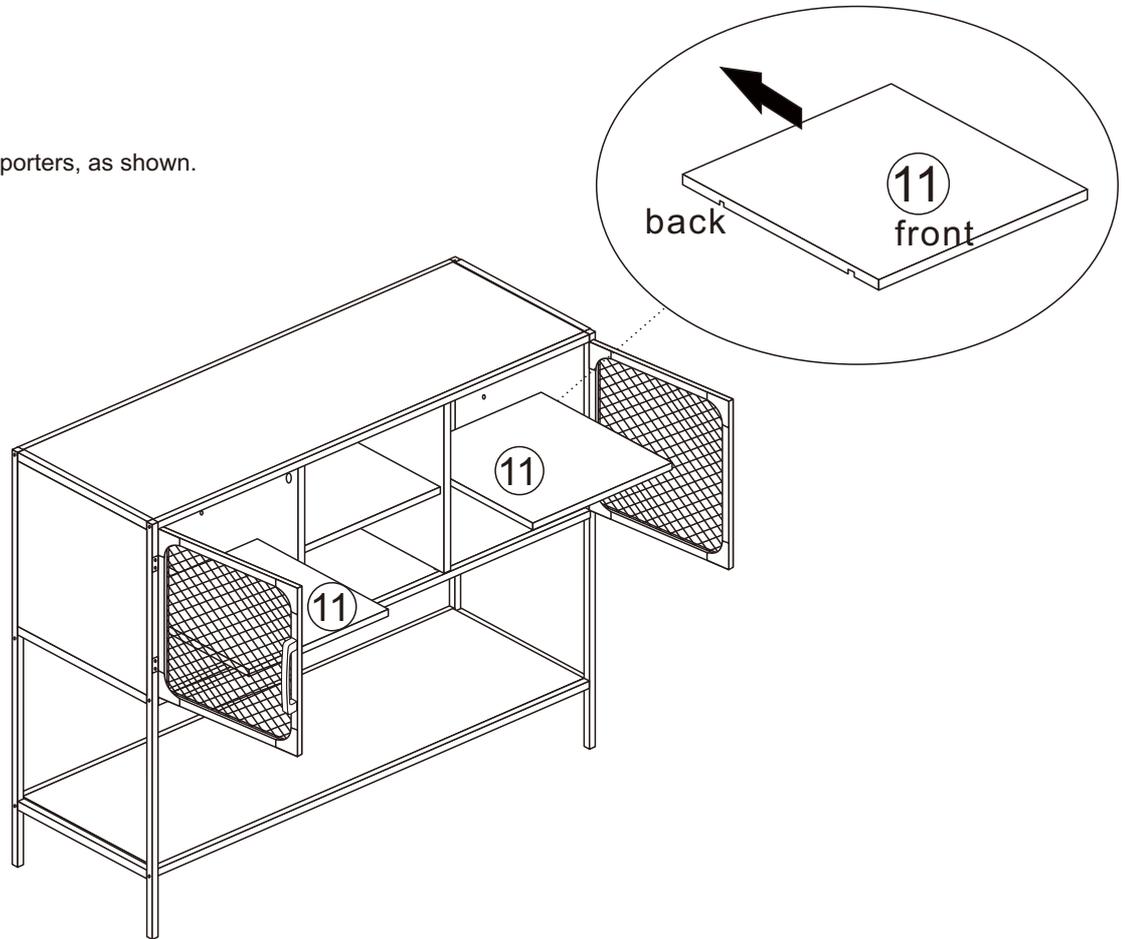

STEP 16.

For extra stability, it is recommended that you fix your sideboard to the wall using hardware (K and L), as shown.

Screw (K) are fixed through wall brackets and into the wall plugs (L).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

