


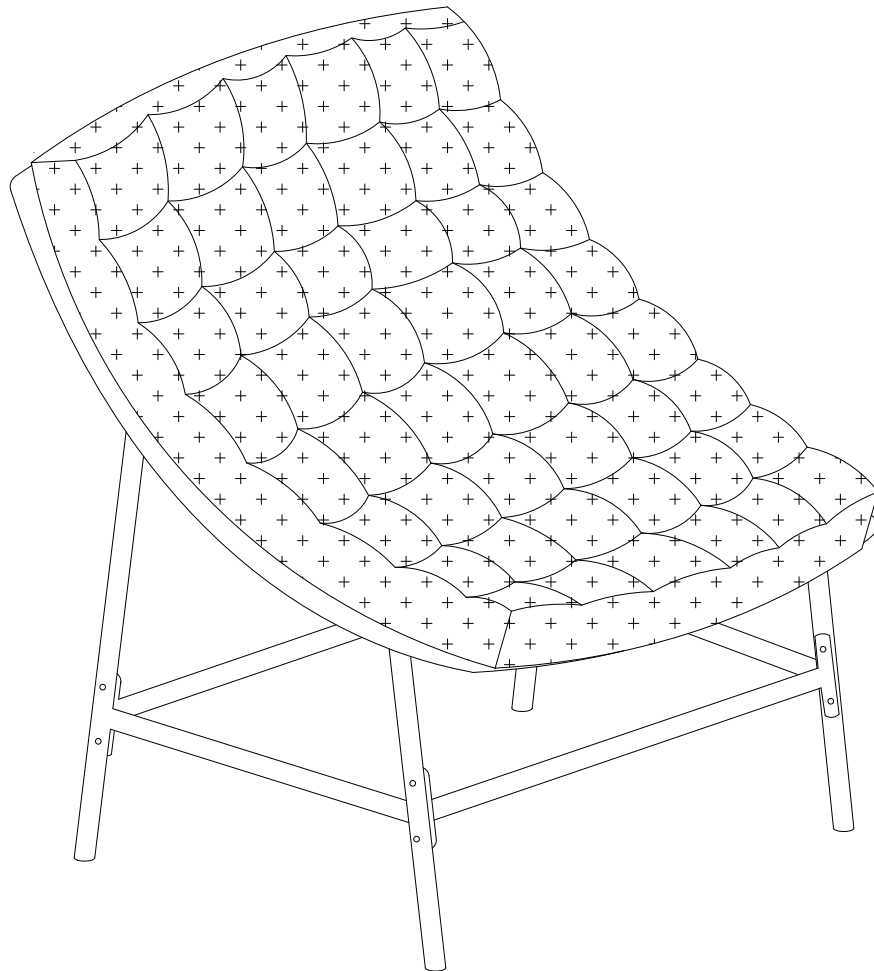

ORRSC2 # : ORRSC2
Assembly Instructions




*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **www.walkeredison.com***

Revised 07/02/2018




General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main type of hardware used to assemble this product are: bolts and screws.
- V. Power tools should not be used to assemble this product.

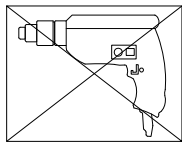





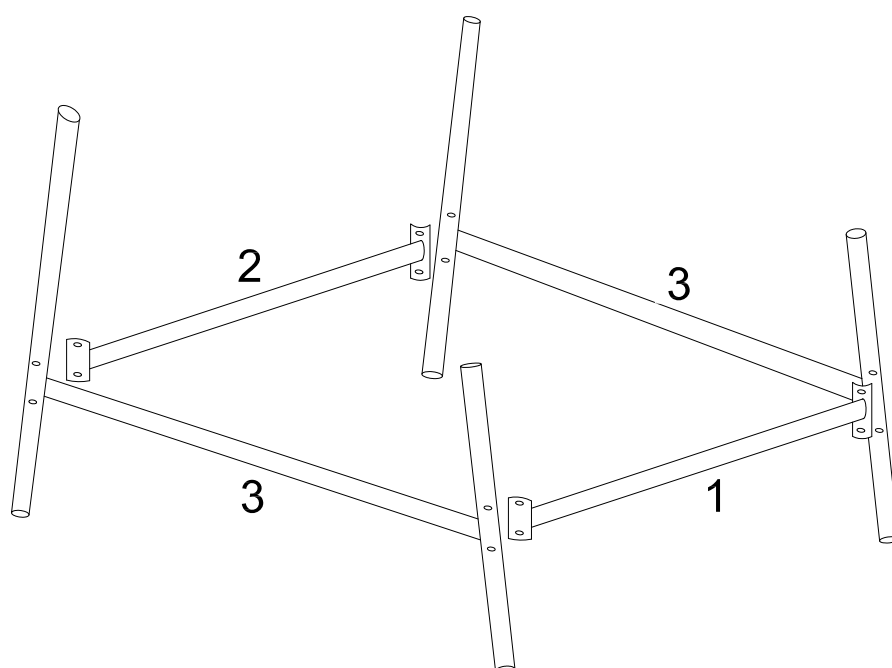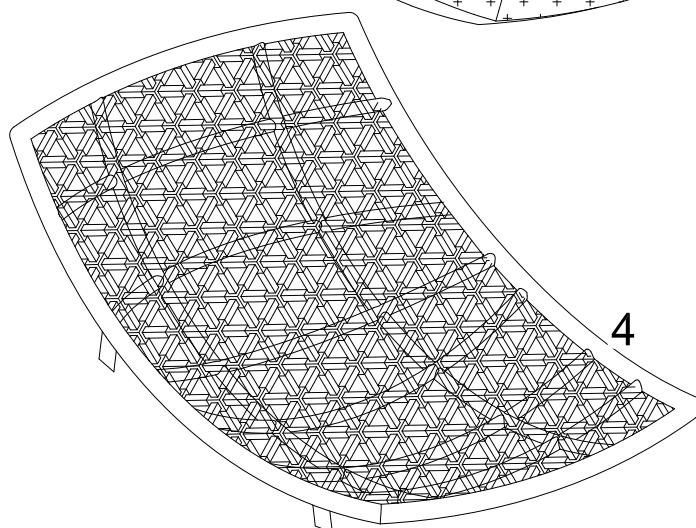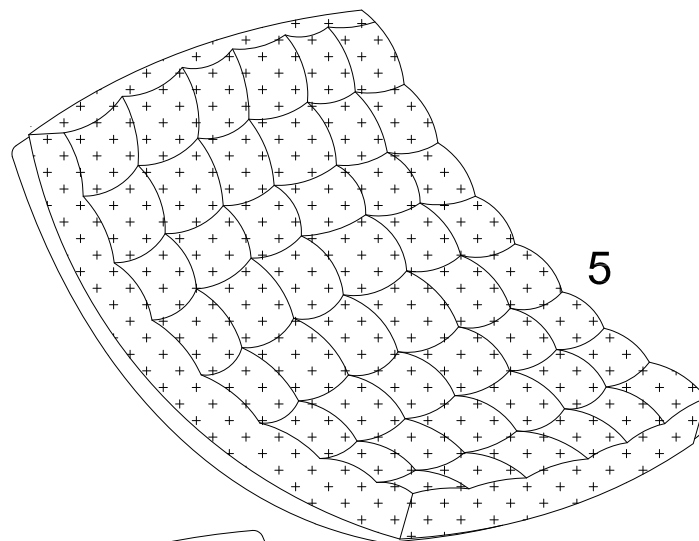

- VI. Drill may be needed for securing product to wall.

Parts List




Hardware List

A		M6x35mm	Bolt	12 pcs
B		Ø15	Flat	24 pcs
C		M 6	Hex Key	1 pcs
D		M6	Hex nut	12 pcs
E		M6	Open spanner	1 pcs
F		M6	Screwdriver cap	12 pcs


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

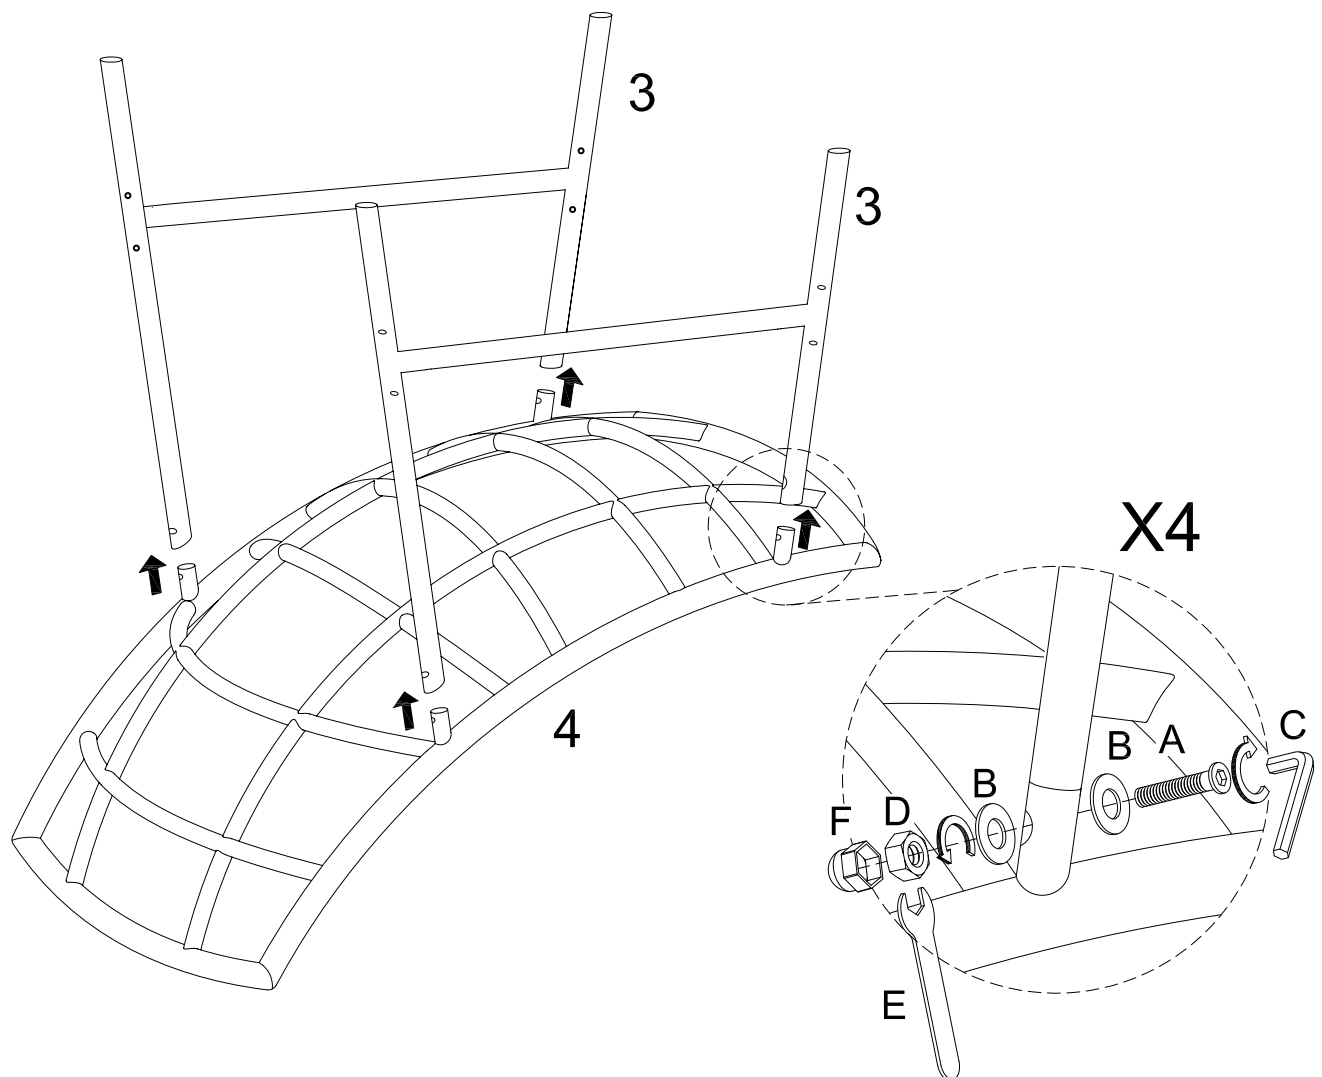


Attach part (3) to part (4) using bolt (A), flat (B), and hex nut (D) with hex key (C) and open spanner (E). Then place screwdriver cap (F) on hex nut (D) per diagram.

Step 2

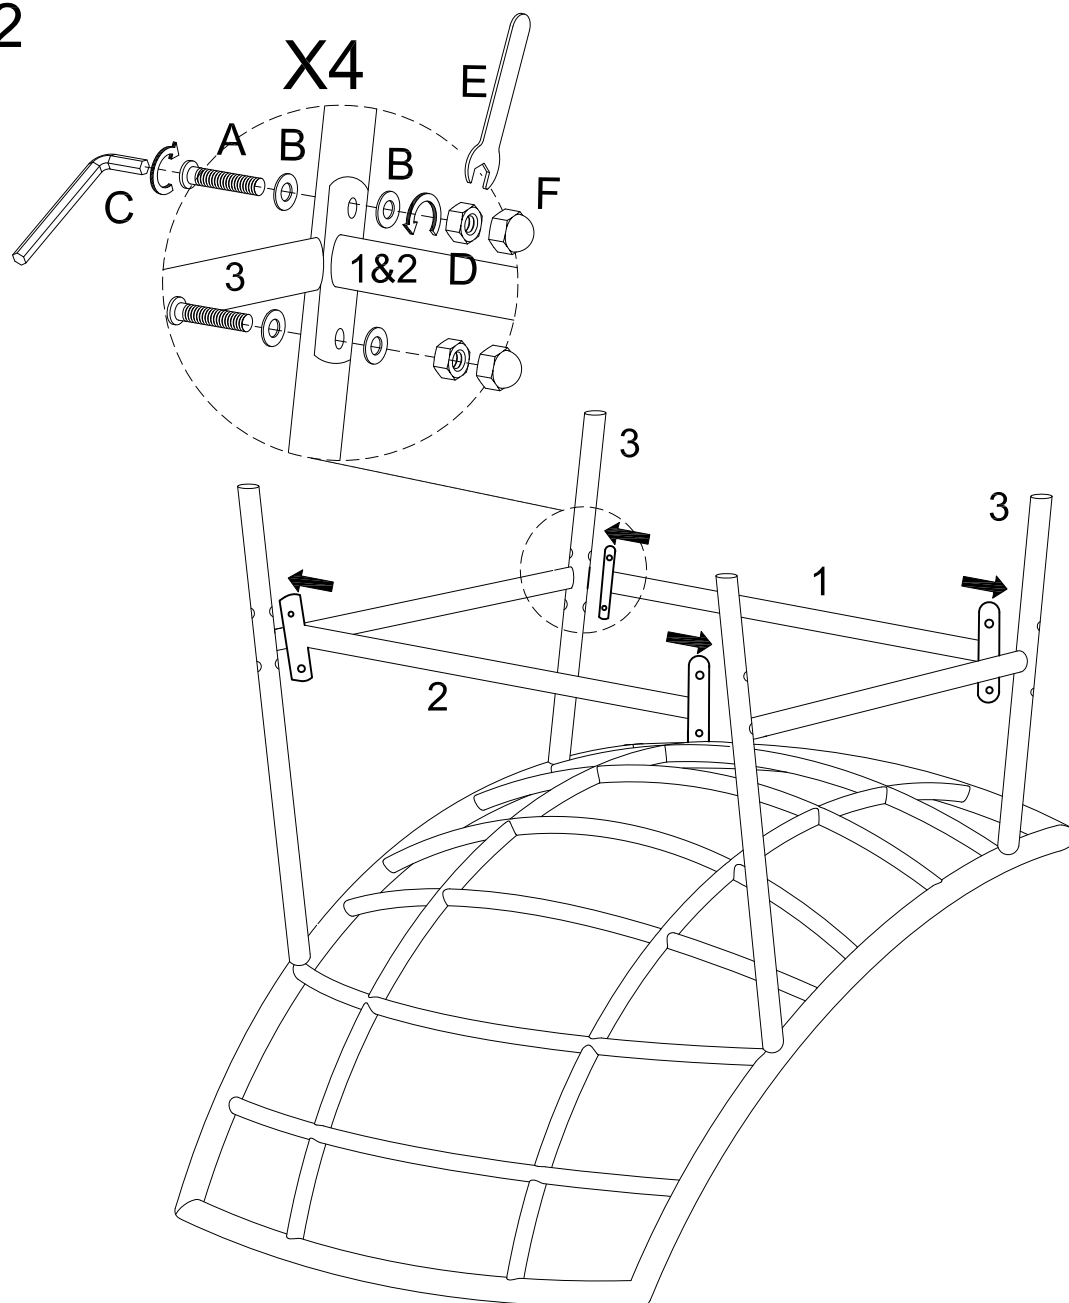


Attach parts (1,2) to part (3) using bolt (A), flat (B) and hex nut (D) with hex key (C) and open spanner (E). Then place screwdriver cap (F) on hex nut (D) per diagram.

Step 3

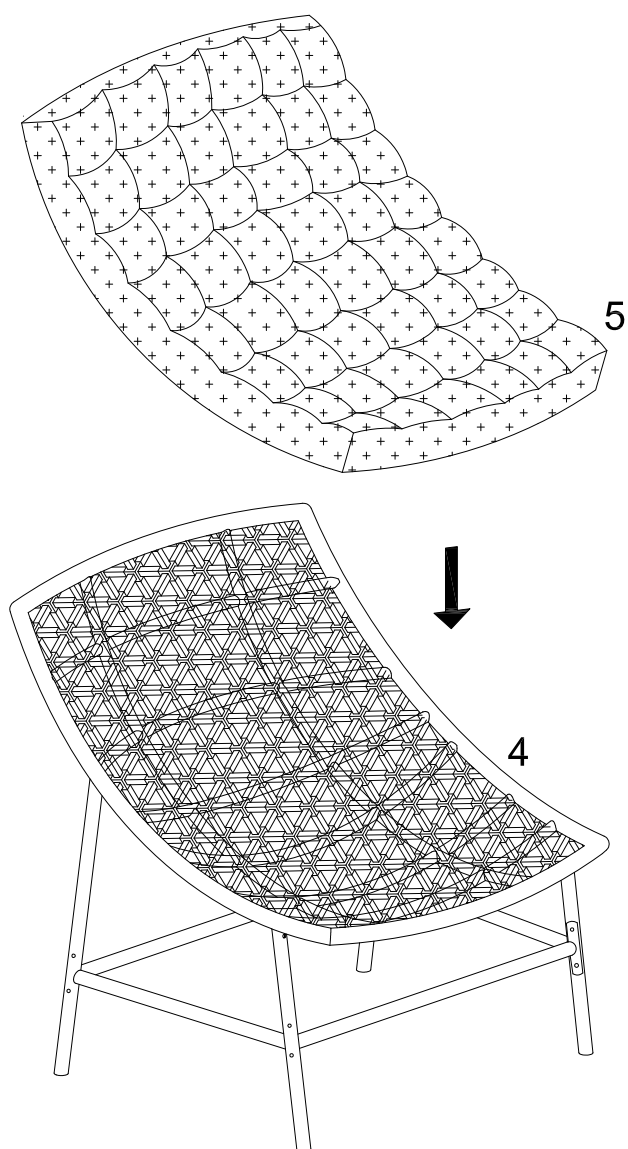

Place cushion (5) on top of chair per diagram.

Step 4

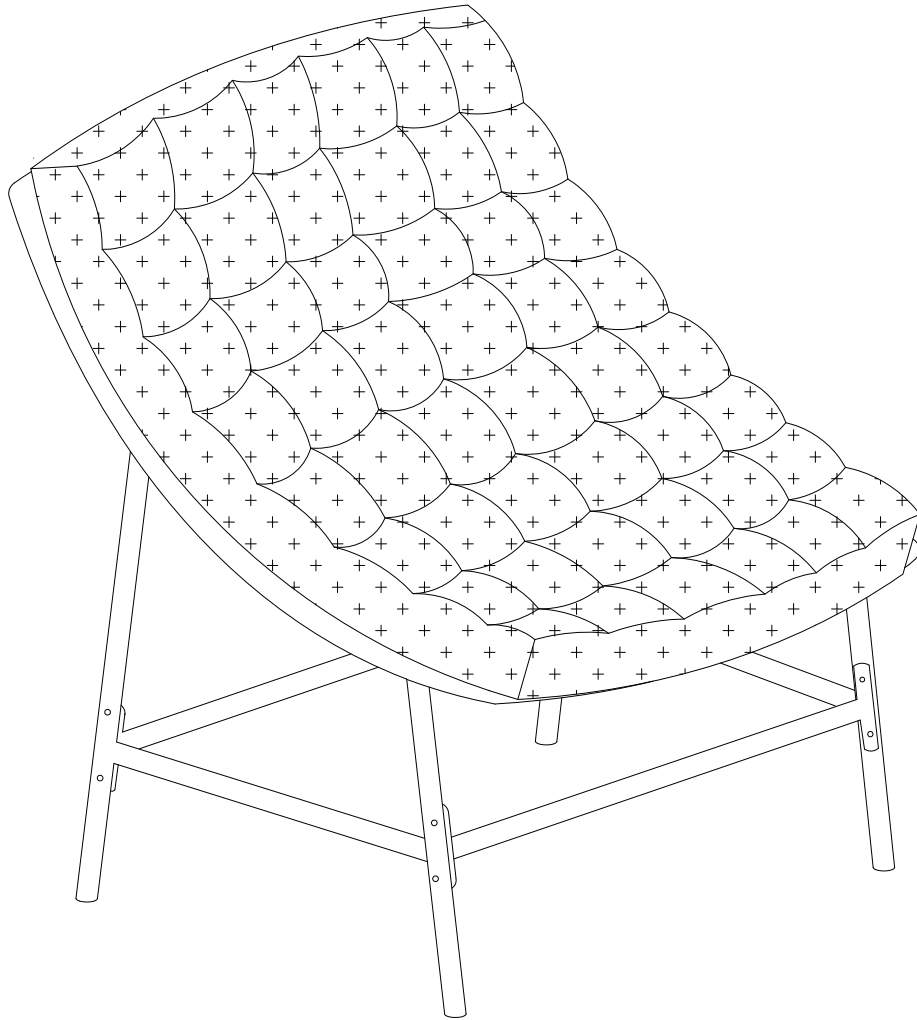

Final Assembly