






# ASSEMBLY INSTRUCTIONS



## CAUTION:

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD TO BE ASSEMBLED ON A DRY,SOFT,SMOOTH AND CLEAN SURFACE. DO NOT USE DETERGENT OR CHEMICAL.


AVOID DAMP AND DIRECT SUNLIGHT.

STEP 1 CHECK YOUR HARDWARE		
	SCREW M3 X 20	4 PCS
	CORNER BLOCK	4 PCS
	SCREW #9 X 1 1/2"	12 PCS
	WOOD DOWEL M6 X 25	12 PCS
	STICKER	12 PCS


## TOOLS REQUIRED:

	HAMMER		SCREW DRIVER
---	--------	---	--------------


## STEP 2

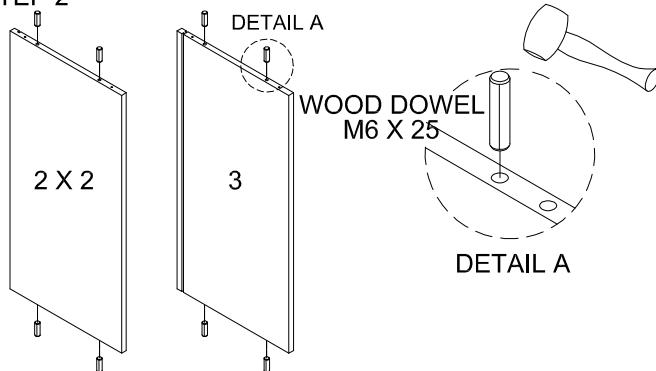


## STEP 3

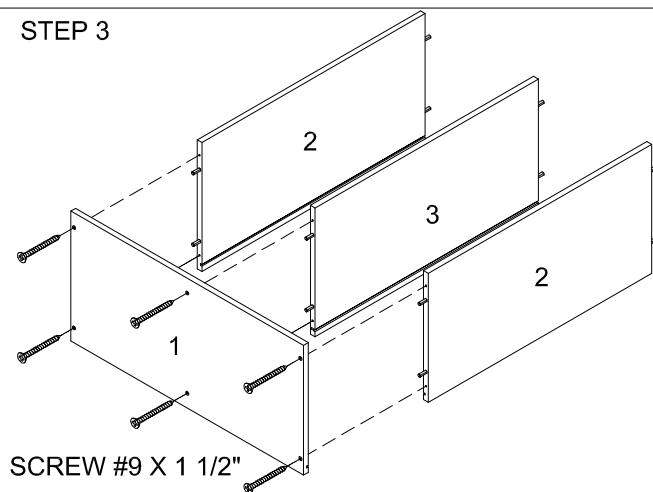


## STEP 4

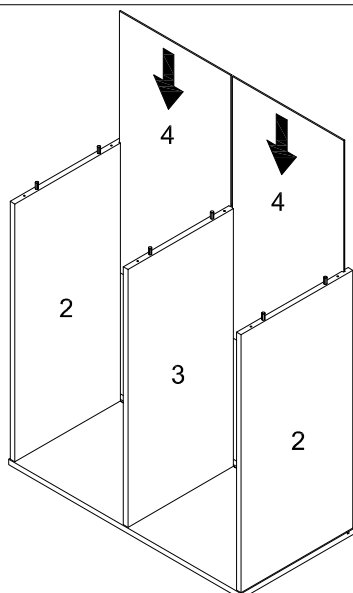

## STEP 5

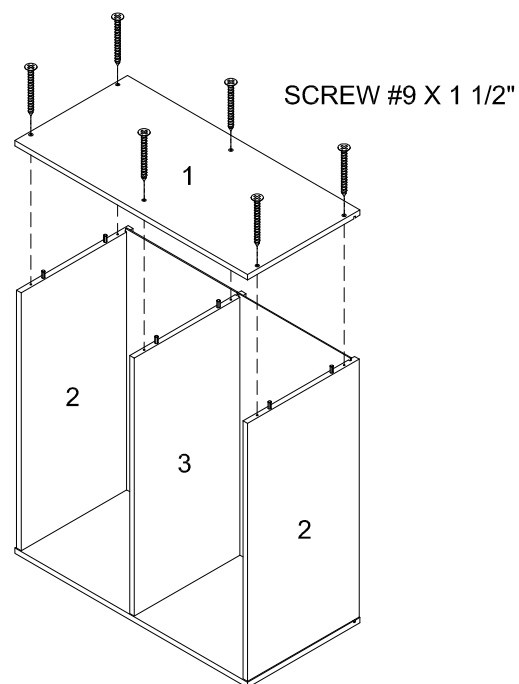

## STEP 6

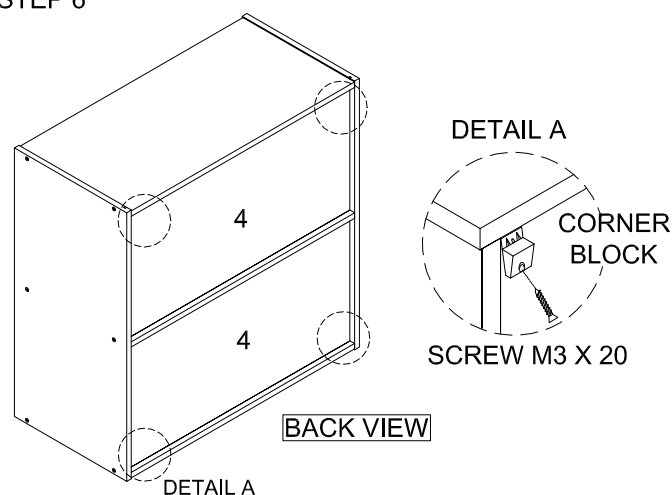

## STEP 7

