





867-V59D-CTG / 867-V59D-CFO / 867-V59D-NZB / 867-V59D-SOK


Vanities Assembly Instructions

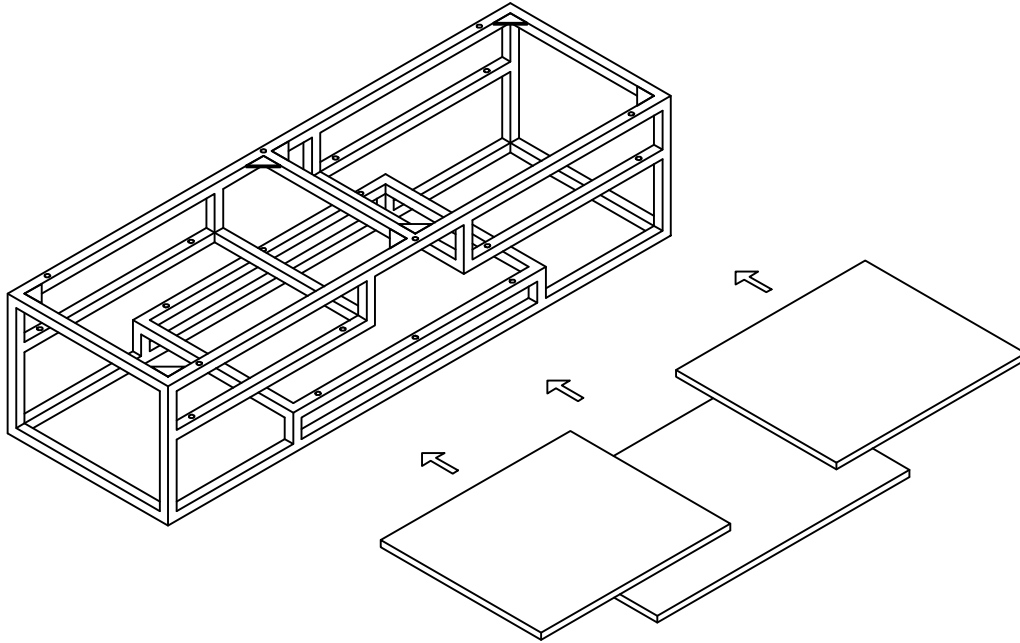


Step 1:

Unpack the metal base and shelves from packaging, and place the shelves to the position.

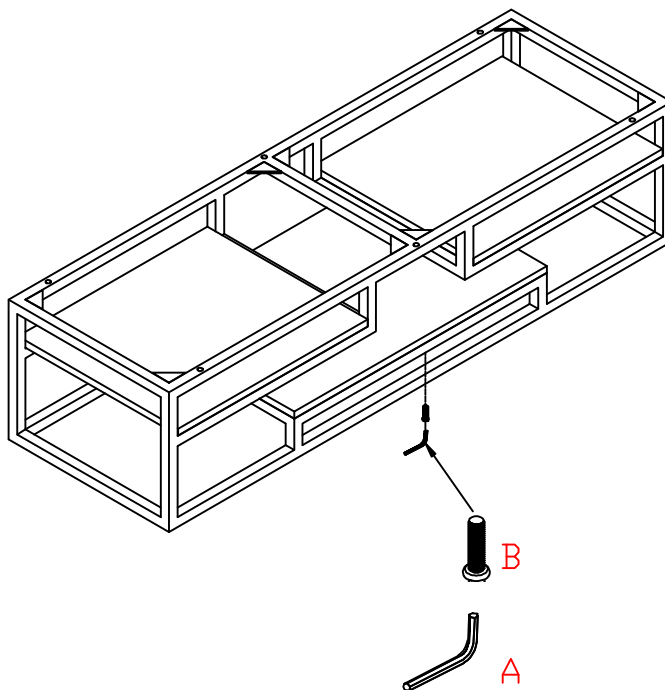

A=1PC $\varnothing 4$ 


B=14PCS $\varnothing 1/4 \times 1-1/2$ 

Step 2: Insert the bolt (B) from underneath of frame by using with Allen Wrench





867-V59D-CTG / 867-V59D-CFO / 867-V59D-NZB / 867-V59D-SOK

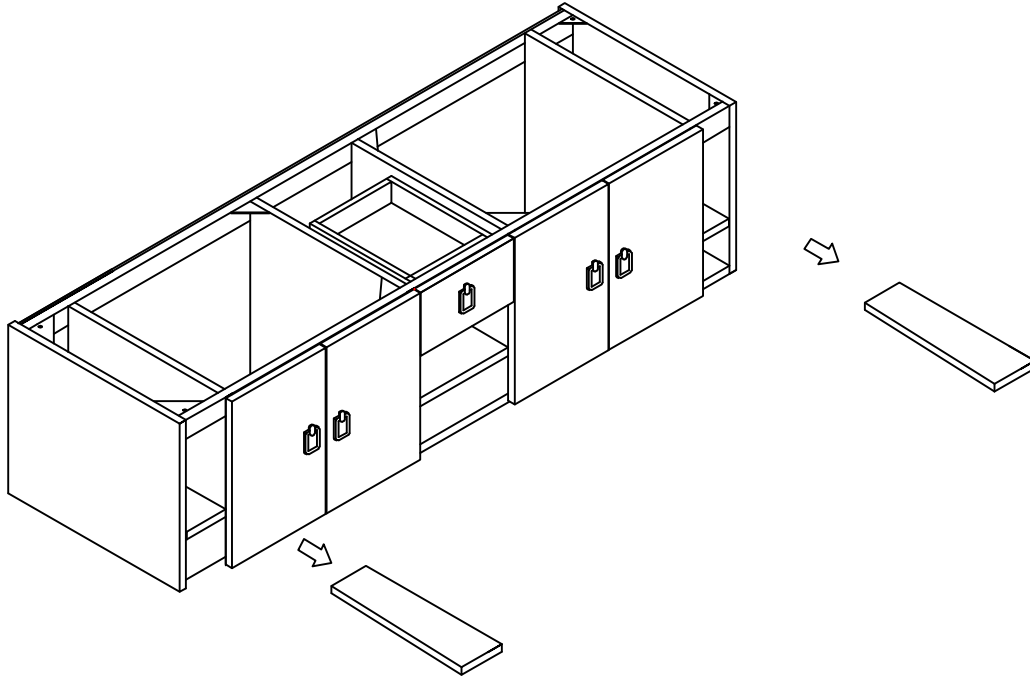
Vanities Assembly Instructions



Step 3: Remove the shelves from top row for easier access to assemble the top.

Note: James Martin recommends a minimum of two people for the assembly.


A=1PC	Ø4	
B=6PCS	Ø1/4*1-1/2	

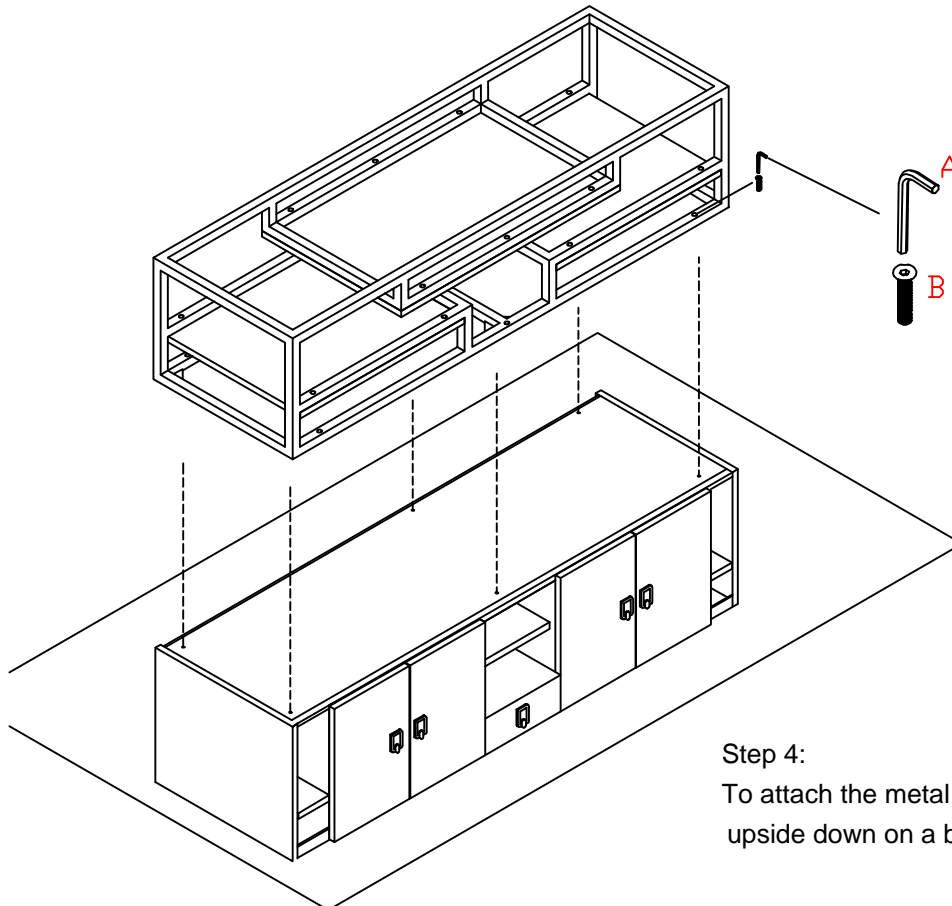

Step 4:
To attach the metal base, place the vanity cabinet upside down on a blanket or similar soft material.



867-V59D-CTG / 867-V59D-CFO / 867-V59D-NZB / 867-V59D-SOK

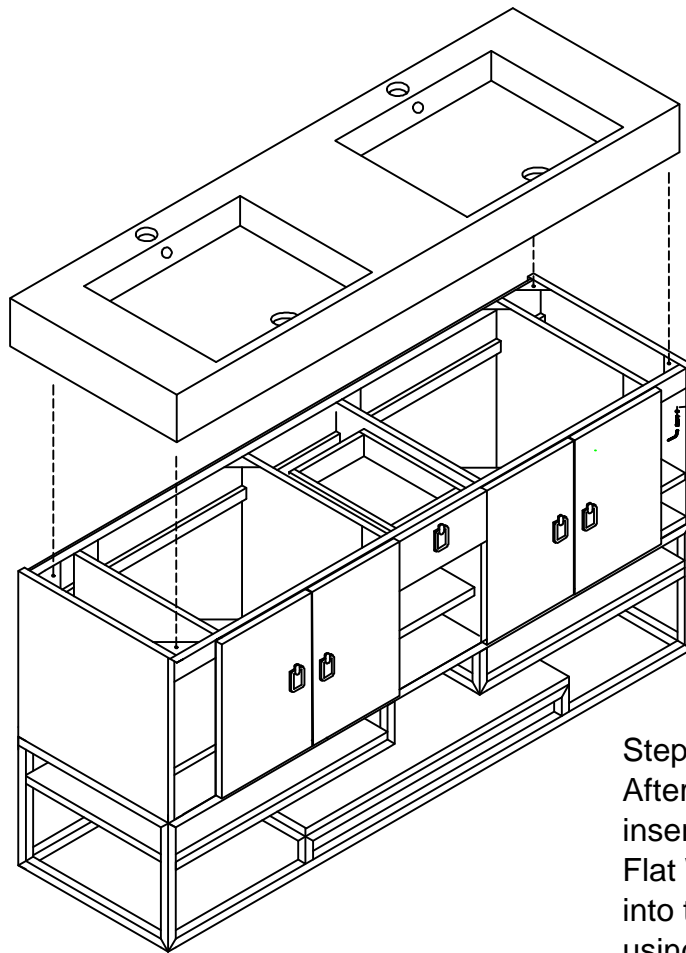Vanities Assembly Instructions

A=1PC

Ø4



C=4PCS

Ø1/4*1-3/4



D=4PCS

Ø1/4



E=4PCS

Ø19

**Step 5:**

After the washbasin has been correctly positioned, insert the bolts through the Spring Washer (D) and Flat Washer (E) access the vanity cabinet and into the pre-drilled holes, tighten the bolts using the included Allen Wrench.

Step 6: Place the top row shelves back to position.