


ASSEMBLY INSTRUCTION

MODEL : 37058T EDMONTON TWIN BED (990 x 1905)MM

ACME FURNITURE

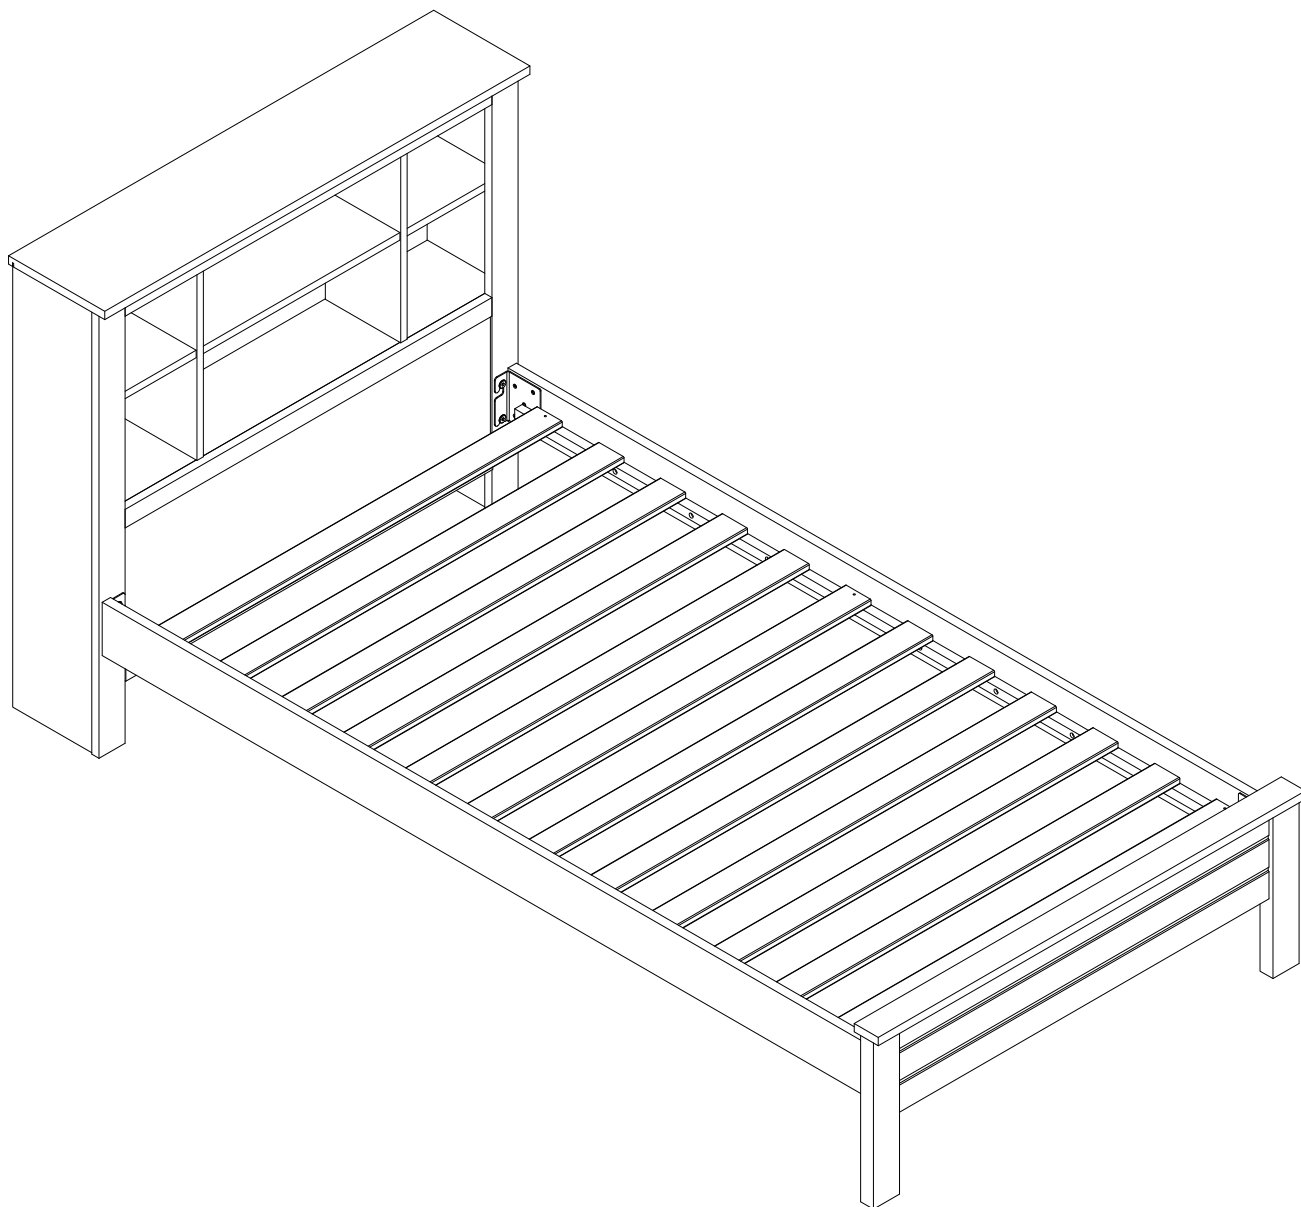

HARDWARE LIST

A

8 PCS



JCBB BOLT (M8 x 16MM)

B


6 PCS



CSK C/B SCREW (M4 x 32MM)

C

1 PC

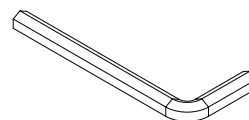


ALLEN KEY (M5 x 60MM)




Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.

Tools Required :
Crosshead Screw Driver


PART LIST

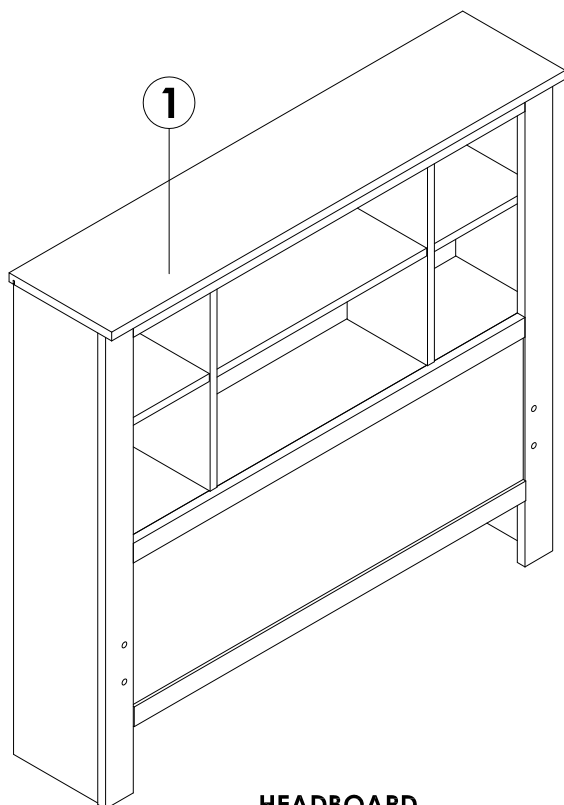


HEADBOARD
(1 PC / SET)
CARTON 1 OF 3

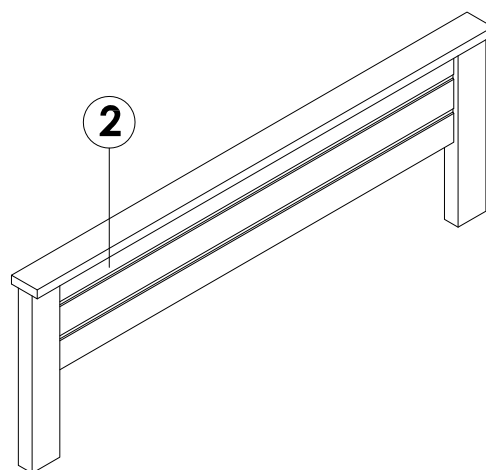


FOOTBOARD
(1 PC / SET)
CARTON 2 OF 3

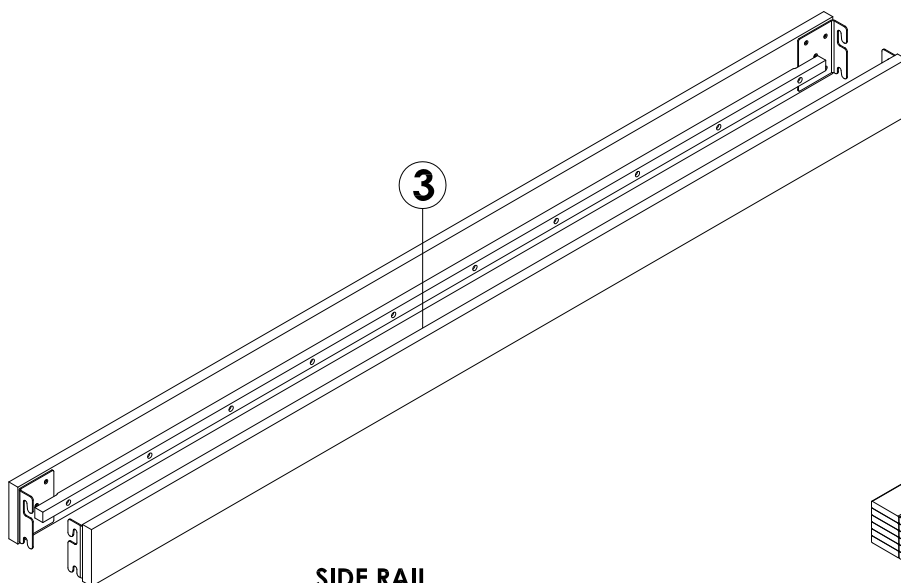

SIDE RAIL
(2 PCS / SET)
CARTON 3 OF 3

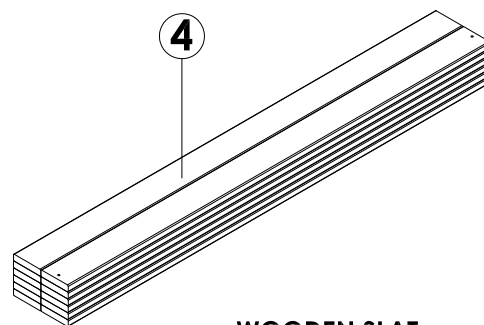


WOODEN SLAT
(12 PCS / SET)
CARTON 1 OF 3

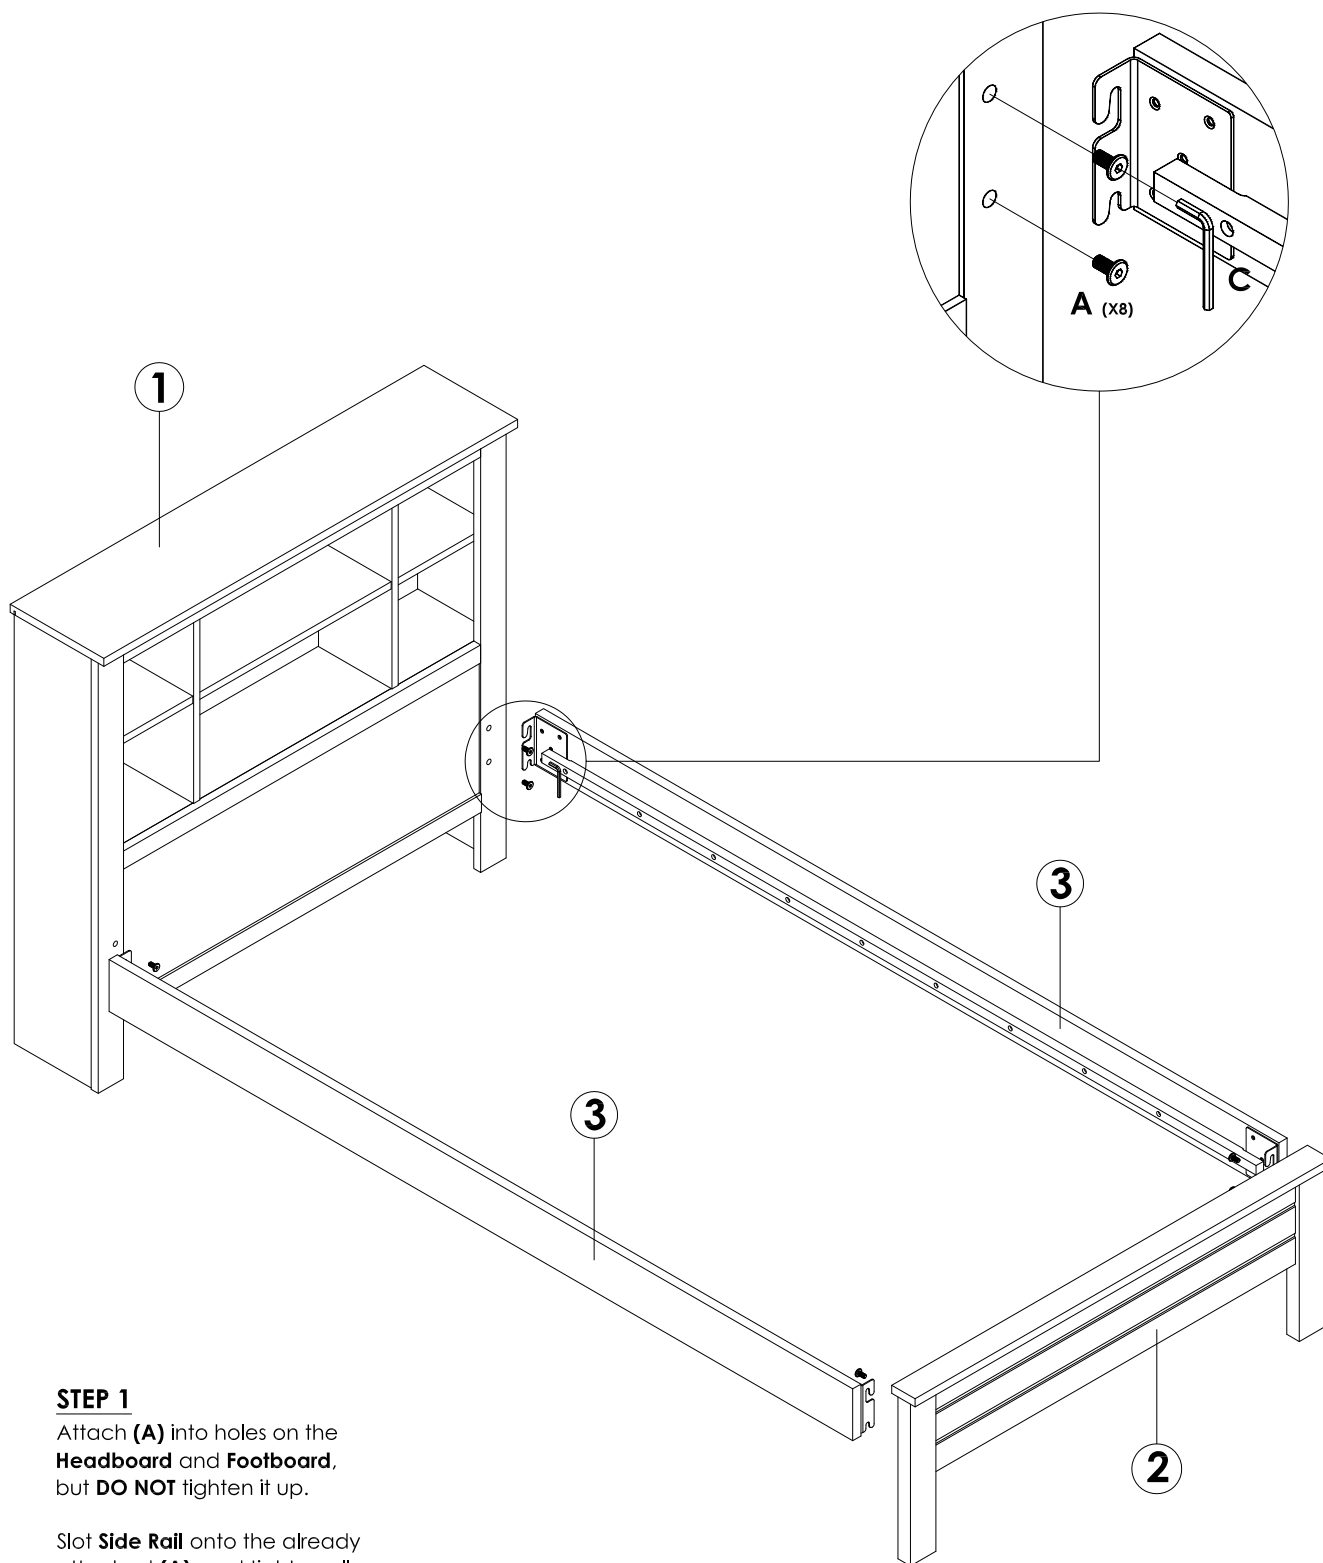

STEP 1

Attach **(A)** into holes on the **Headboard** and **Footboard**, but **DO NOT** tighten it up.

Slot **Side Rail** onto the already attached **(A)**, and tighten all the screws up by using **(C)**.

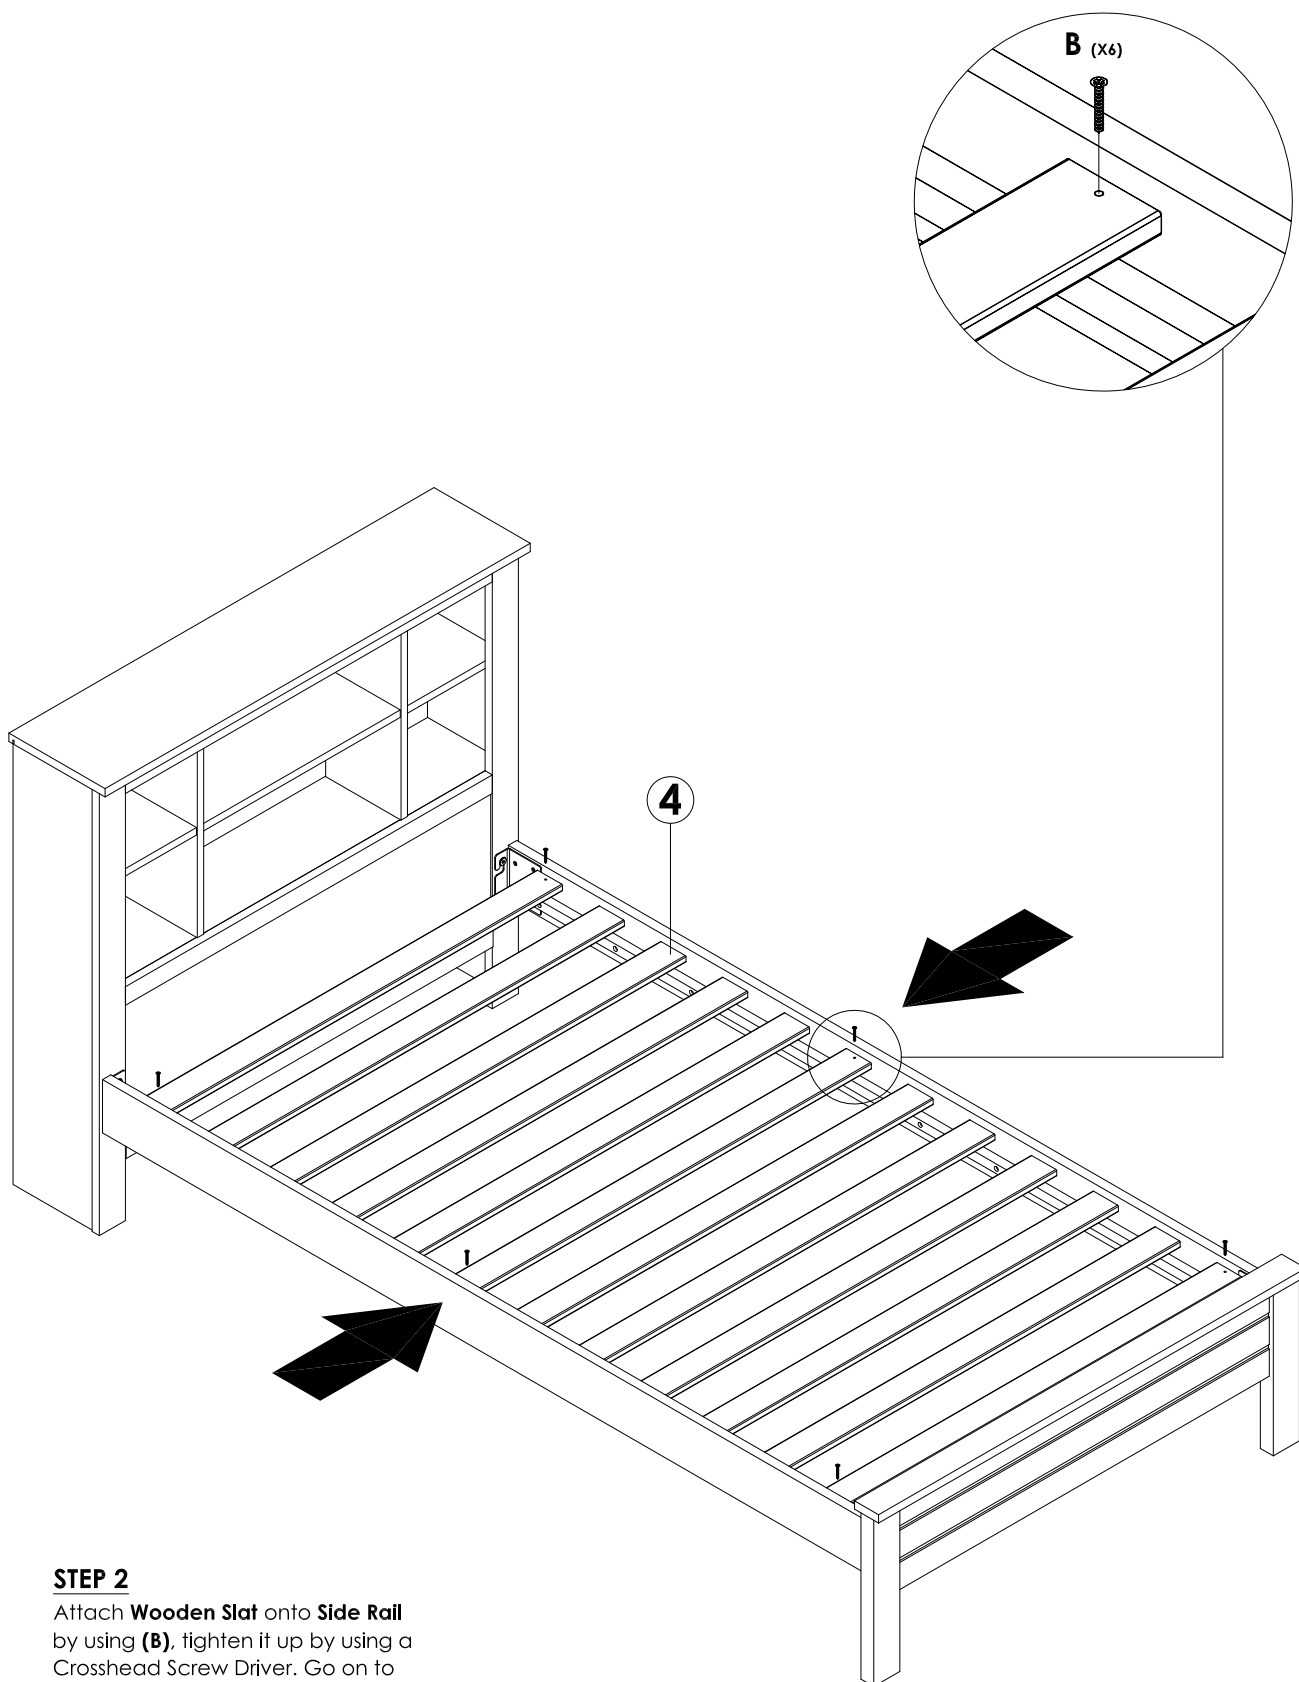

STEP 2

Attach **Wooden Slat** onto **Side Rail** by using **(B)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the entire assembly.

* Align both **Side Rail** before tightening the screws.