




Welland


# Colima Hair Dryer Hanging Rack

WSV157-150

## TOOLS REQUIRED



Hammer

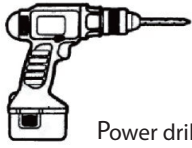

Power drill




3/8 in. drill bit



Level





Pencil




Screwdriver


## INSTRUCTION

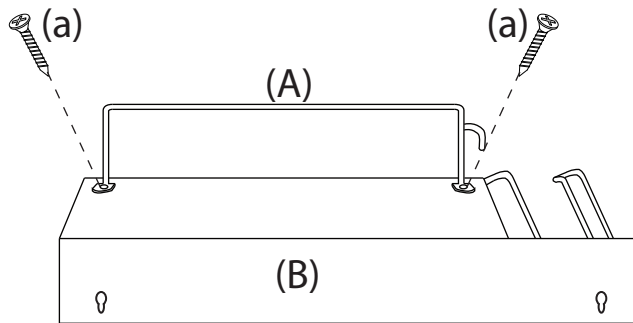


**Step 1:** Secure the towel rack (A) to the shelf (B) with screws(a)

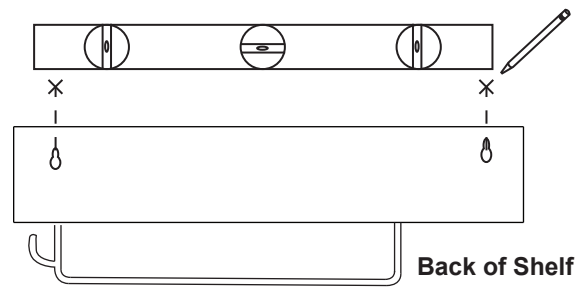

**Step 2:** Measure the diameter of 2 mounting positions on board by Level. Mark the hanging position on the desired spot with a pencil (make sure they are on level).

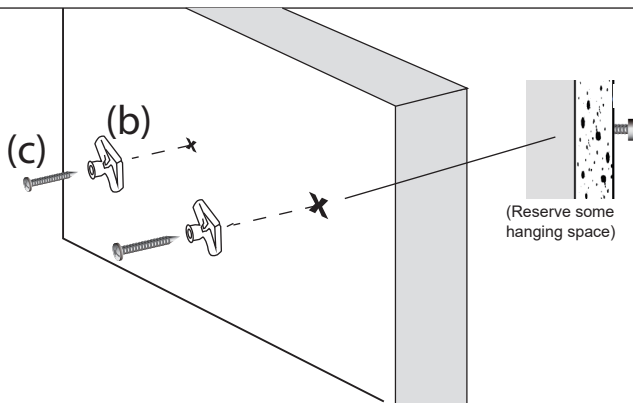

**Step 3:** In case the holes don't hit the studs, you need to use the drywall anchors(b). Drill 2 holes in the marked position by Power drill and 3/8 in drill bit, and tap the anchors into the holes with a hammer. Use Power drill or a Philips screwdriver to drive the screws(c) into the studs or drywall anchors.

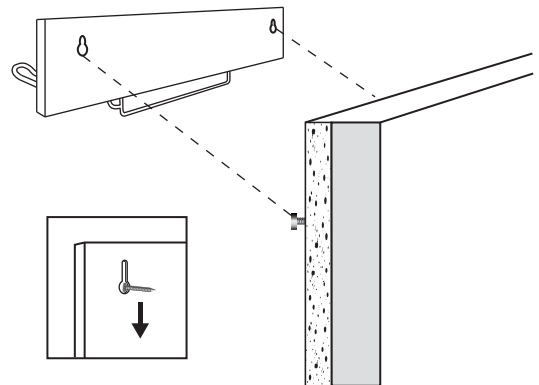

**Step 4:** Slide the shelf onto the screws on the wall till it moves no further.

**DISCLAIMER:** Install Welland shelf and shelving units according to instructions provided. WELLAND LLC and its related companies are not responsible for injury or damage resulting from incorrect installation or use. Welland products are for use only as shelves units and are not intended for any other purposes. For assistance with installation or missing parts, please contact us via [customerservice@wellandllc.com](mailto:customerservice@wellandllc.com)

The emission of the chemicals listed in Prop 65 in this product has been tested to meet the standard of CARB ATCM.