
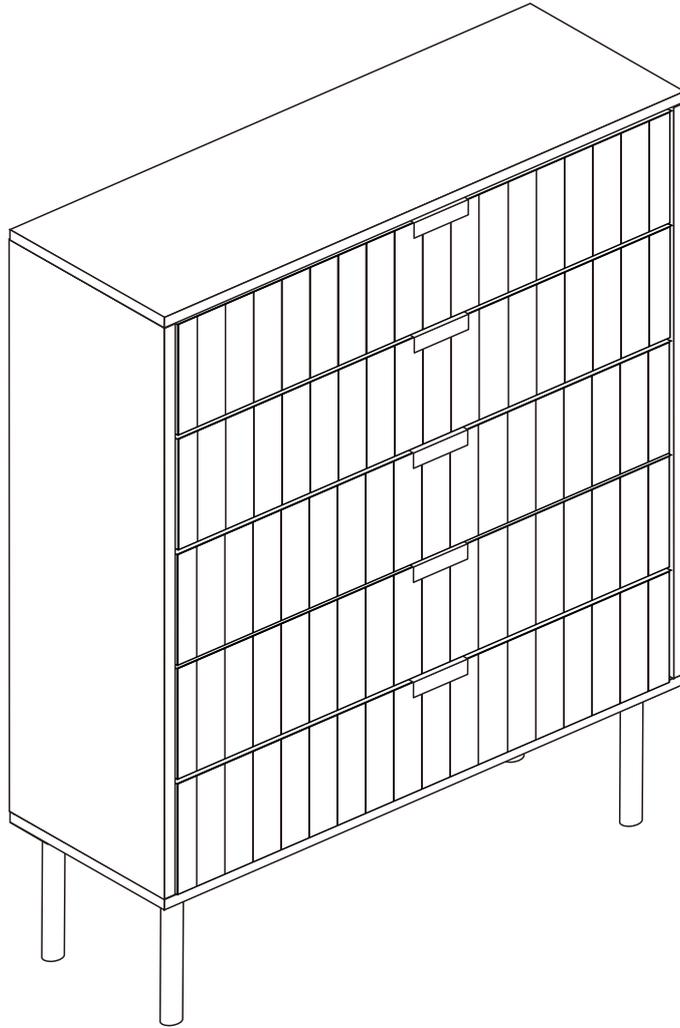
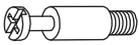


# Chest of drawers

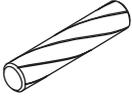


## ASSEMBLY INSTRUCTION

# HARDWARE LIST

<p>A</p> <p>42pcs</p>		<p>B</p> <p>42pcs</p>		<p>C</p> <p>24pcs</p>		<p>D</p> <p>16pcs</p>	
<p>E</p> <p>78pcs</p>		<p>F</p> <p>10pcs</p>		<p>G</p> <p>10pcs</p>		<p>H</p> <p>5pcs</p>	
<p>I</p> <p>2pcs</p>		<p>J</p> <p>2pcs</p>		<p>K</p> <p>2pcs</p>		<p>L</p> <p>8pcs</p>	
<p>M</p> <p>22pcs</p>		<p>N</p> <p>2pcs</p>					

# PARTS LIST


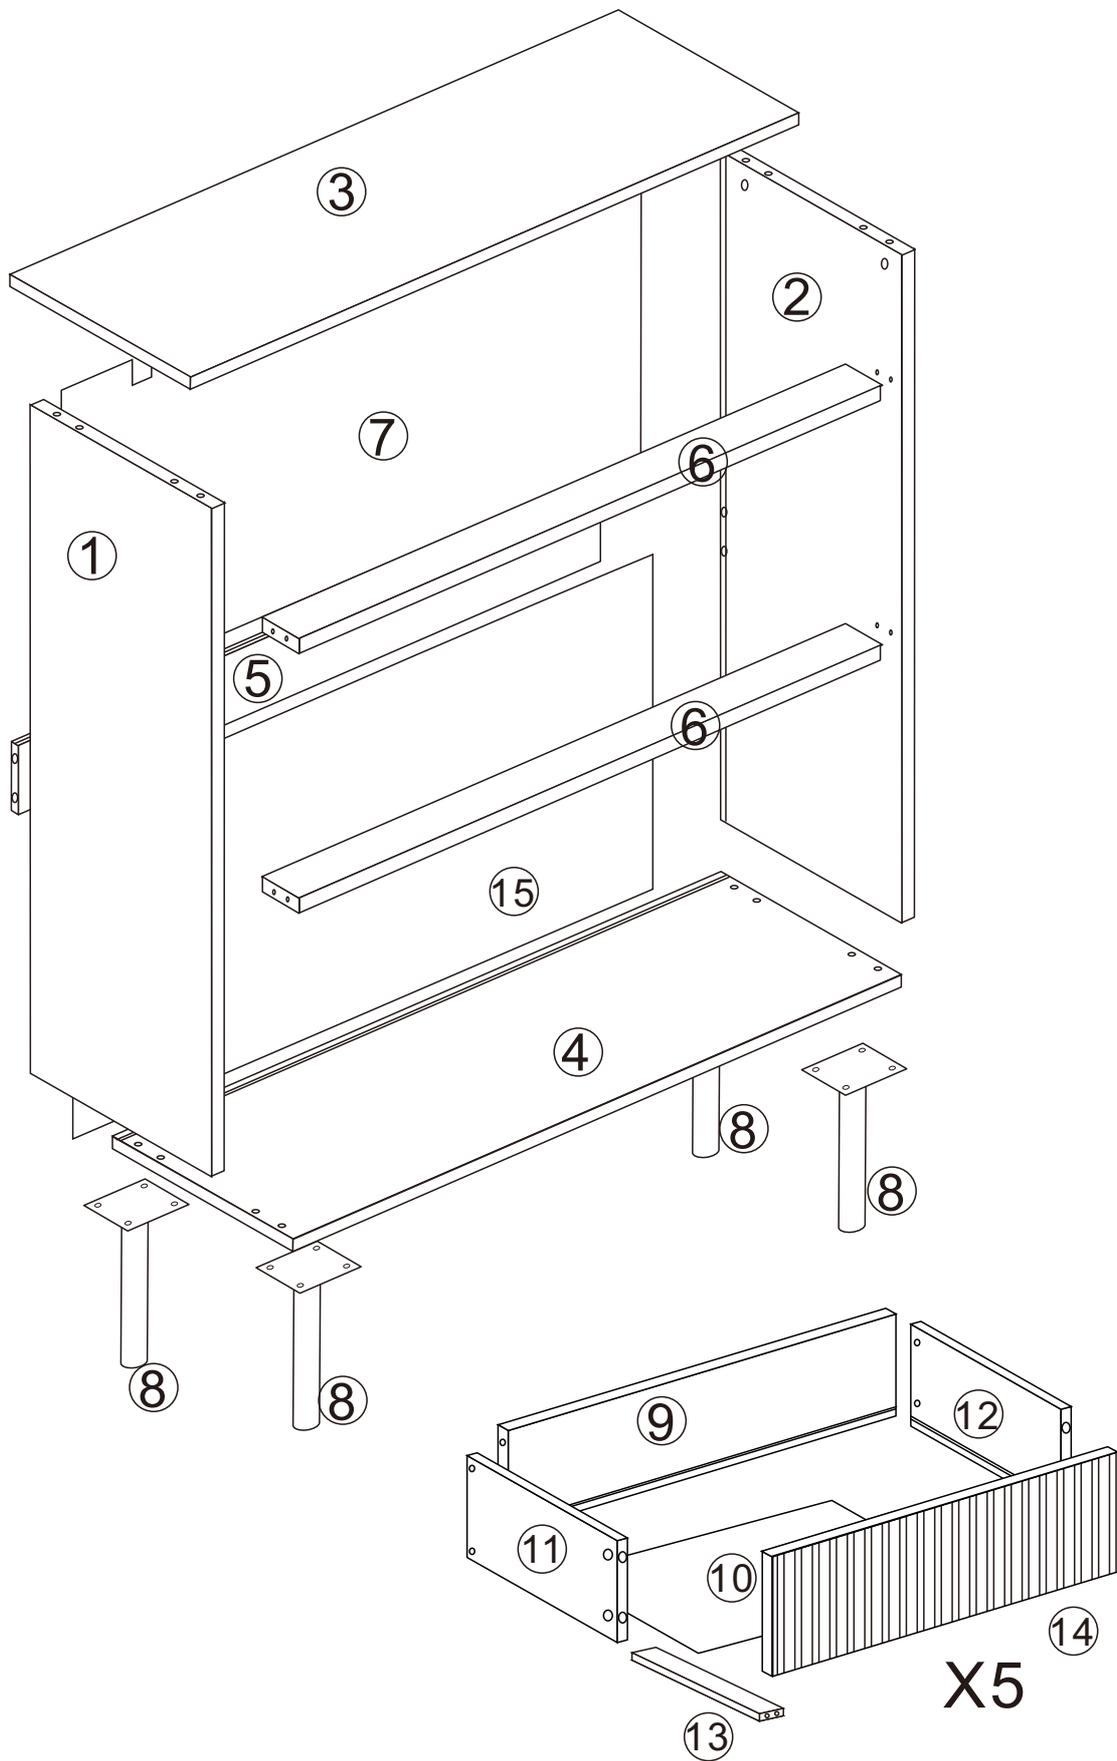


# ASSEMBLY STEPS

## STEP 1.




Slide drawer runner (F) and (G) apart until the drawer lock can be seen, as shown. Press and hold the drawer runner lock upwards and then continue to slide drawers runners apart, as shown.

Your inner and outer runners drawer runners are ready to be fixed to panels. Fix outer drawer runners (G) to parts 1 and 2 using screws(E), as shown.

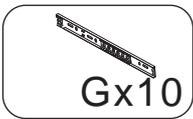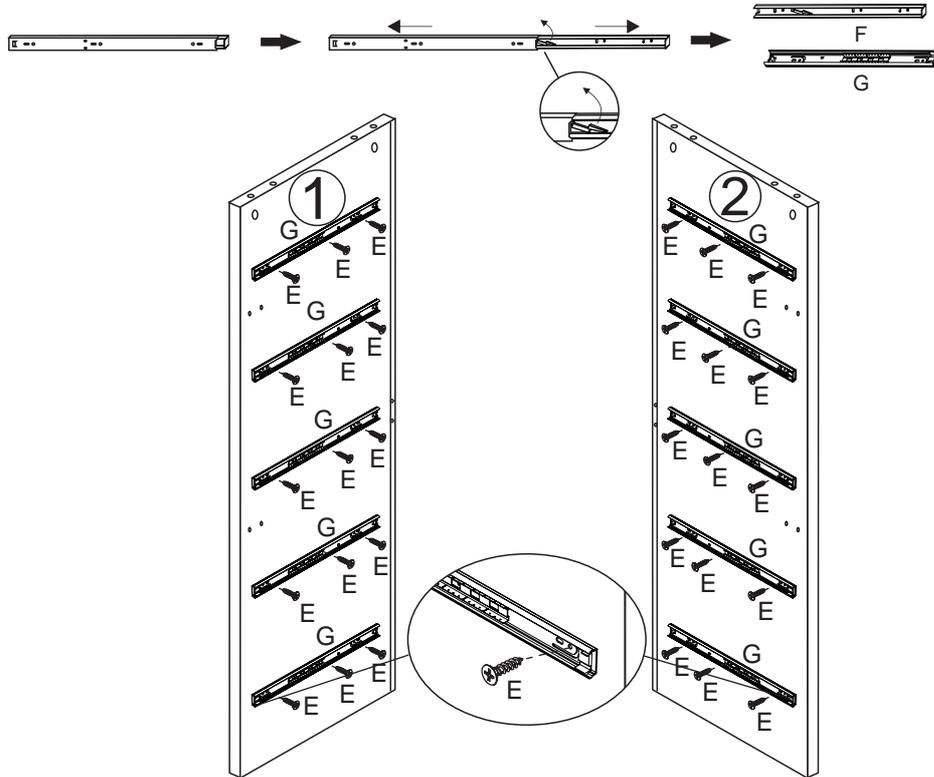

## STEP 2.

Fix parts 11 and 12 to part 9 using screws (C). Insert quickfit screw (A) and wooden dowel (M) into part 9. Insert cam lock (B) into part 13 and attach to part 9, as shown. Turn cam locks clockwise to tighten. Insert part 10 into grooves of parts 11, 12 and 9, as shown.


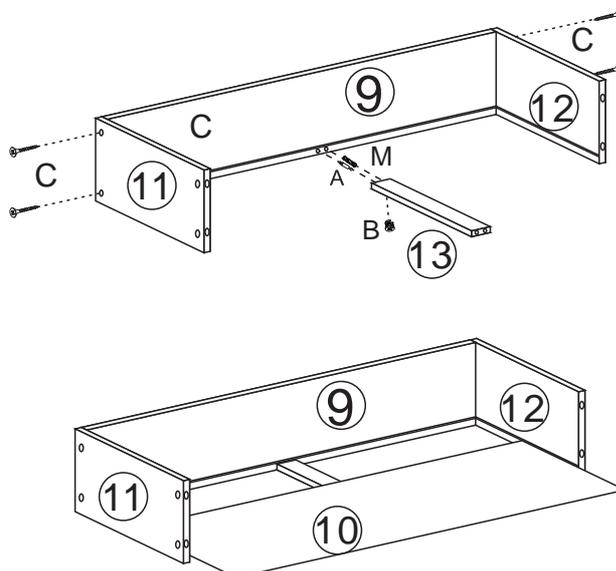
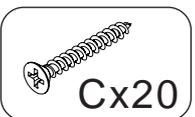
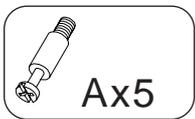


X5

## ASSEMBLY STEPS

### STEP 3.


Insert quickfit screws (A) to parts 14. And fix handles (H) to parts 14 using screws (E), as shown.  
 Insert cam locks (B) and wooden dowels (M) to parts 11, 12 and 13, as shown.  
 Attach parts 14 to assembled drawers.  
 Turn cam locks clockwise to tighten.  
 Fix inner drawer runners (F) to assembled drawers using screws (E), as shown.

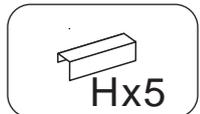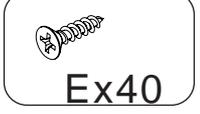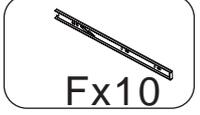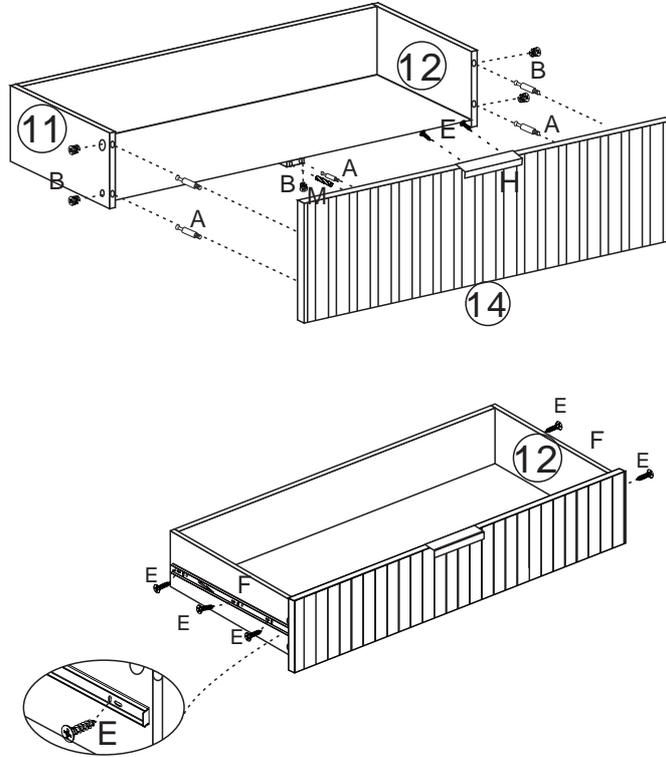

X5

### STEP 4.



Insert quickfit screws (A) and wooden dowels (M) into part 2, as shown.  
 Insert cam locks (B) into parts 6 and 5, as shown. Fit parts 6 and 5 to part 2.  
 Turn cam locks clockwise to tighten.

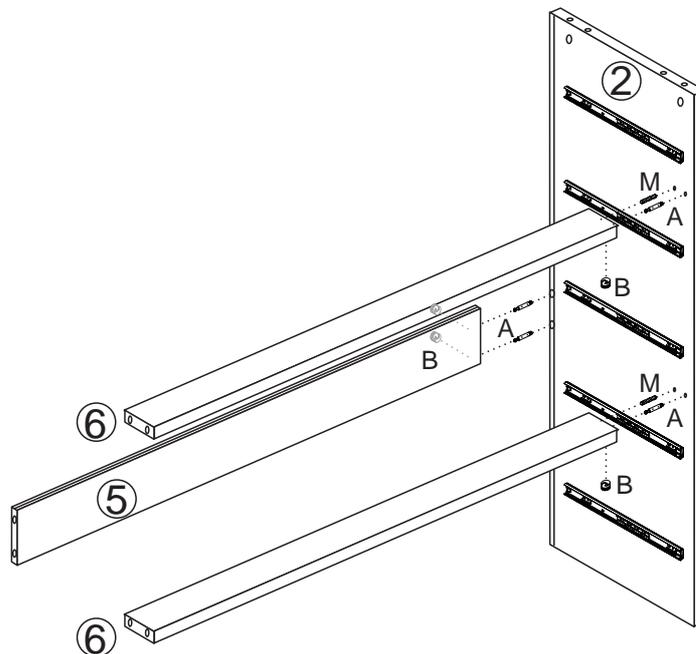

## ASSEMBLY STEPS


### STEP 5.

Insert quickfit screws (A) and wooden dowels (M) into part 1, as shown.  
Insert cam locks (B) into parts 6 and 5, as shown.  
Fit part 1 to assembled unit, as shown.  
Turn cam locks clockwise to tighten.

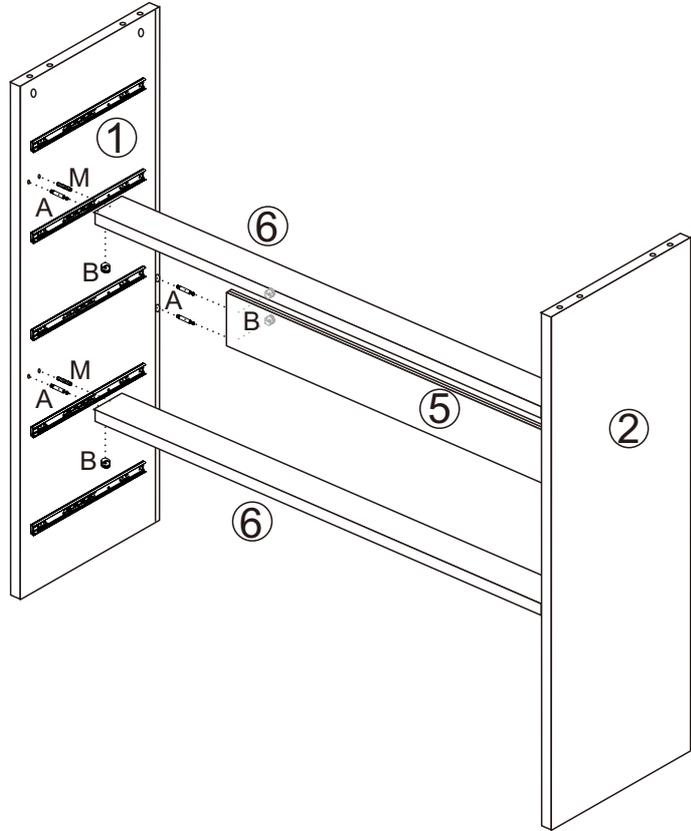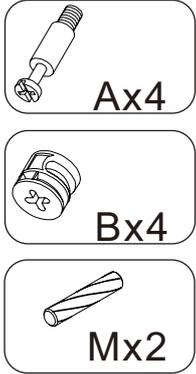

### STEP 6.


Insert part 15 into grooves of parts 1, 2 and 5, as shown.

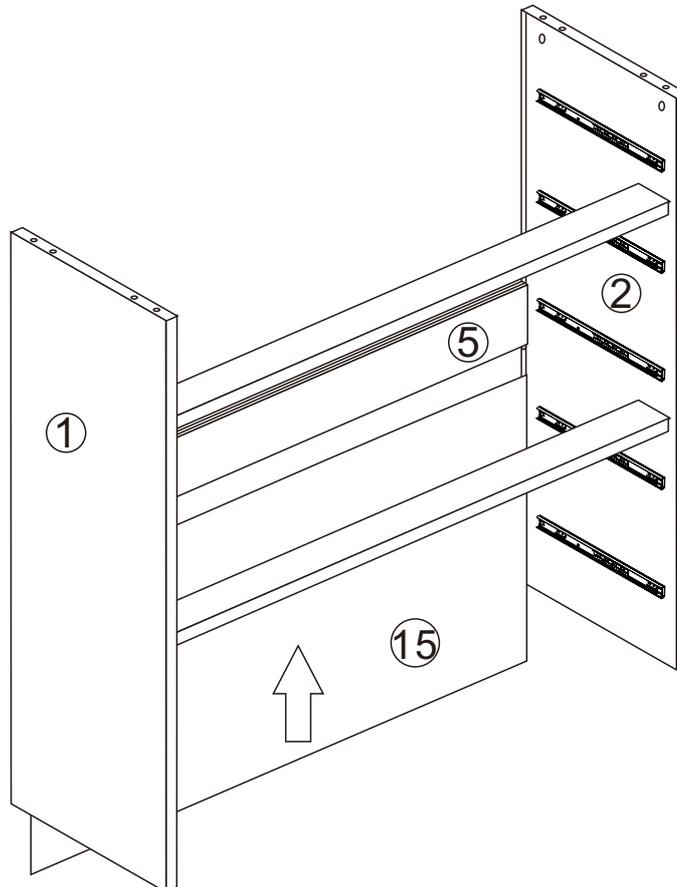

## ASSEMBLY STEPS


### STEP 7.

Insert wooden dowels (M) to part 4 and attach to assembled unit using screws (C), as shown.

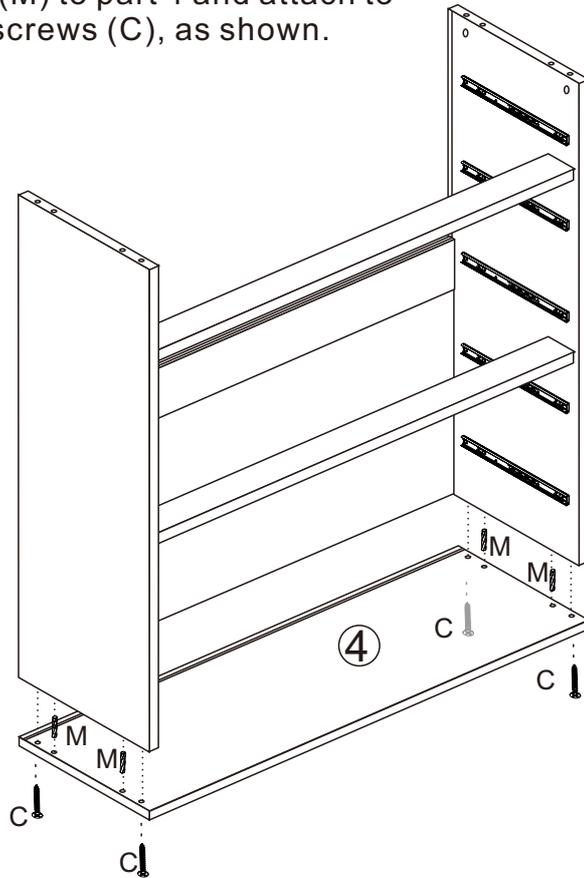

### STEP 8.


Insert part 7 into grooves of parts 1, 2 and 5, as shown.

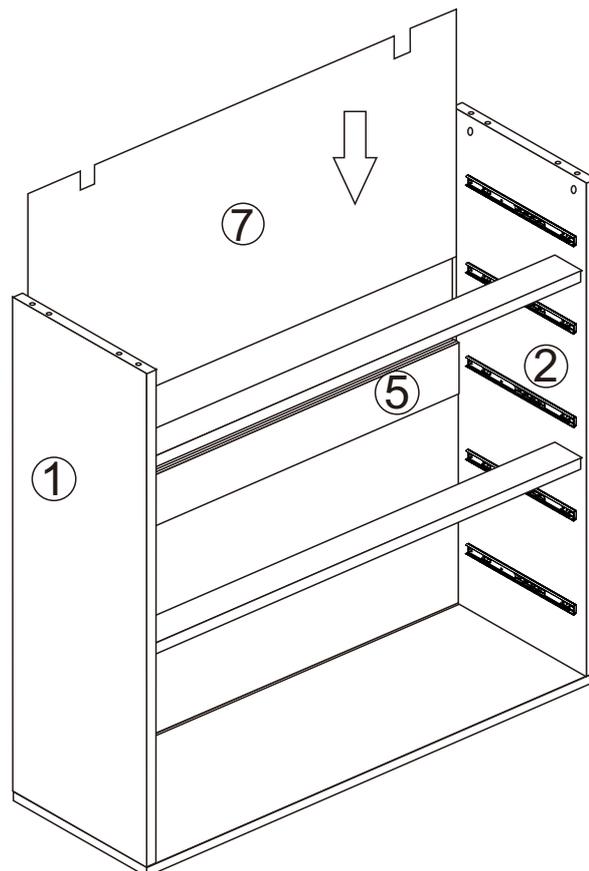

## ASSEMBLY STEPS

### STEP 9.

Fix wall brackets (I) to part 3 using screws (N), as shown.

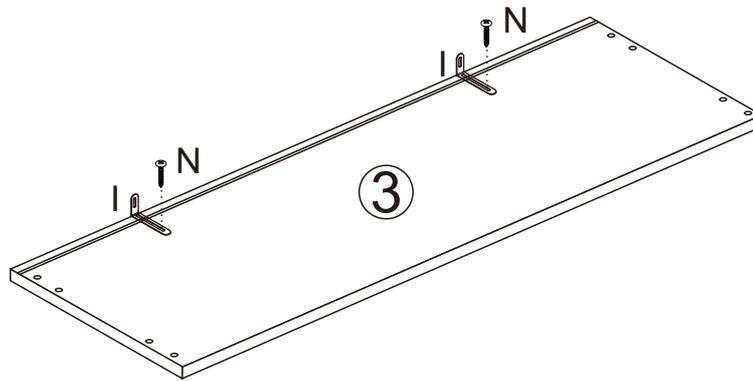


### STEP 10.

Insert quickfit screws (A) to part 3.

Insert cam locks (B) and wooden dowels (M) into parts 1 and 2, as shown.



Fit part 3 to assembled unit. Turn cam locks clockwise to tighten.

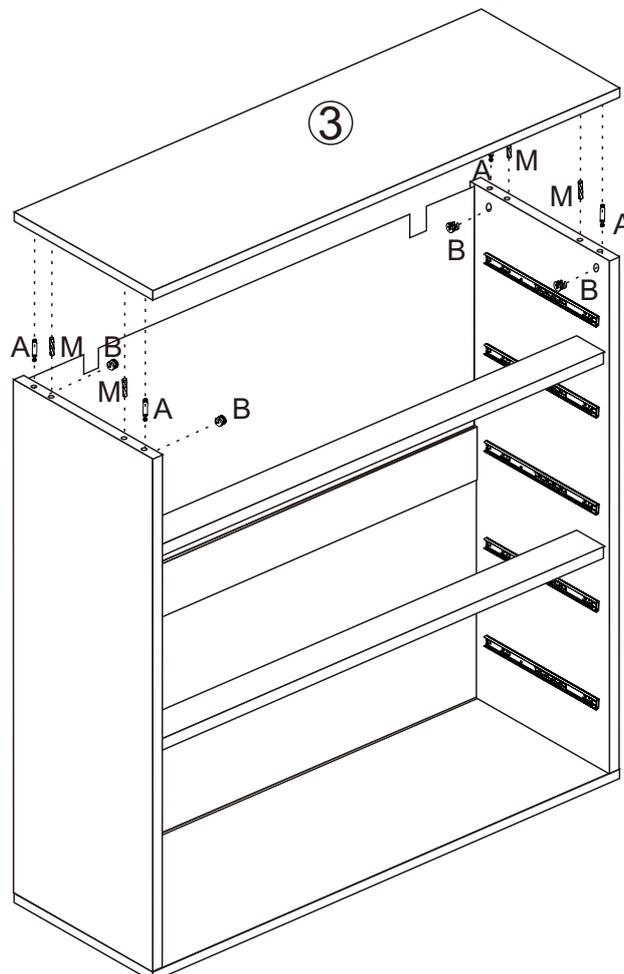

## ASSEMBLY STEPS




### STEP 11.

Fix legs 8 to part 4 using screws (D), as shown.  
Fix corner brackets (L) to parts 7 and 15 using screws (E), as shown.

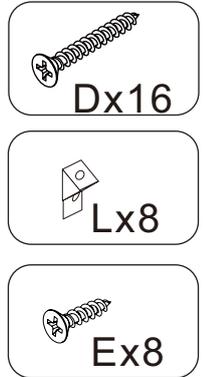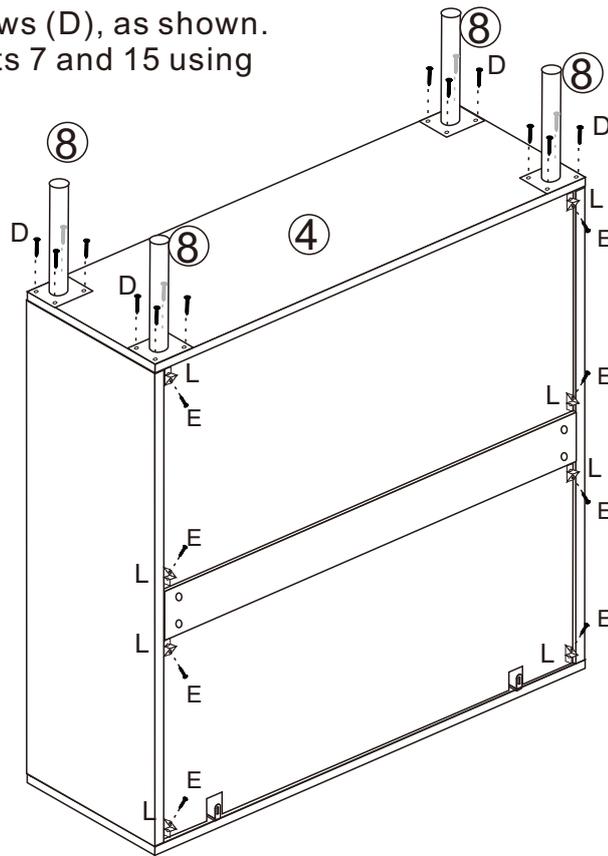

### STEP 12.


For extra stability, you must fix your chest of drawers to the wall using hardware (J and K), as shown.  
Screws (J) are fixed through wall brackets (I) and into the wall plugs (K).  
Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

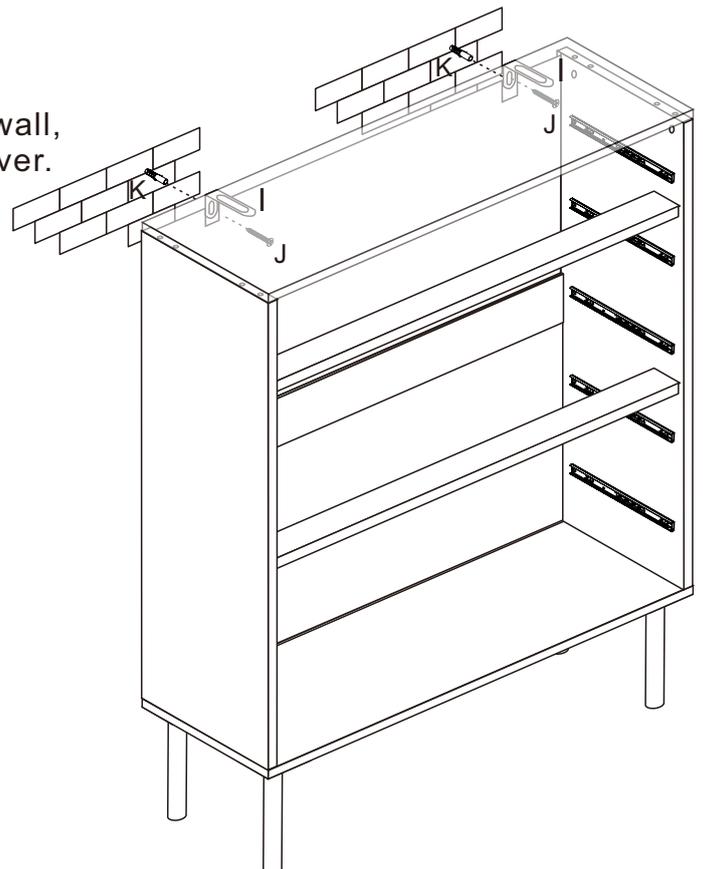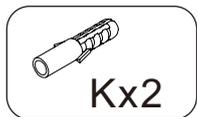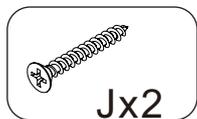

## ASSEMBLY STEPS

### STEP 13.

Insert drawers into assembled unit, as shown.  
Place the assembled drawers into the frame by aligning the slide runners of the drawers with the runners on the unit.  
If the drawer does not slide in smoothly, remove the drawer to ensure the alignment on both sides are correct.  
Push the drawers all the way into the unit until it stops.

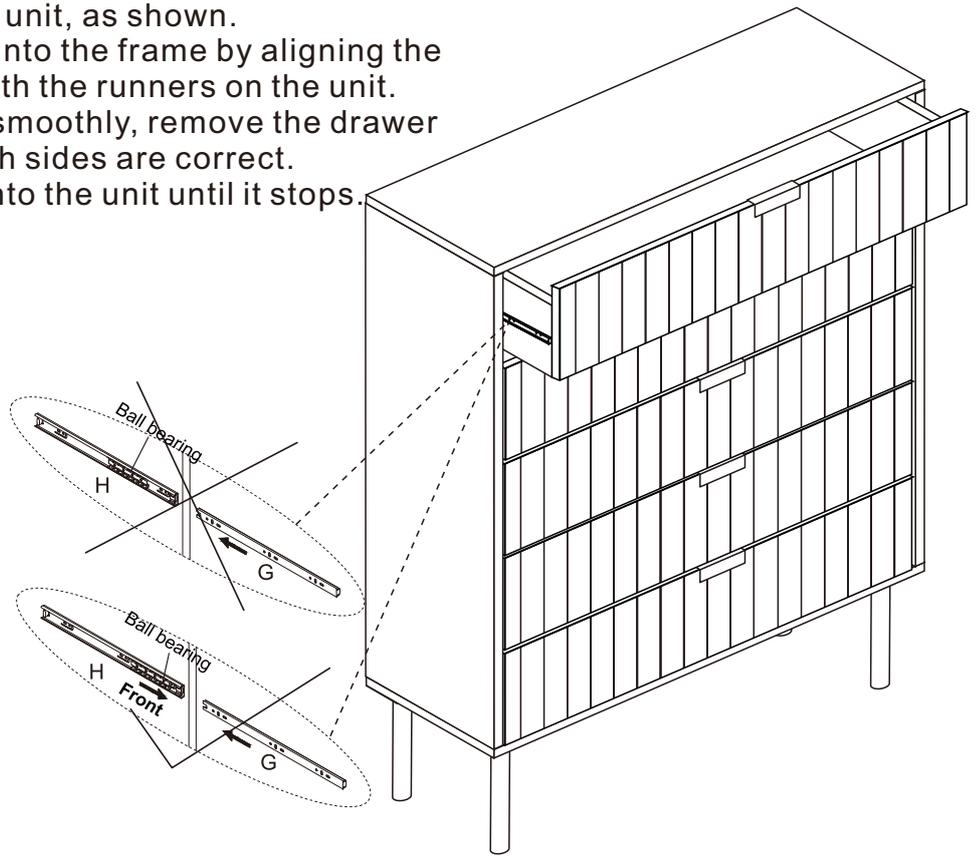

### STEP 14.

