




# Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEKÝ & JLEĐNÍŇ

MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325

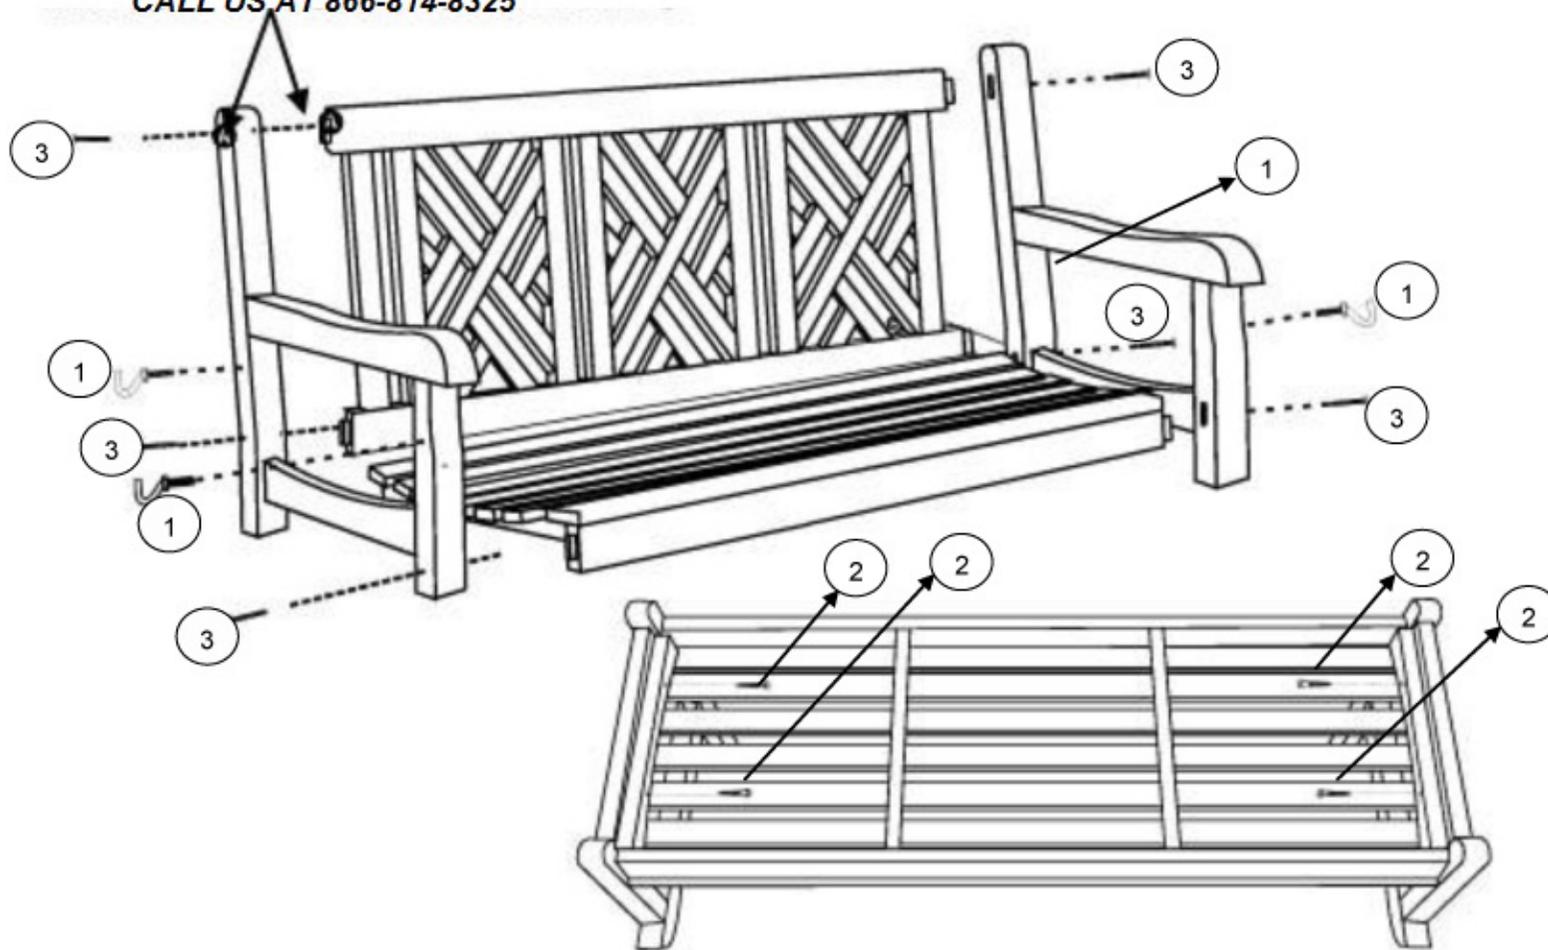


Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly


Code

**WJ 121**

Hardware

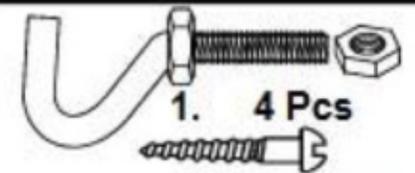

1. 4 Pcs



2. Screw 40 mm (4 Pcs)



3. F. Bolt (6 Pcs)

Tool



F 16-17



Socket Wrench 4m/m Ht

Total Section

**4 Section**