


ASSEMBLY INSTRUCTIONS







SHOE RACK

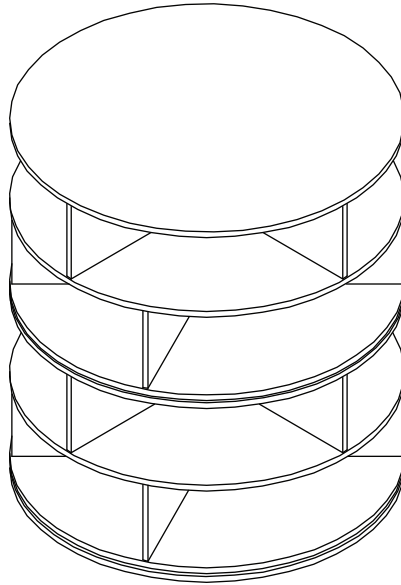











NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.



PARTS IDENTIFICATION

P1 Quantity: 1  Top Panel	P2 Quantity: 2  Top/Base Middle Panel	P3 Quantity: 2  Top/Base Lower Panel	P4 Quantity: 1  BaseTop Panel	P5 Quantity: 1  Base Bottom Panel
P6 Quantity: 16  Divider Panel				

HARDWARE LIST


H1 Screw #9 x 1 1/2"  Quantity: 16 pcs	H2 Screw m4 x 28mm  Quantity: 8 pcs	H3 Wooden Dowel m6x 25mm  Quantity: 64 pcs	H4 Connecting Bolts  Quantity: 16 pcs	H5 Cam Lock 15/9.5mm  Quantity: 16 pcs
H6 Sofa leg  Quantity: 8 pcs	H7 Pivot Bolt (For The Revolving Plate)  Quantity: 2 pcs	H8 Revolving Plate (Top)  Quantity: 2 pcs	H9 Revolving Plate (Bottom)  Quantity: 2 pcs	H10 Screw m3.5 x 12mm  Quantity: 8 pcs

TOOLS REQUIRED


 SCREW DRIVER	 MALLET
---	--

STEP 1

DETAIL A

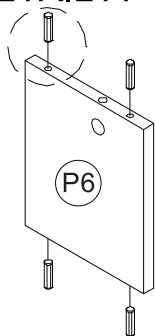


16 pcs

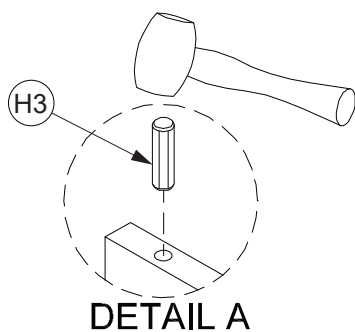


DETAIL A

STEP 2

CONNECTING BOLT

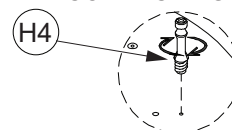

DETAIL B

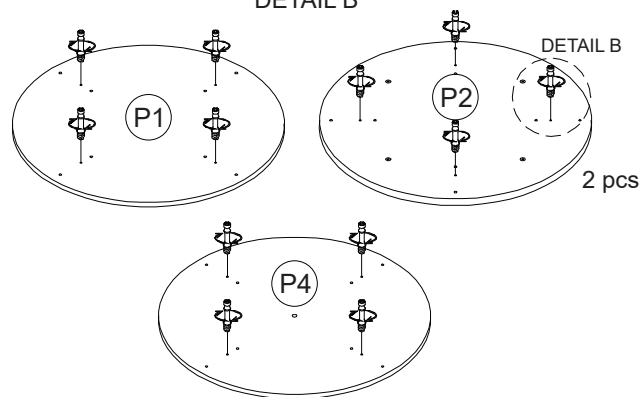


2 pcs


ASSEMBLY INSTRUCTIONS

SHOE RACK


STEP 3

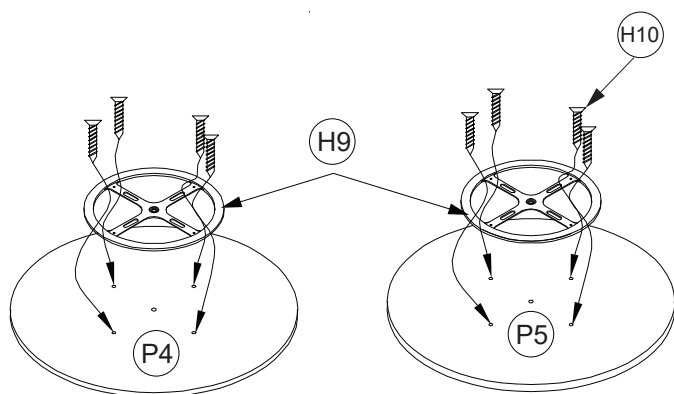


STEP 4

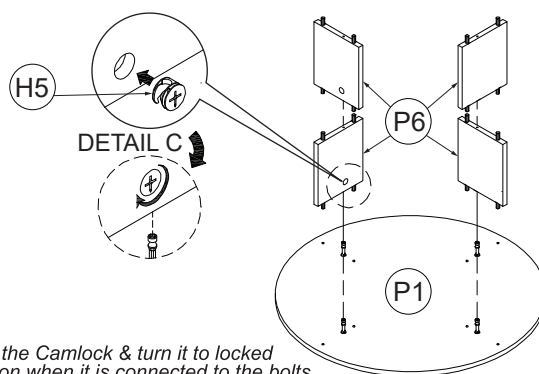


STEP 5

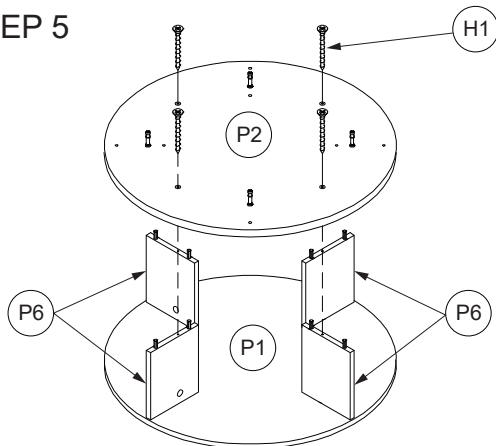


STEP 6

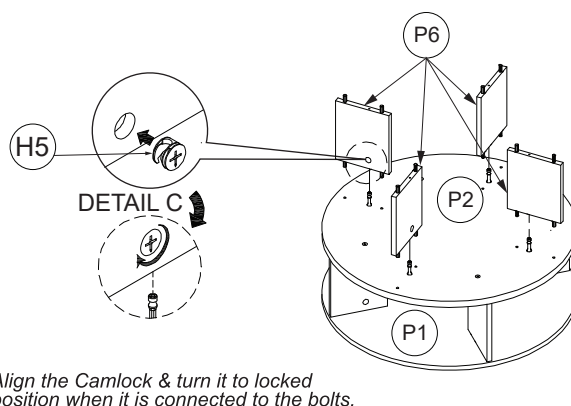


STEP 7

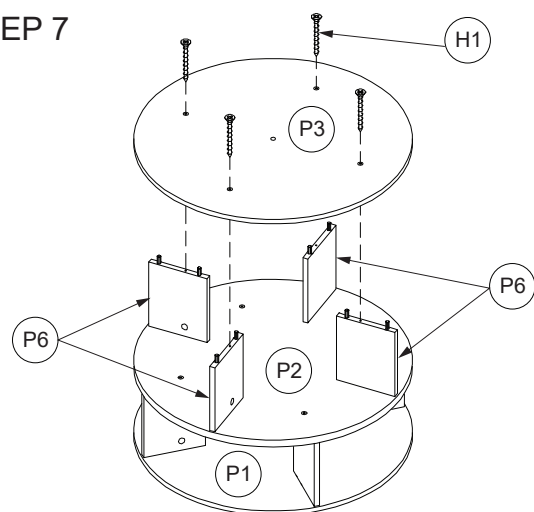


STEP 8

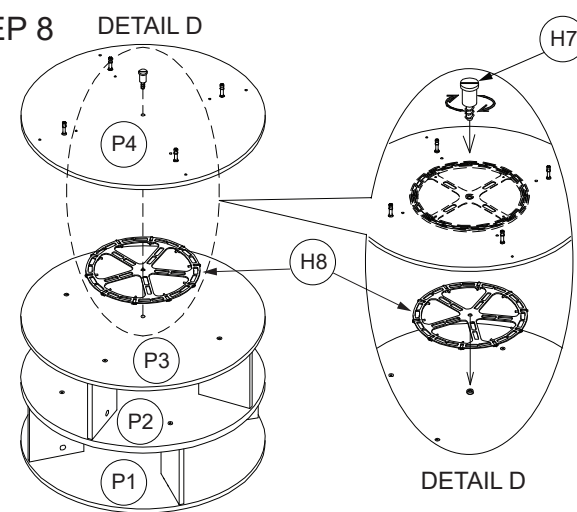

STEP 9

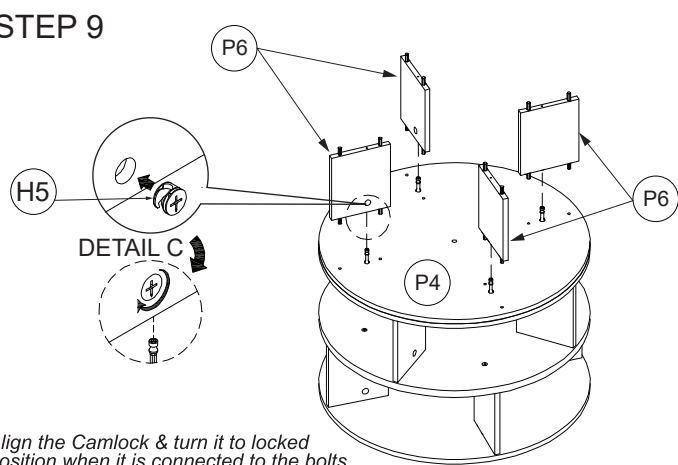


STEP 10

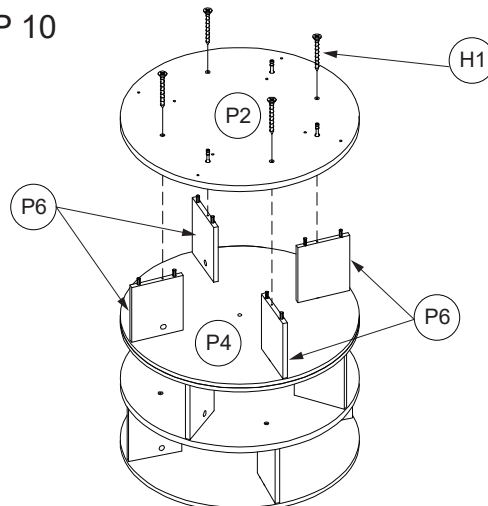

ASSEMBLY INSTRUCTIONS


SHOE RACK

STEP 11

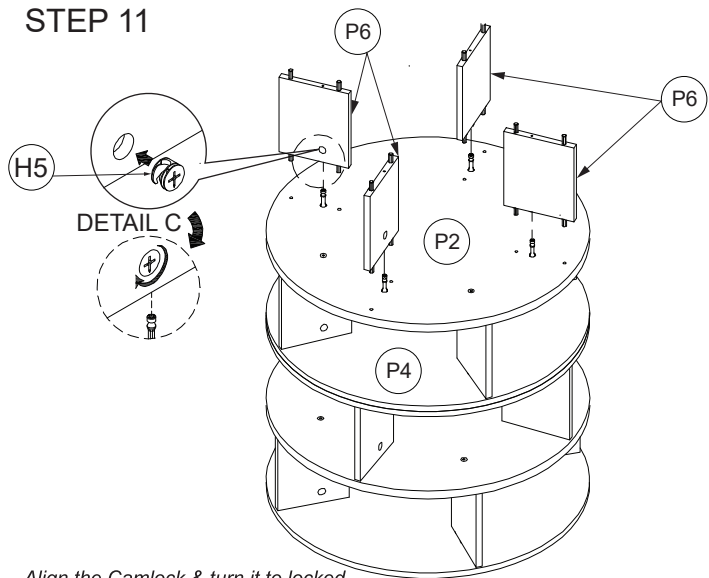


Align the Camlock & turn it to locked position when it is connected to the bolts.


STEP 12

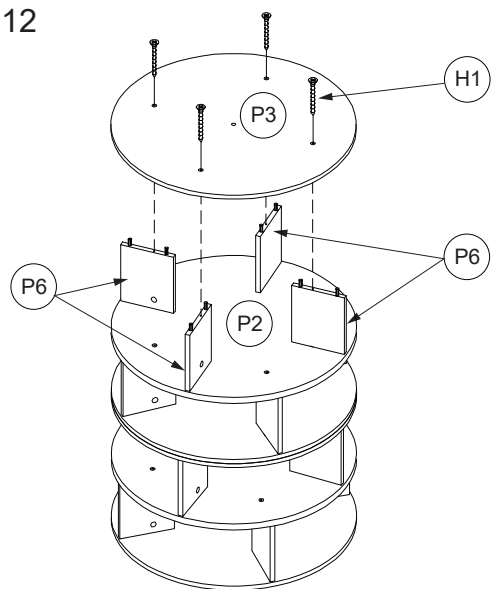

STEP 13 DETAIL D

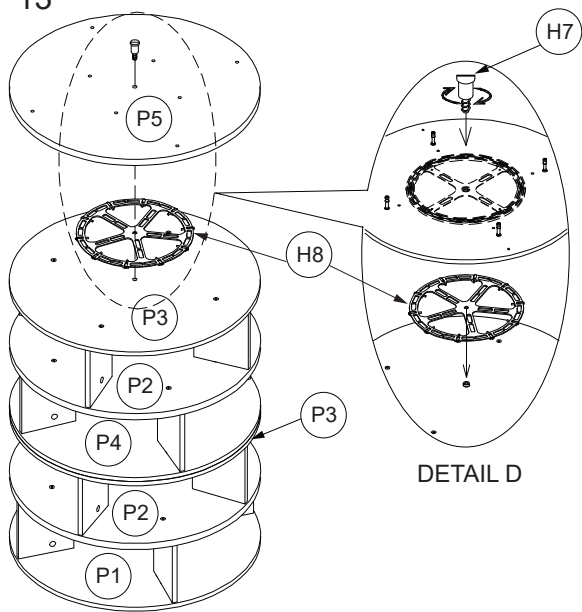

STEP 14

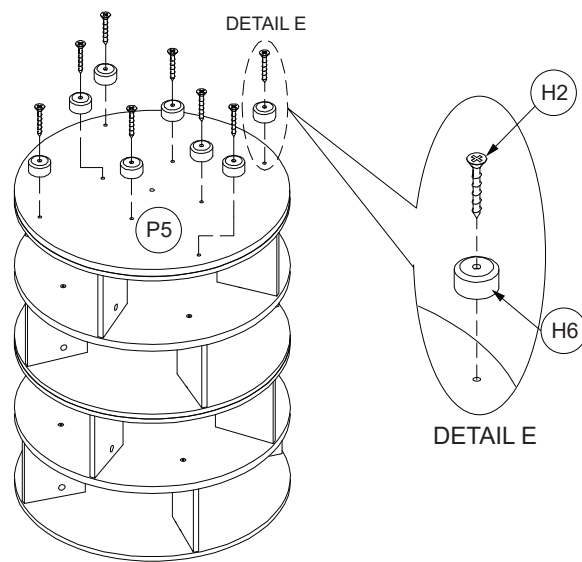

STEP 15

Turn the item upright, and it is ready to use.

