






MANHATTAN
COMFORT

Glenmore Nightstand


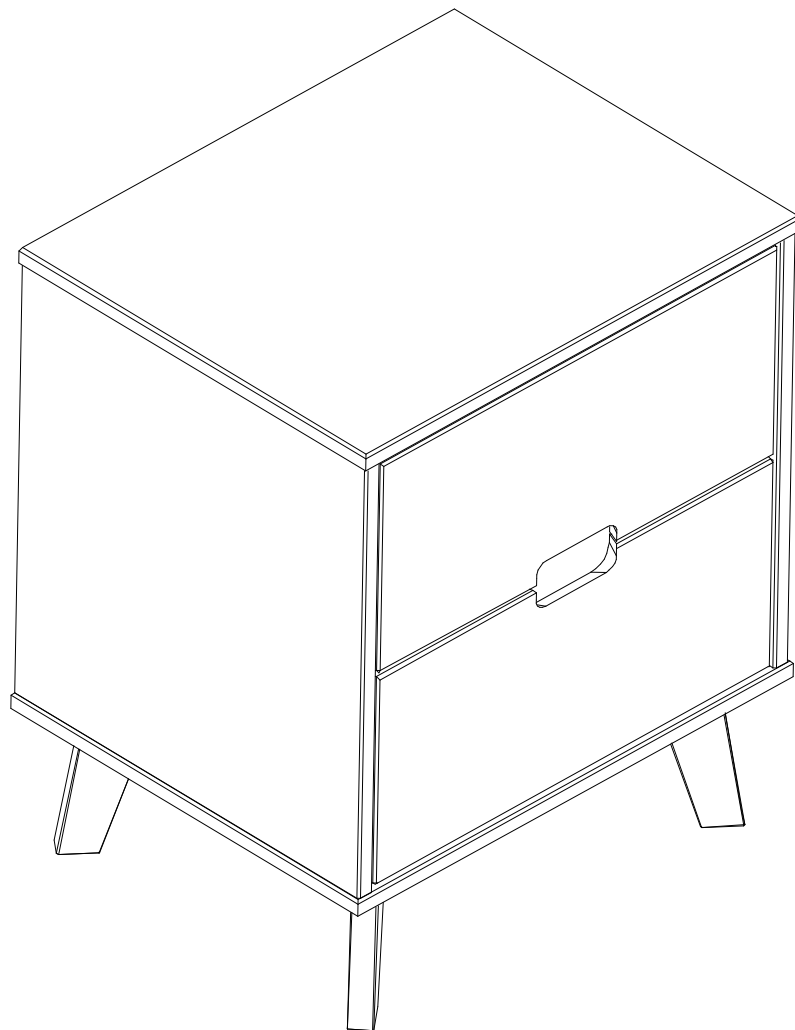


SKU# CS91208 - CS91209

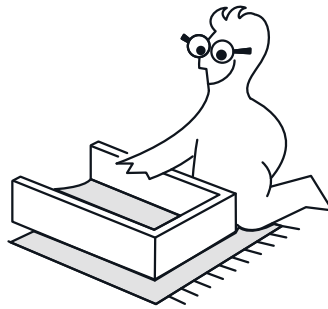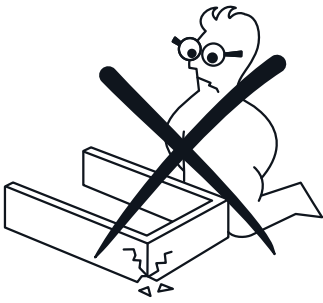


For Best Results


- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

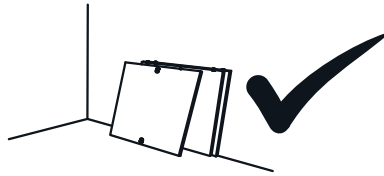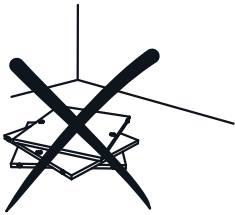

Tools Required

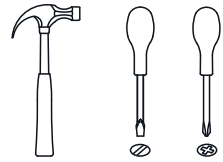


View our assembly video online
www.manhattancomfort.com





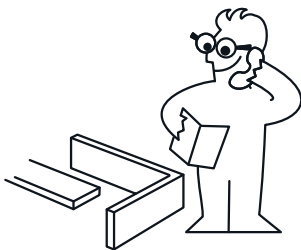


Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com


Included in this Package

- 1 Bottom Drawer Front x1
- 2 Upper Drawer Front x1
- 3 Left Foot x1
- 4 Right Foot x1
- 5 Top Board x1
- 6 Base Board x1
- 7 Right Side x1
- 8 Left Side x1
- 9 Right Side Drawer x2
- 10 Left Side Drawer x2
- 11 Back Panel of Drawer x2
- 12 Central Batten x1
- 13 Blackplate x1
- 14 Bottom of Drawer x2

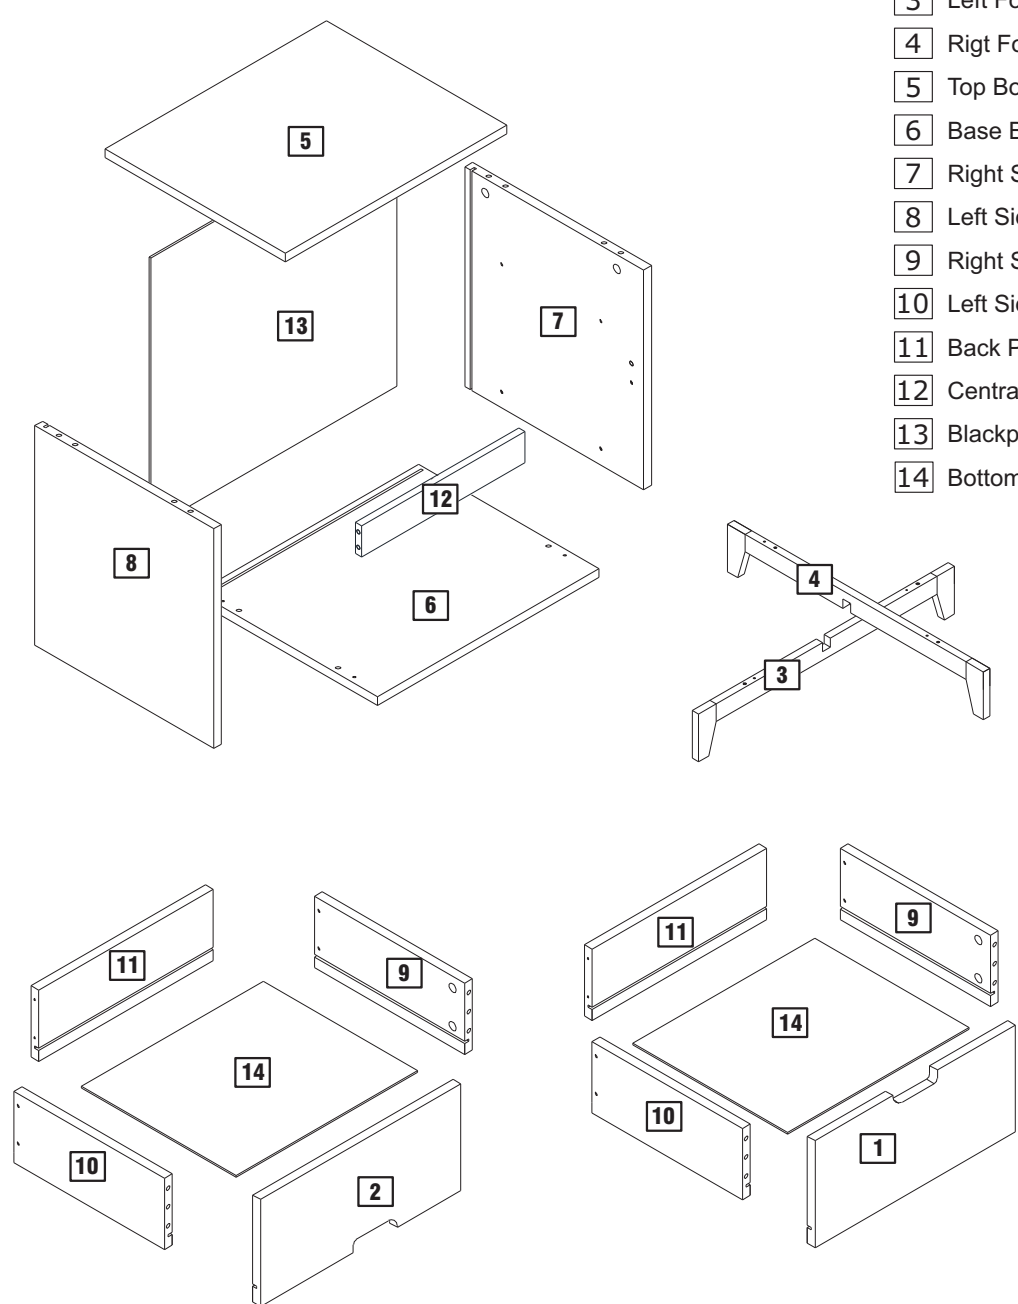


A  Wooden dowel x 18	B  12mm Screw x 16	C  40mm Screw x 12
D  45mm Screw x 4	E  8mm Screw x 8	F  Metal dowel x 14
G  Locking nut x 14	H  a  b Right runner x 2 pair	I  a  b Left runner x 2 pair

STEP 1


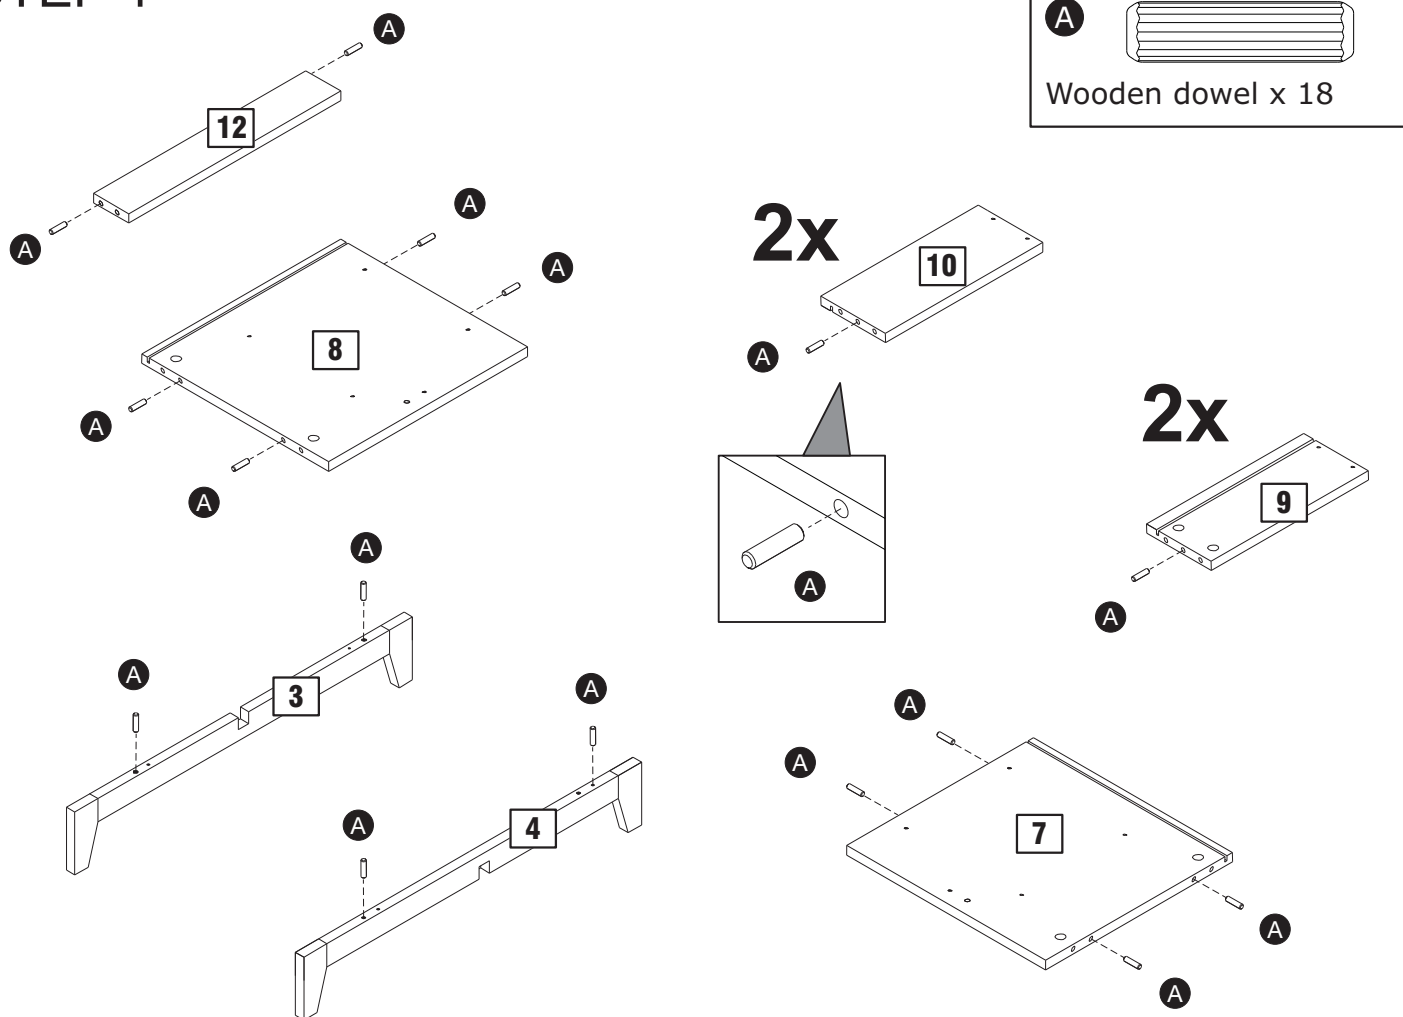


STEP 2

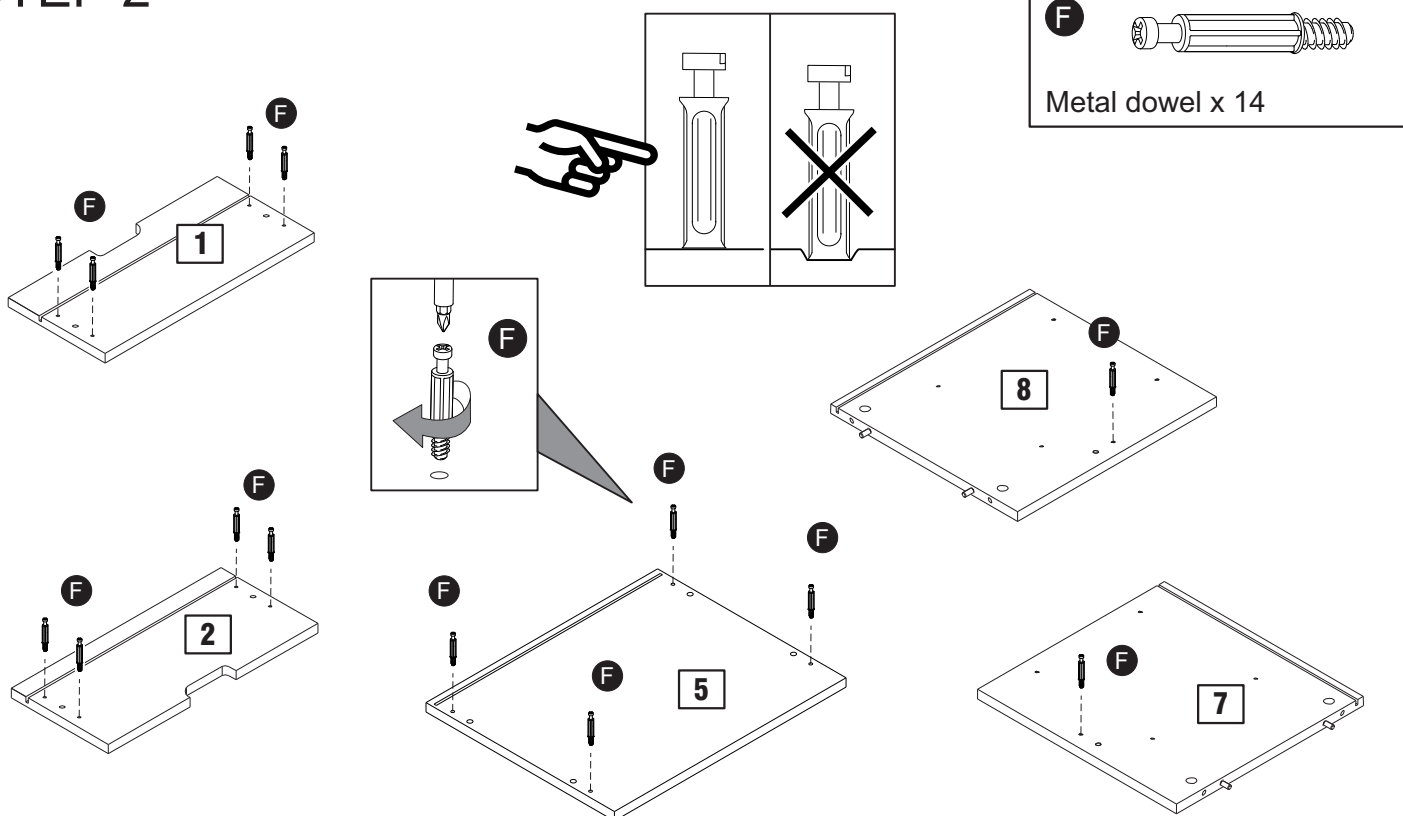


STEP 3


E  8mm Screw x 8	H  a Right runner x 2
	J  a Left runner x 2

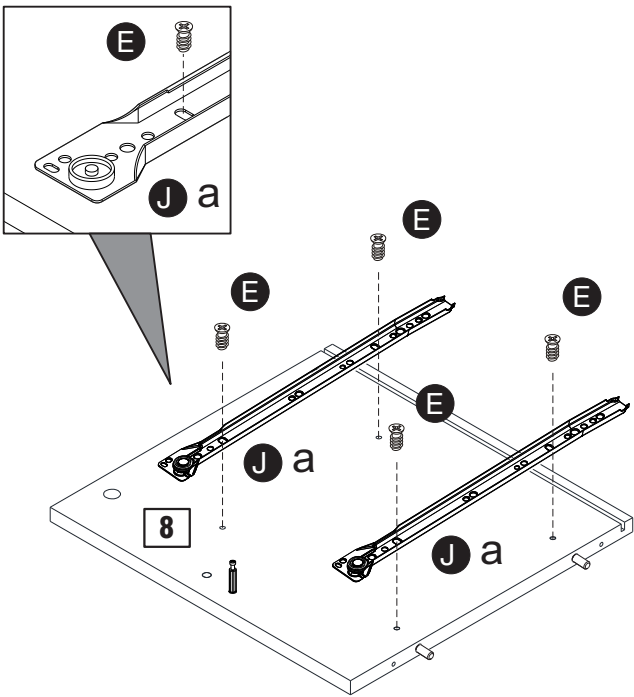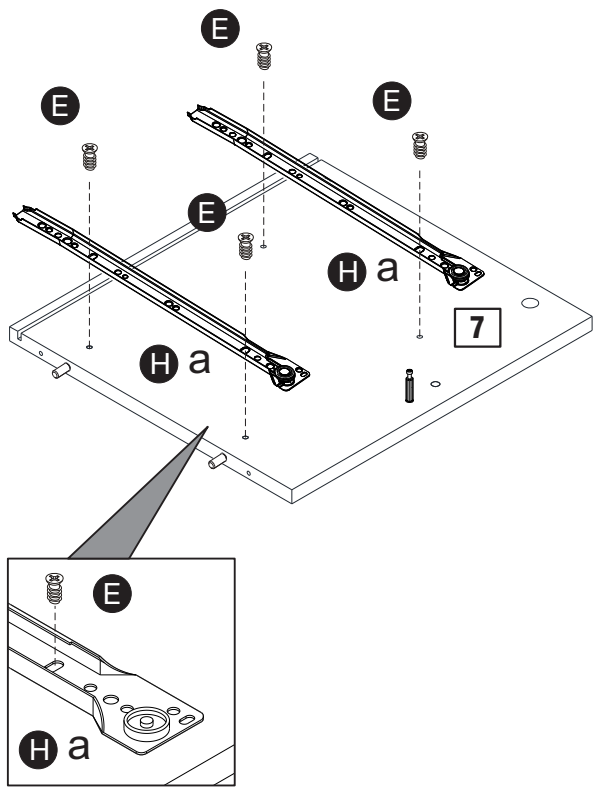


STEP 4

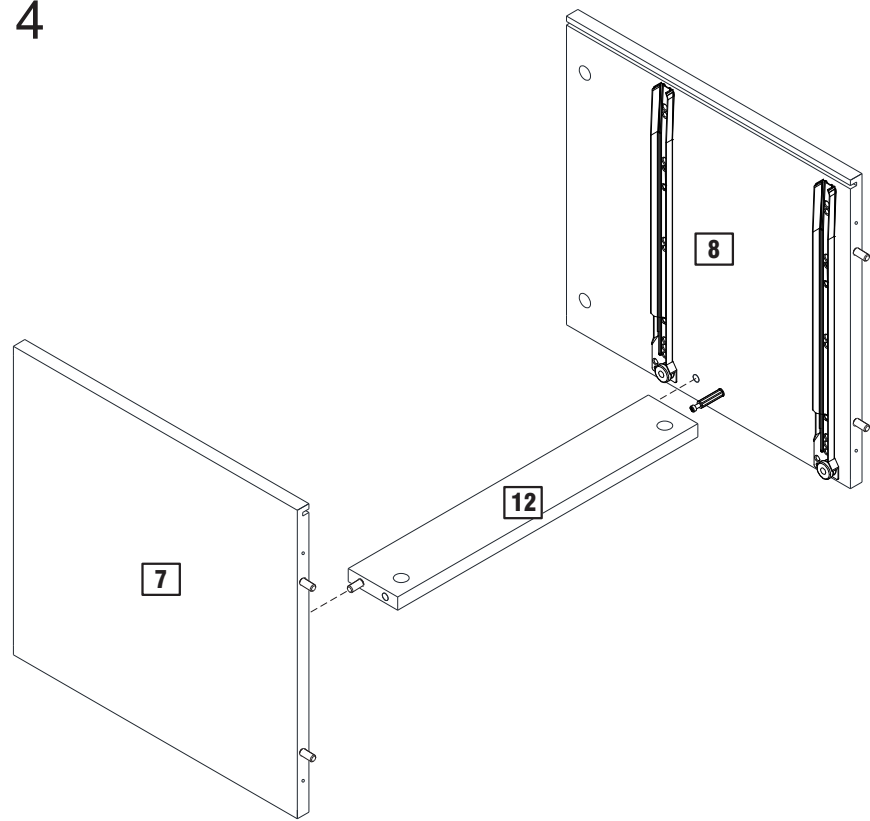

STEP 5

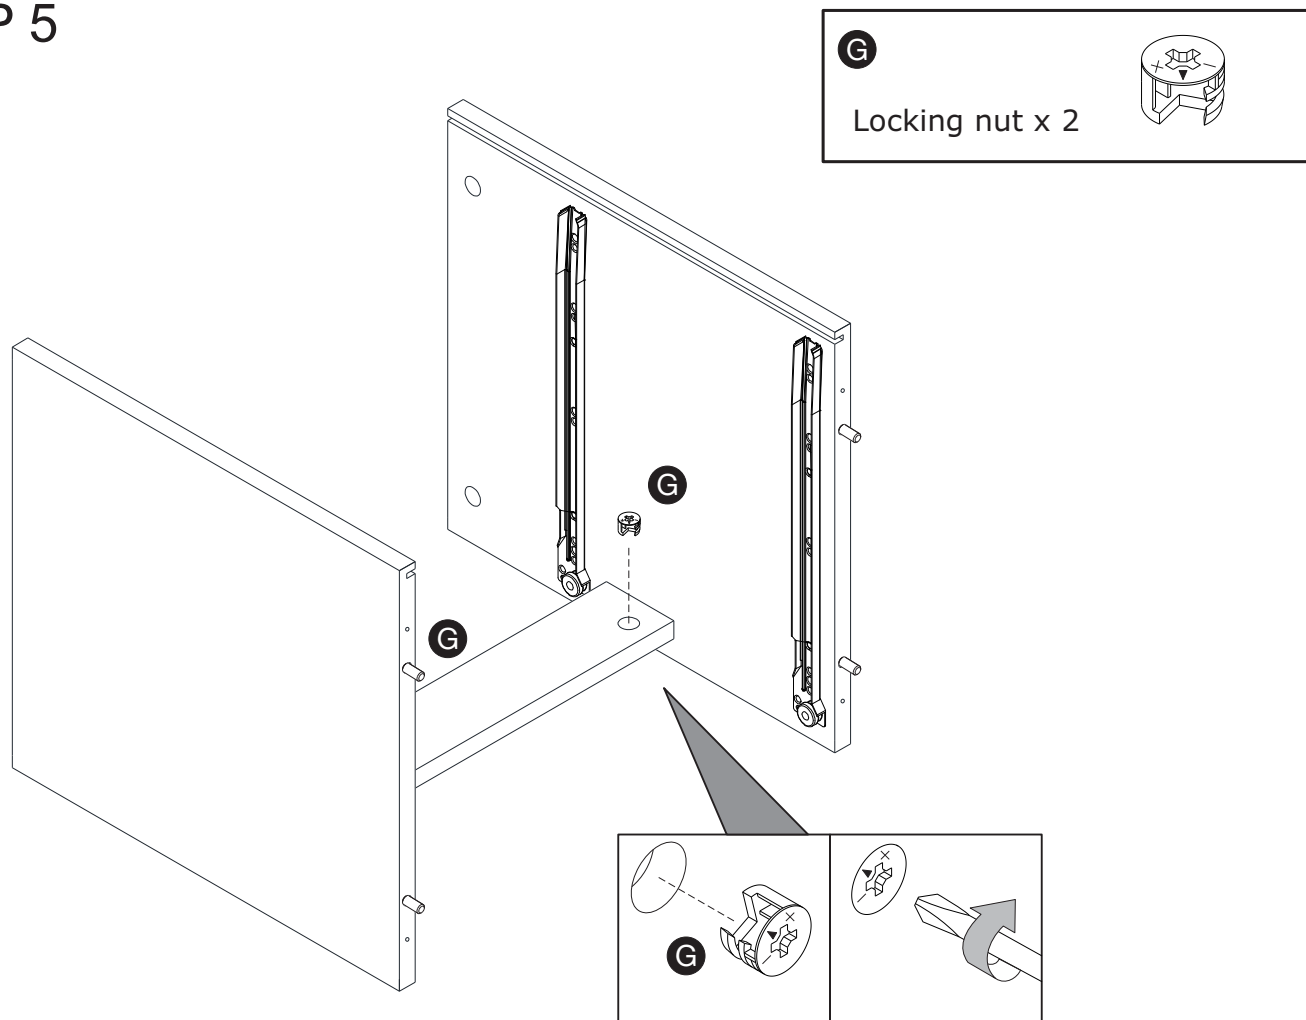

STEP 6

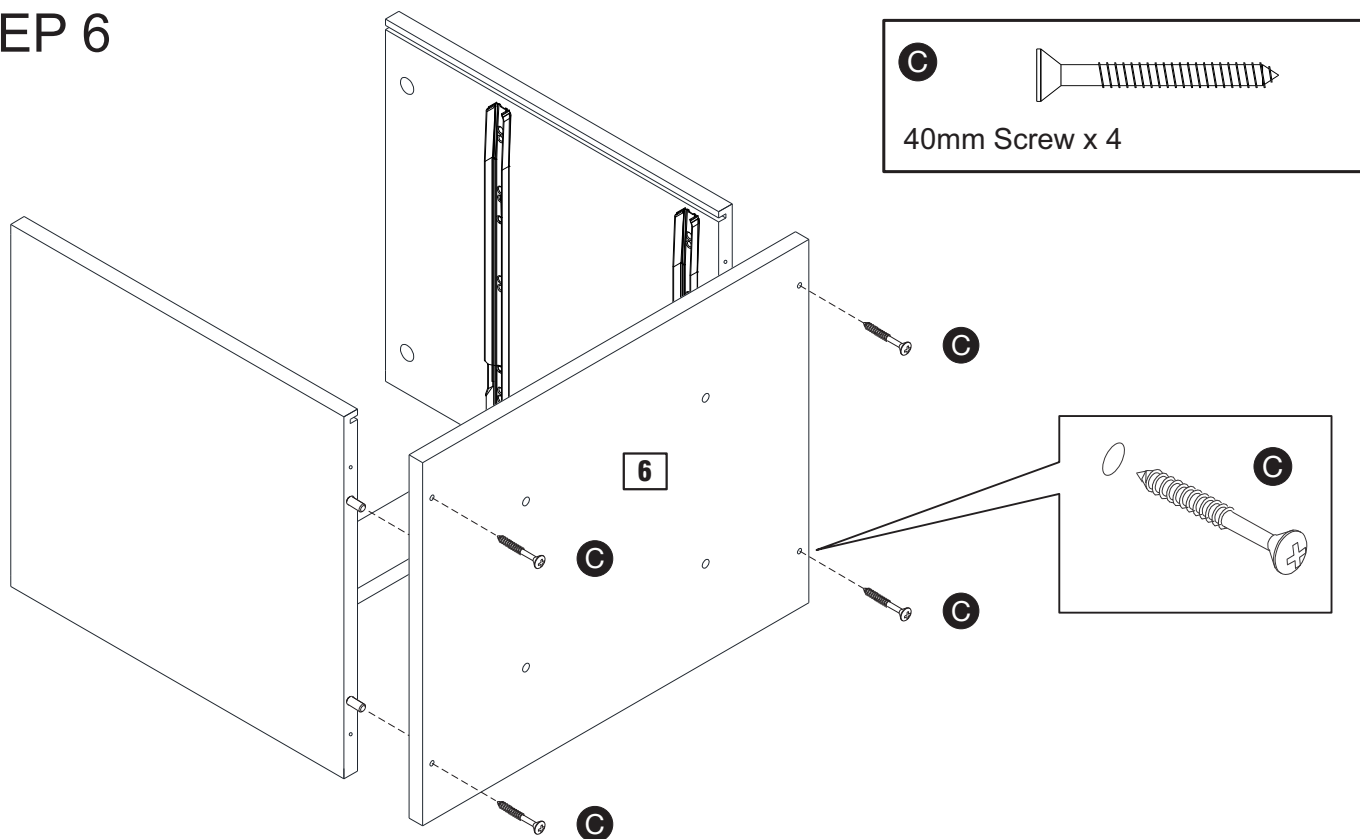


STEP 7

D



45mm Screw x 2

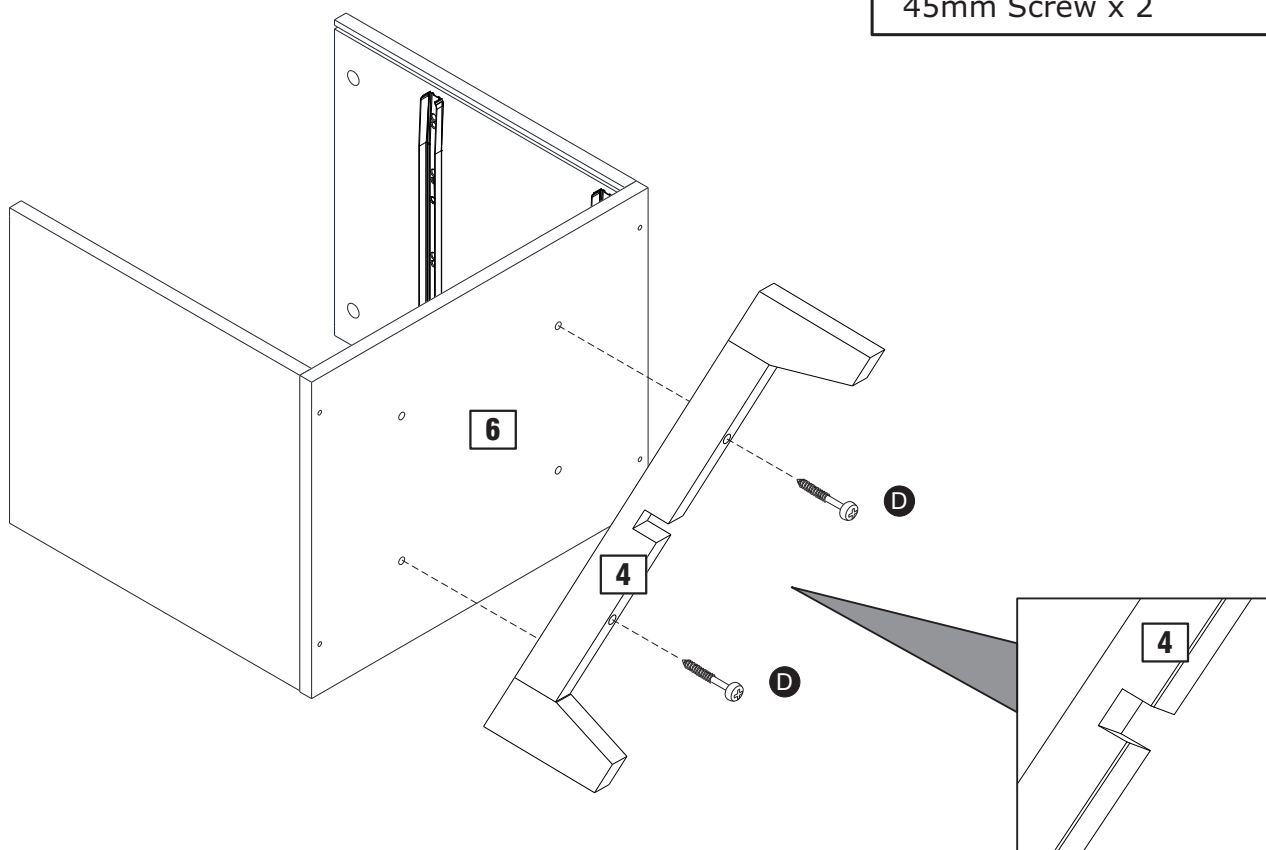


STEP 8


D




45mm Screw x 2

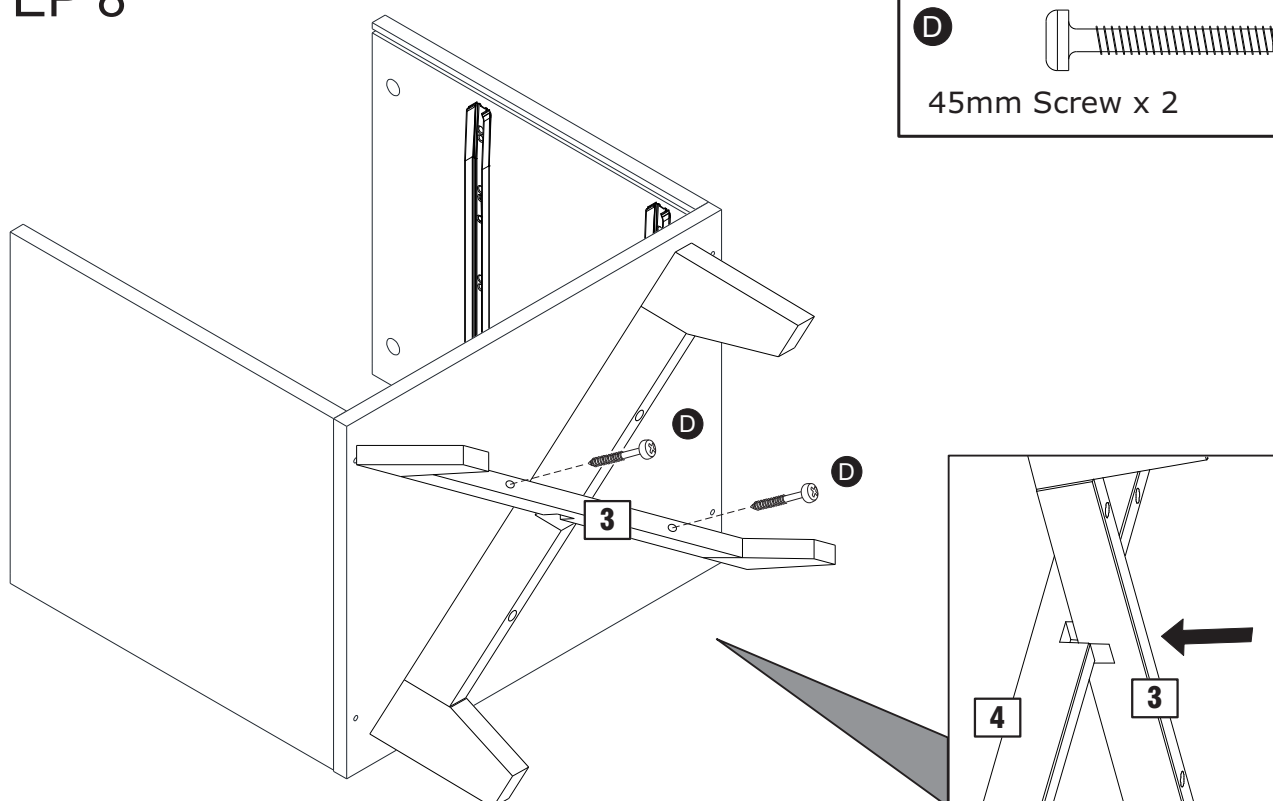

STEP 9

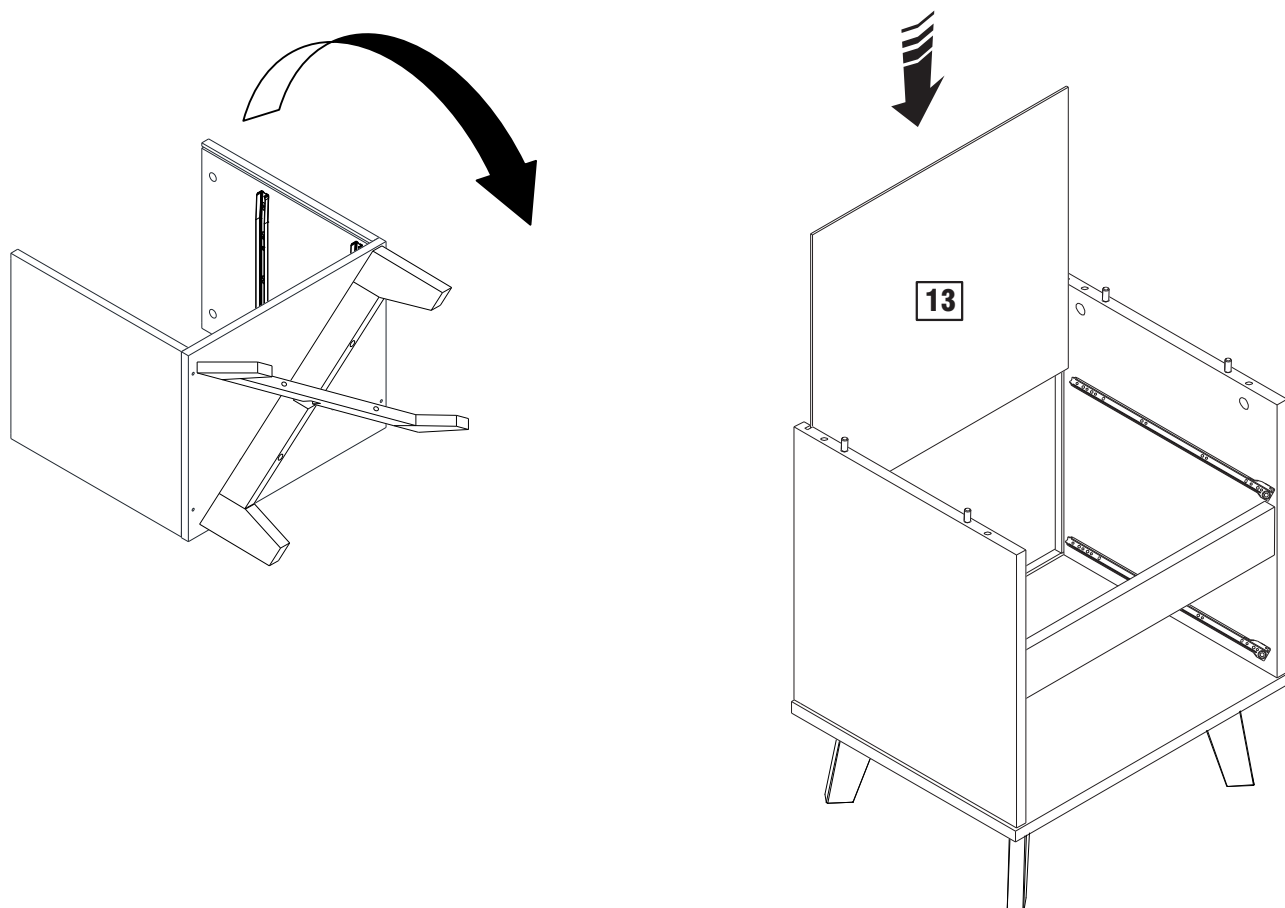


STEP 10

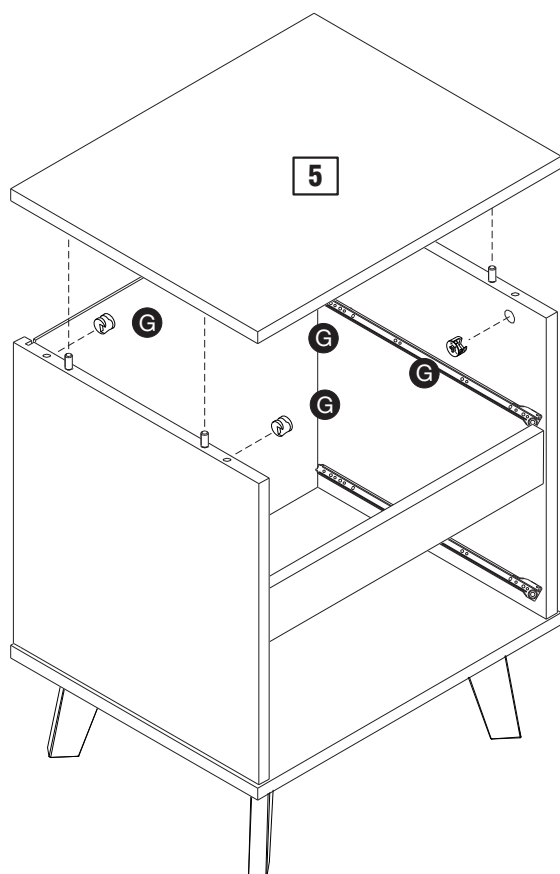


G



Locking nut x 4

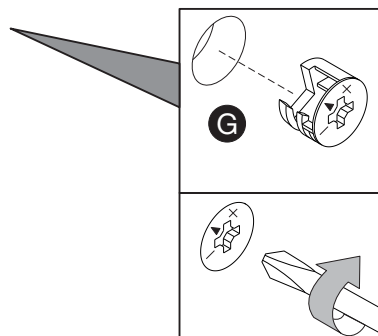


STEP 11

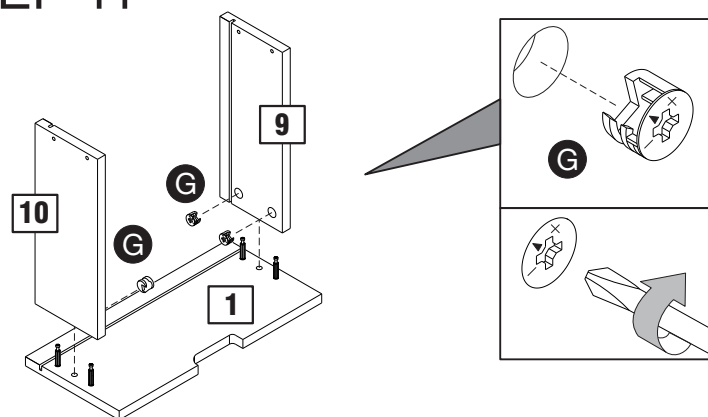




C	
40mm Screw x 4	
G	
Locking nut x 4	

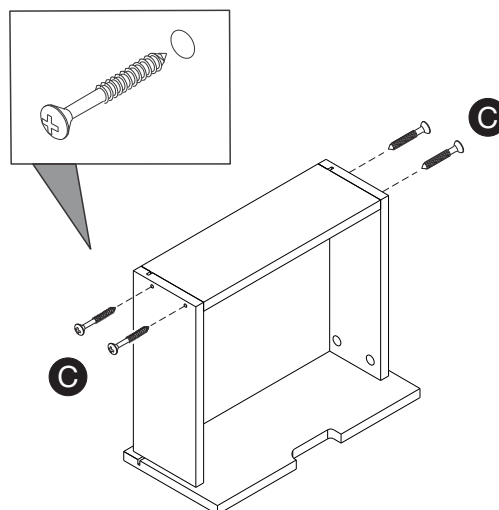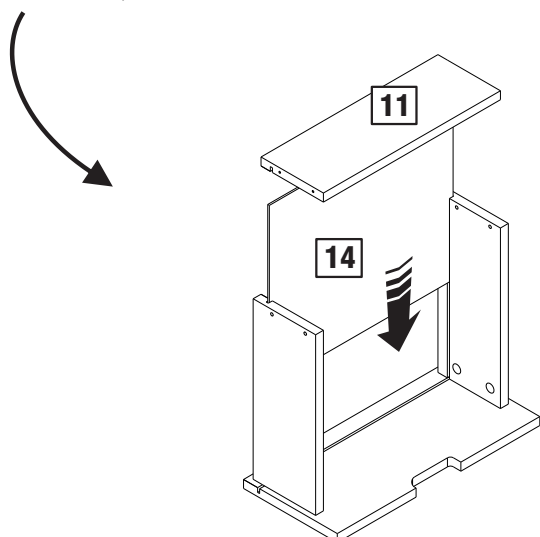


STEP 12

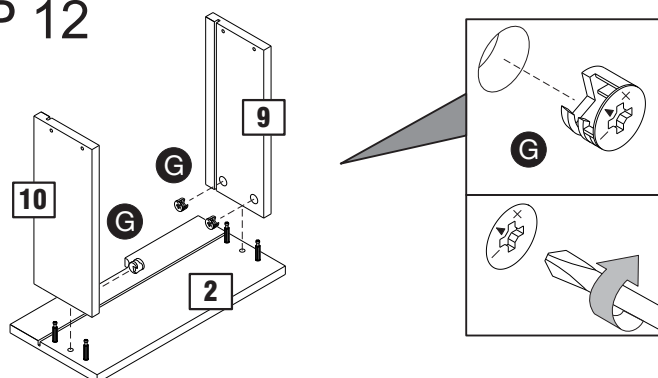




C	
40mm Screw x 4	
G	
Locking nut x 4	

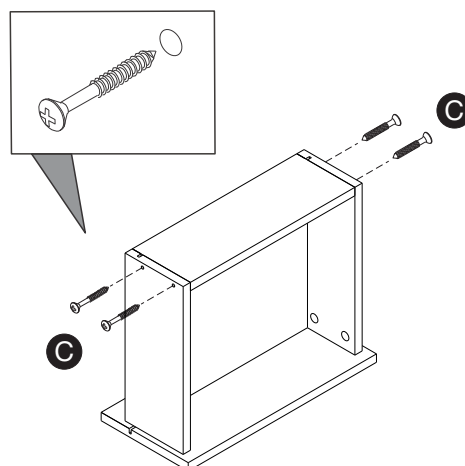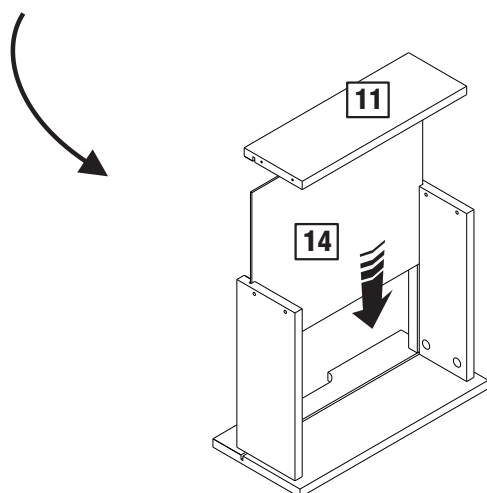



STEP 13

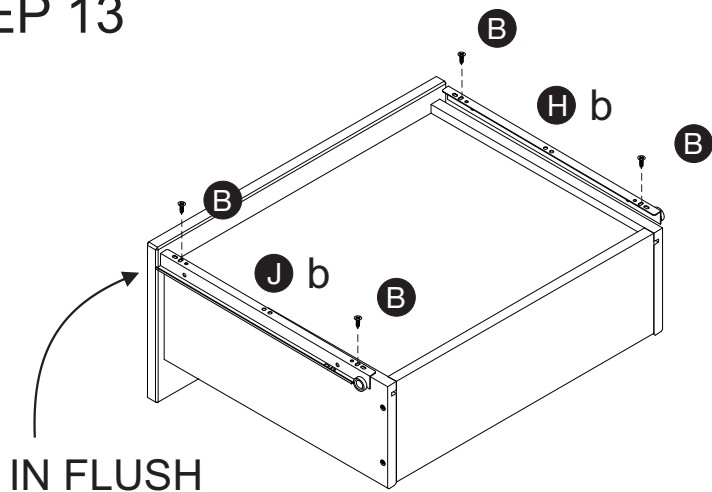

B	
12mm Screw x 8	
H	
Right runner x 2 pair	
J	
Left runner x 2 pair	

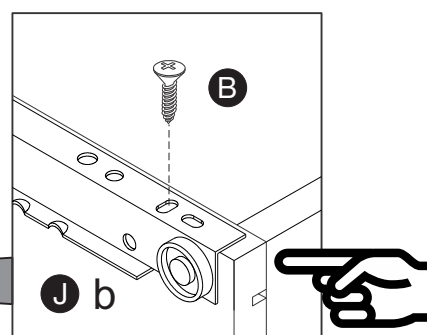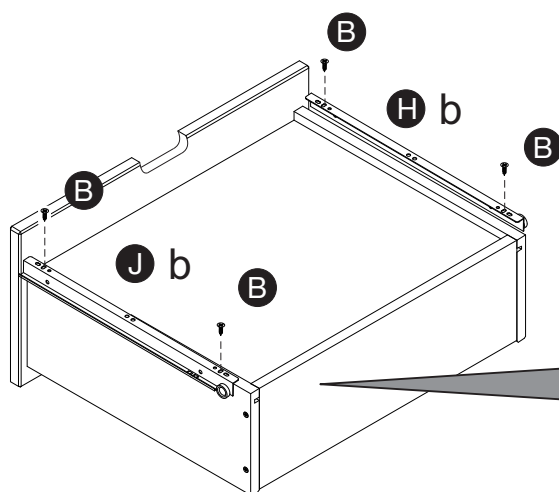


STEP 14

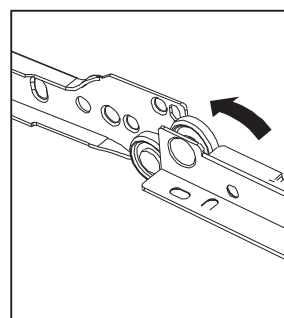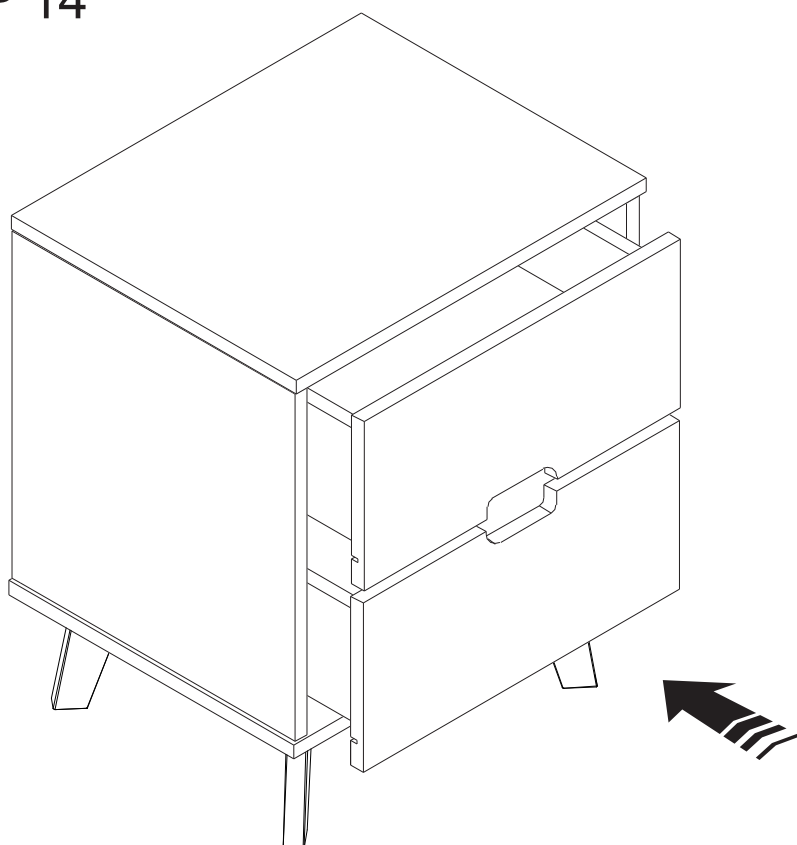

STEP 13

B



12mm Screw x 16

