



Luxurious Solid Brass Chrome Overhead Shower Bar Square Ceiling Mounted Shower Arm



INSTALLATION INSTRUCTIONS

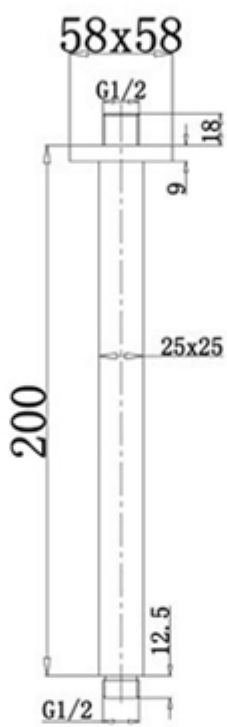


(单位: mm)

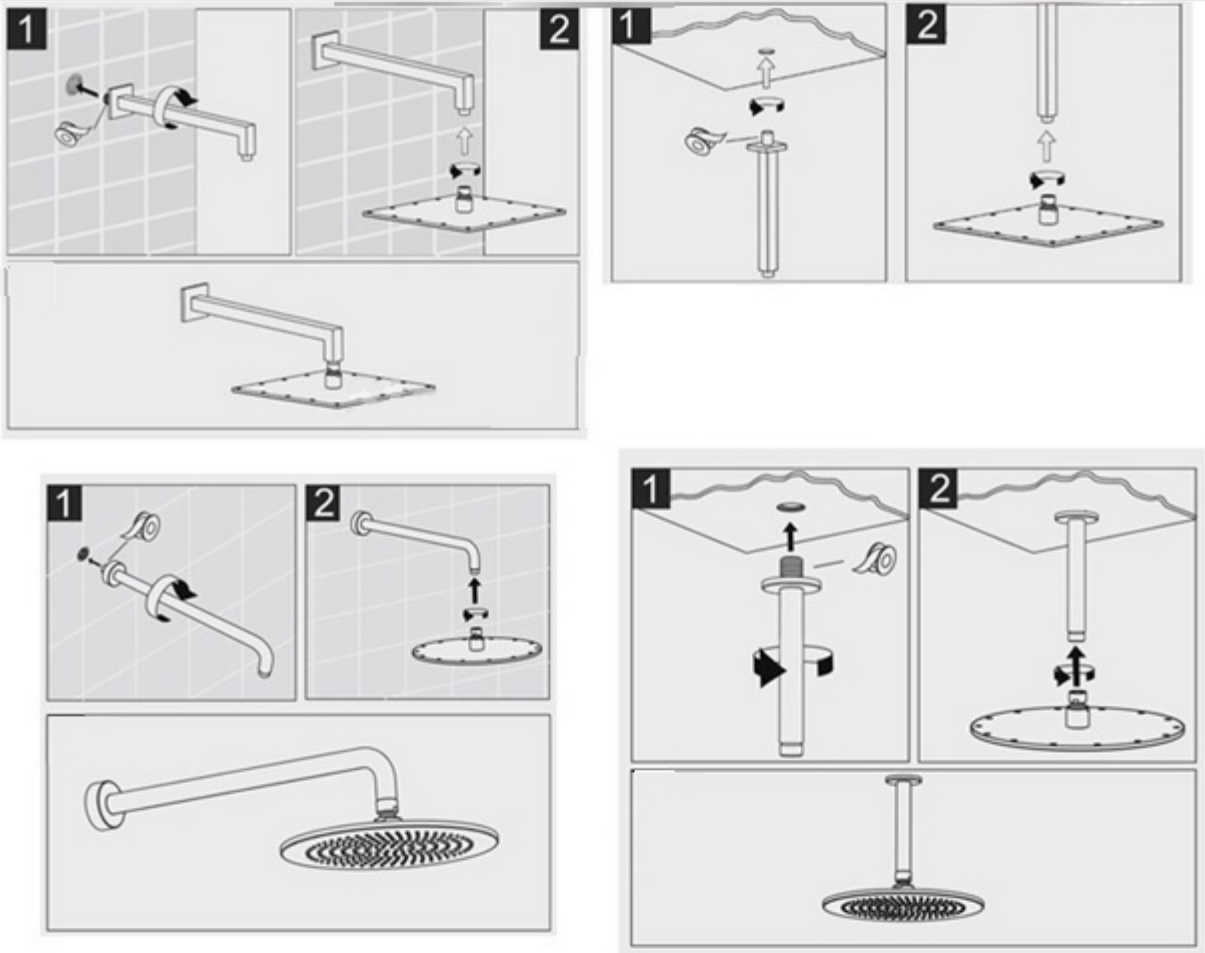

SA44-A :
Square Ceiling Shower Arm - 9.5" - Made of BRASS

Installation

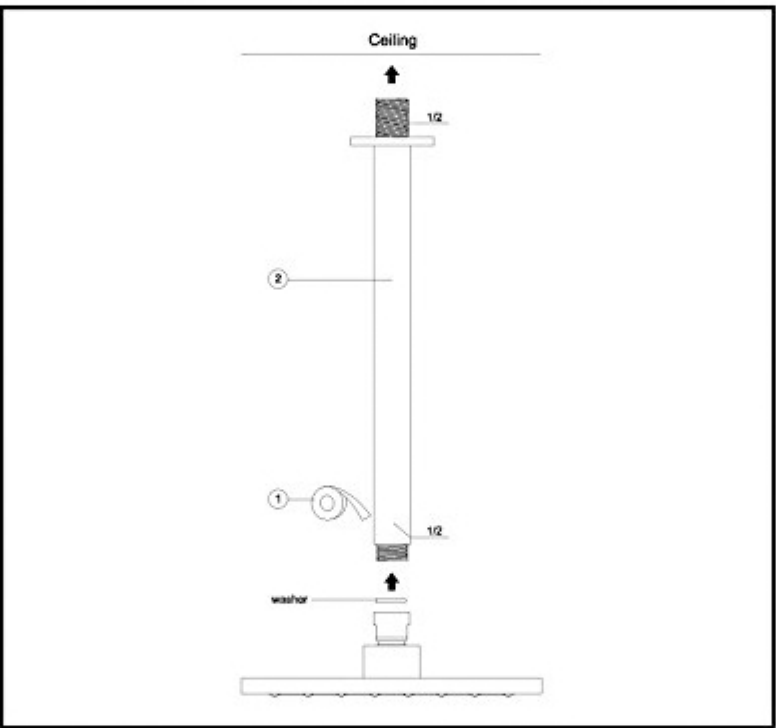

- Installation Instruction:**
- 1. Attach flange to strait end of shower arm.
 - 2. Attach shower arm to water outlet using enclosed plumber's tape (1) to ensure connection is water tight.
 - 3. Insert washer (2) into shower head fitting.
 - 4. Attach shower head to shower arm.



This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!