



1

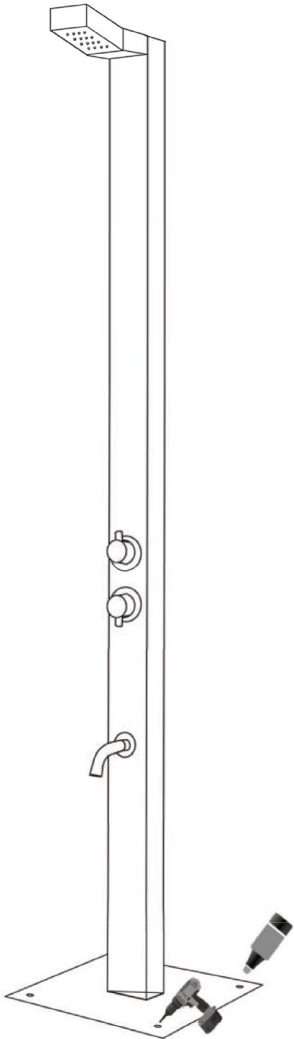


Place the shower in the desired position. Mark and drill the (4) holes.

2

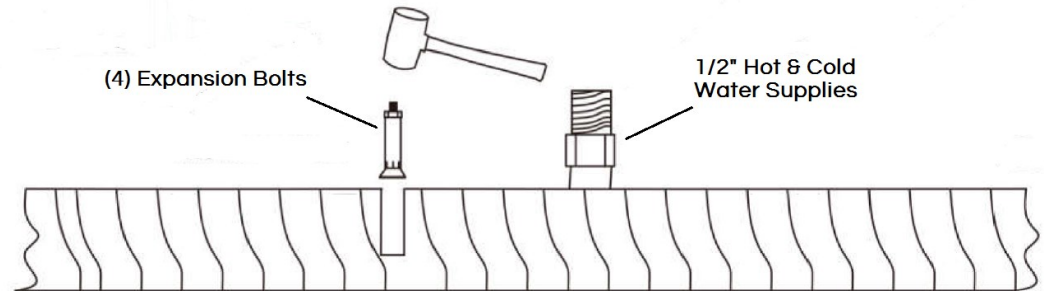


Insert the (4) expansion bolts into the holes and verify the 1/2" hot & cold water supplies.

3

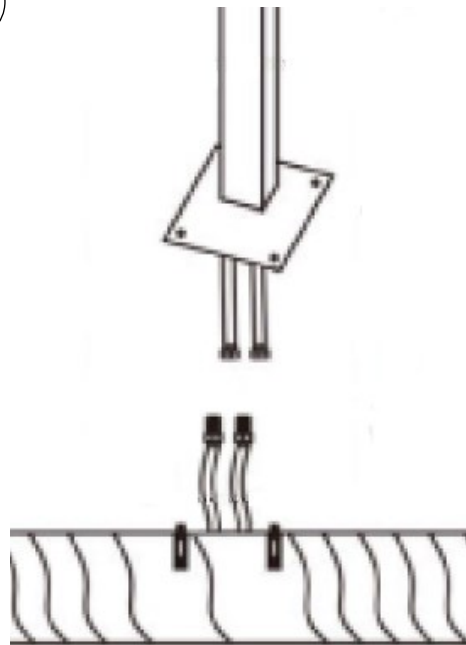

Connect the flexible hoses to the 1/2" hot & cold water supplies.

4

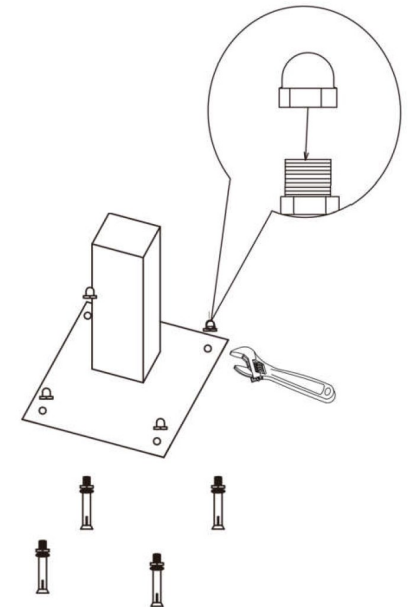

Place the shower over the expansion bolts and secure by tightening the (4) cap nuts.