




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325**

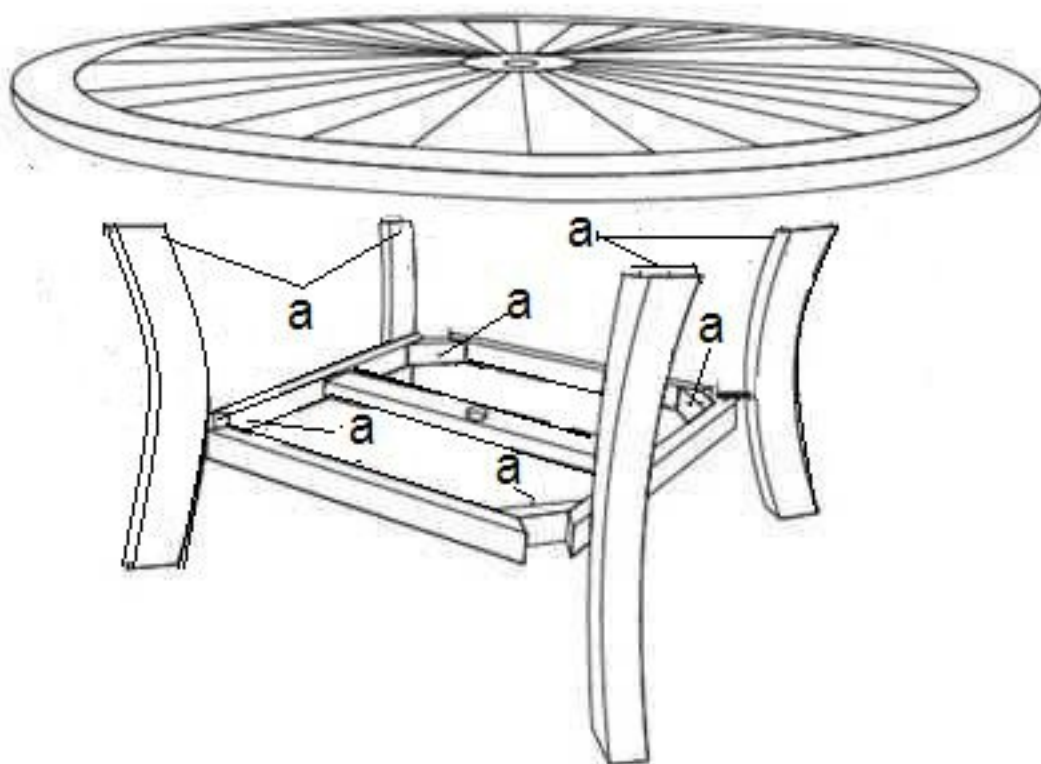

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AT25

Hardware



F. Bolt 8cm (8 Pcs)

Tool



Socket Wrench 4m/16 It

Total Section

6 Section