


CONVENIENCE CONCEPTS

Landon Desk
203520W/203520BL

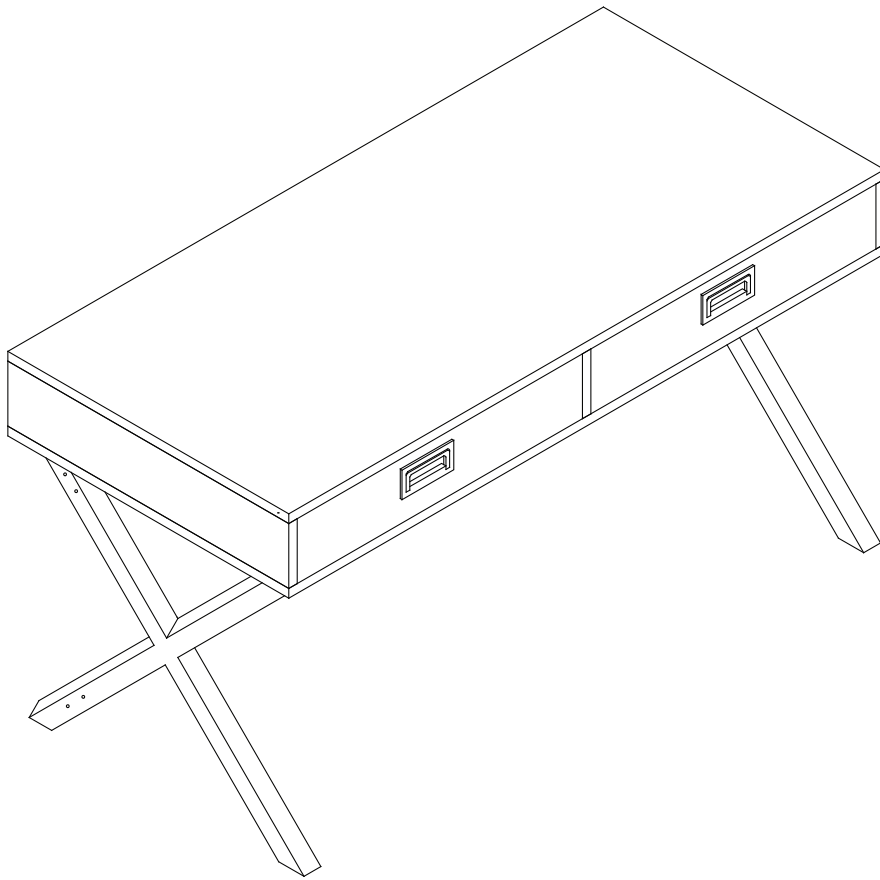

Assembly Instructions



We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com

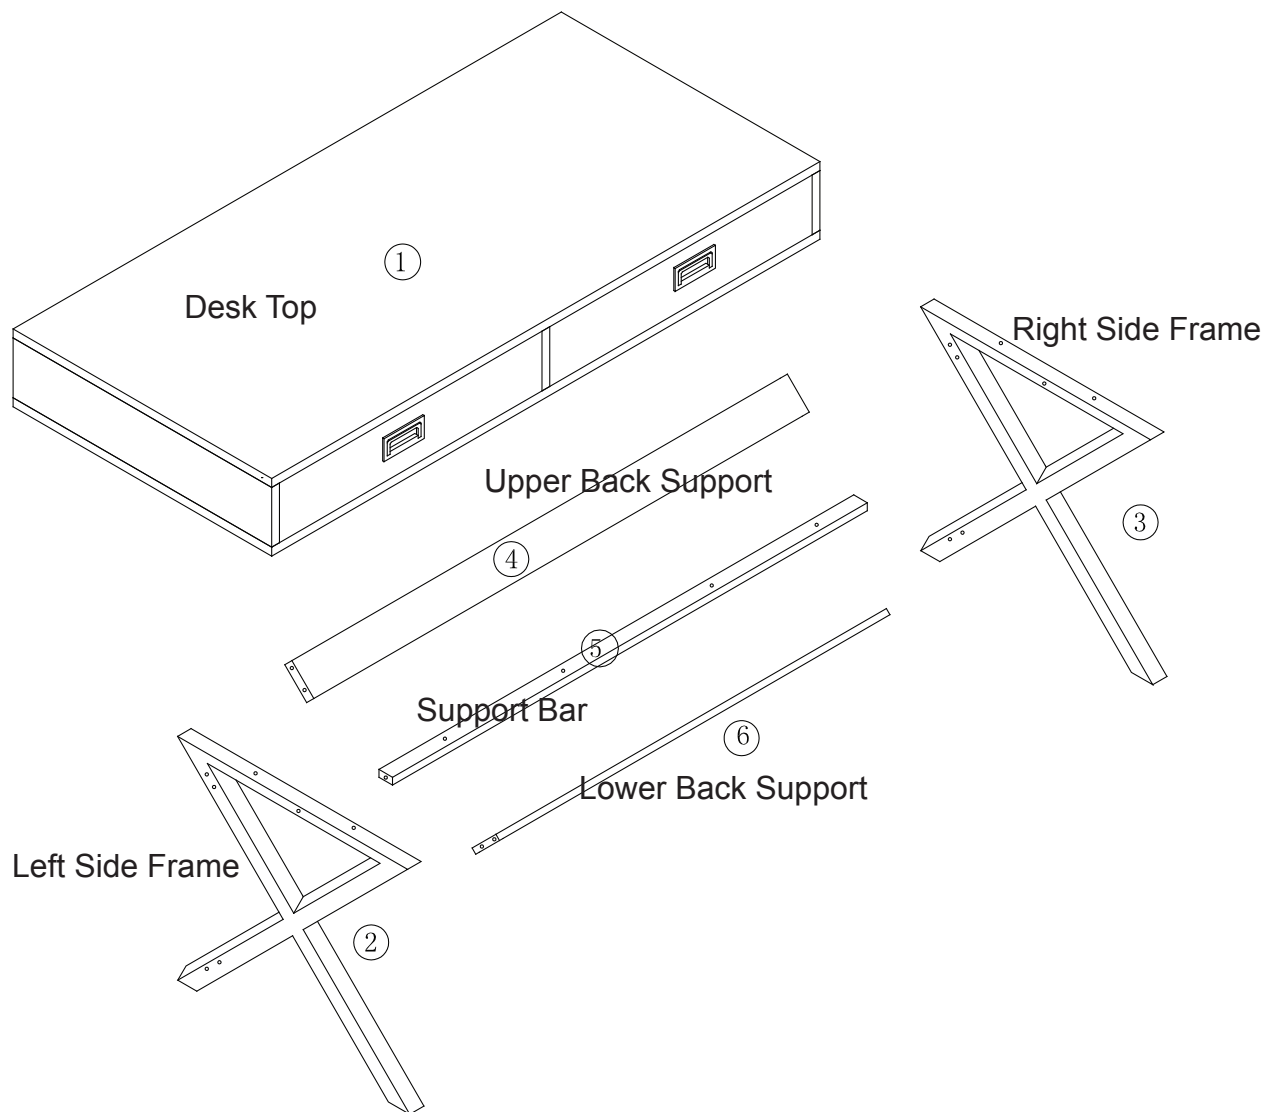

A x4

Allen Bolt




Bx1

Allen Wrench



Cx4

Wood Screw



Dx10

Screw



Ex8

Barrel Nut



Fx10


Stickers

Step 1

1. Connect Left and Right side frames ② and ③ to Support bar ⑤ using Screws (D).




10X D	
8X E	

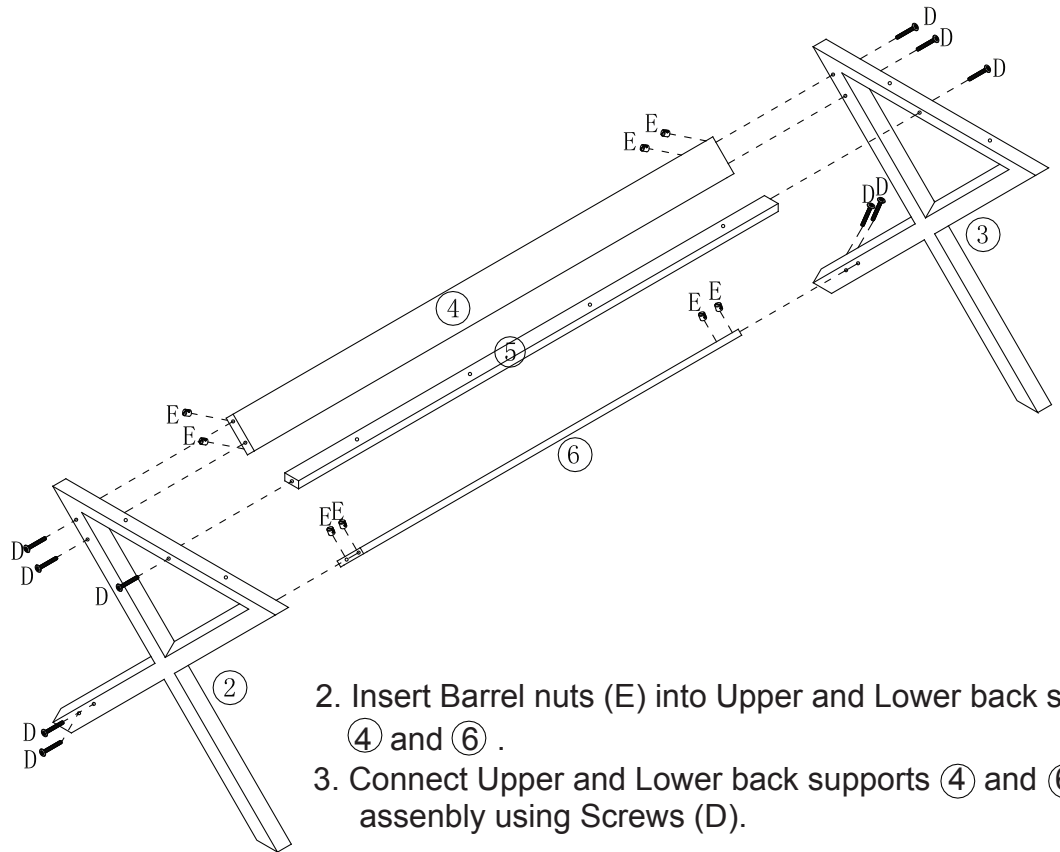

2. Insert Barrel nuts (E) into Upper and Lower back supports ④ and ⑥ .
3. Connect Upper and Lower back supports ④ and ⑥ to assembly using Screws (D).

Step 2

4X A	
1X B	
4X C	

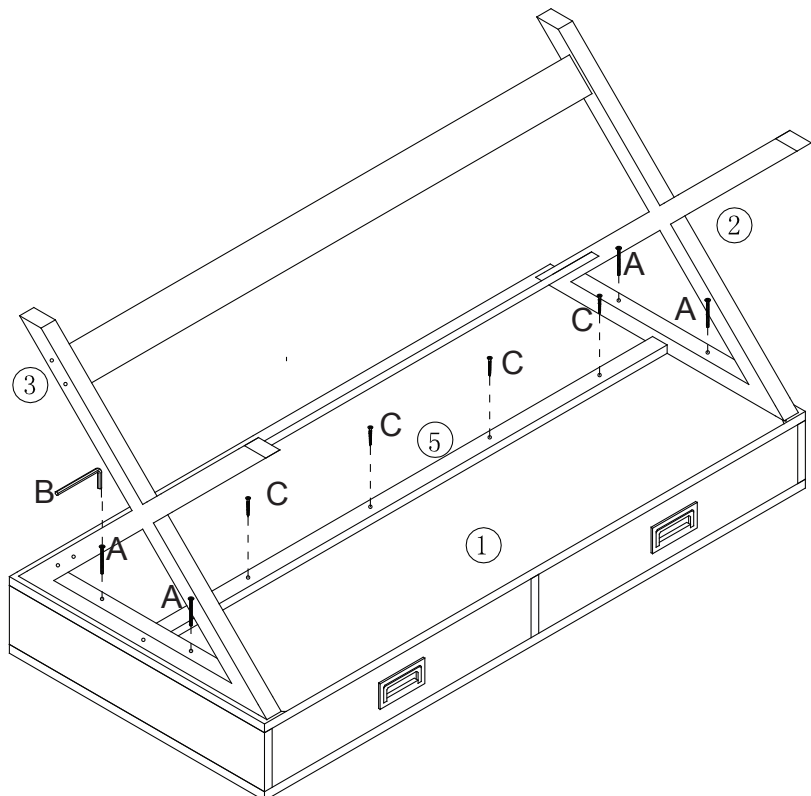

1. Place Desk top ① upside down on carpet or another soft surface
2. Connect leg assembly to Desk top ① using Wood screws (C) and Allen Bolts (A) as shown

Step 3

1. Place stickers (F) over bolt holes as shown.
2. Turn over and enjoy.

