

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below


## ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.



### **WARNING !**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time: 1/2 hours
5. Component parts and fittings contained in the box.  
Please sort out all parts before you begin to assemble the item.  
This is to make sure you always use the correct part
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product.  
Toppling furniture can cause serious injuries and death.  
This product has not been fitted with an anchor strap.  
To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

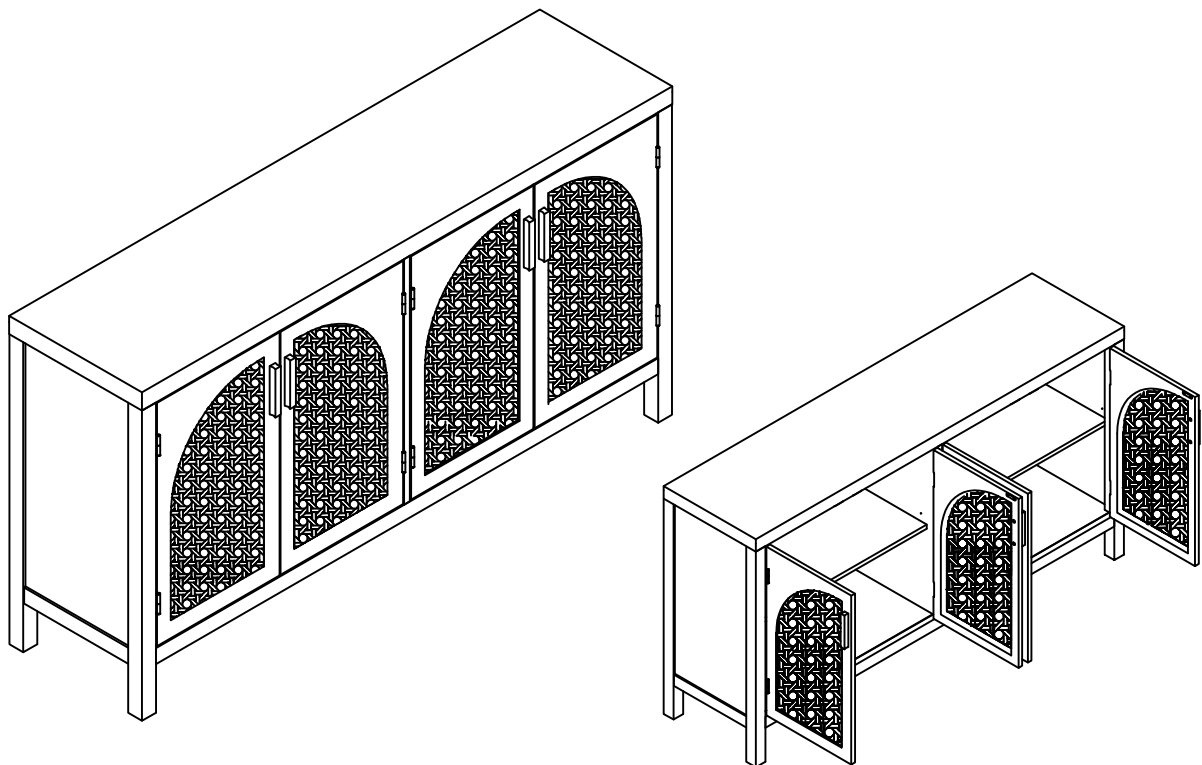


TOOLS NEEDED: Phillips Screwdriver













Wall Drill



Hammer



ASSEMBLY INSTRUCTIONS  
PART LIST

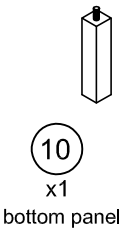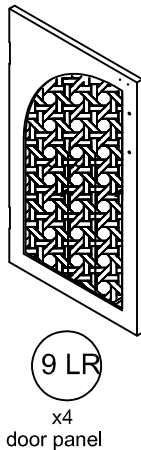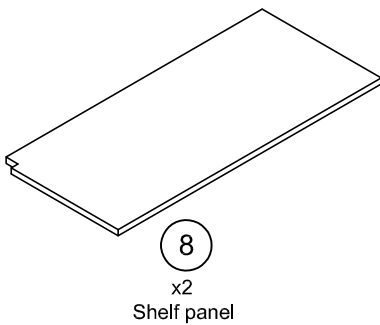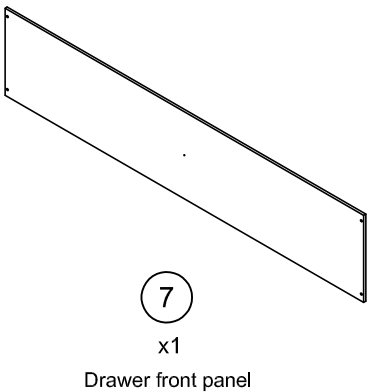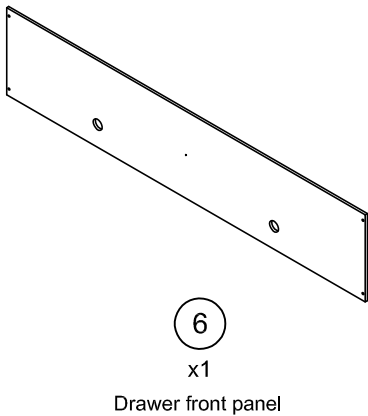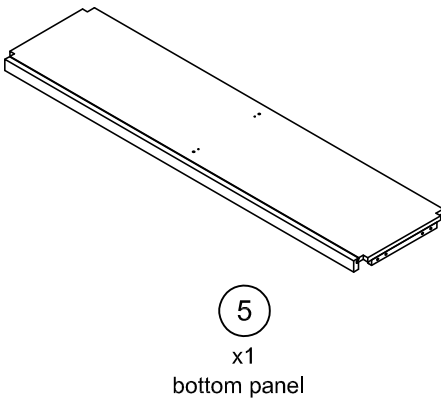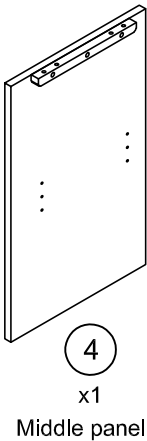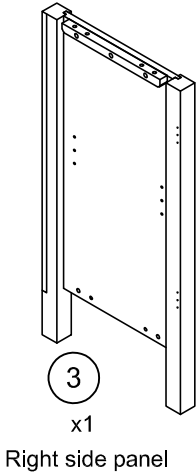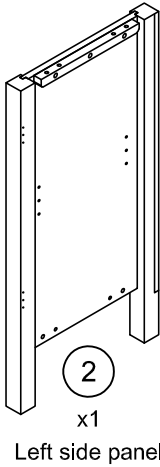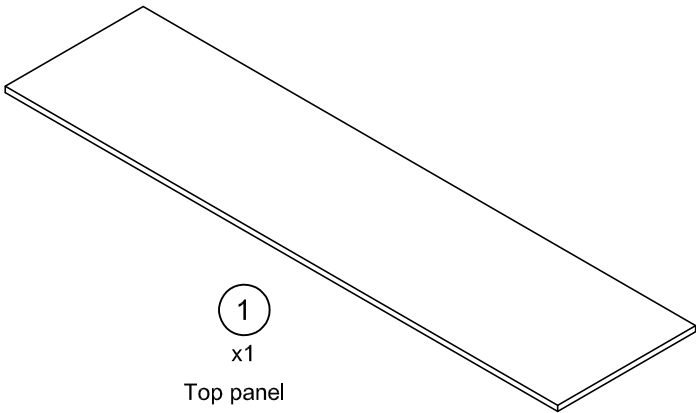

# ASSEMBLY INSTRUCTIONS

## HARDWARE LIST



(A)

x4  
Hook




(B)

x4  
Anchor




(C)

x2  
Plastic tie




(D)

x4  
Screws




(E)

x4  
Screws




(F)

x18  
Bolts




(G)

x18  
Flat Washer




(H)

x18  
Spring Washer




(I)

x1  
Allen Key



(J)

x4  
Screws




(K)

x12  
Dowels



(L)

x8  
Shelf supports



(M)



x4  
Handles

5/32"\* 3/4"




(N)

x8  
handle bolts




(O)

x4  
Door Sniff




(P)

x16  
Screws

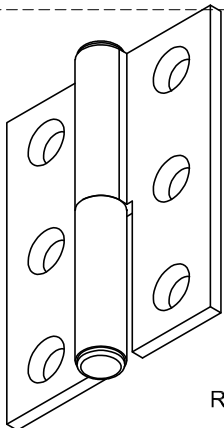


(Q)

x4  
Right Hinges

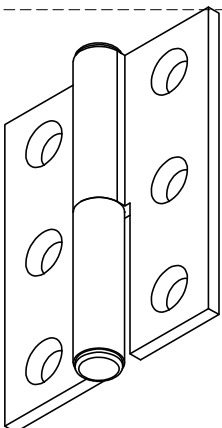

(R)

x4  
Left Hinges





(S)

x48  
Screws

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237

STEP 1

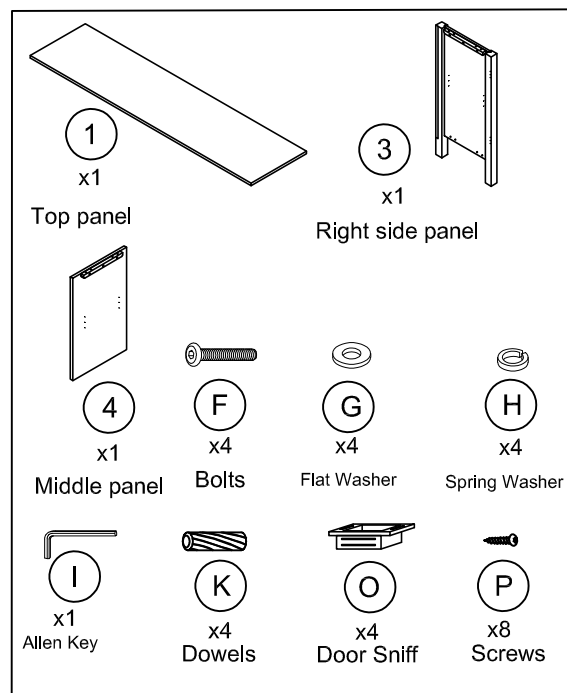
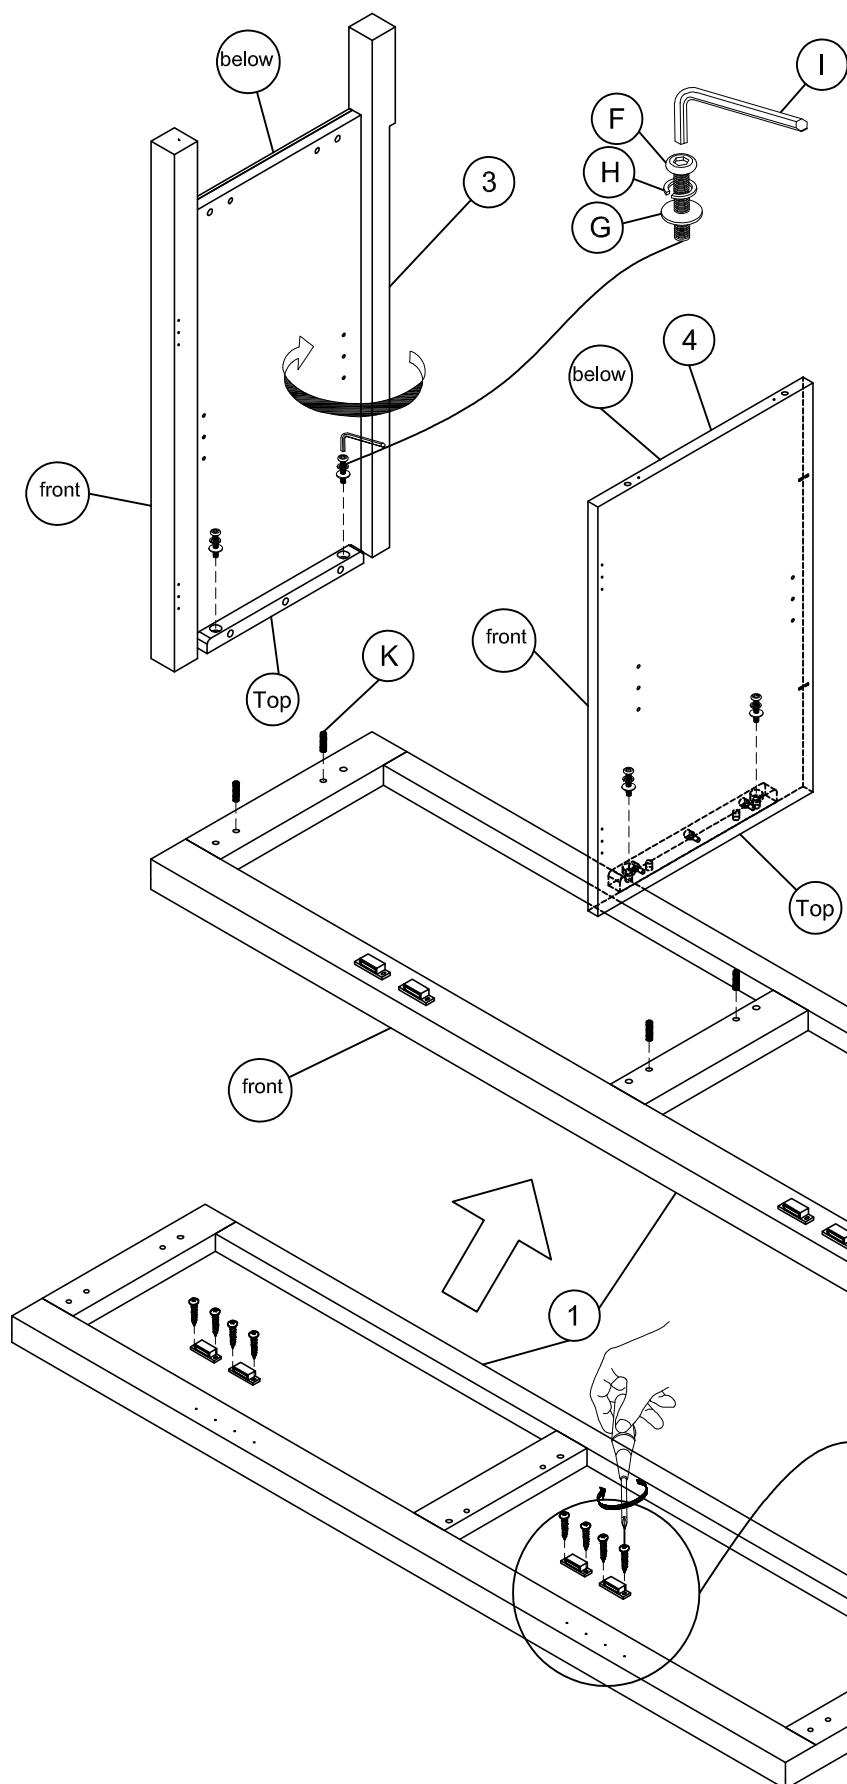




# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237



STEP 2

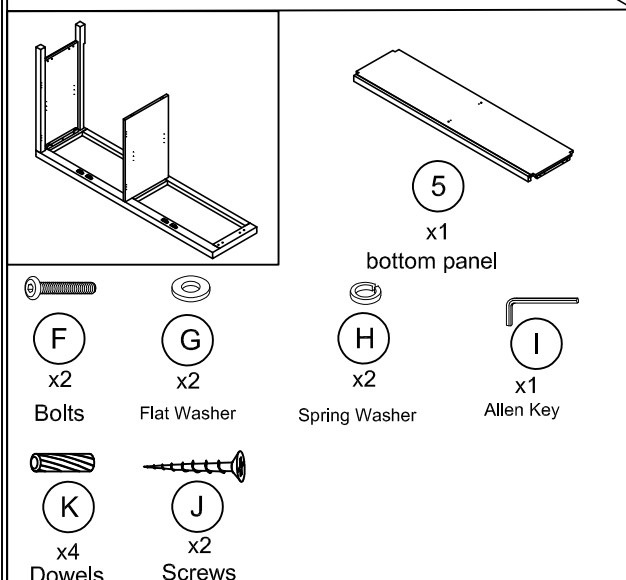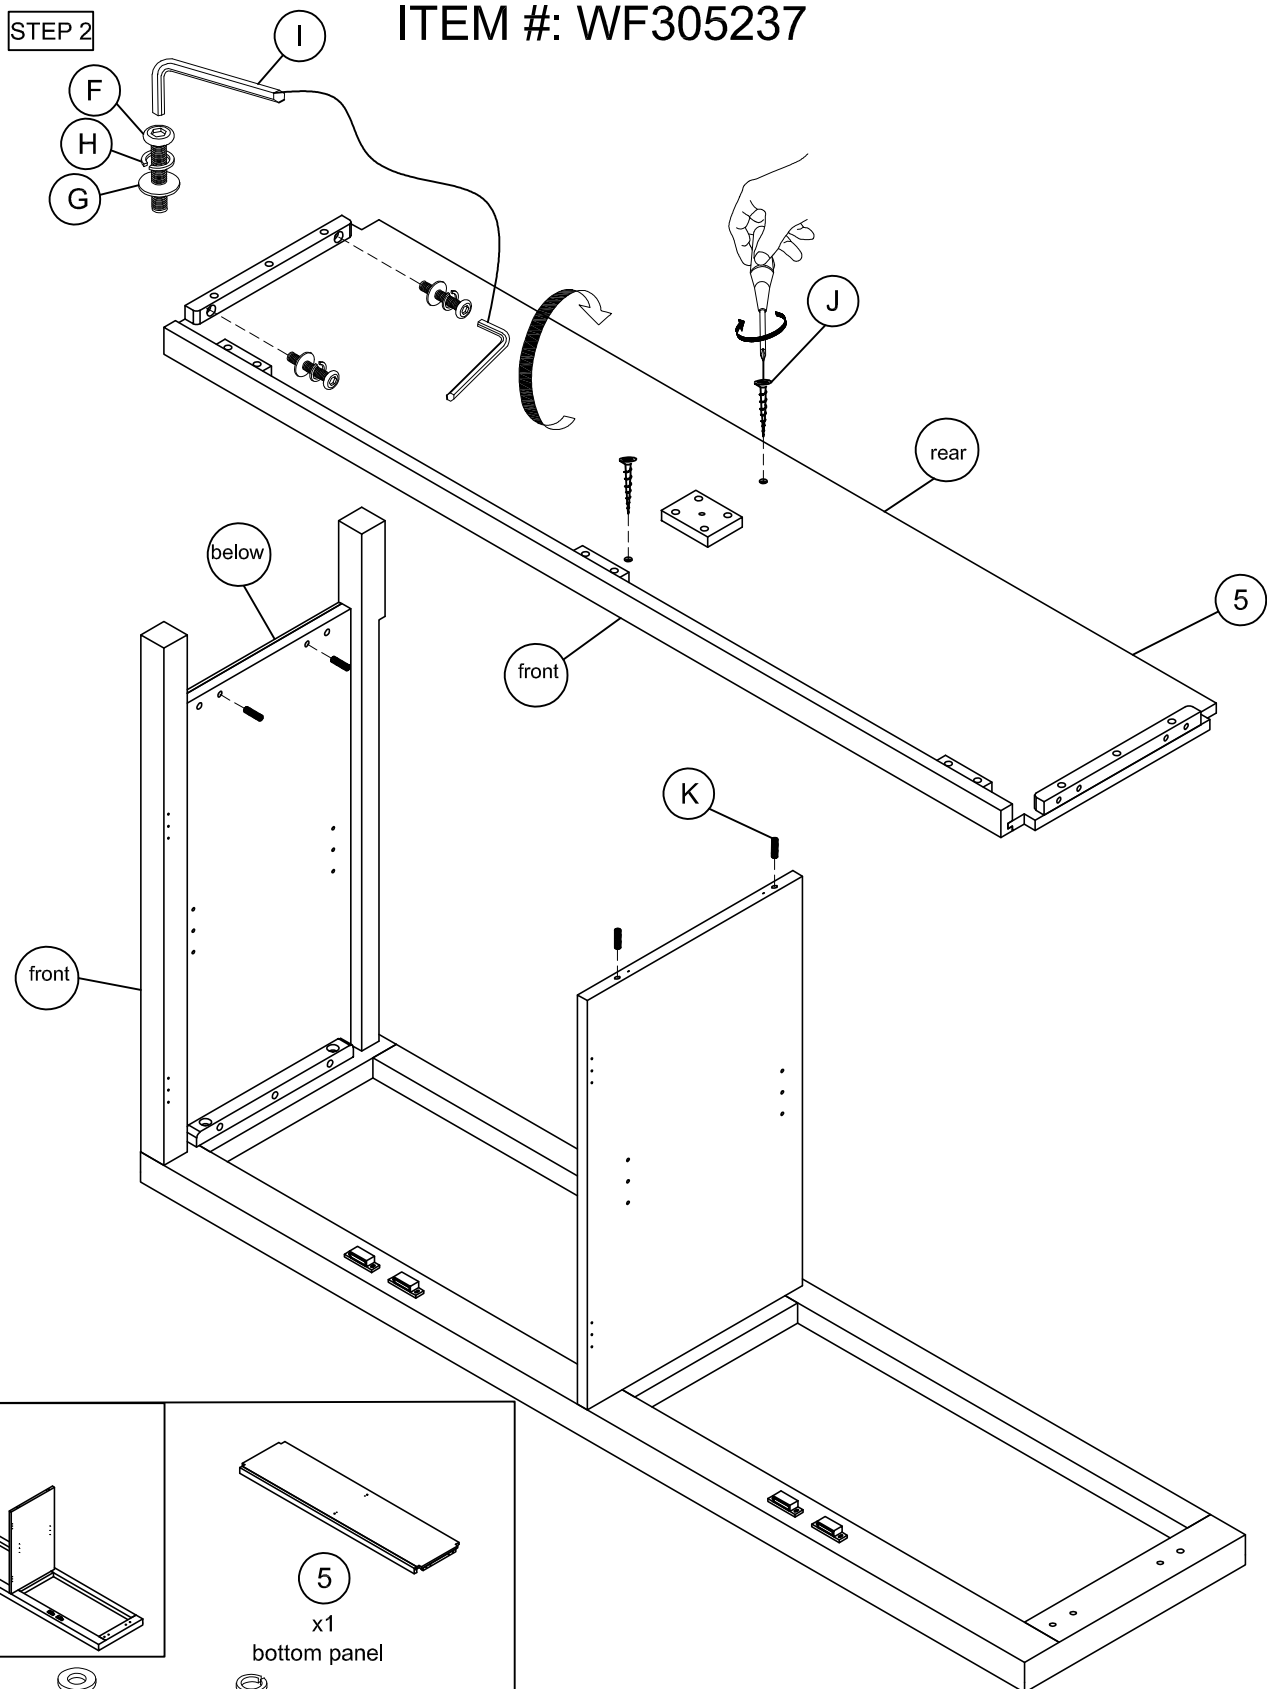

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237




STEP 3

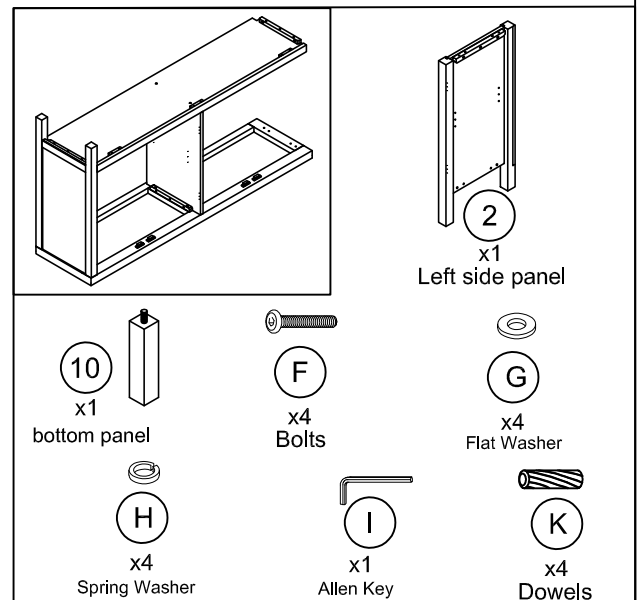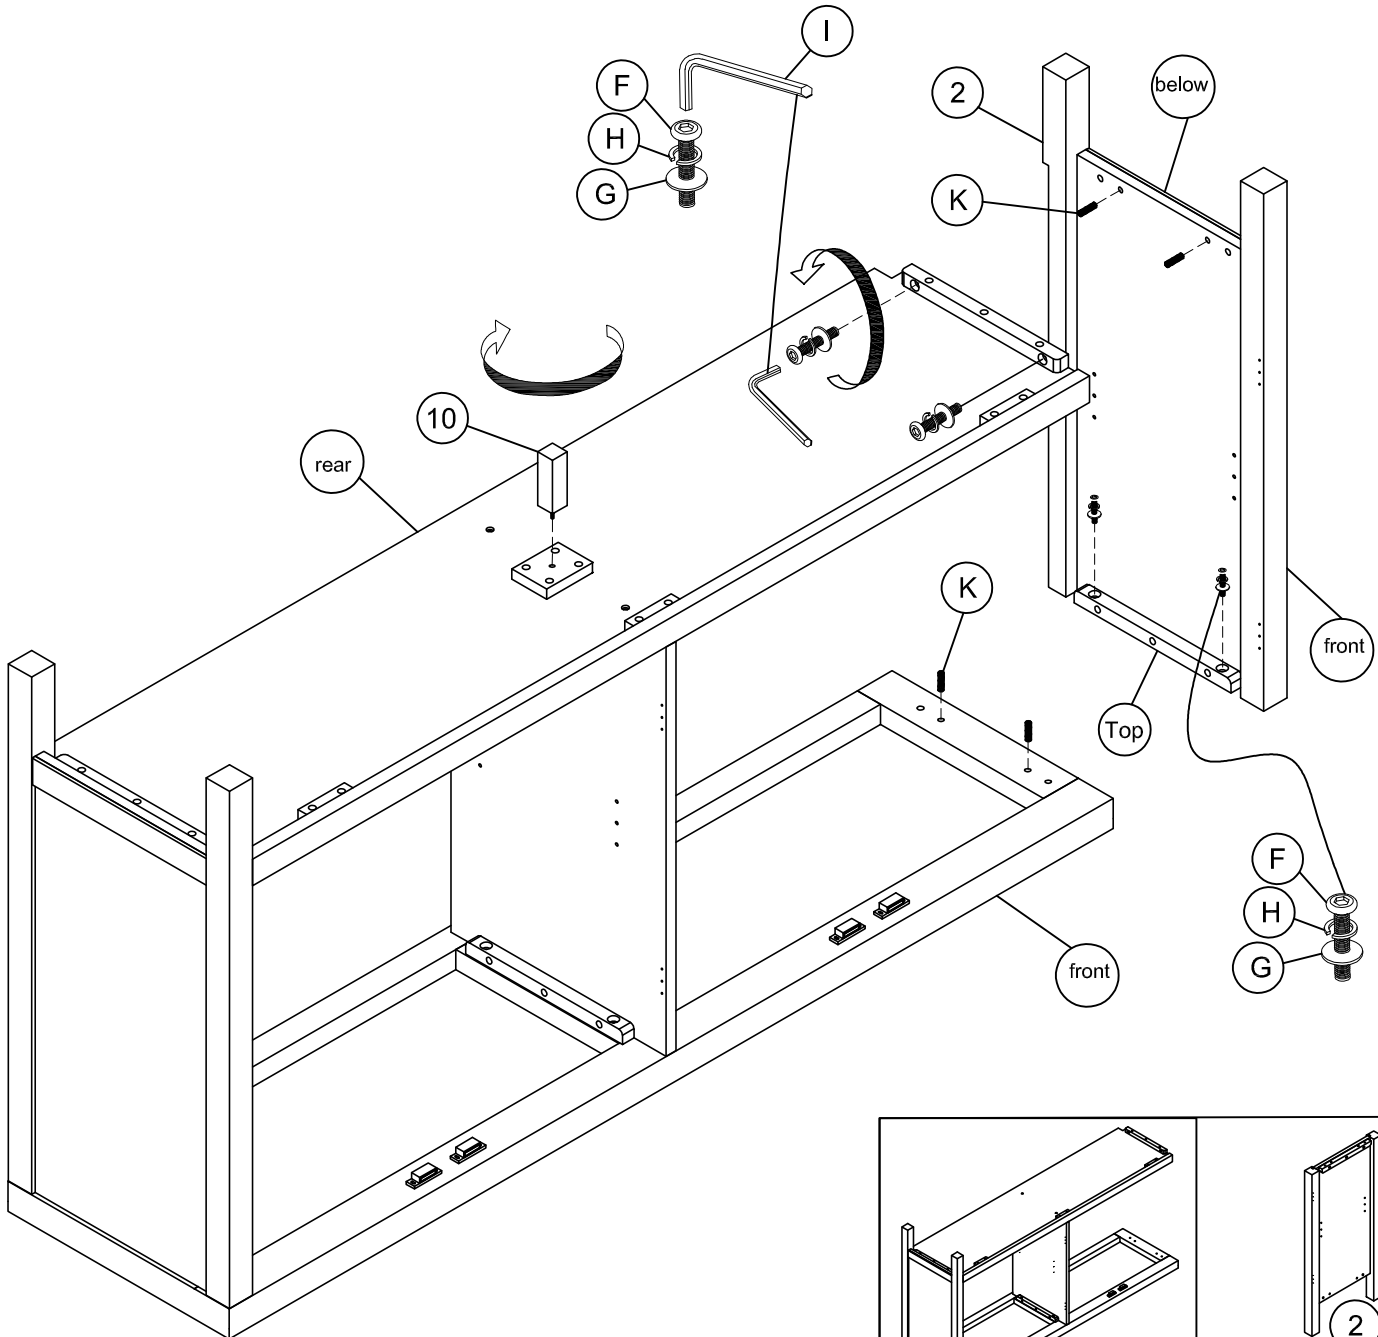

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237


STEP 4

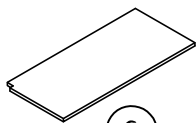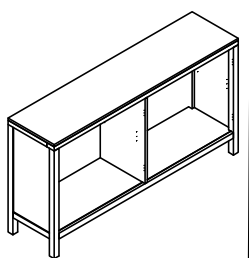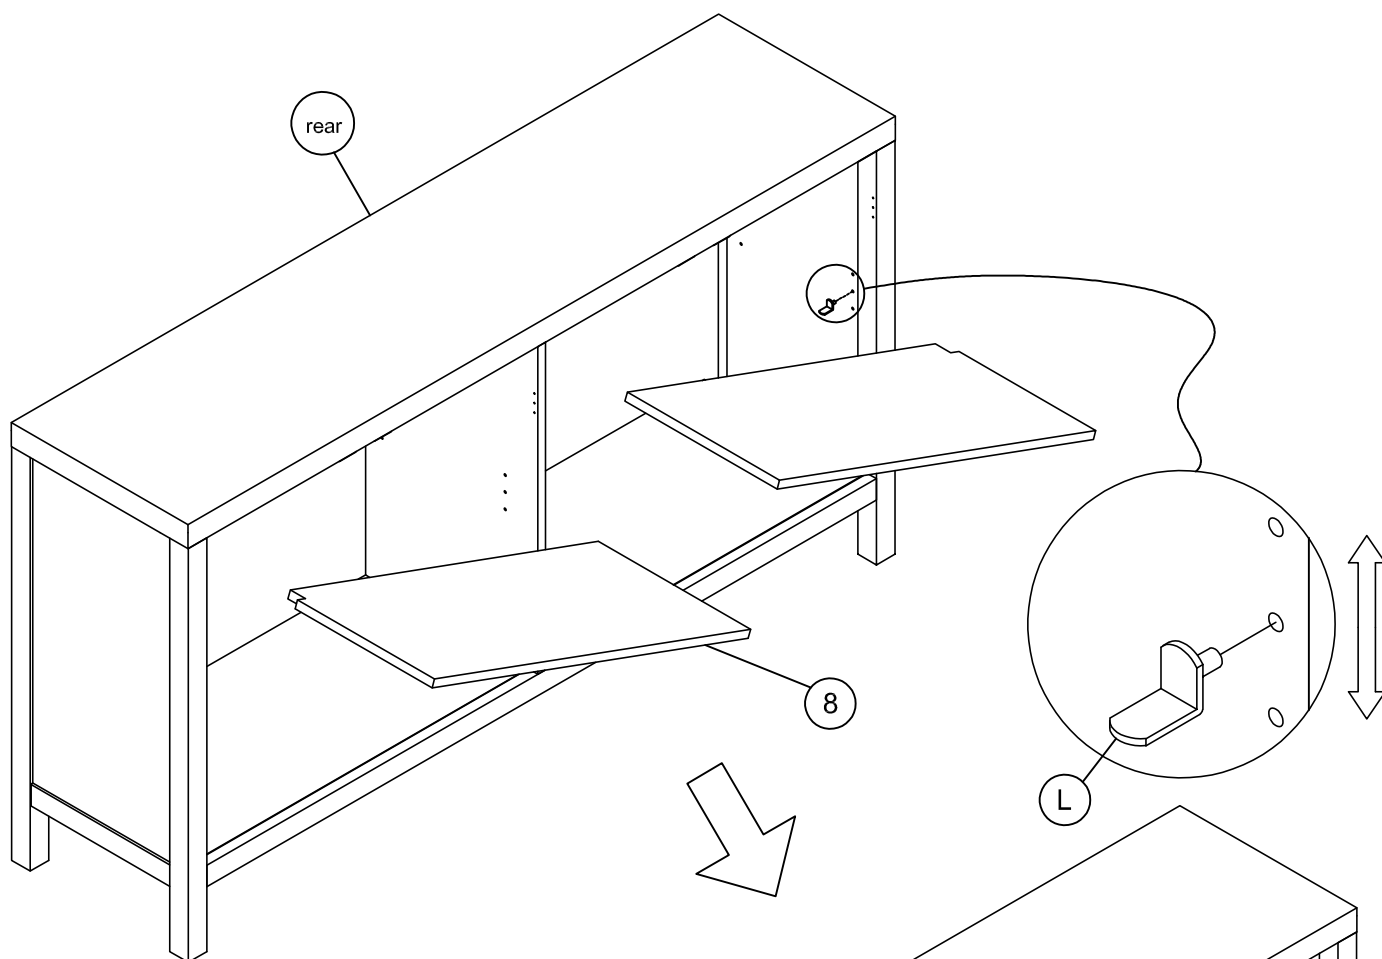

x2  
Shelf panel








x8  
Shelf supports

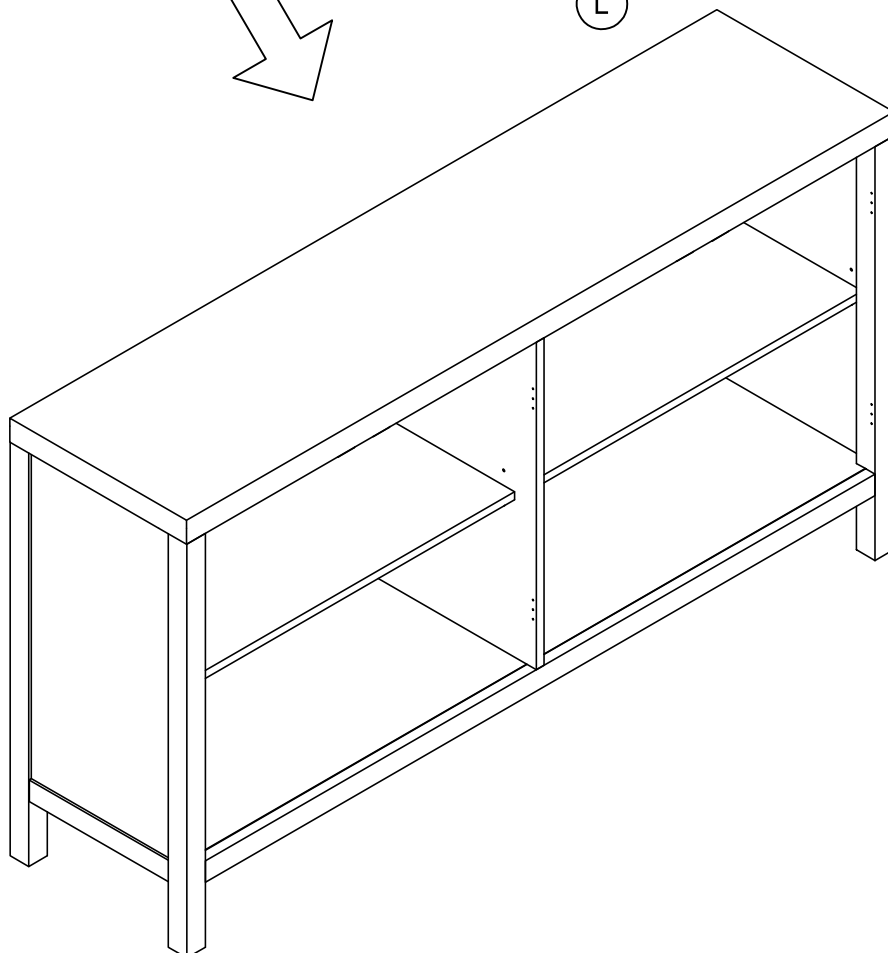

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237

STEP 5

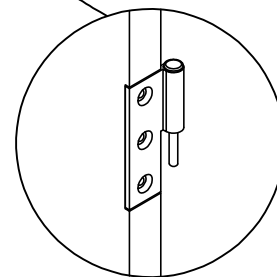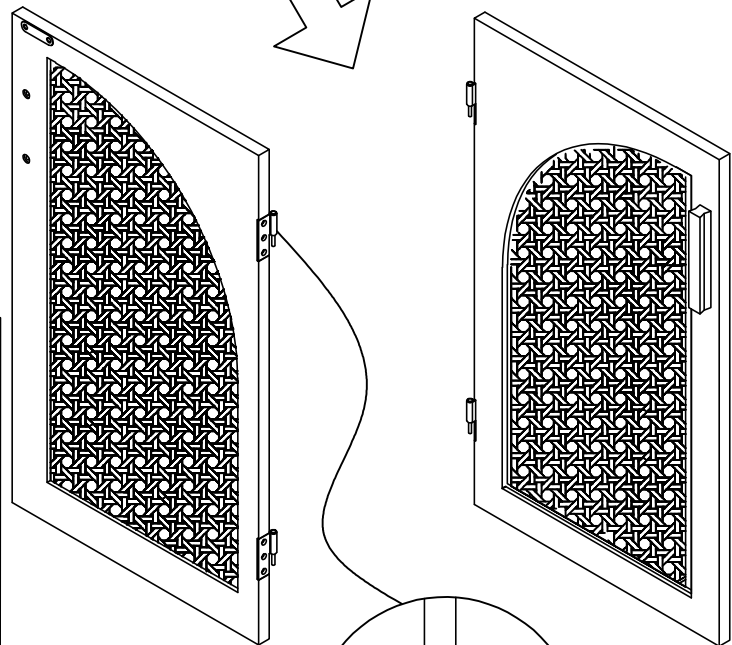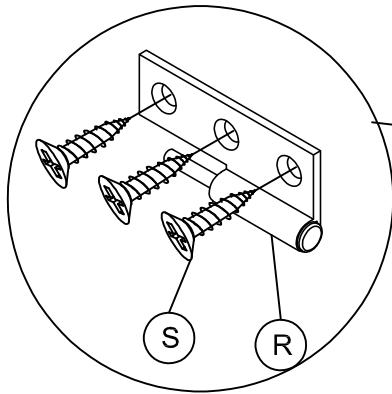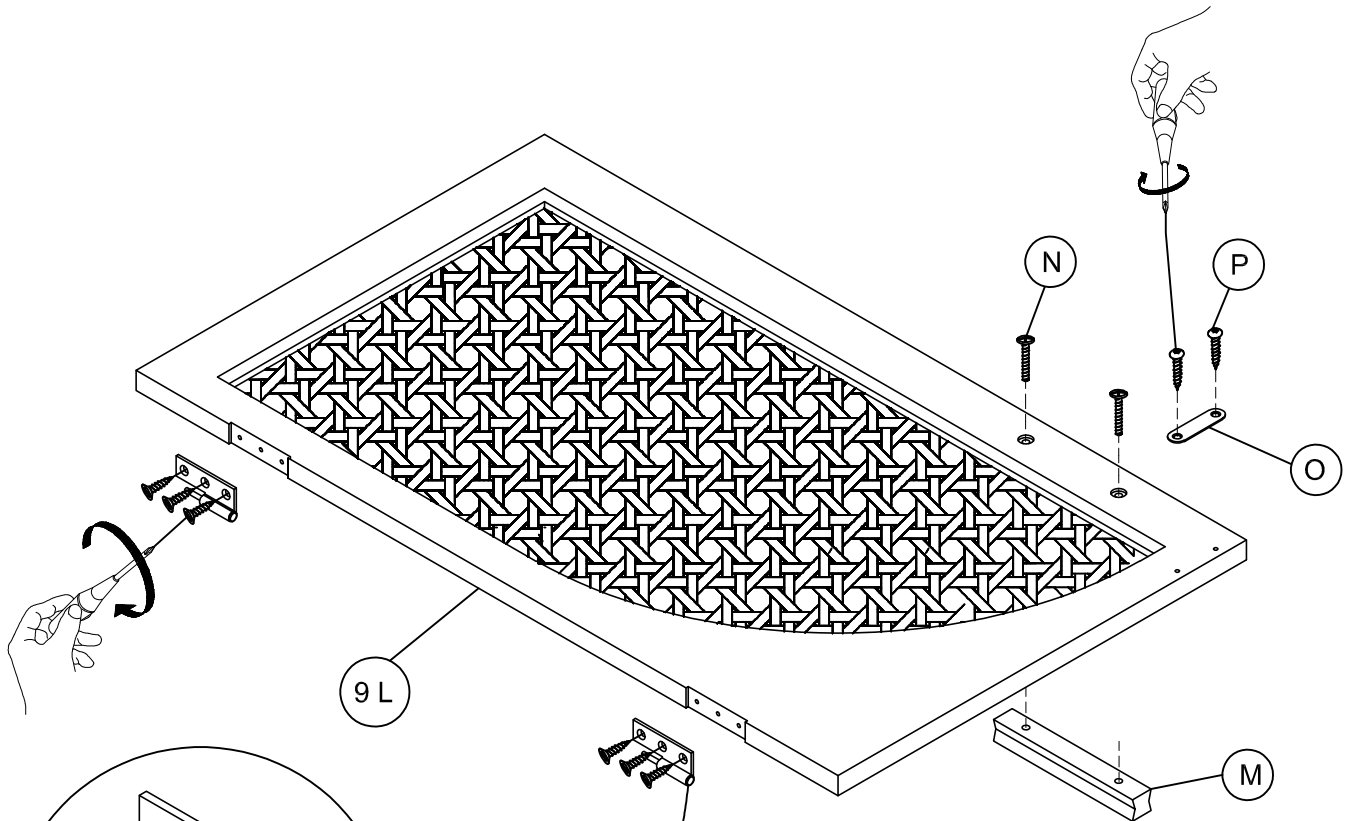

9 L

x2  
door panel



M

x2  
Handles



N

x4  
handle bolts




O

x2  
Door Sniff



P

x4  
Screws



R

x4  
Left Hinges




S

x12  
Screws

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237





STEP 6

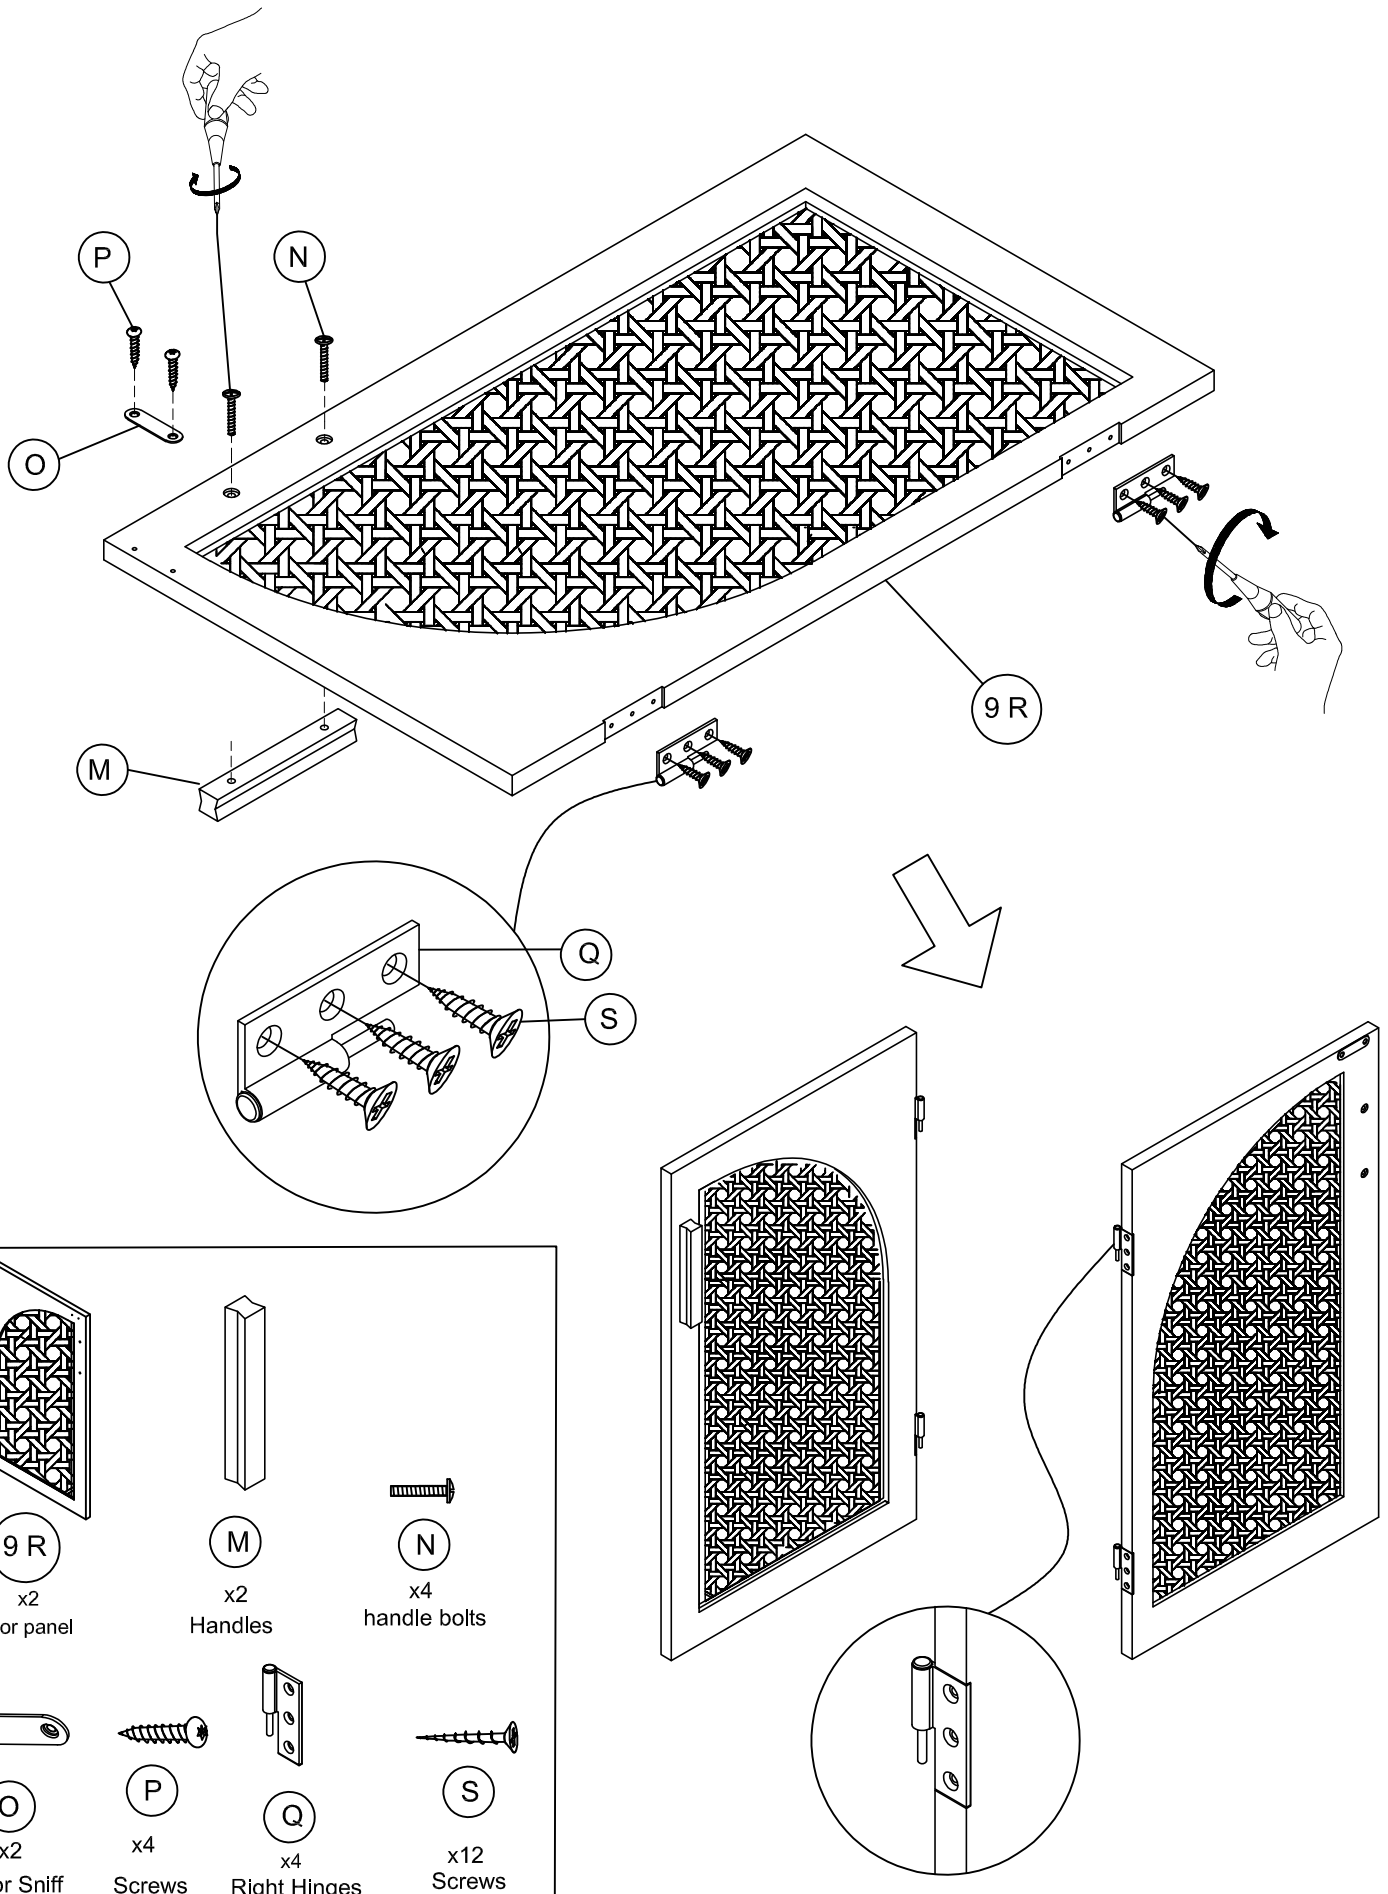

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237

STEP 7

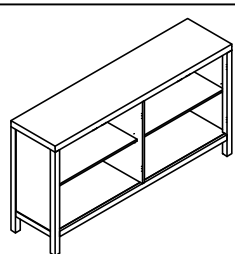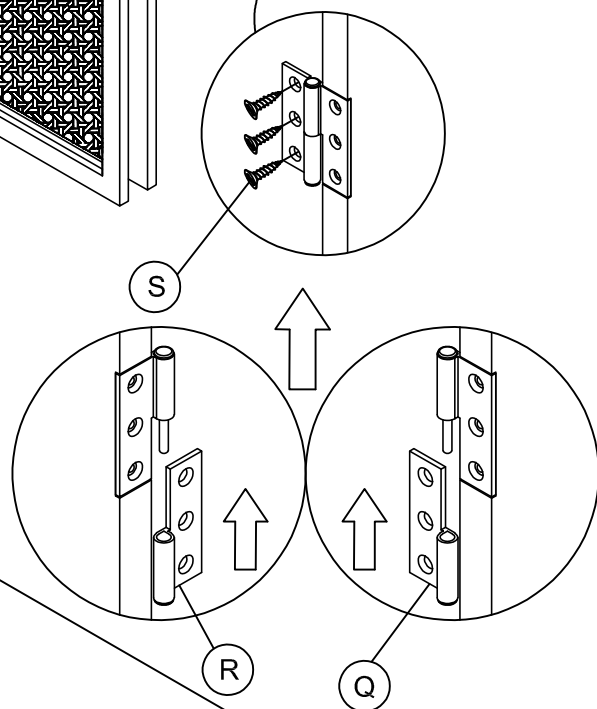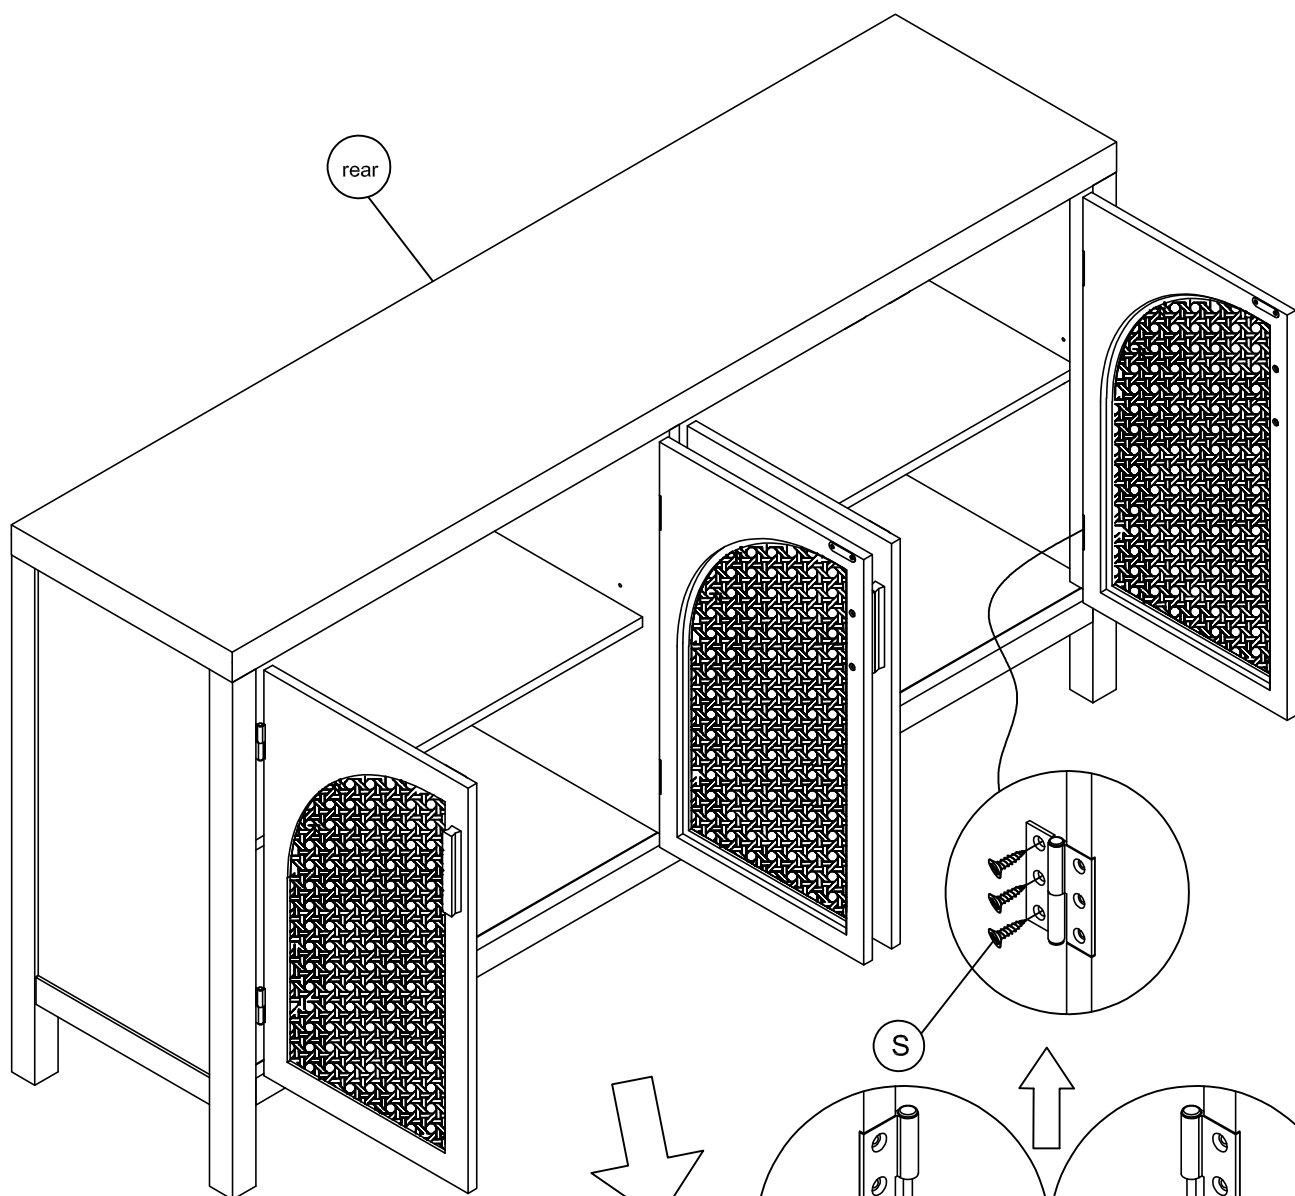

9 LR

x4  
door panel




Q

x4  
Right Hinges




R

x4  
Left Hinges



S




x24  
Screws

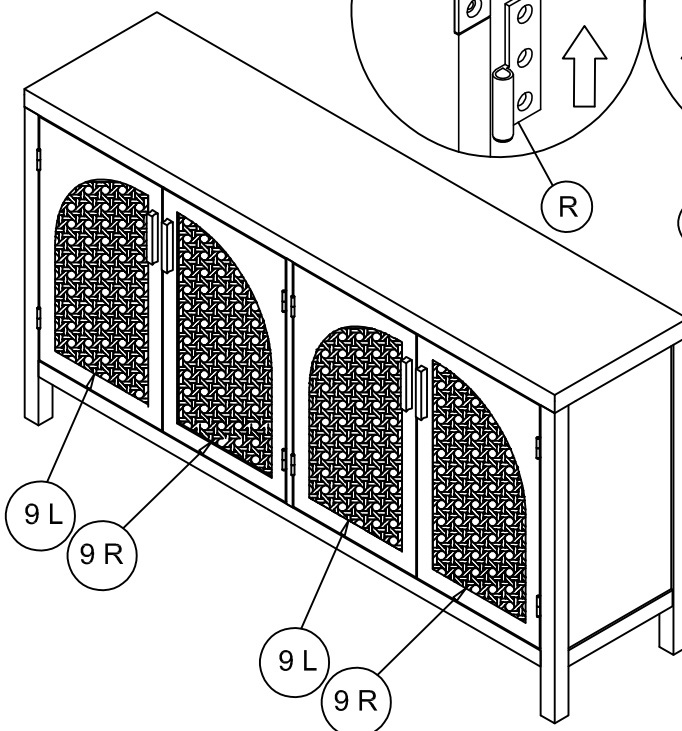

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237


STEP 8

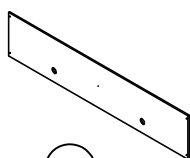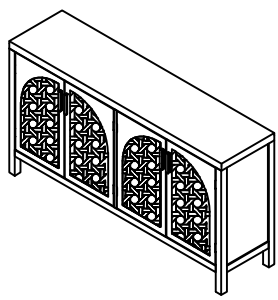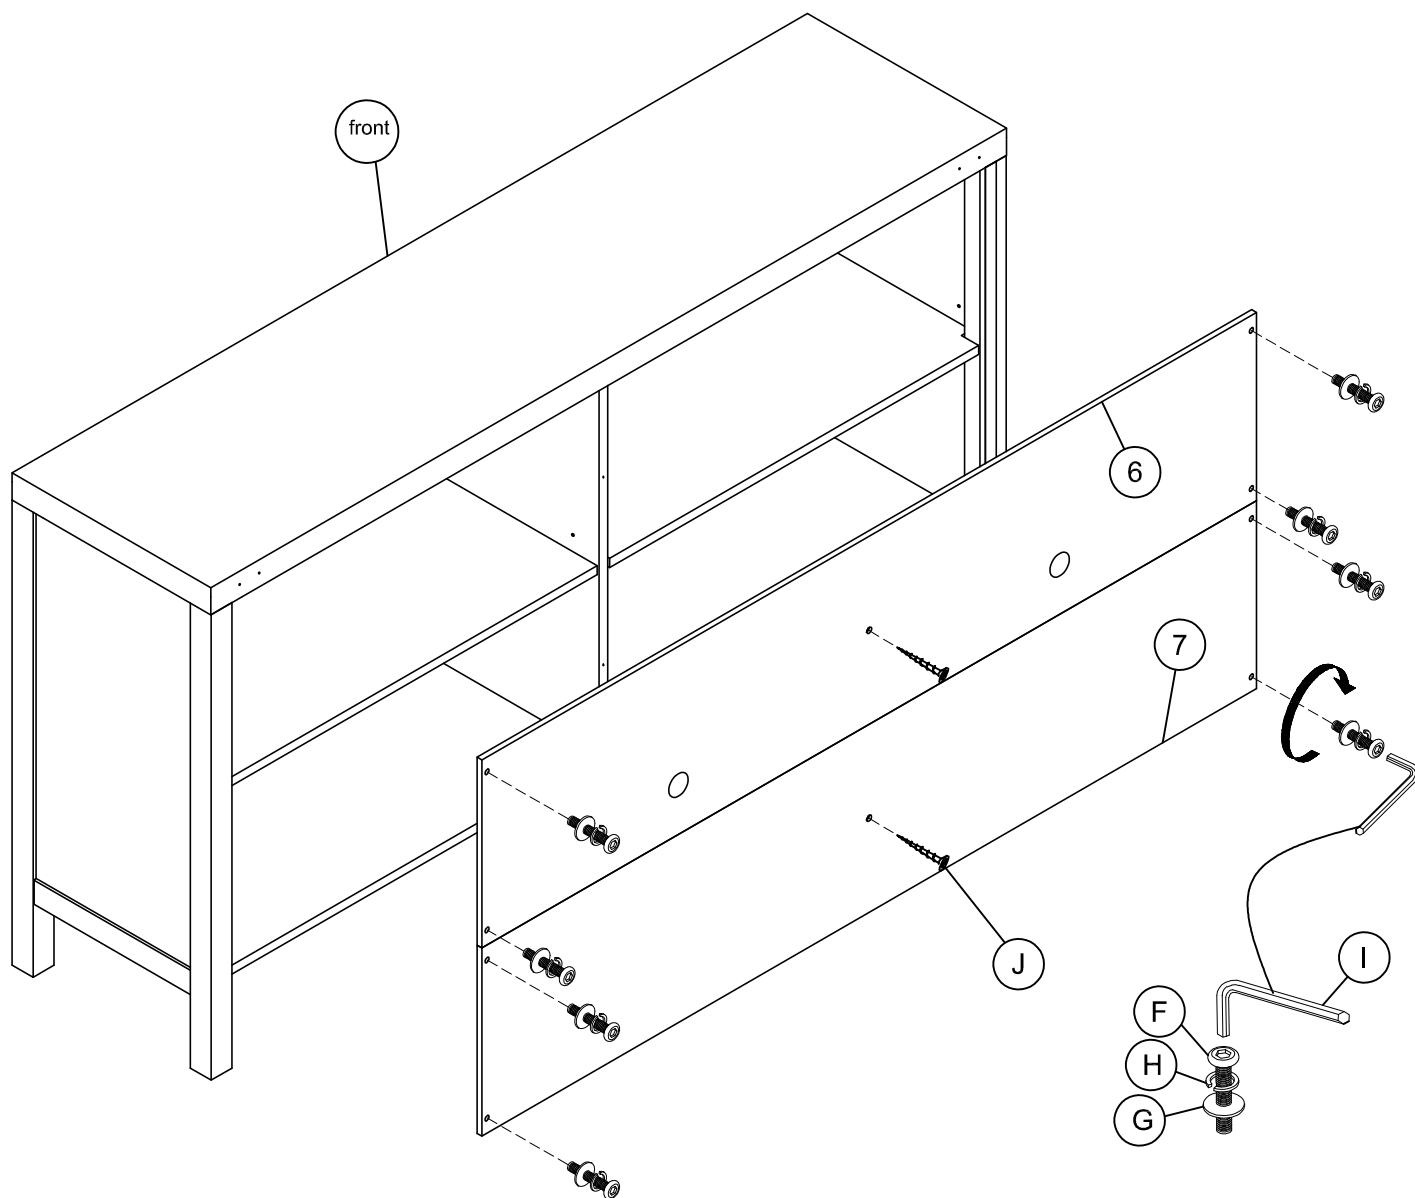

6

x1

Drawer front panel

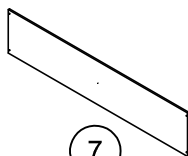

7

x1

Drawer front panel



F

x8

Bolts



G

x8

Flat Washer



H

x8


Spring Washer



I

x1

Allen Key



J

x2



Screws

# ASSEMBLY INSTRUCTIONS

ITEM #: WF305237

## STEP 9

Place the Cabinet in the desired location against the wall. Mark the position of the attached Hooks on the wall and remove the Cabinet. Using one of the remaining Hooks (A) as a template, Place the Hook (A) under the marks on the wall and mark the two hole positions. Drill the holes for the Anchors (B) and insert the Anchors (B) into the wall. Attach the remaining Hooks (A) to the Anchors (A) with Screw (D). Fully tighten the screws. Return the Cabinet to the selected position and connect the Hooks (A) together with Plastic Tie (C ). Assembly is now complete.

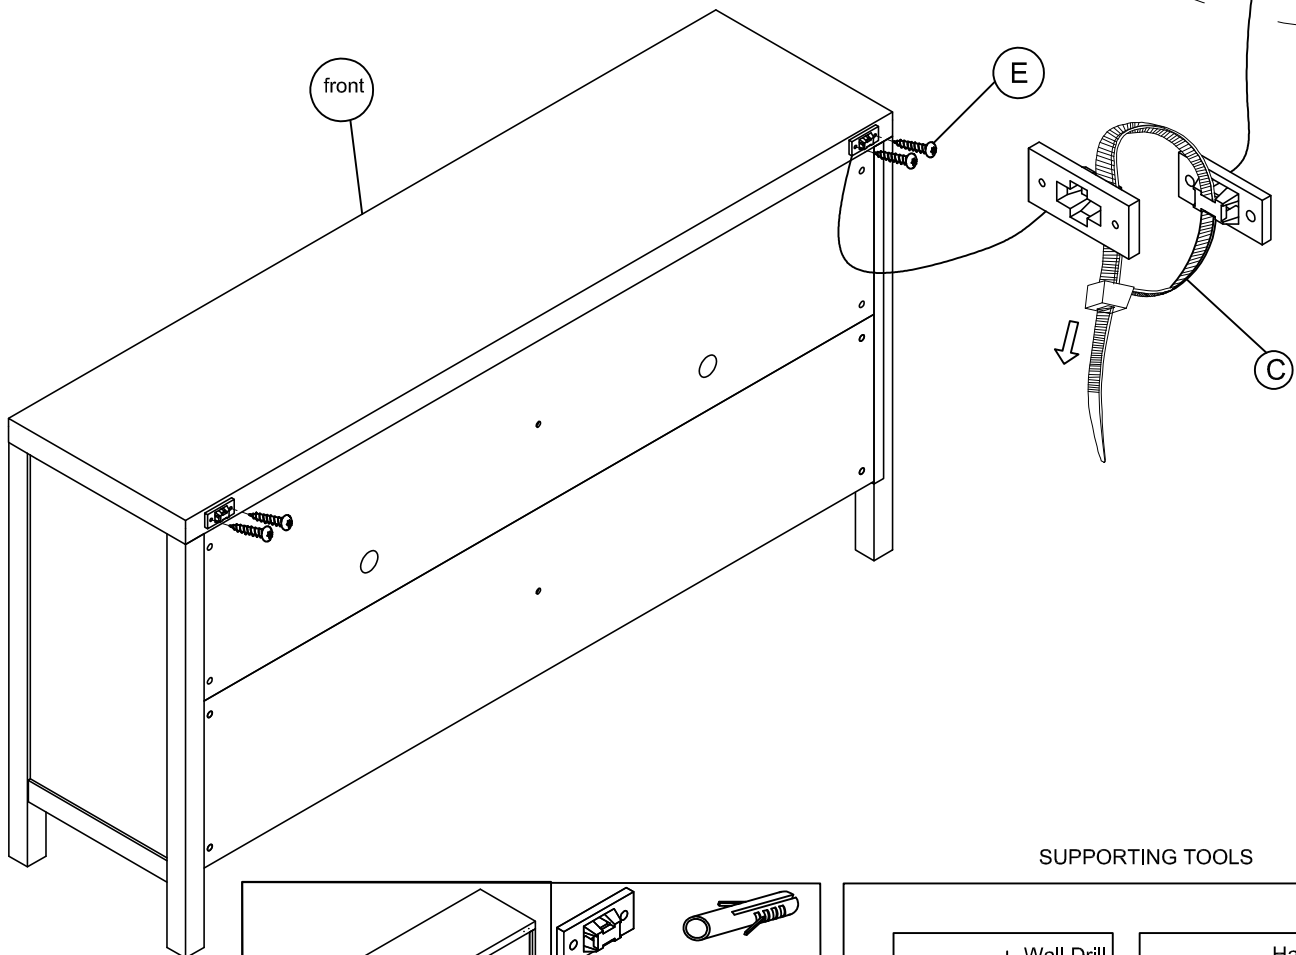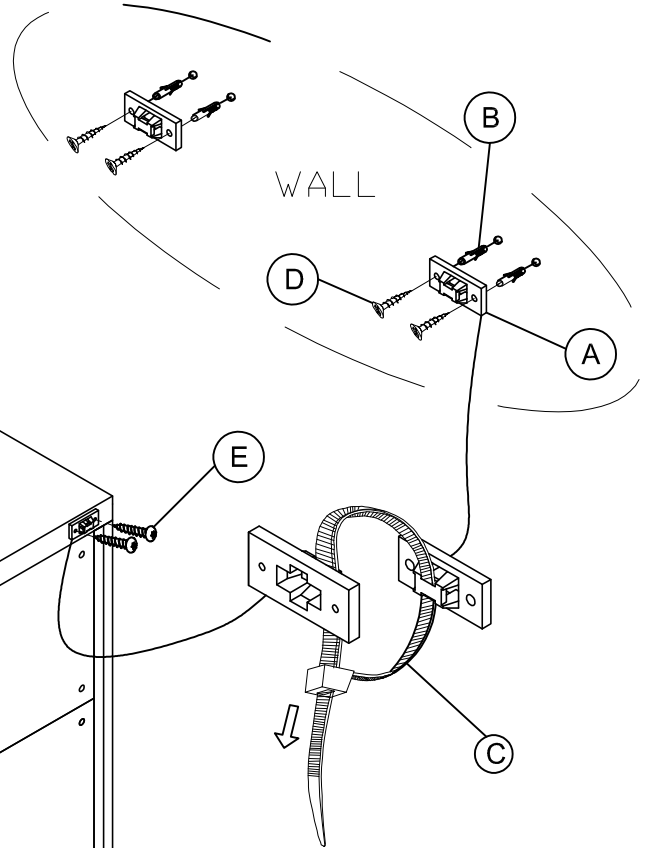

### SUPPORTING TOOLS

