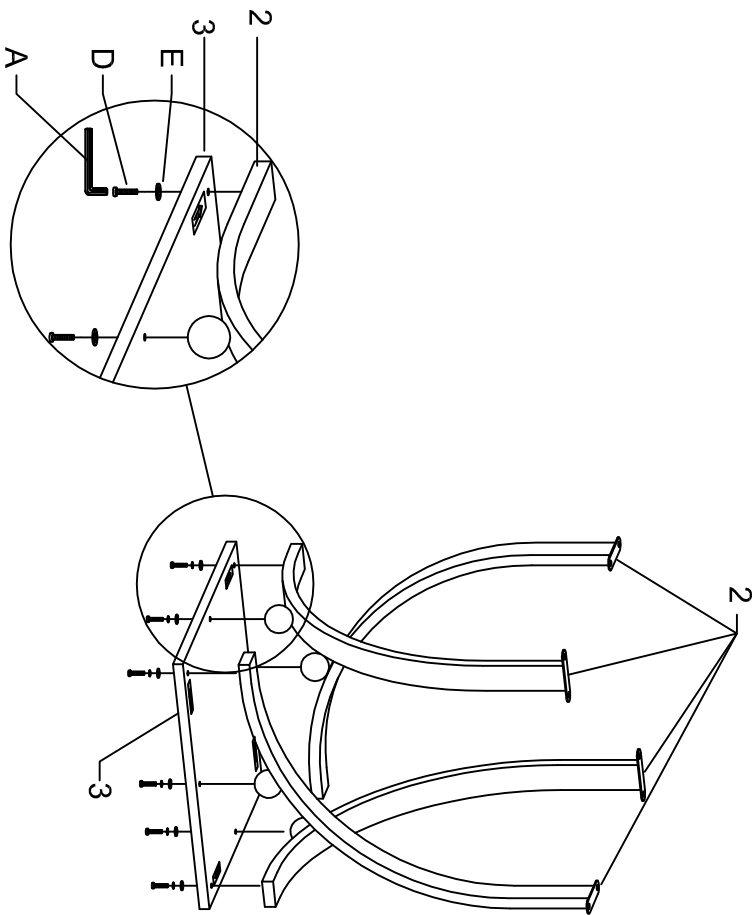
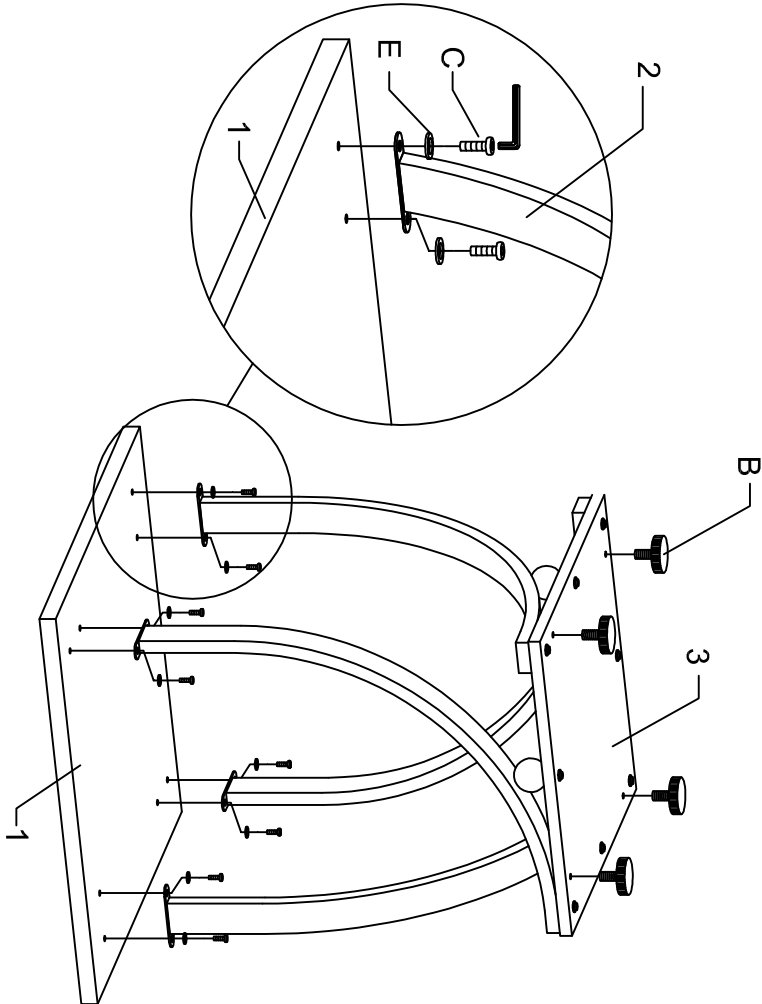


**\*\* Do not tighten any bolts until all of them have been started !**








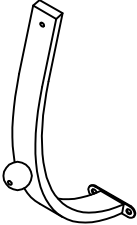

Step 1.



Step 2.



**ACCESSORY PACK**

<b>A</b>  1/4"	<b>B</b>	 1PC	<b>C</b>  1/4" X 15 mm 4PC	<b>D</b>  1/4" X 15 mm 8PCS	<b>E</b>  1/4" X 35mm 8PCS	 16PCS
<b>COMPLETE HARDWARE</b>						
1 	2 		3 			
1PC	1PC	4PCS				1PC