


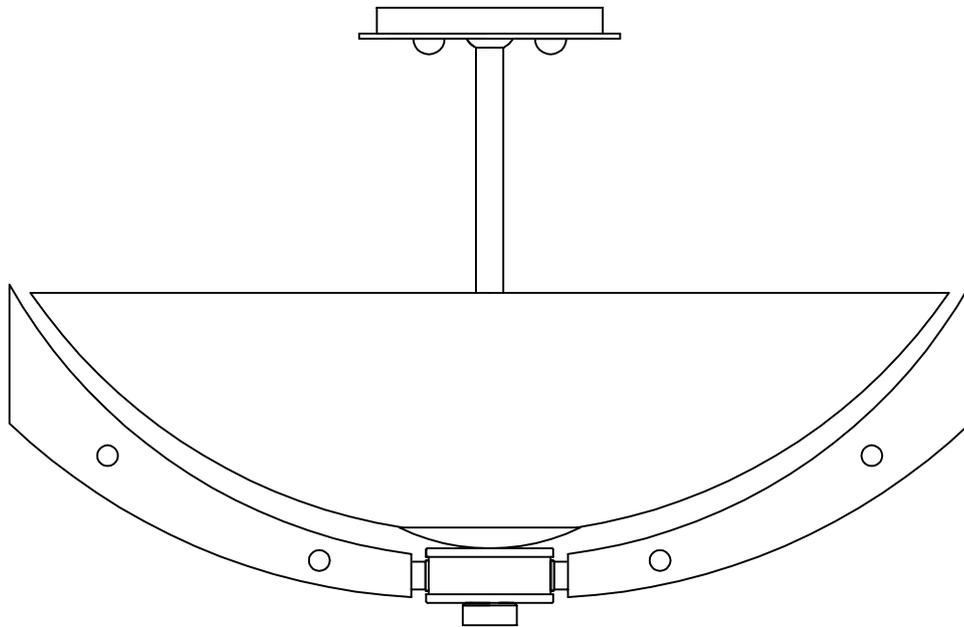

PRODUCT NAME: Merge 6 Light Semi-Flush Mount

ITEM NUMBER: 39511

Please consult a qualified electrician for hanging fixture and wiring.





Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.


Bulb (included): 6\*40W G9 Bulbs

**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation


Locate all hardware & components before discarding packaging

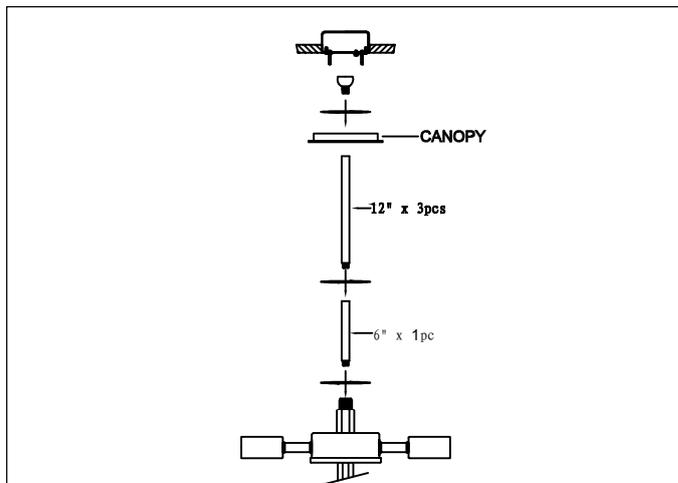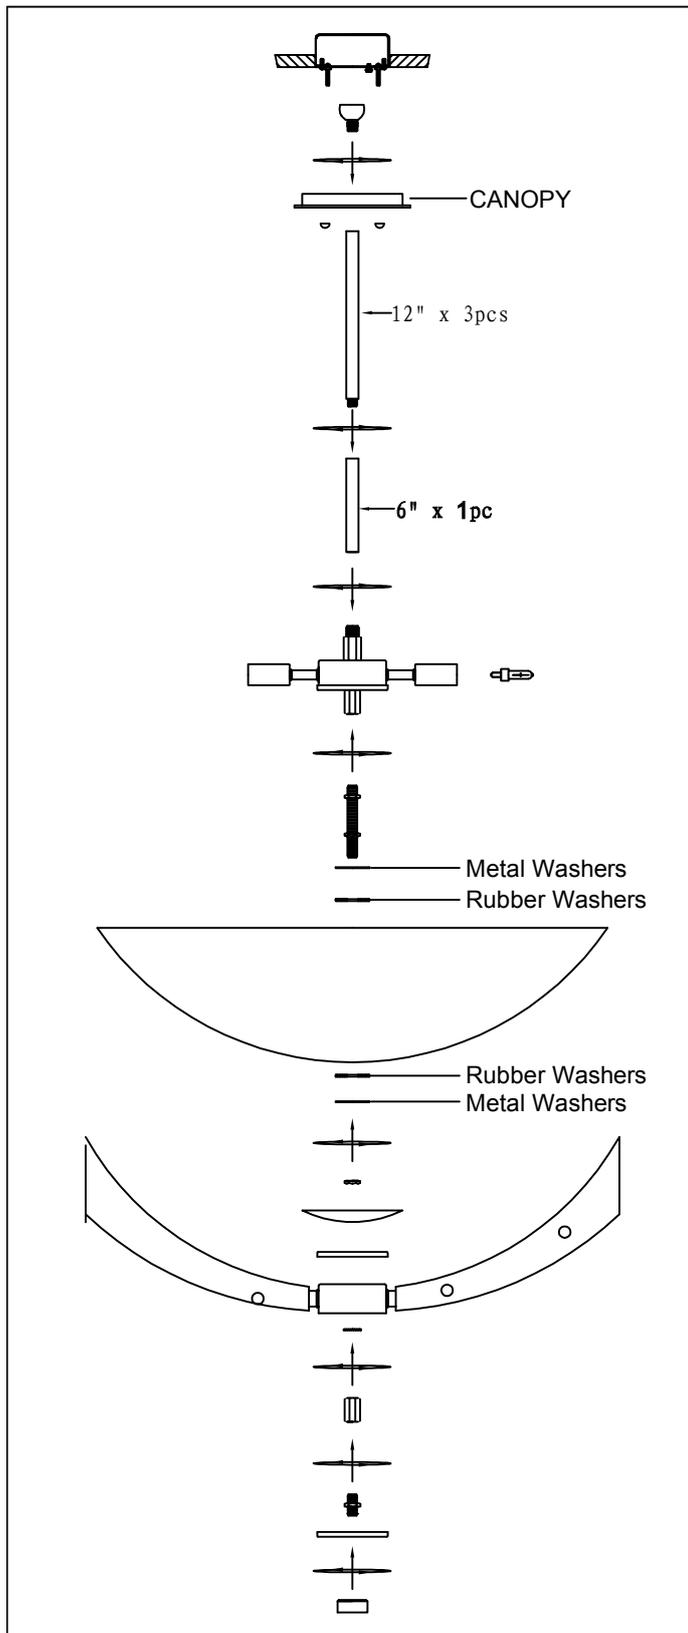

1. Remove mounting bracket from fixture and install to electrical box
2. Run wire through stems and combine stem lengths to meet desired mounting height.

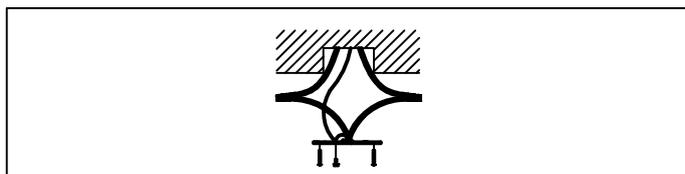

3. Wire fixtures to wires in outlet box. Copper wire is for ground.
4. Attach the socket cluster to the threaded tube. Add metal washer then rubber washer before attaching glass. On the other side again add the metal and rubber washers before tightening hexnut that secures glass. Run decorative caps under glass before securing the wood bottom assembly. Secure the wooden bottom assembly with cap and threaded finial.

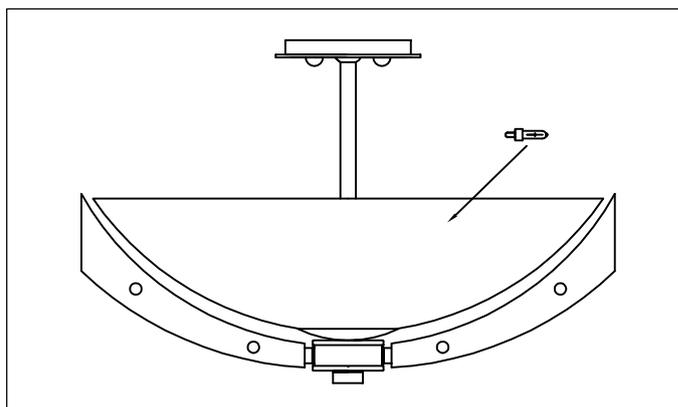

5. Install max 40W G9 bulbs.

**Cleaning & Care:**  
Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner