


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

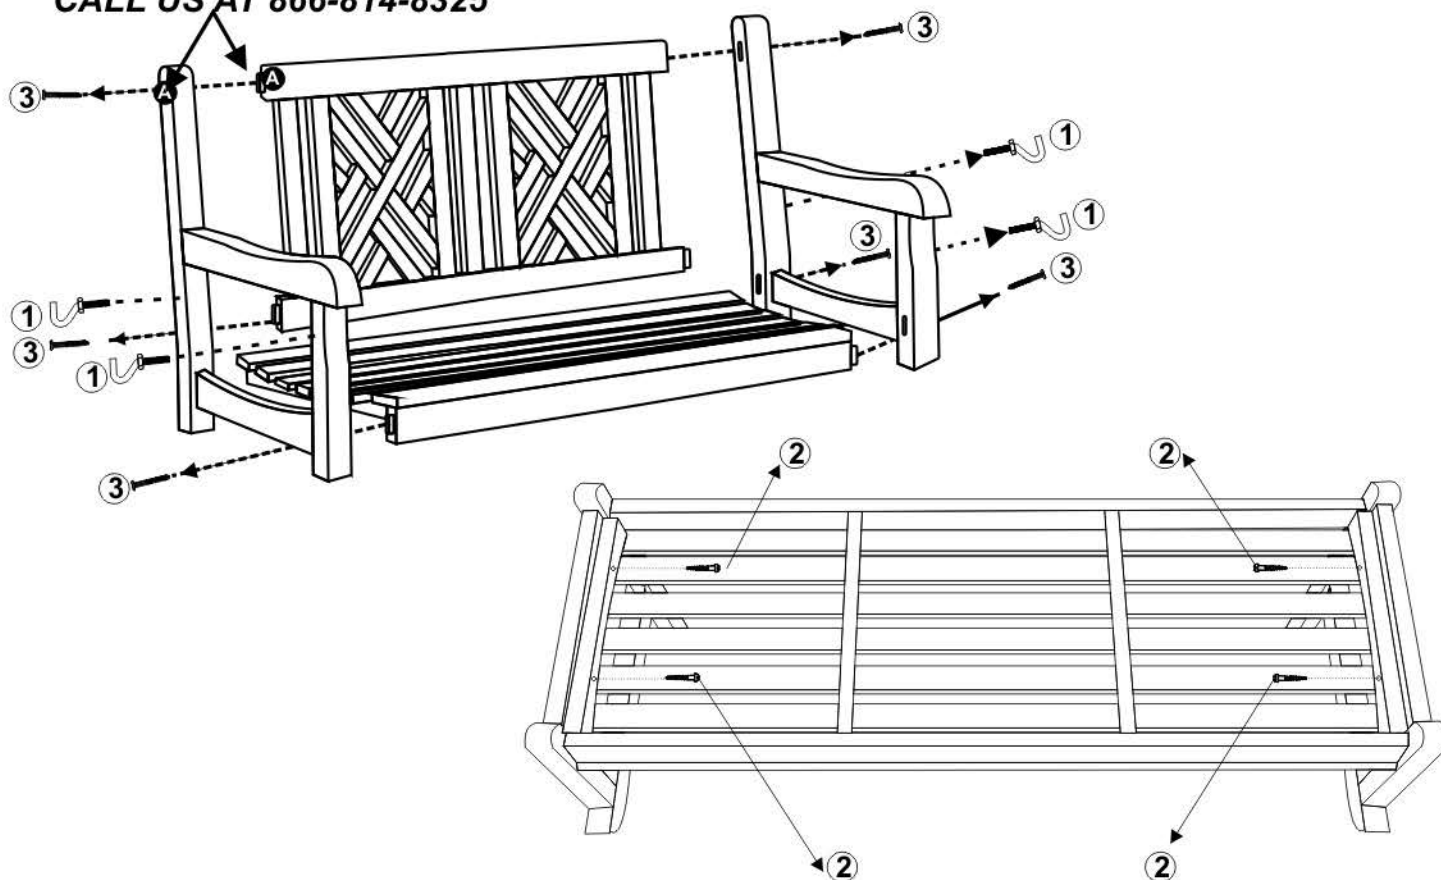


*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

WJ 116

Hardware



1. (4 Pcs)



2. SCREW (4 pcs)



3. F. BOLT (6 pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section