





FAO1&FBO1
Shower Door Instruction Guide

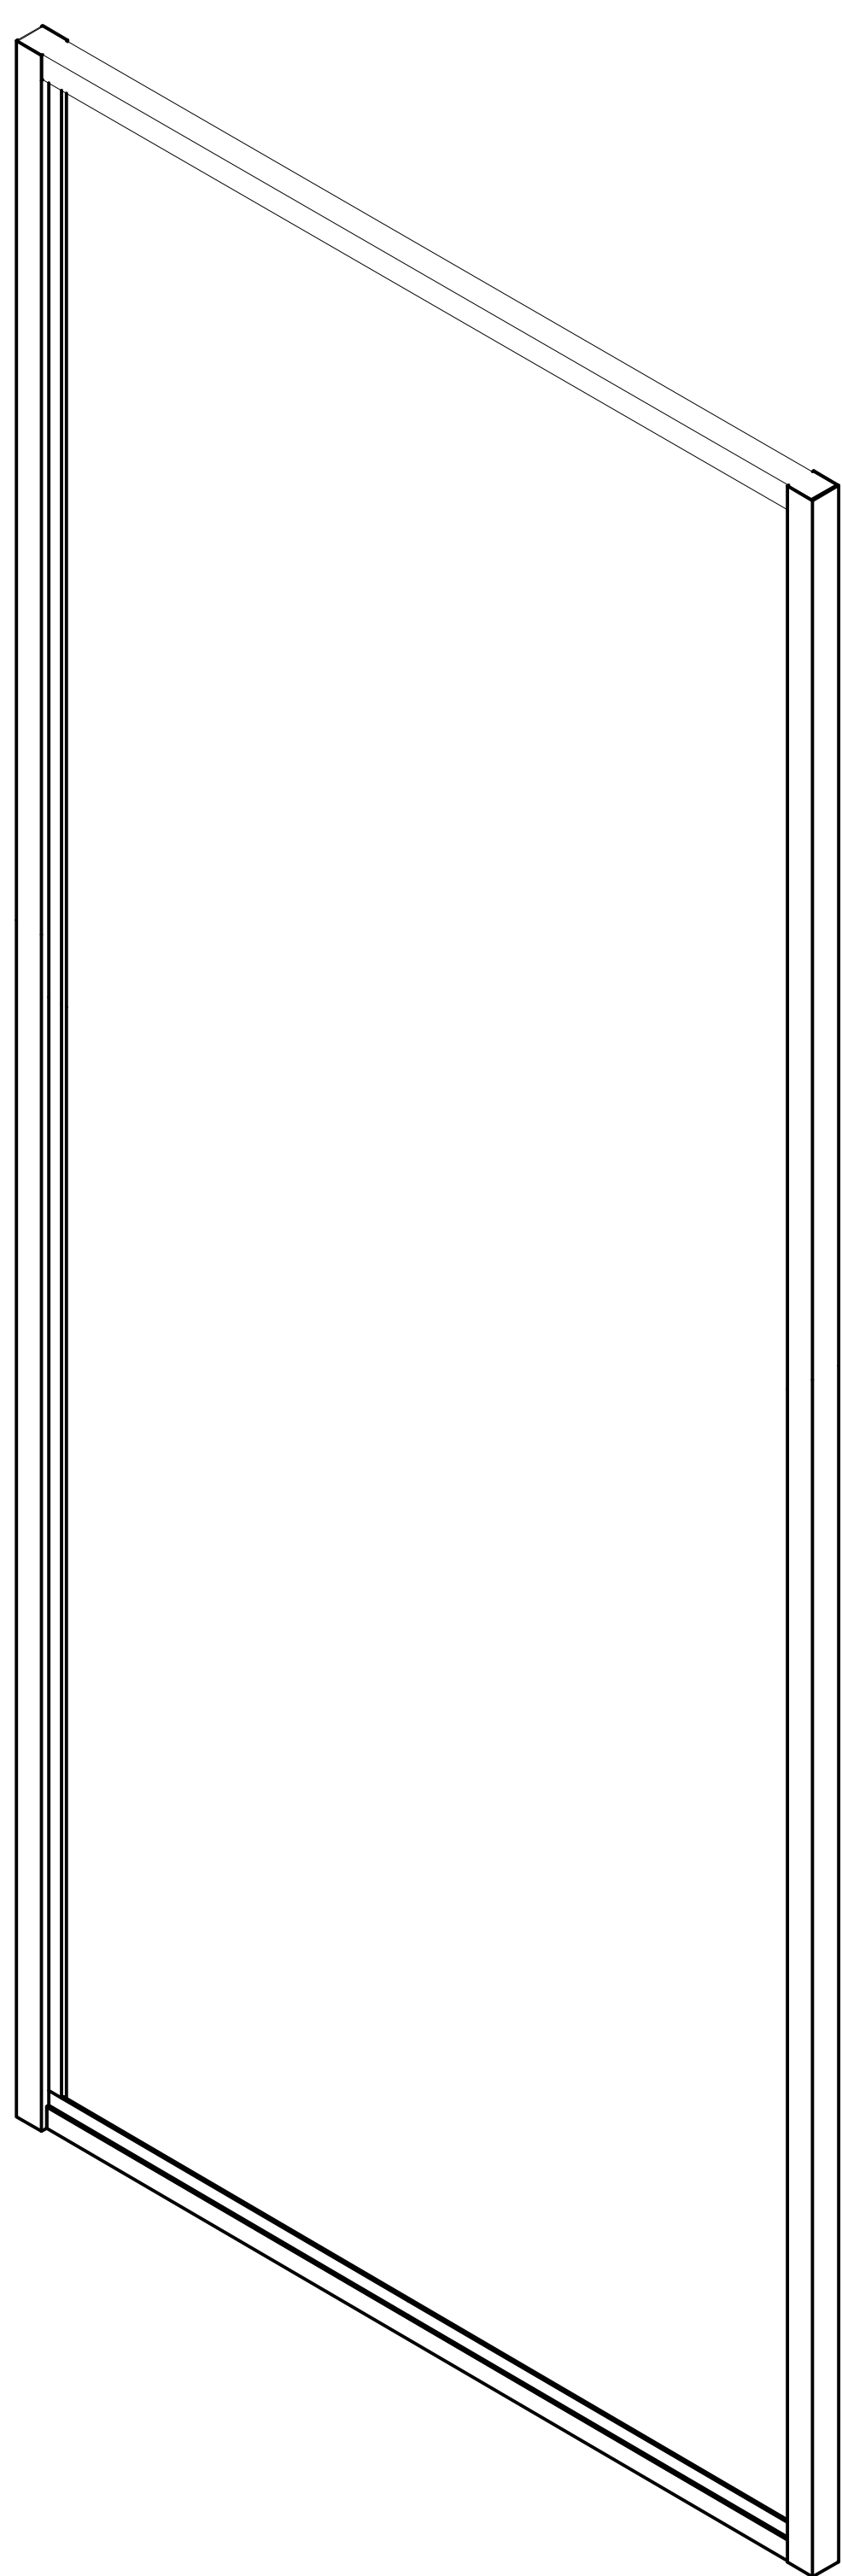


**left-hand side shower
screen installation**

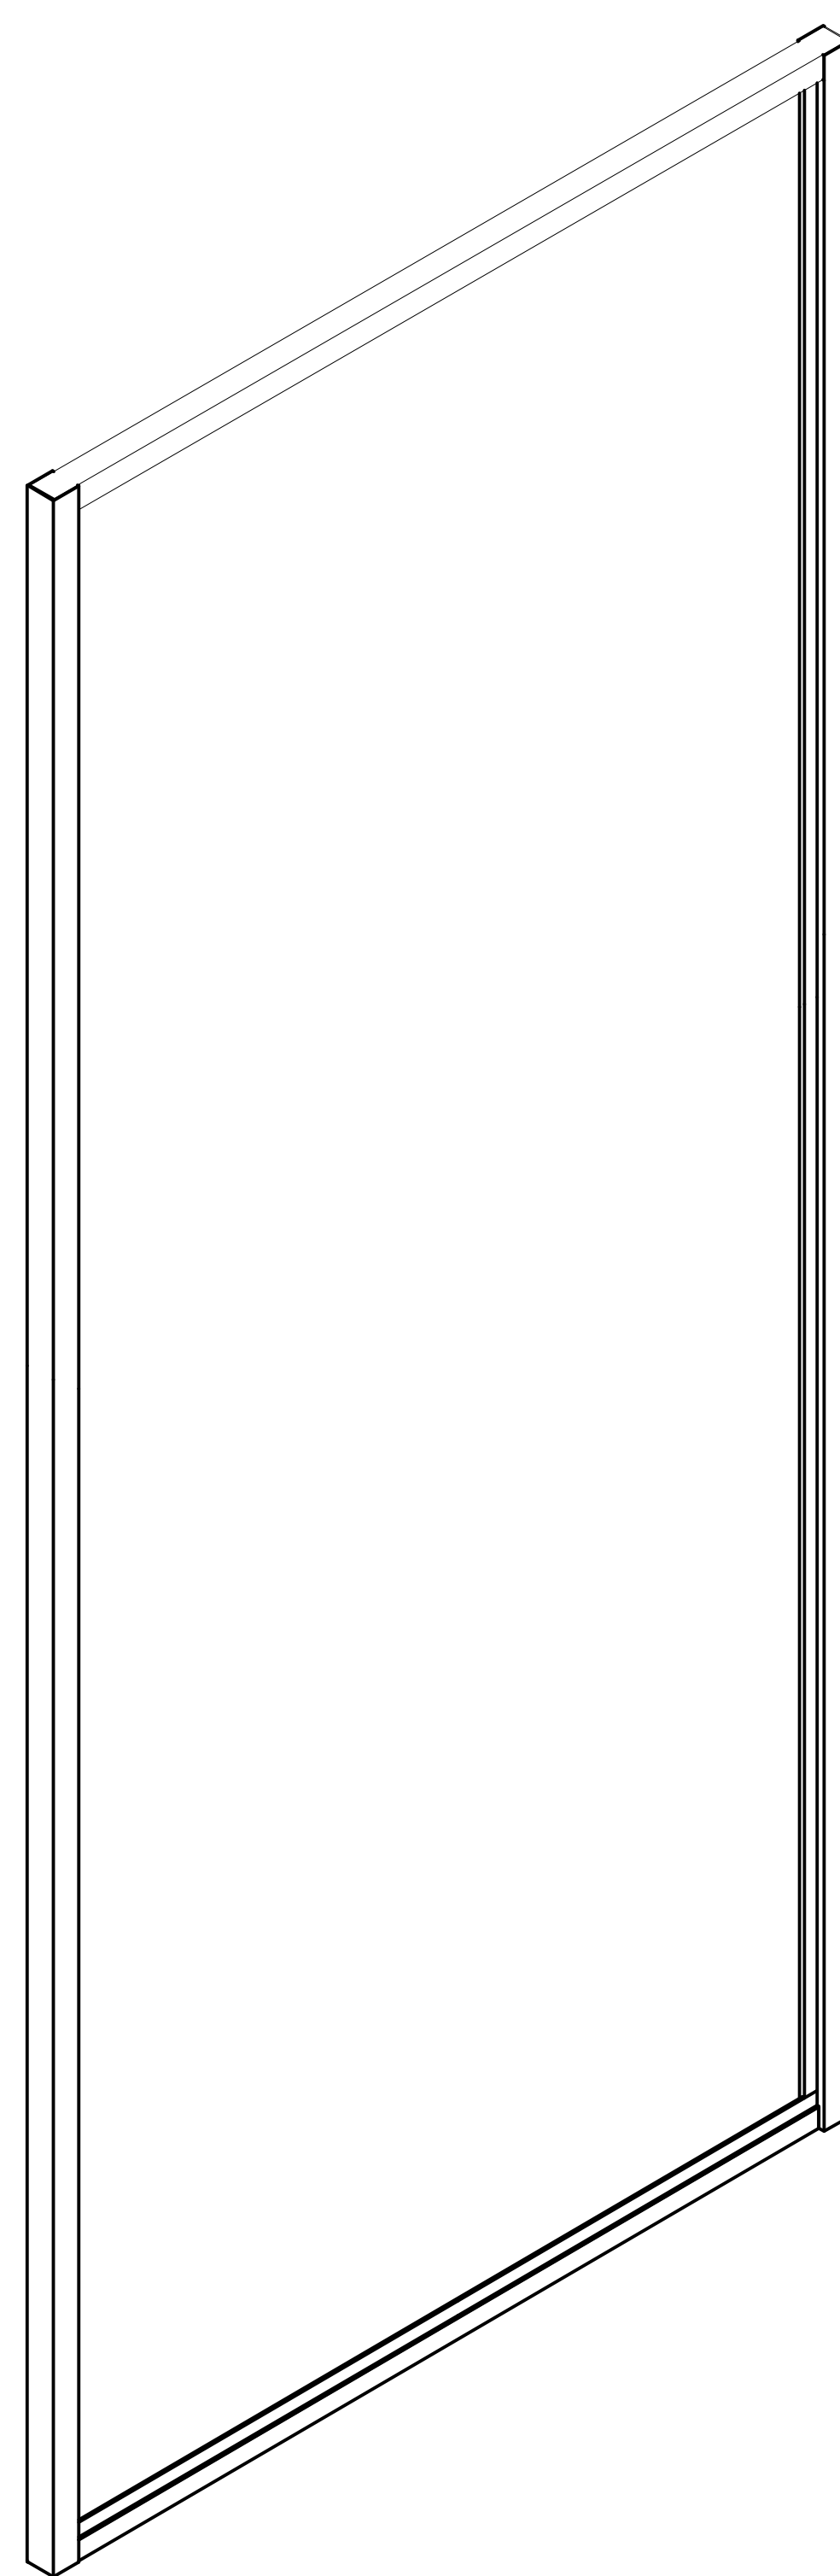

**right-hand side shower
screen installation**











Customer Support: 1-877-897-1222
After-sale service: felyl@outlook.com
Hours of Operation: M-F 9 AM-5:00PM

Detailed Diagram







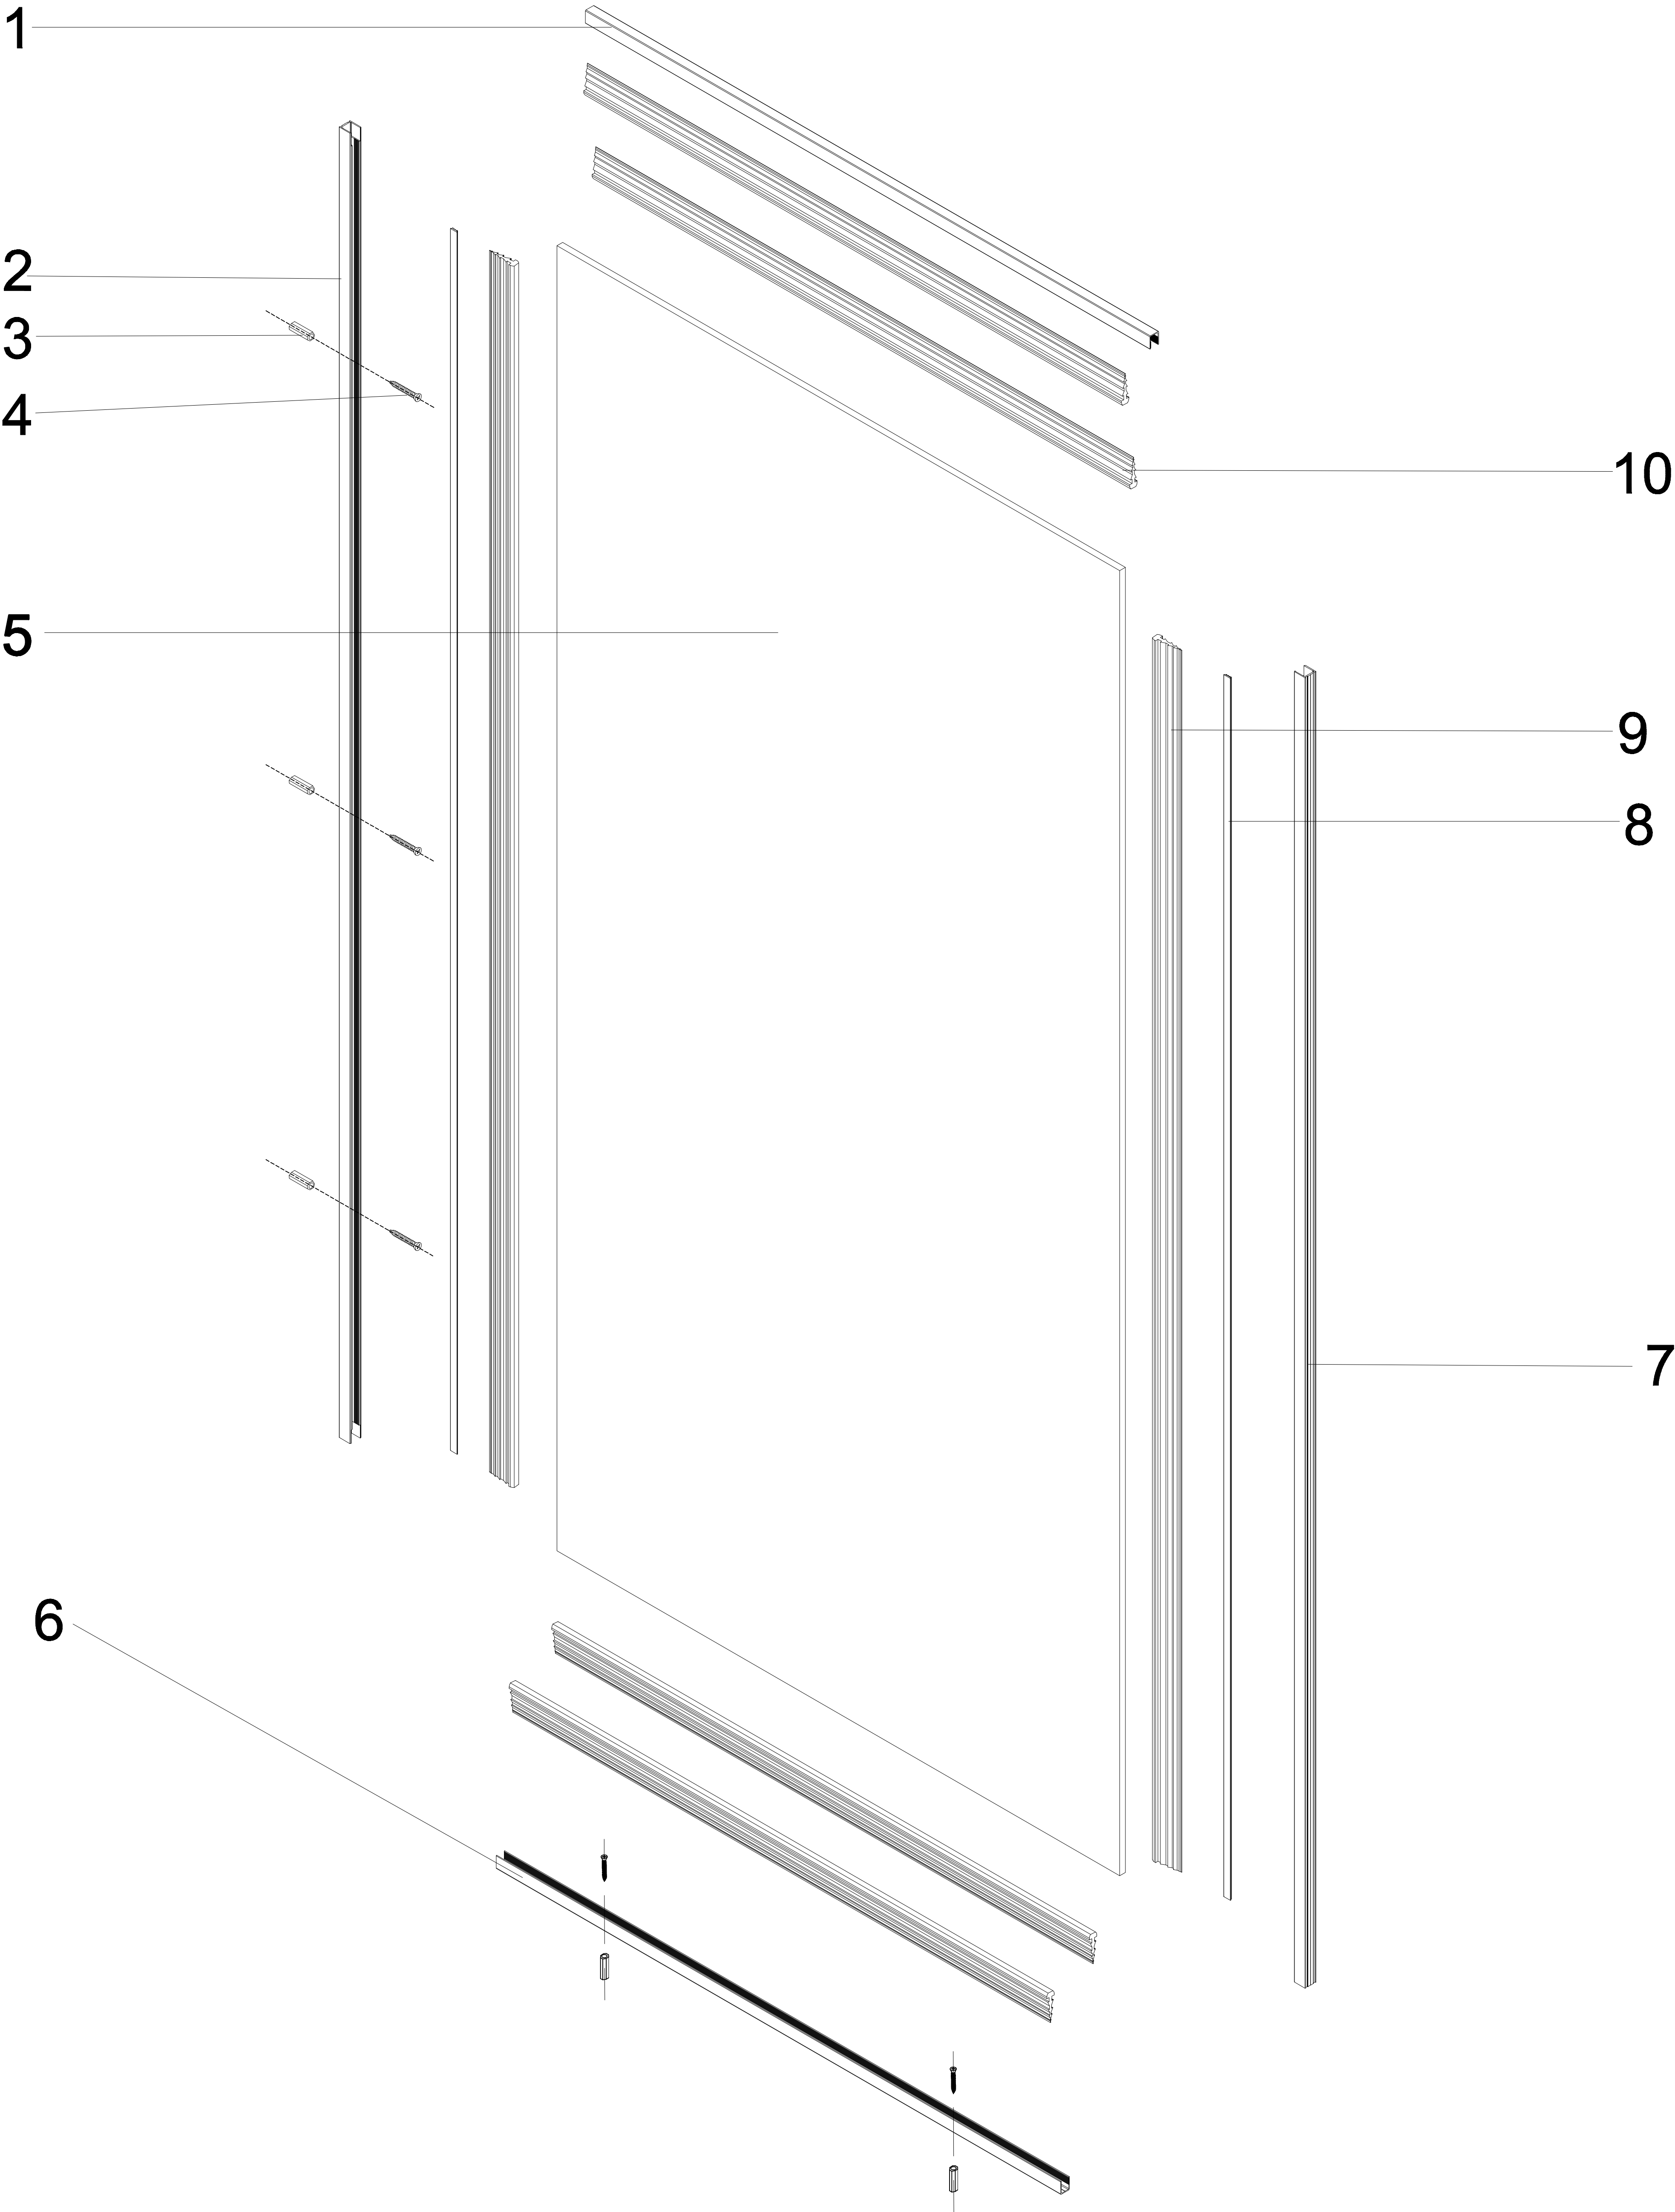

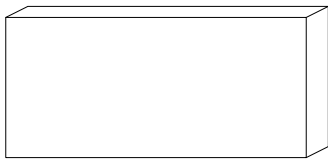
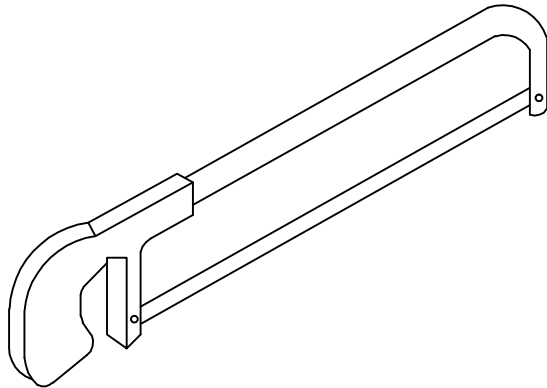




PART LIST

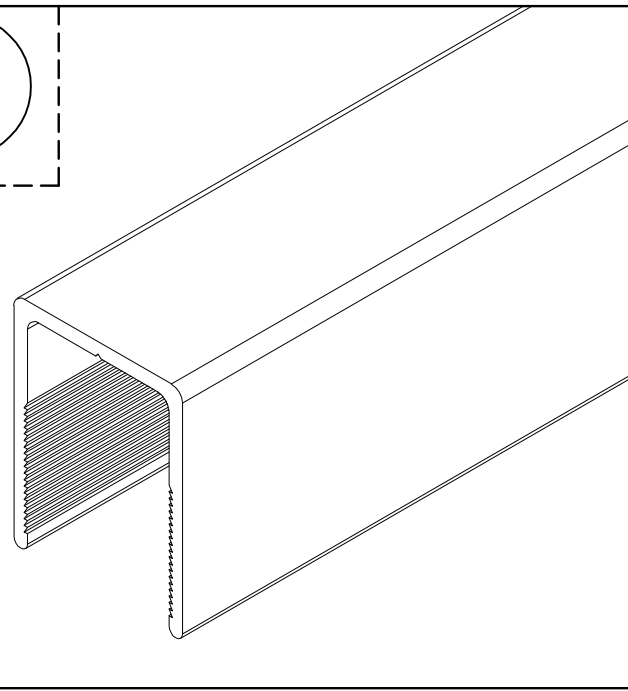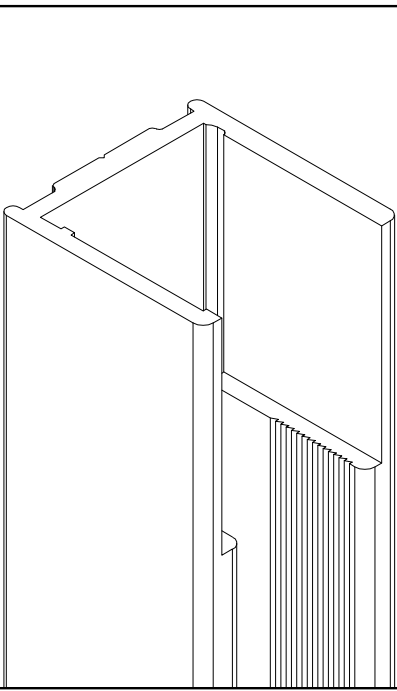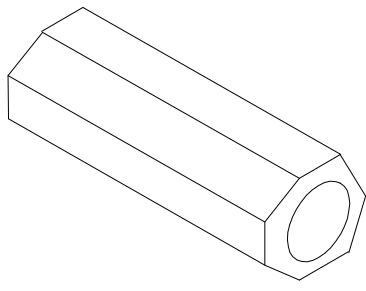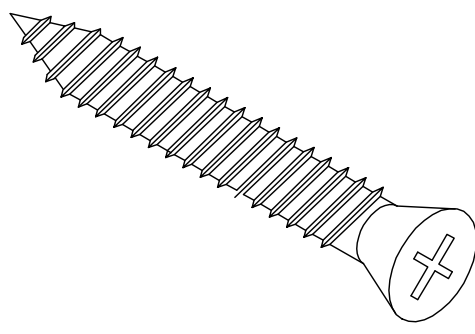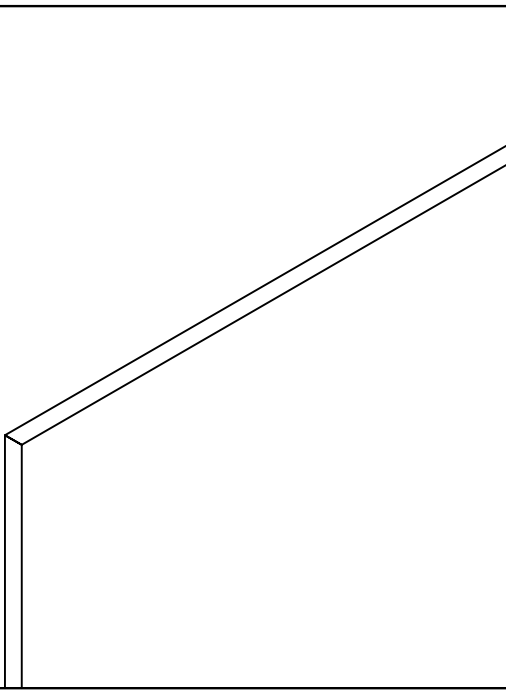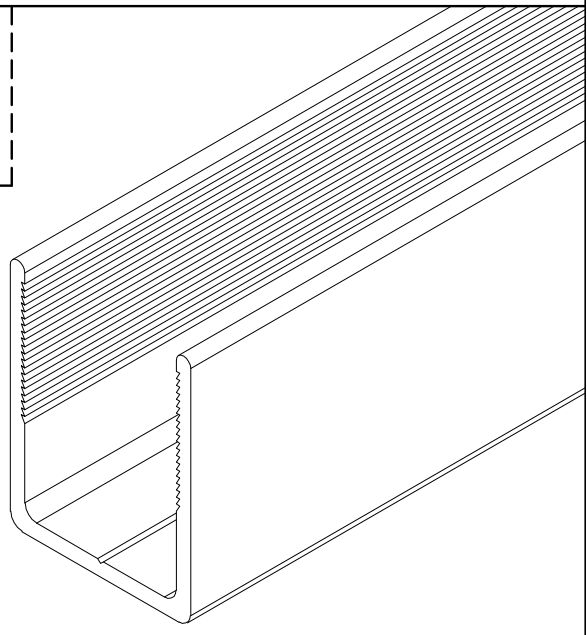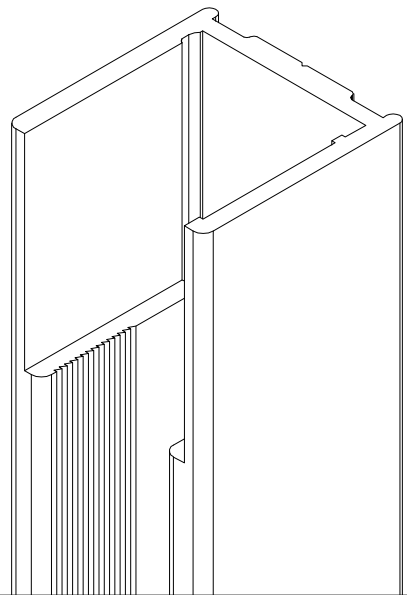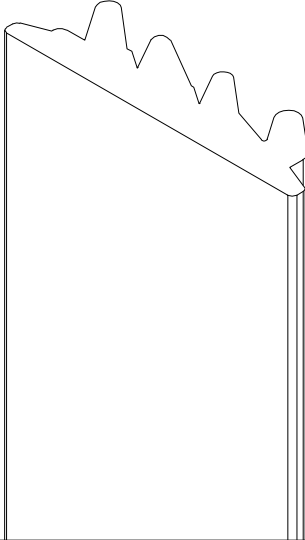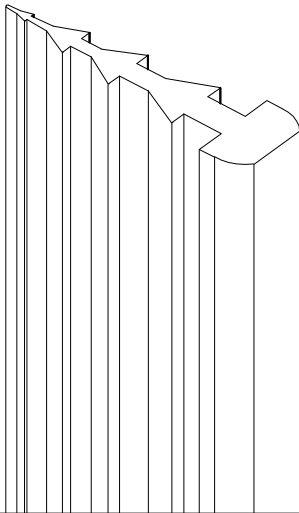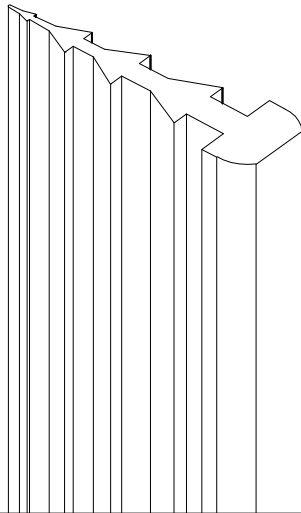Check all parts according to the list before assembly . Feel free to contact with us if you need assistance .

<div>1</div> 	<div>2</div> 	<div>3</div> 	<div>4</div> 	<div>5</div> 	<div>6</div> 
Top aluminum U channel (1PC)	Wall bracket A(1PC)	Plug 6*28(5PCS)	Screw 4*30(5PCS)	Glass shower screen(1PC)	Bottom aluminum U channel(1PC)
<div>7</div> 	<div>8</div> 	<div>9</div> 	<div>10</div> 		
Wall bracket B(1PC)	Strip(2PCS)	One-sided strip(2PCS)	One-sided strip(4PCS)		

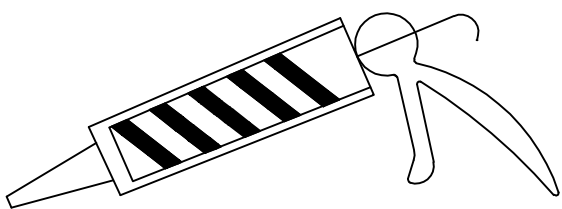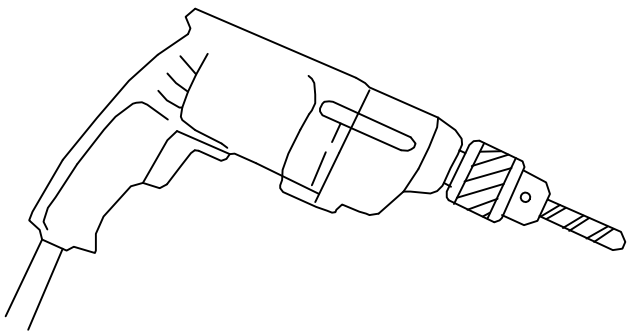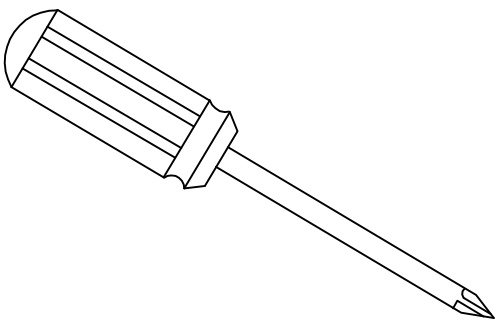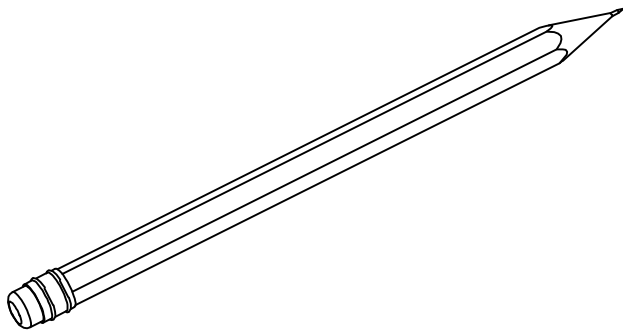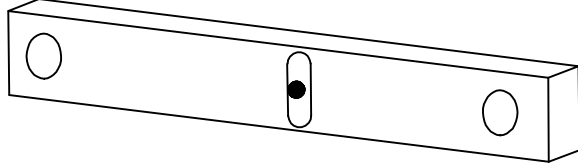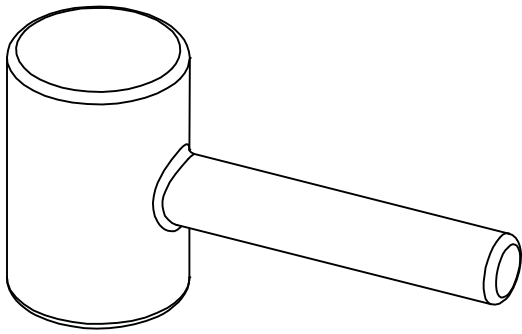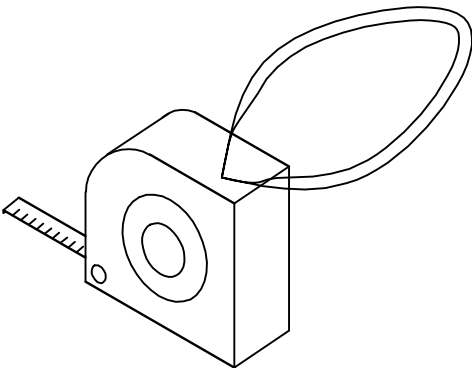Recommended Tools






					
Silicone	Drill	Philips Screw Driver	Pencil	Level	Rubber Mallet
					
Tape Measure	Ø1/4"Drill Bit	Wooden Jam	Hacksaw	Safety Glass	Safety Gloves

Utilize Safety Glasses and Safety Gloves when constructing this shower door

Left Hand Assembly

STEP 1






- 1. Use level to make sure Wall bracket A(2) sit straight, then mark the hole position with pencil.
- 2. Take off the Wall bracket A(2) and drill through the pencil markings.
- 3. Insert the plug(3) into the hole and use Rubber Mallet to hit it until it's fully in.
- 4. Align and use screw 4x30(4) to screw tight the Wall bracket A(2).

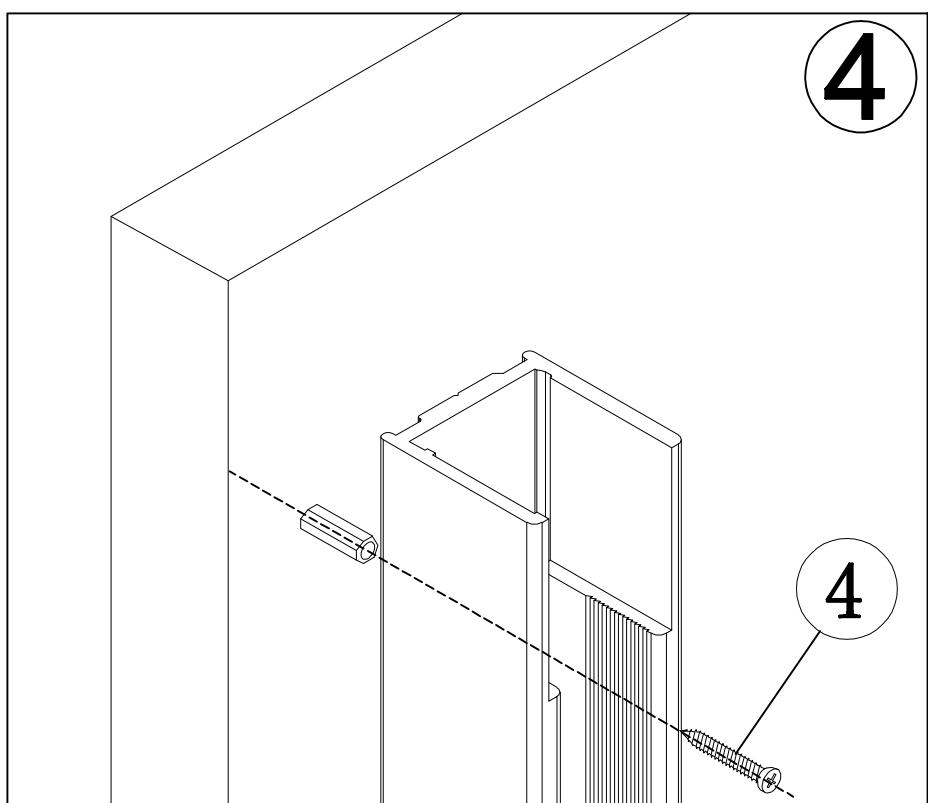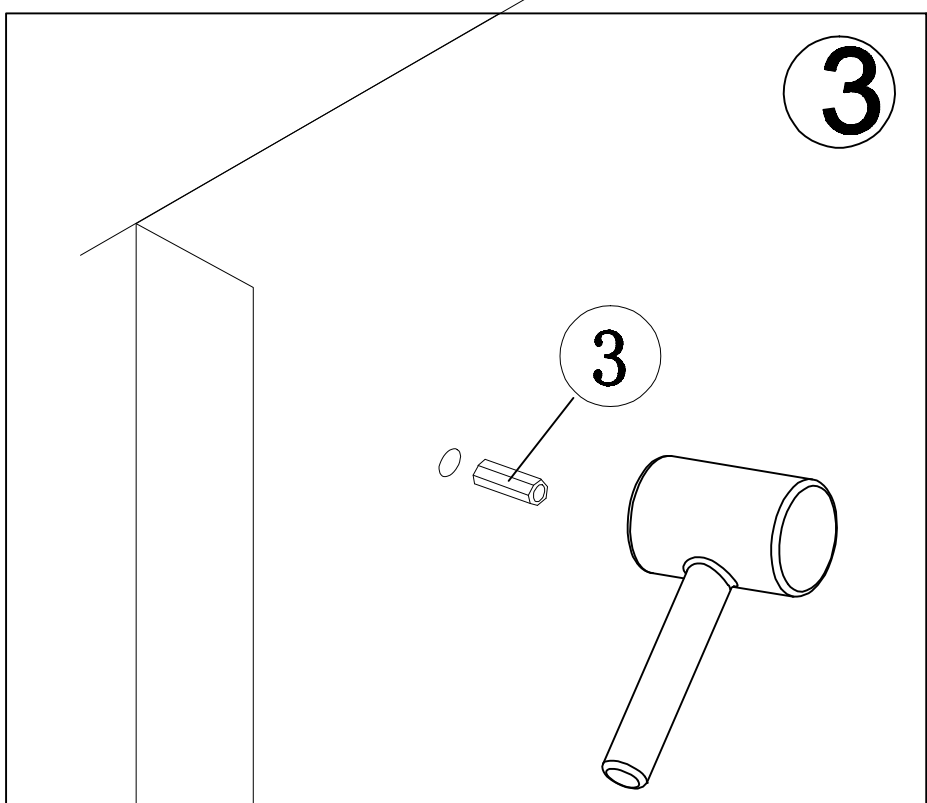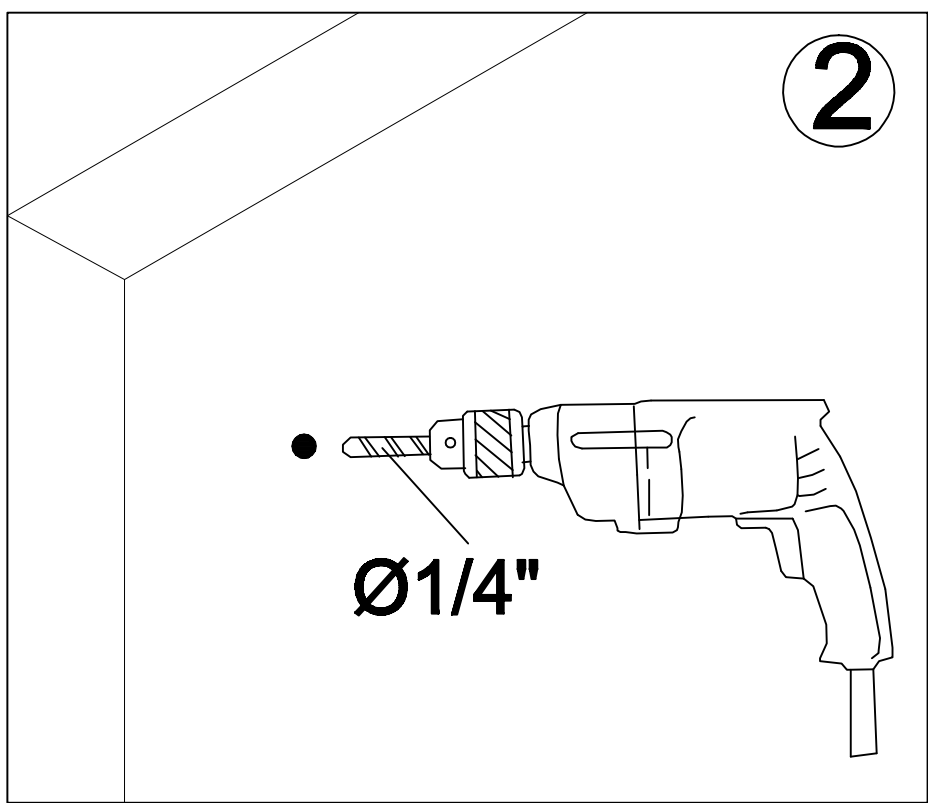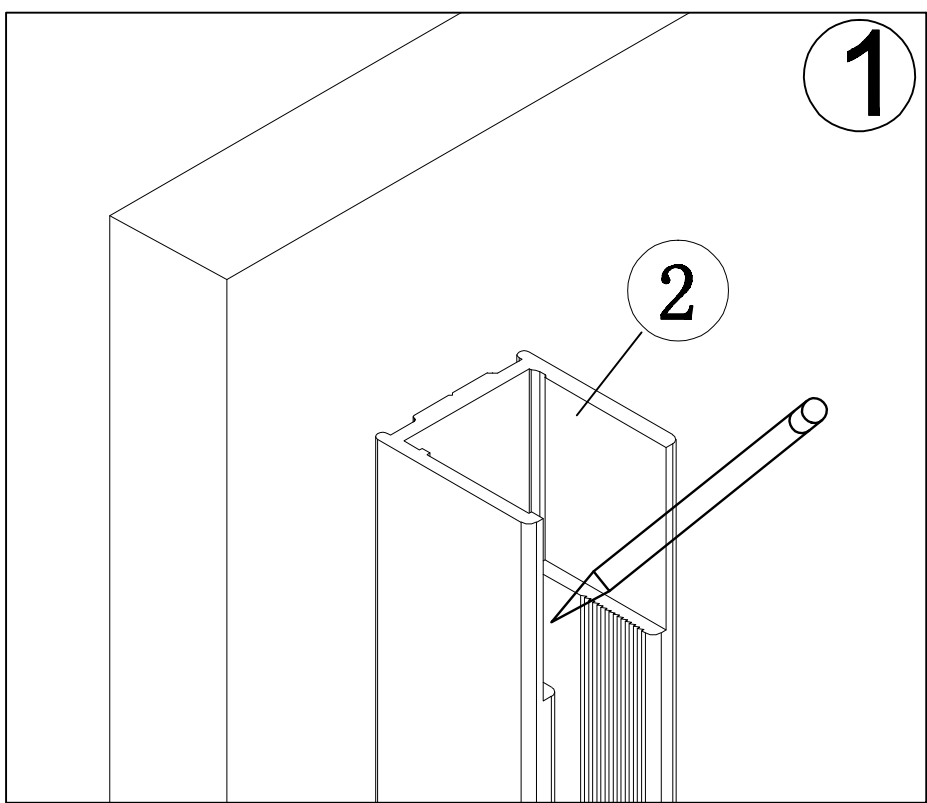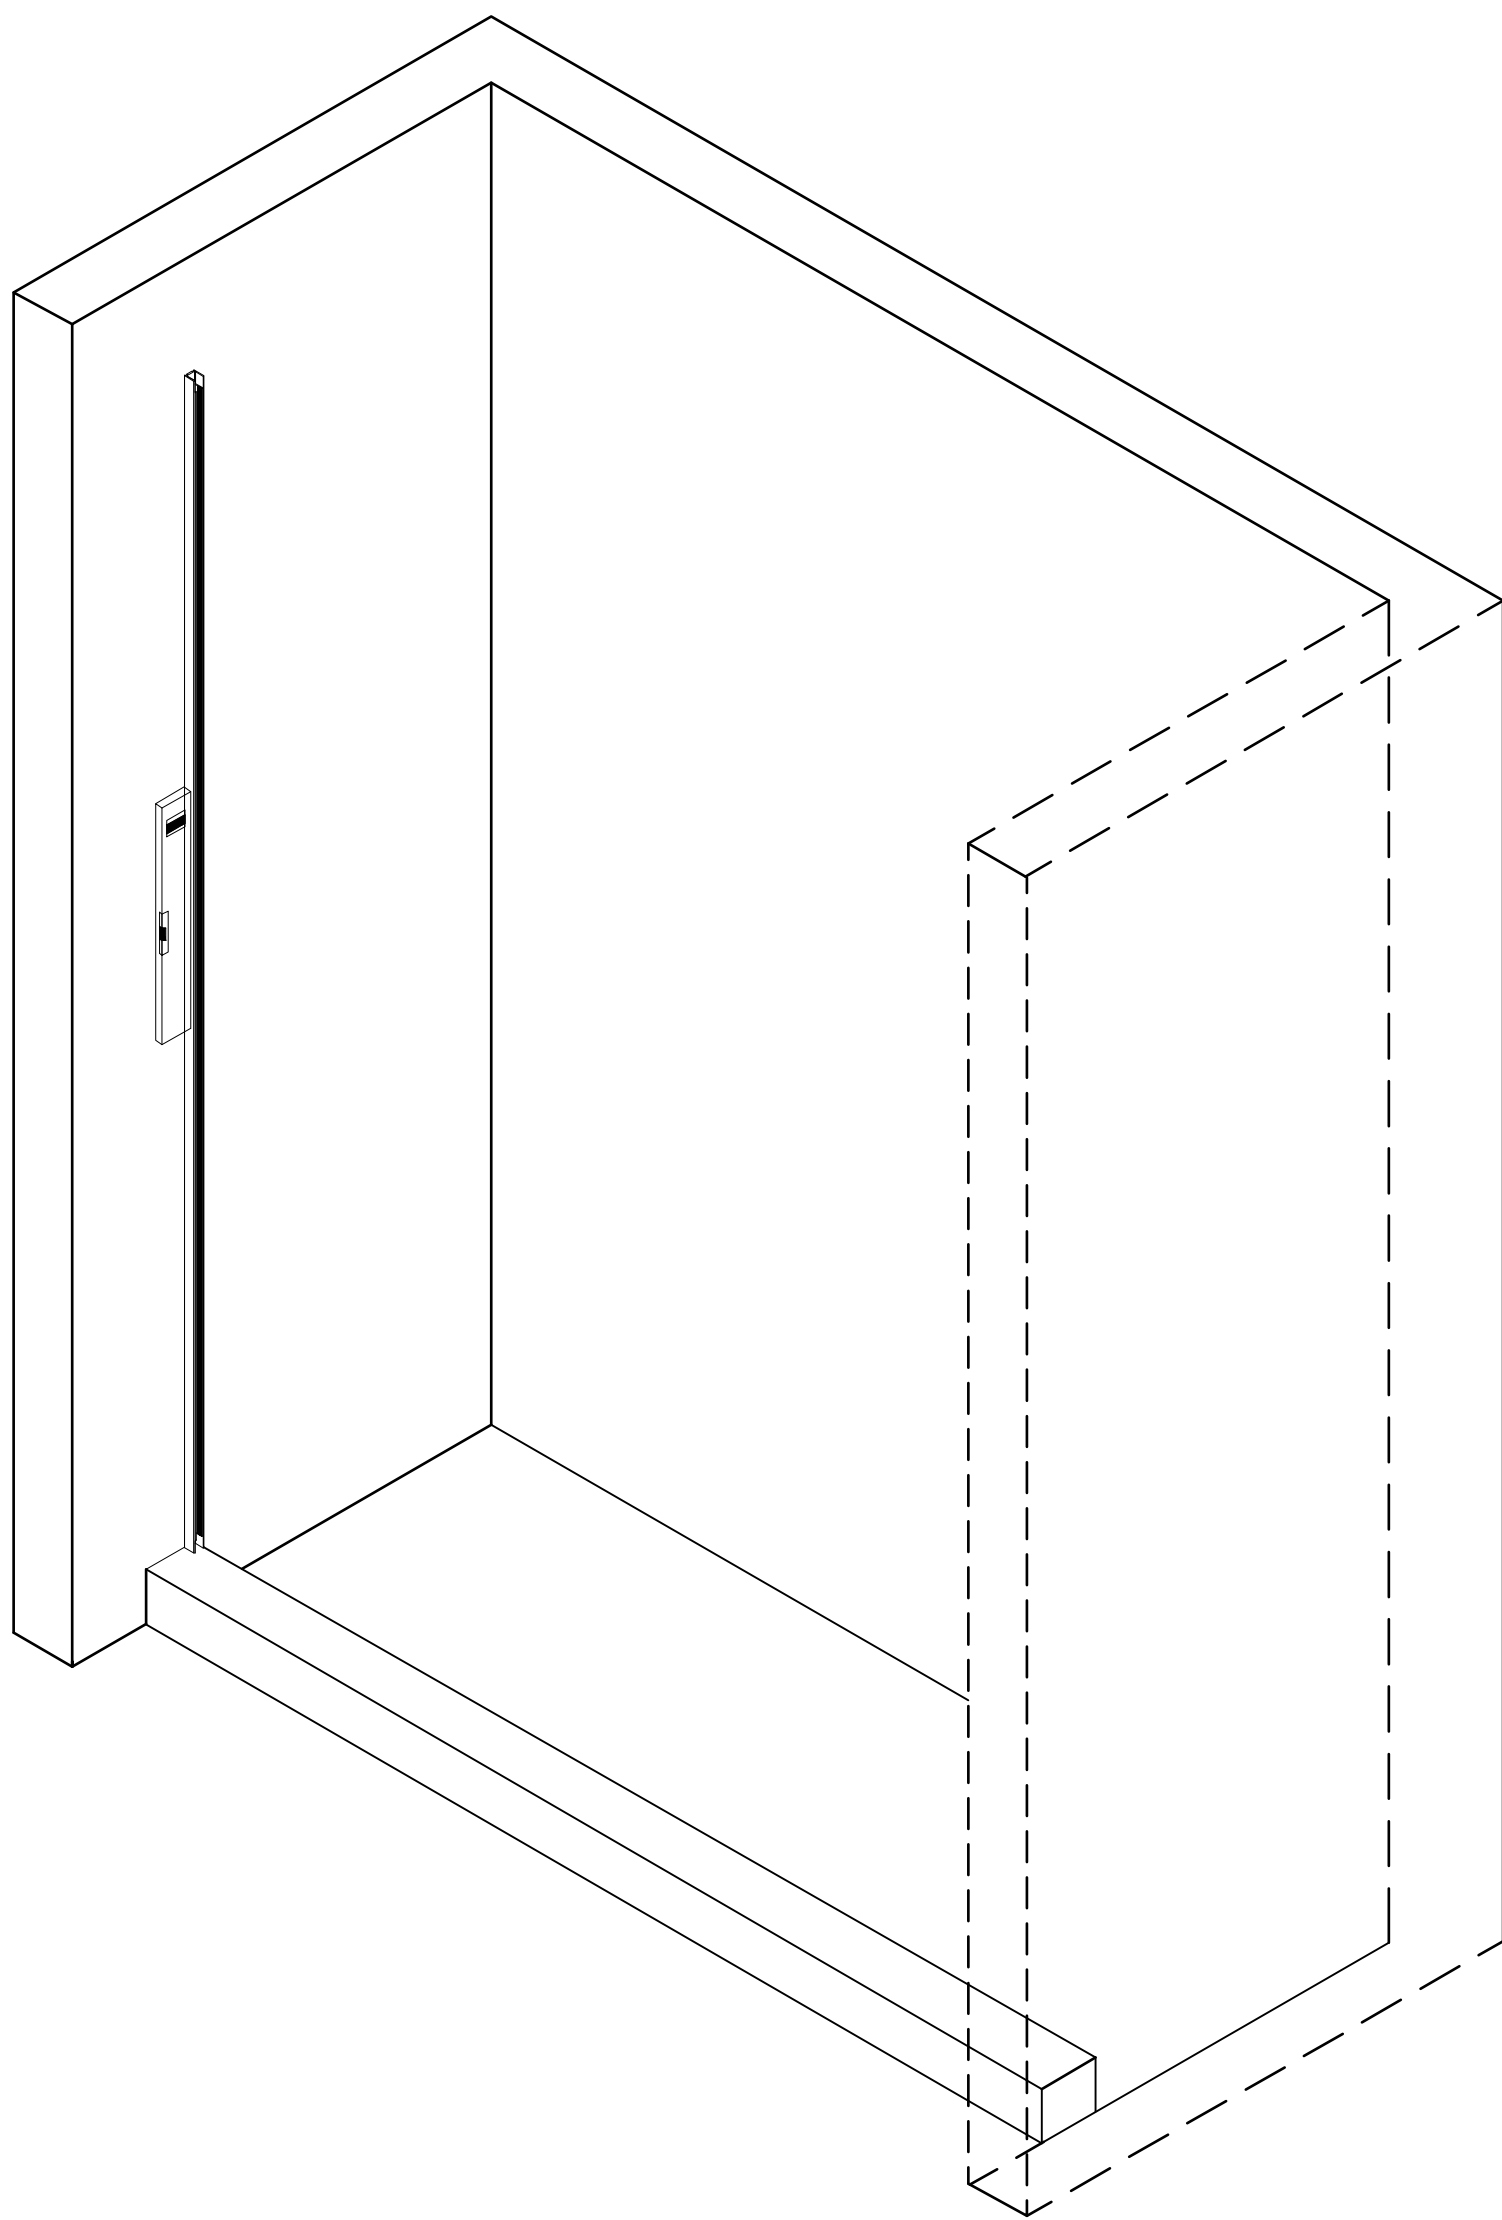

Right Hand Assembly

STEP 1



- 1. Use level to make sure Wall bracket A(2) sit straight, then mark the hole position with pencil.
- 2. Take off the Wall bracket A(2) and drill through the pencil markings.
- 3. Insert the plug(3) into the hole and use Rubber Mallet to hit it until it's fully in.
- 4. Align and use screw 4x30(4) to screw tight the Wall bracket A(2).

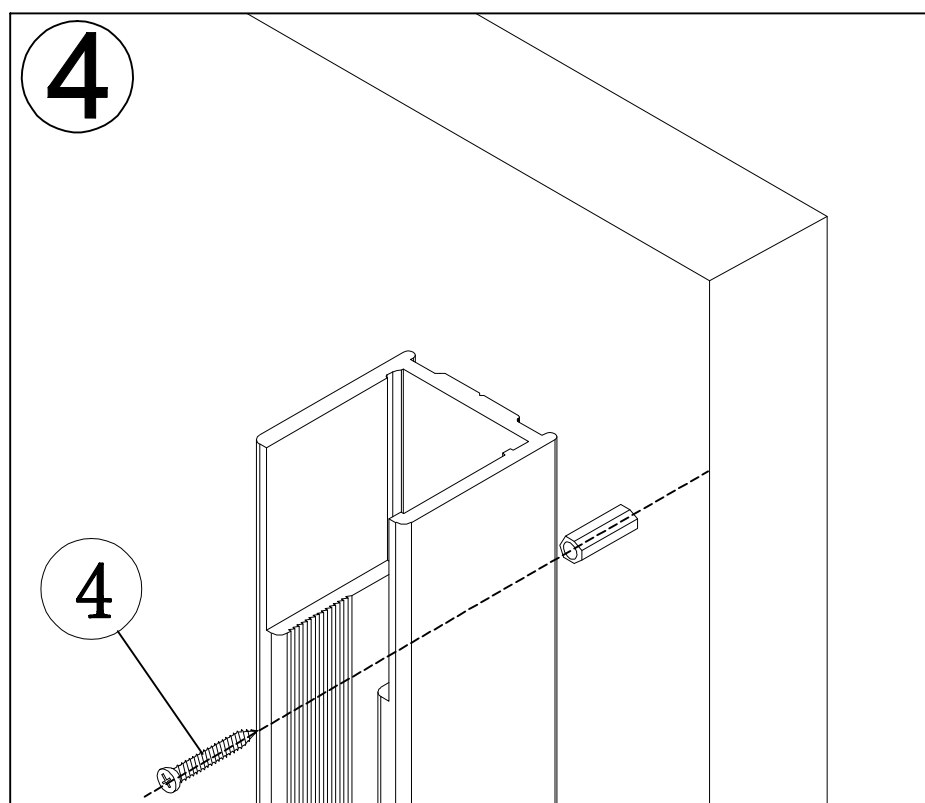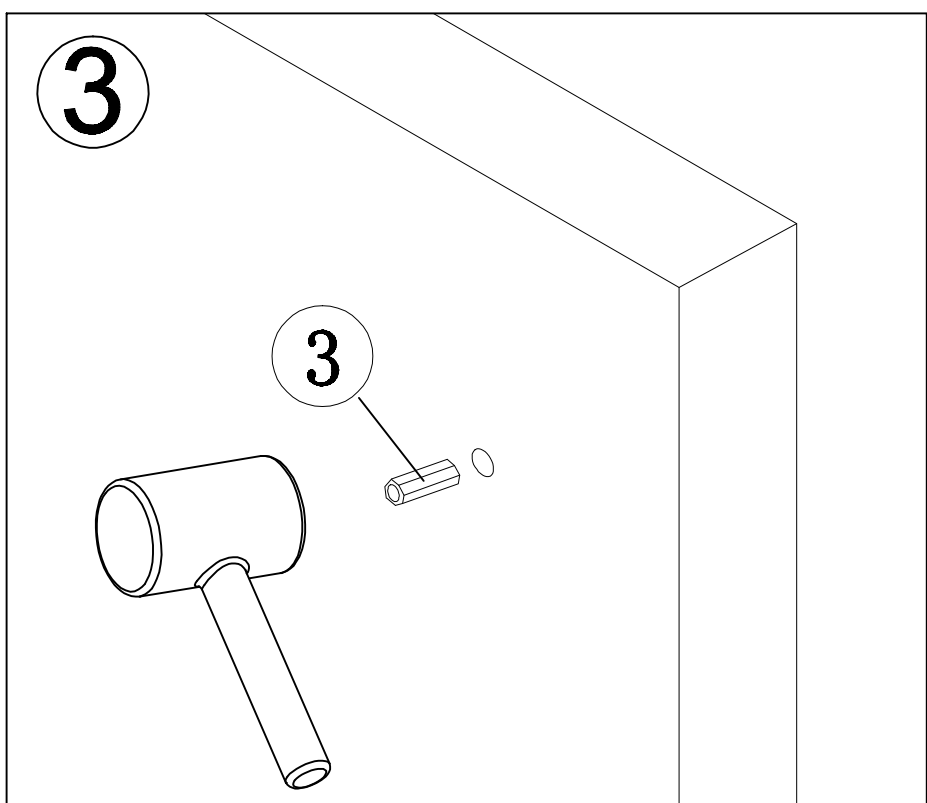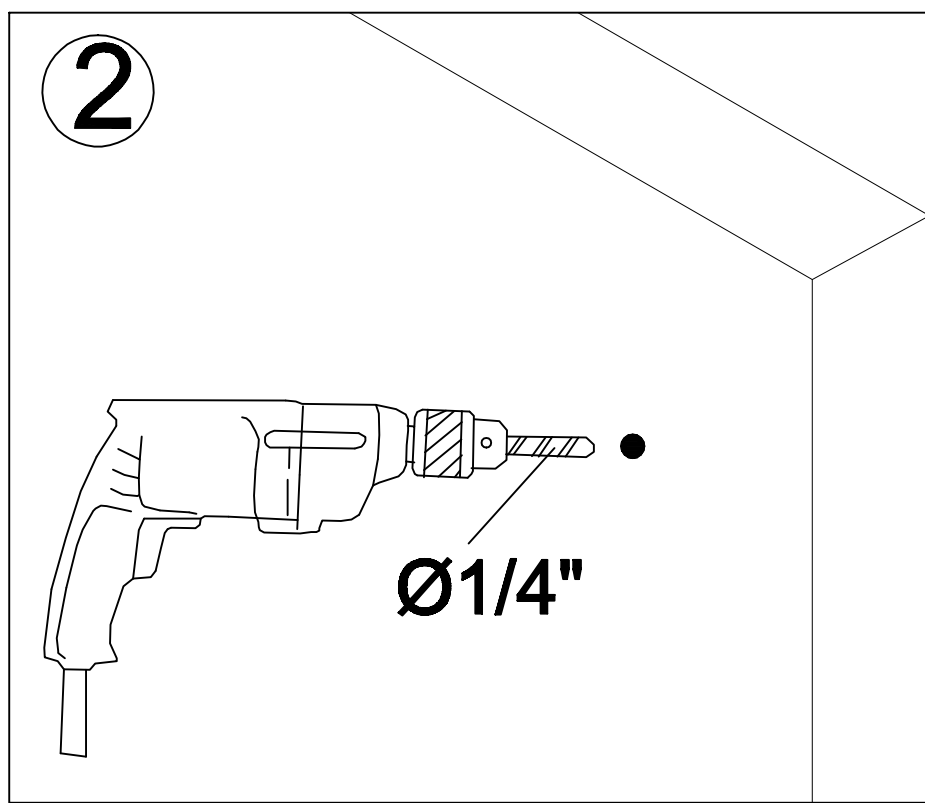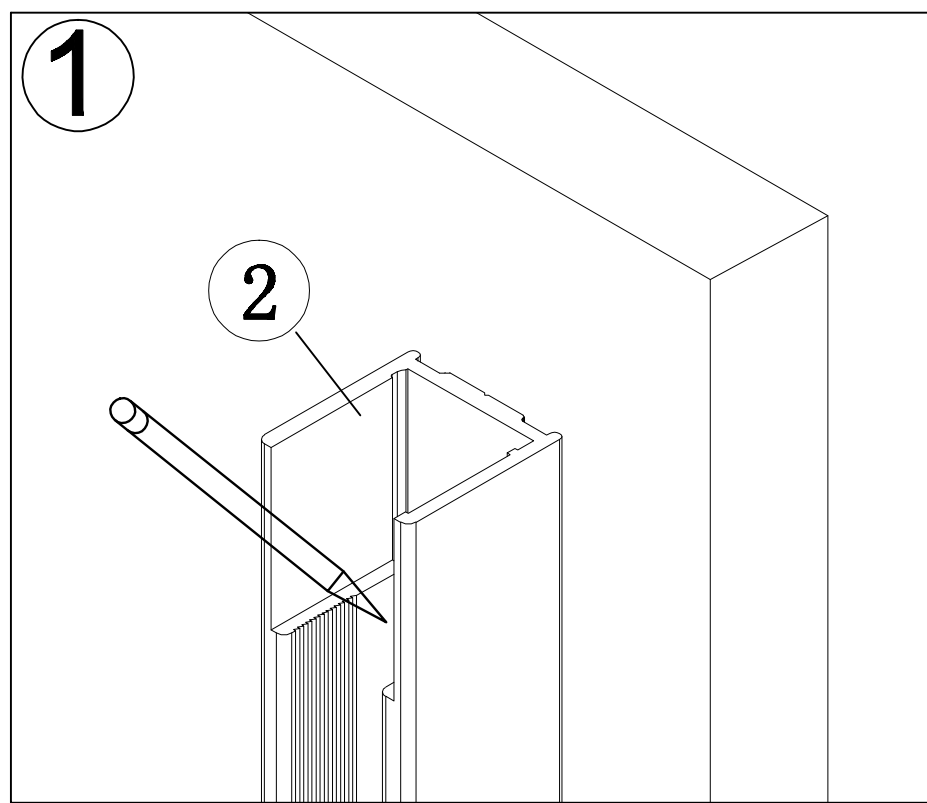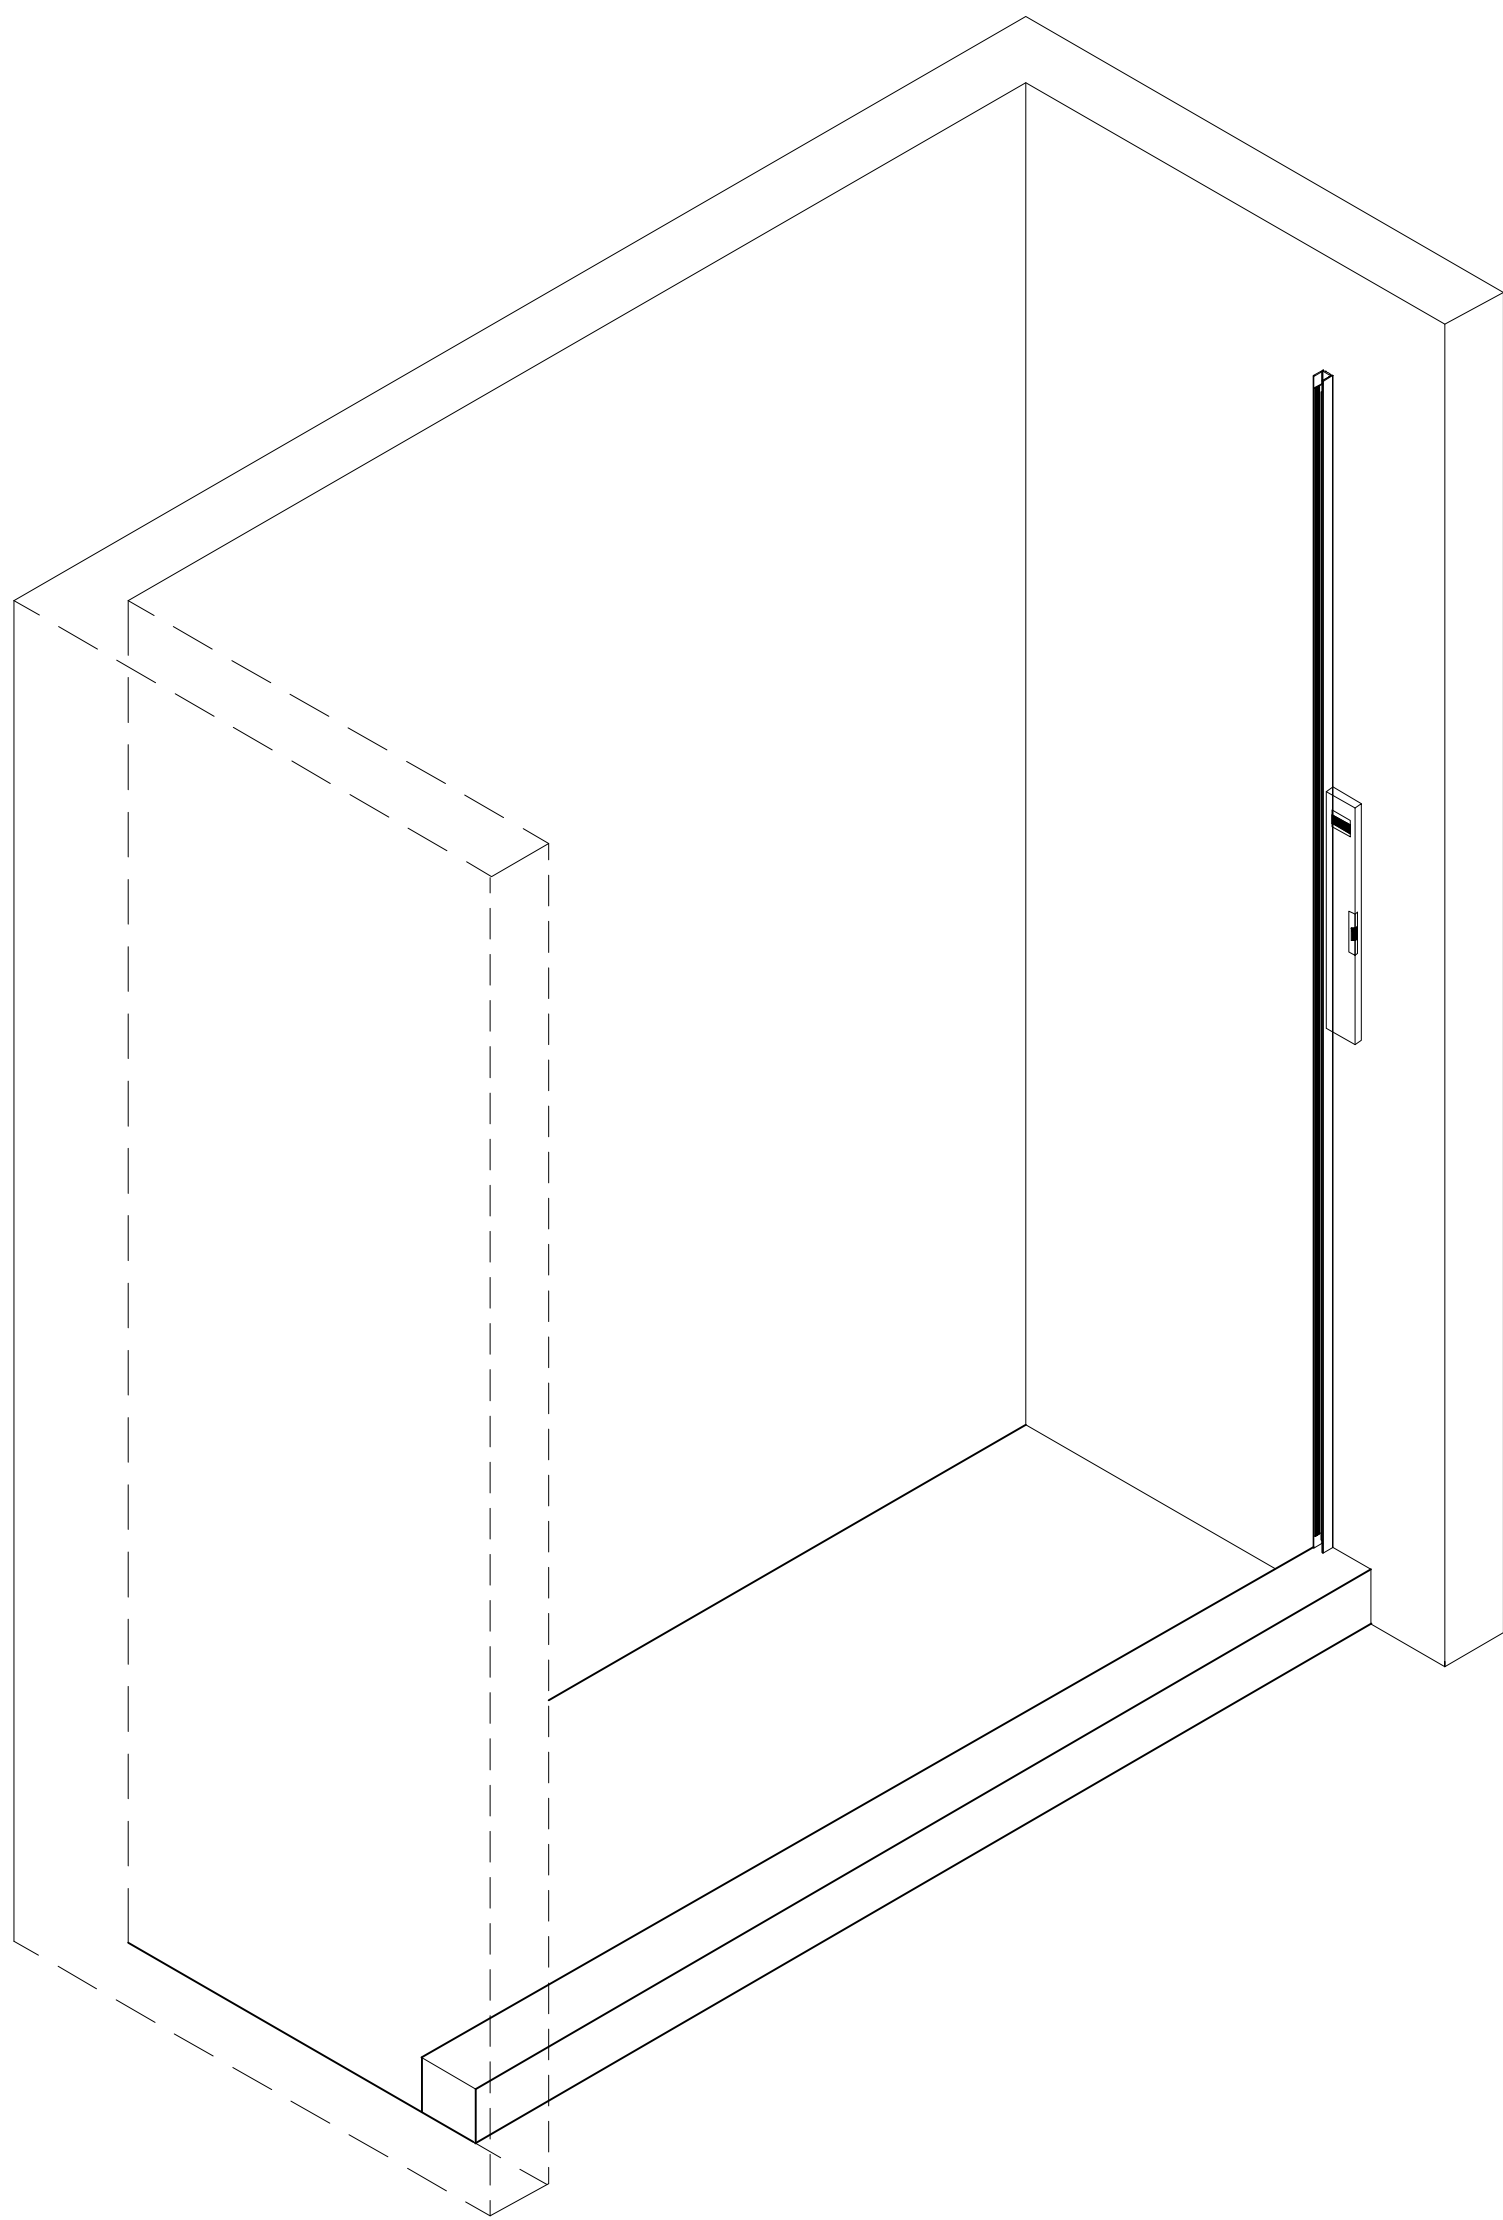

Left Hand Assembly

STEP 2



1.Put Bottom aluminum U channel(6) on the shower base and push it into the bottom slot of Wall bracket A(2).

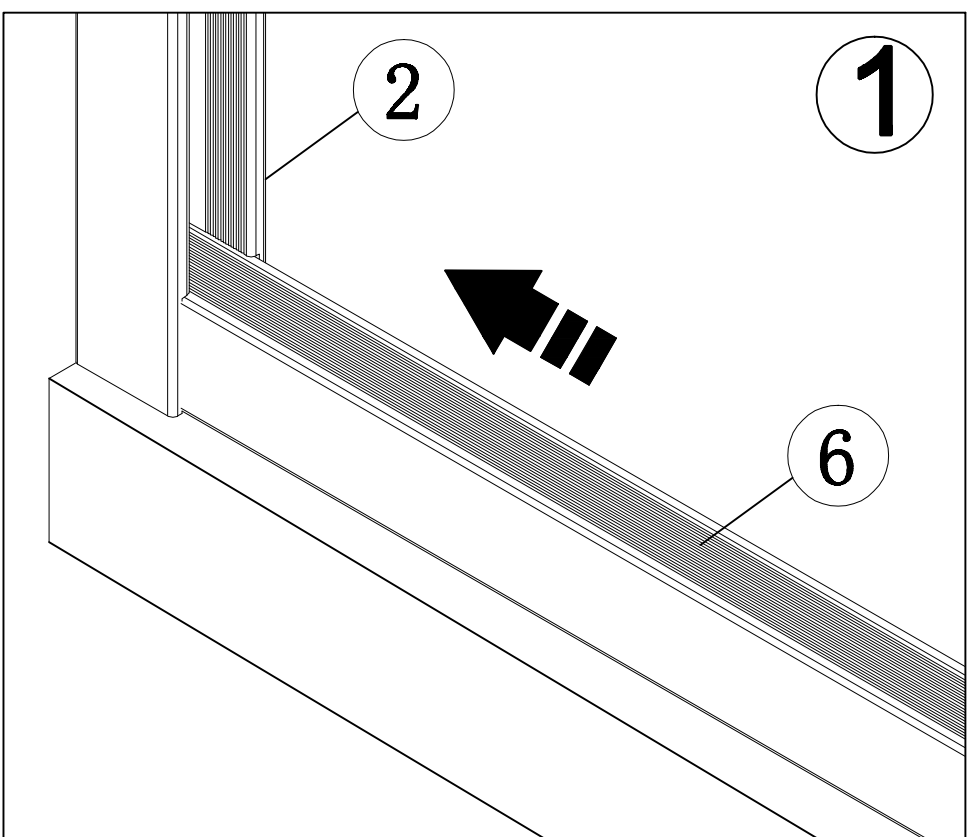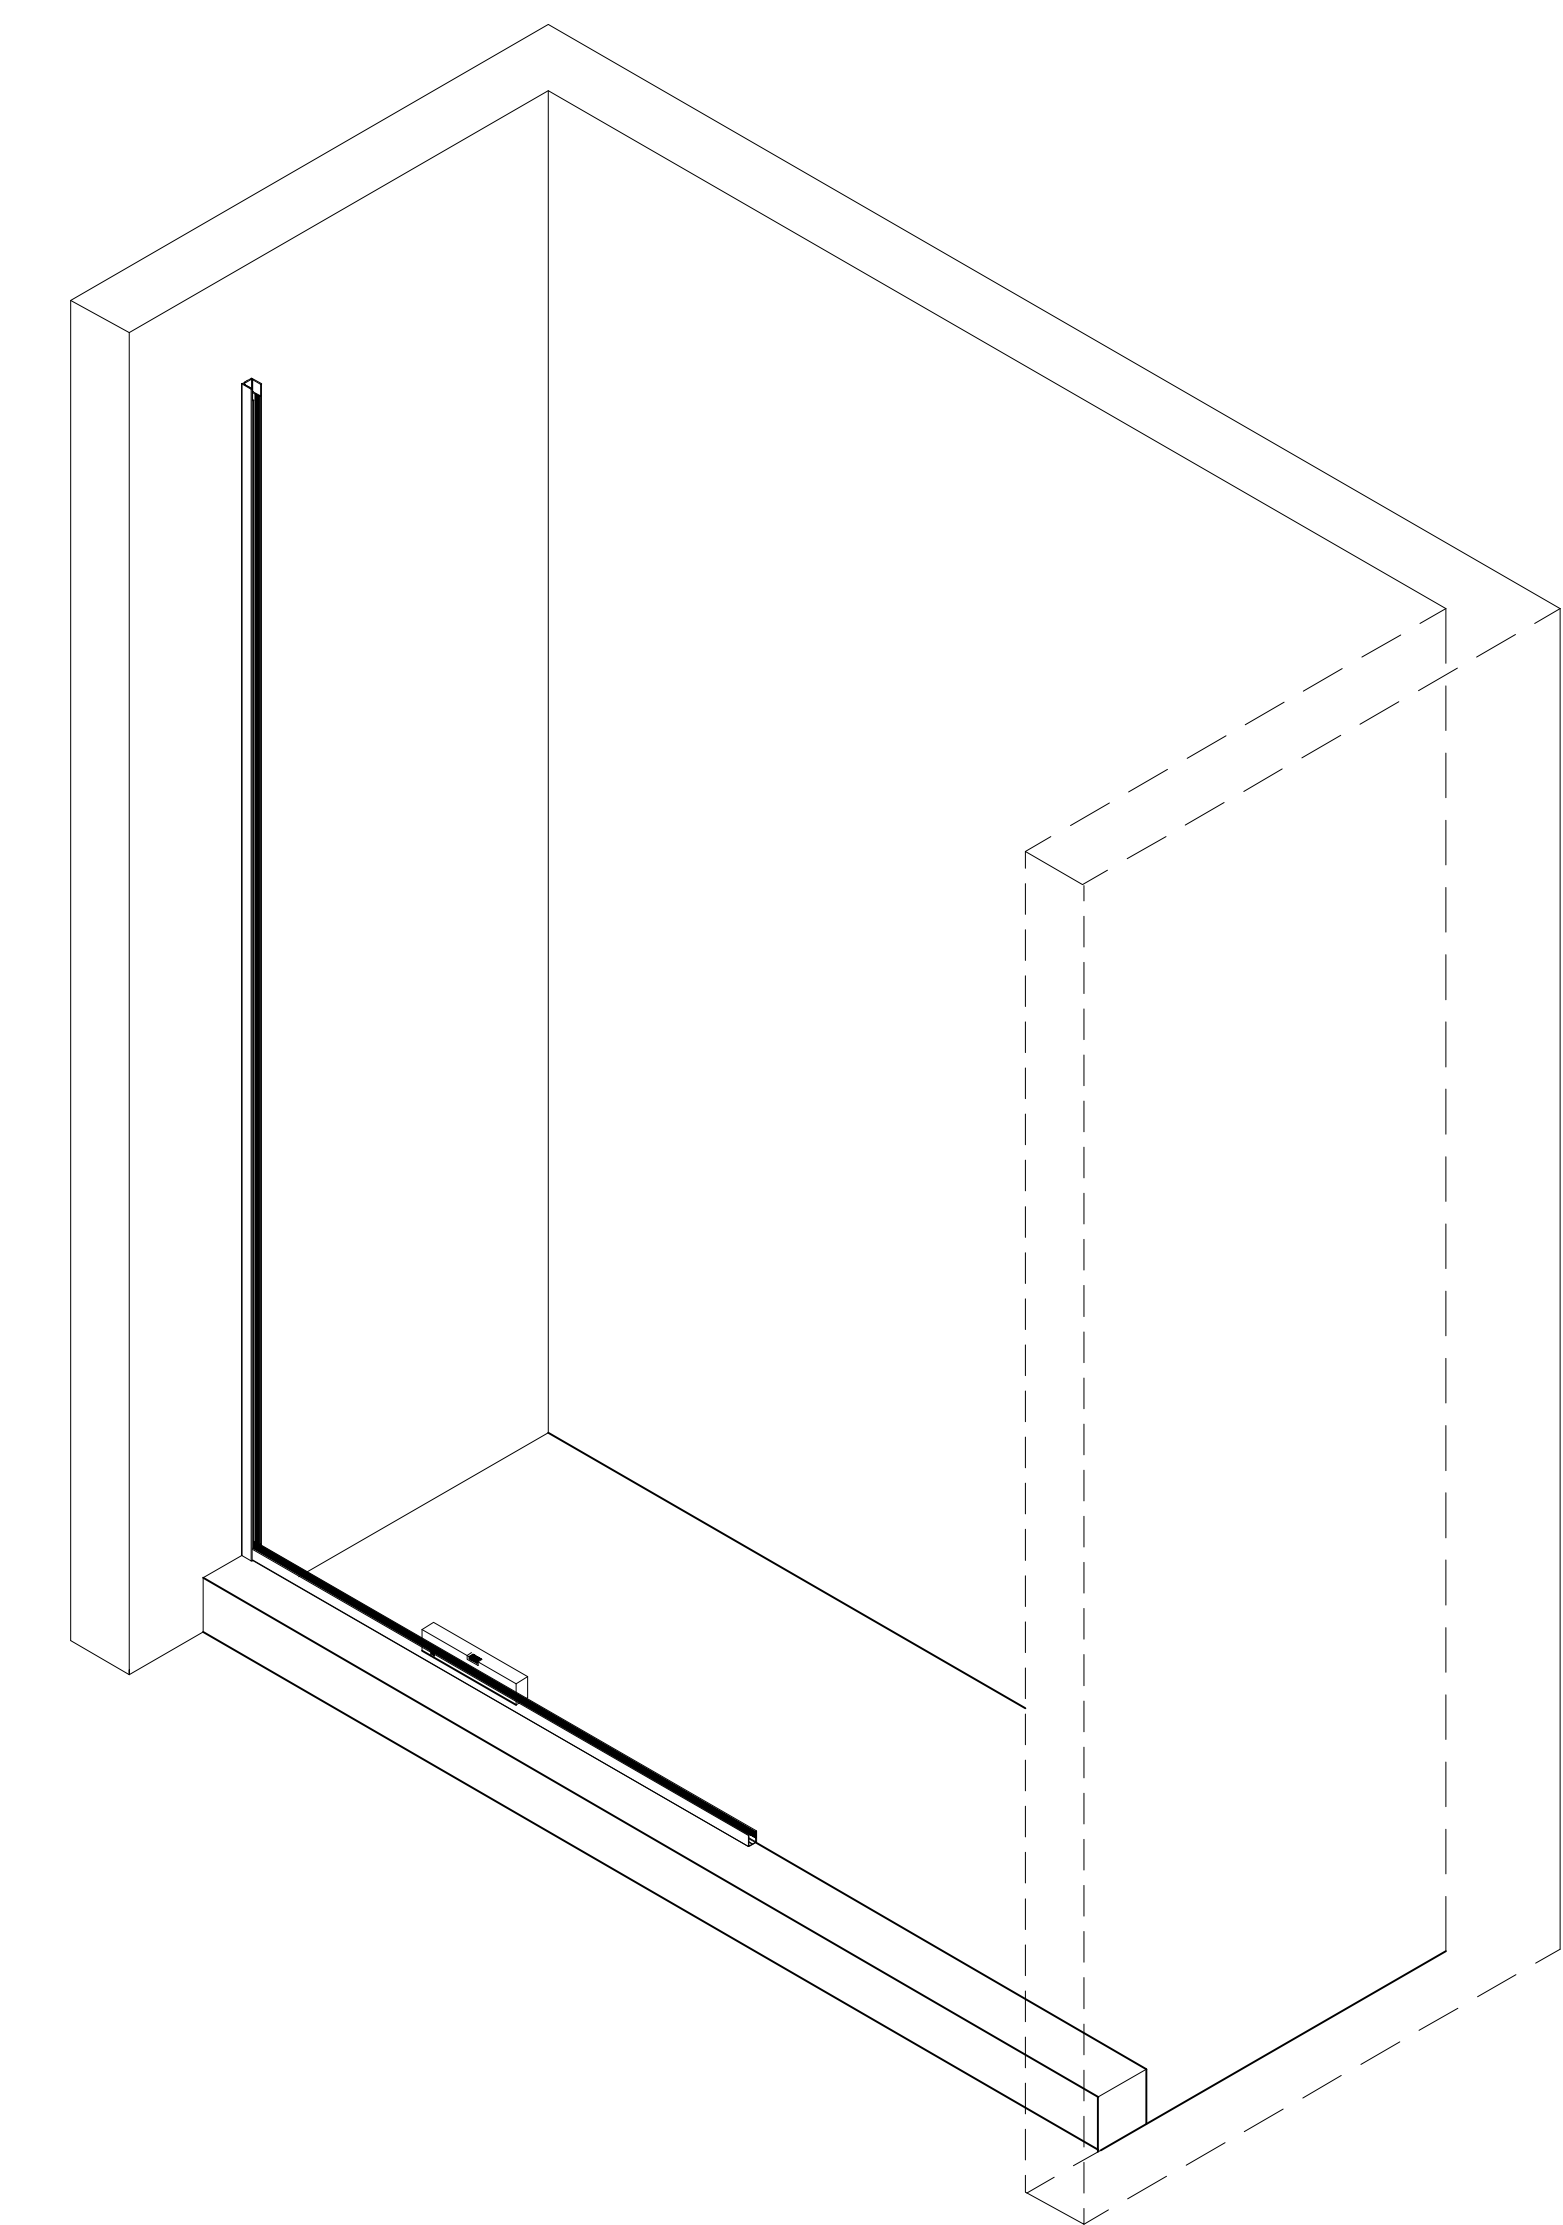

Right Hand Assembly

STEP 2






1.Put Bottom aluminum U channel(6) on the shower base and push it into the bottom slot of Wall bracket A(2).

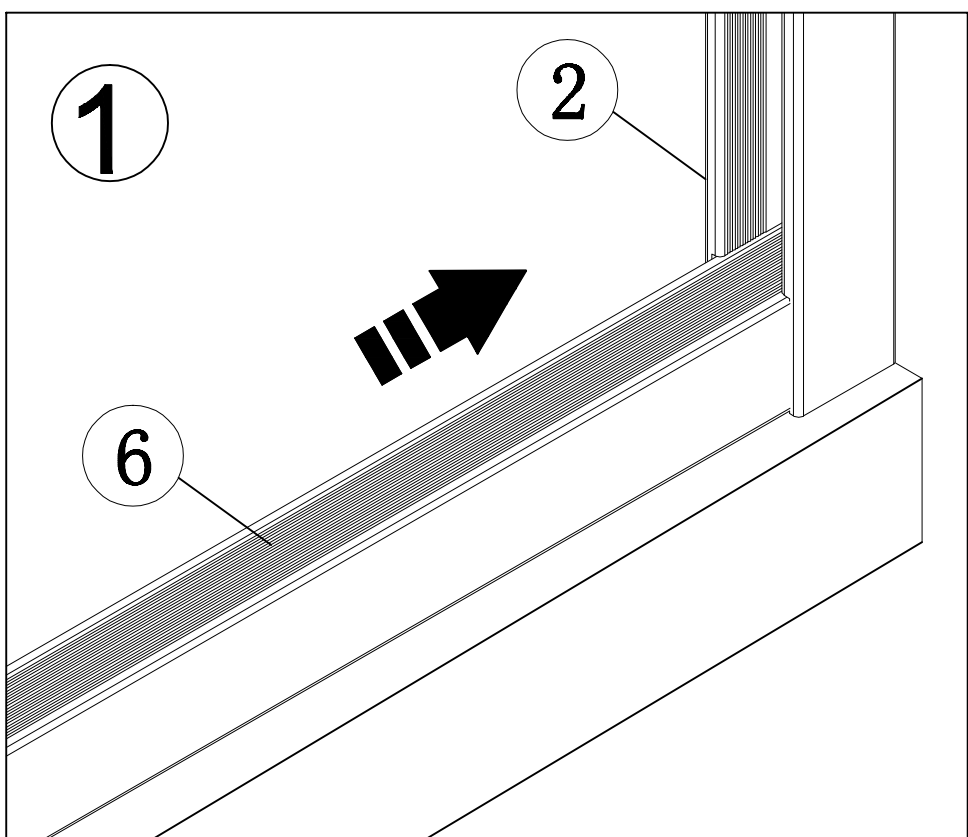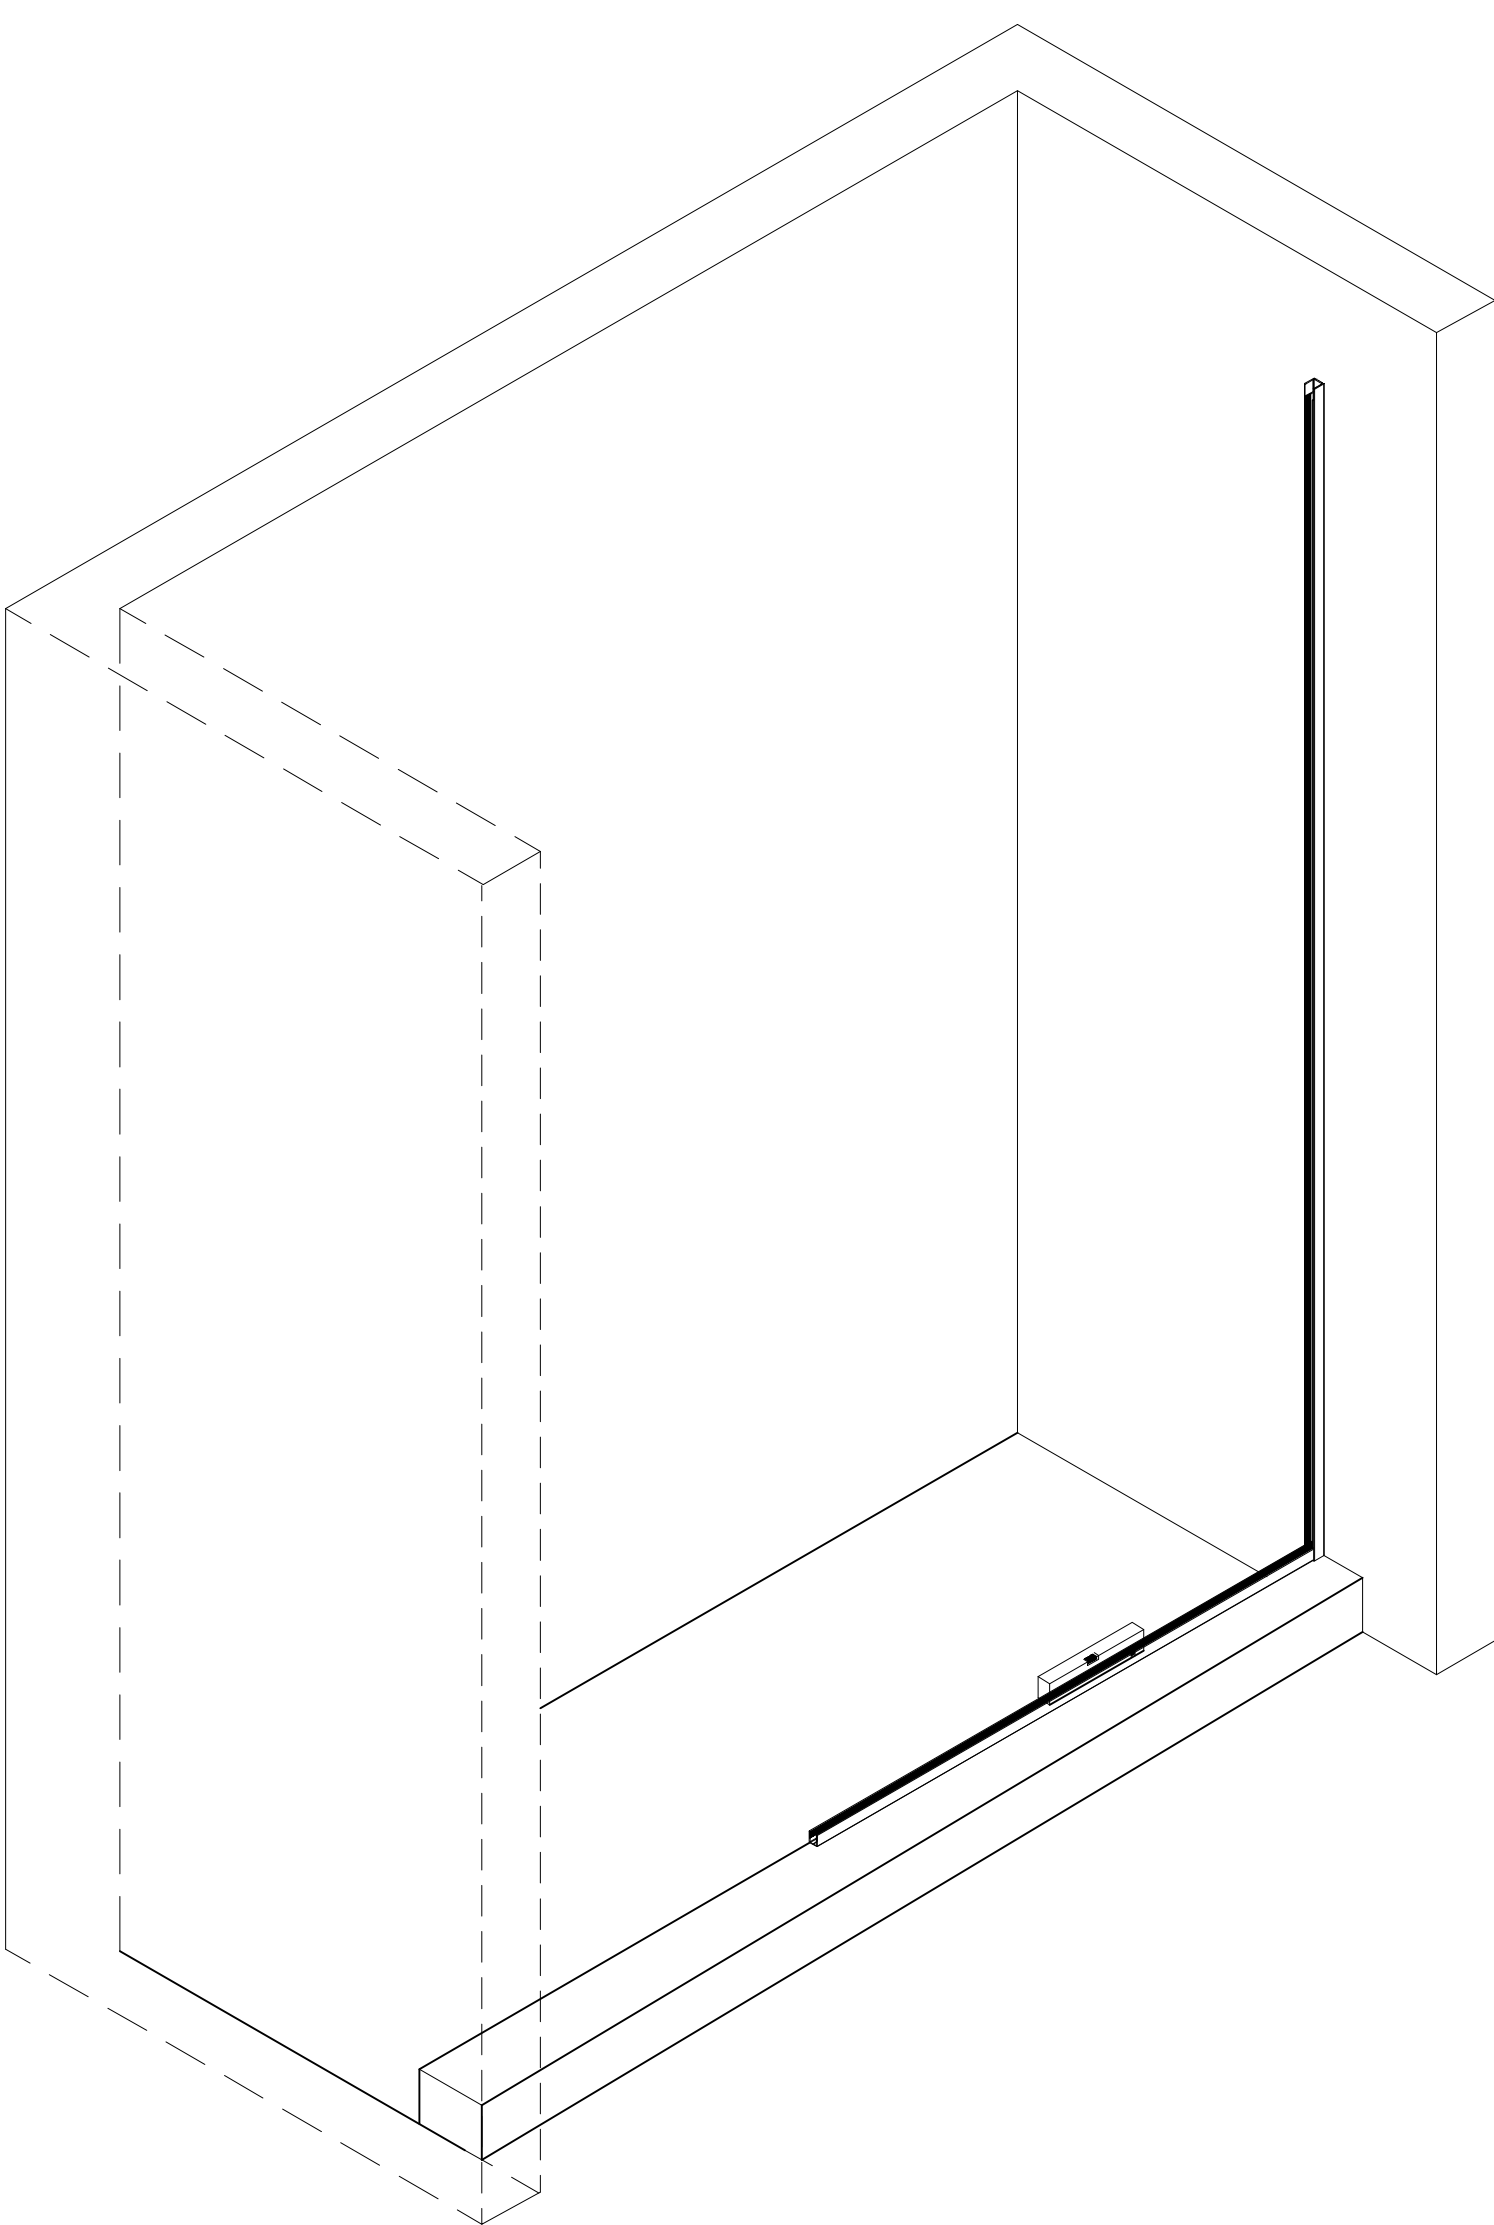

Left Hand Assembly

STEP 3






- 1. Fill the Bottom aluminum U channel(6) with a small amount of silicone.
- 2. Insert the glass shower screen(5) into Bottom aluminum U channel(6).
- 3. Fill the inner groove of wall bracket A(2) with a small amount of silicone.
- 4. Insert the glass shower screen(5) into wall bracket A(2).

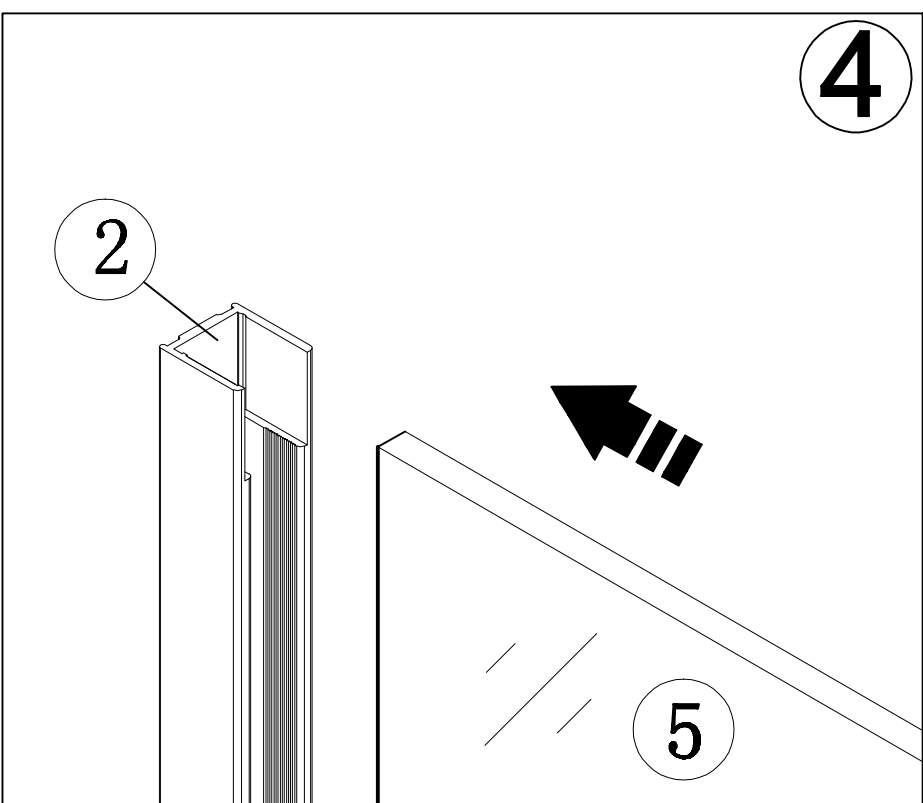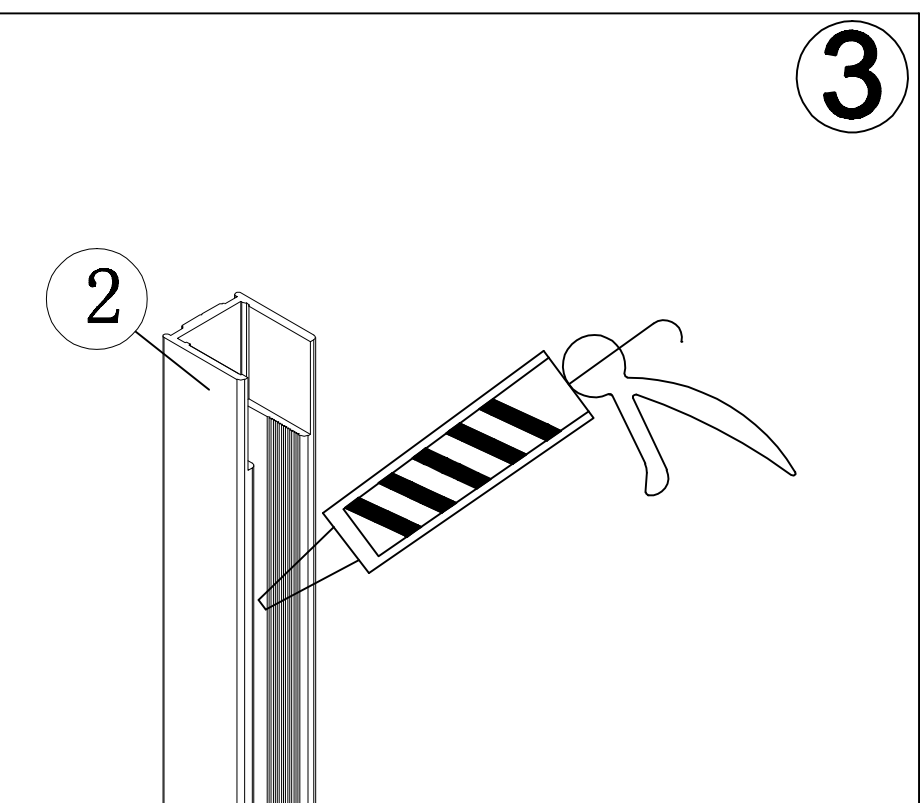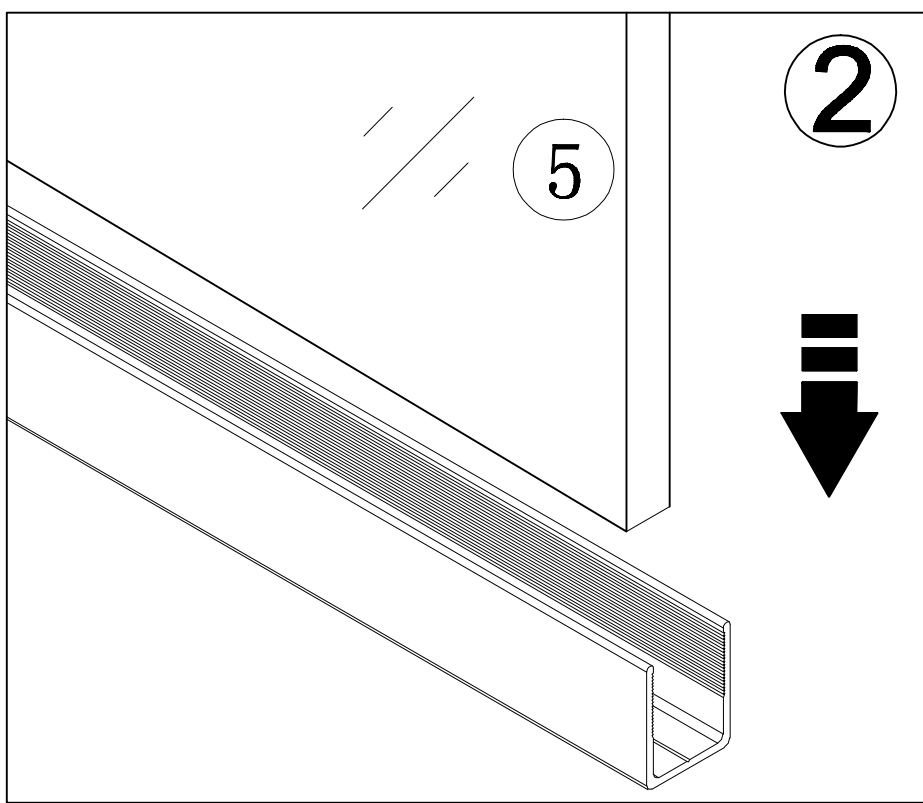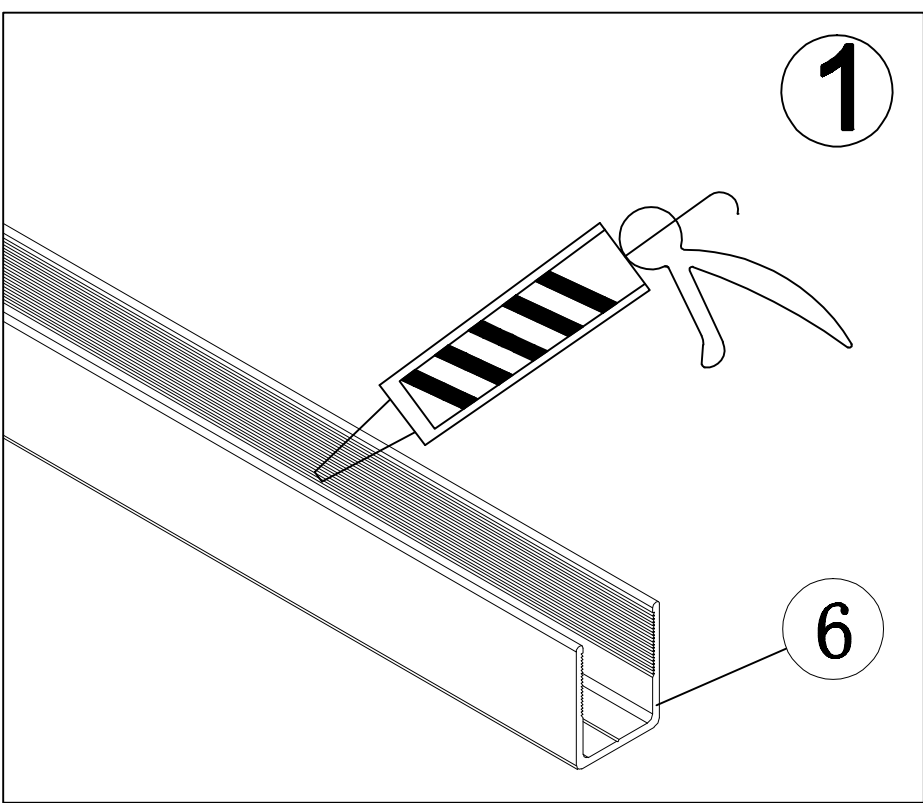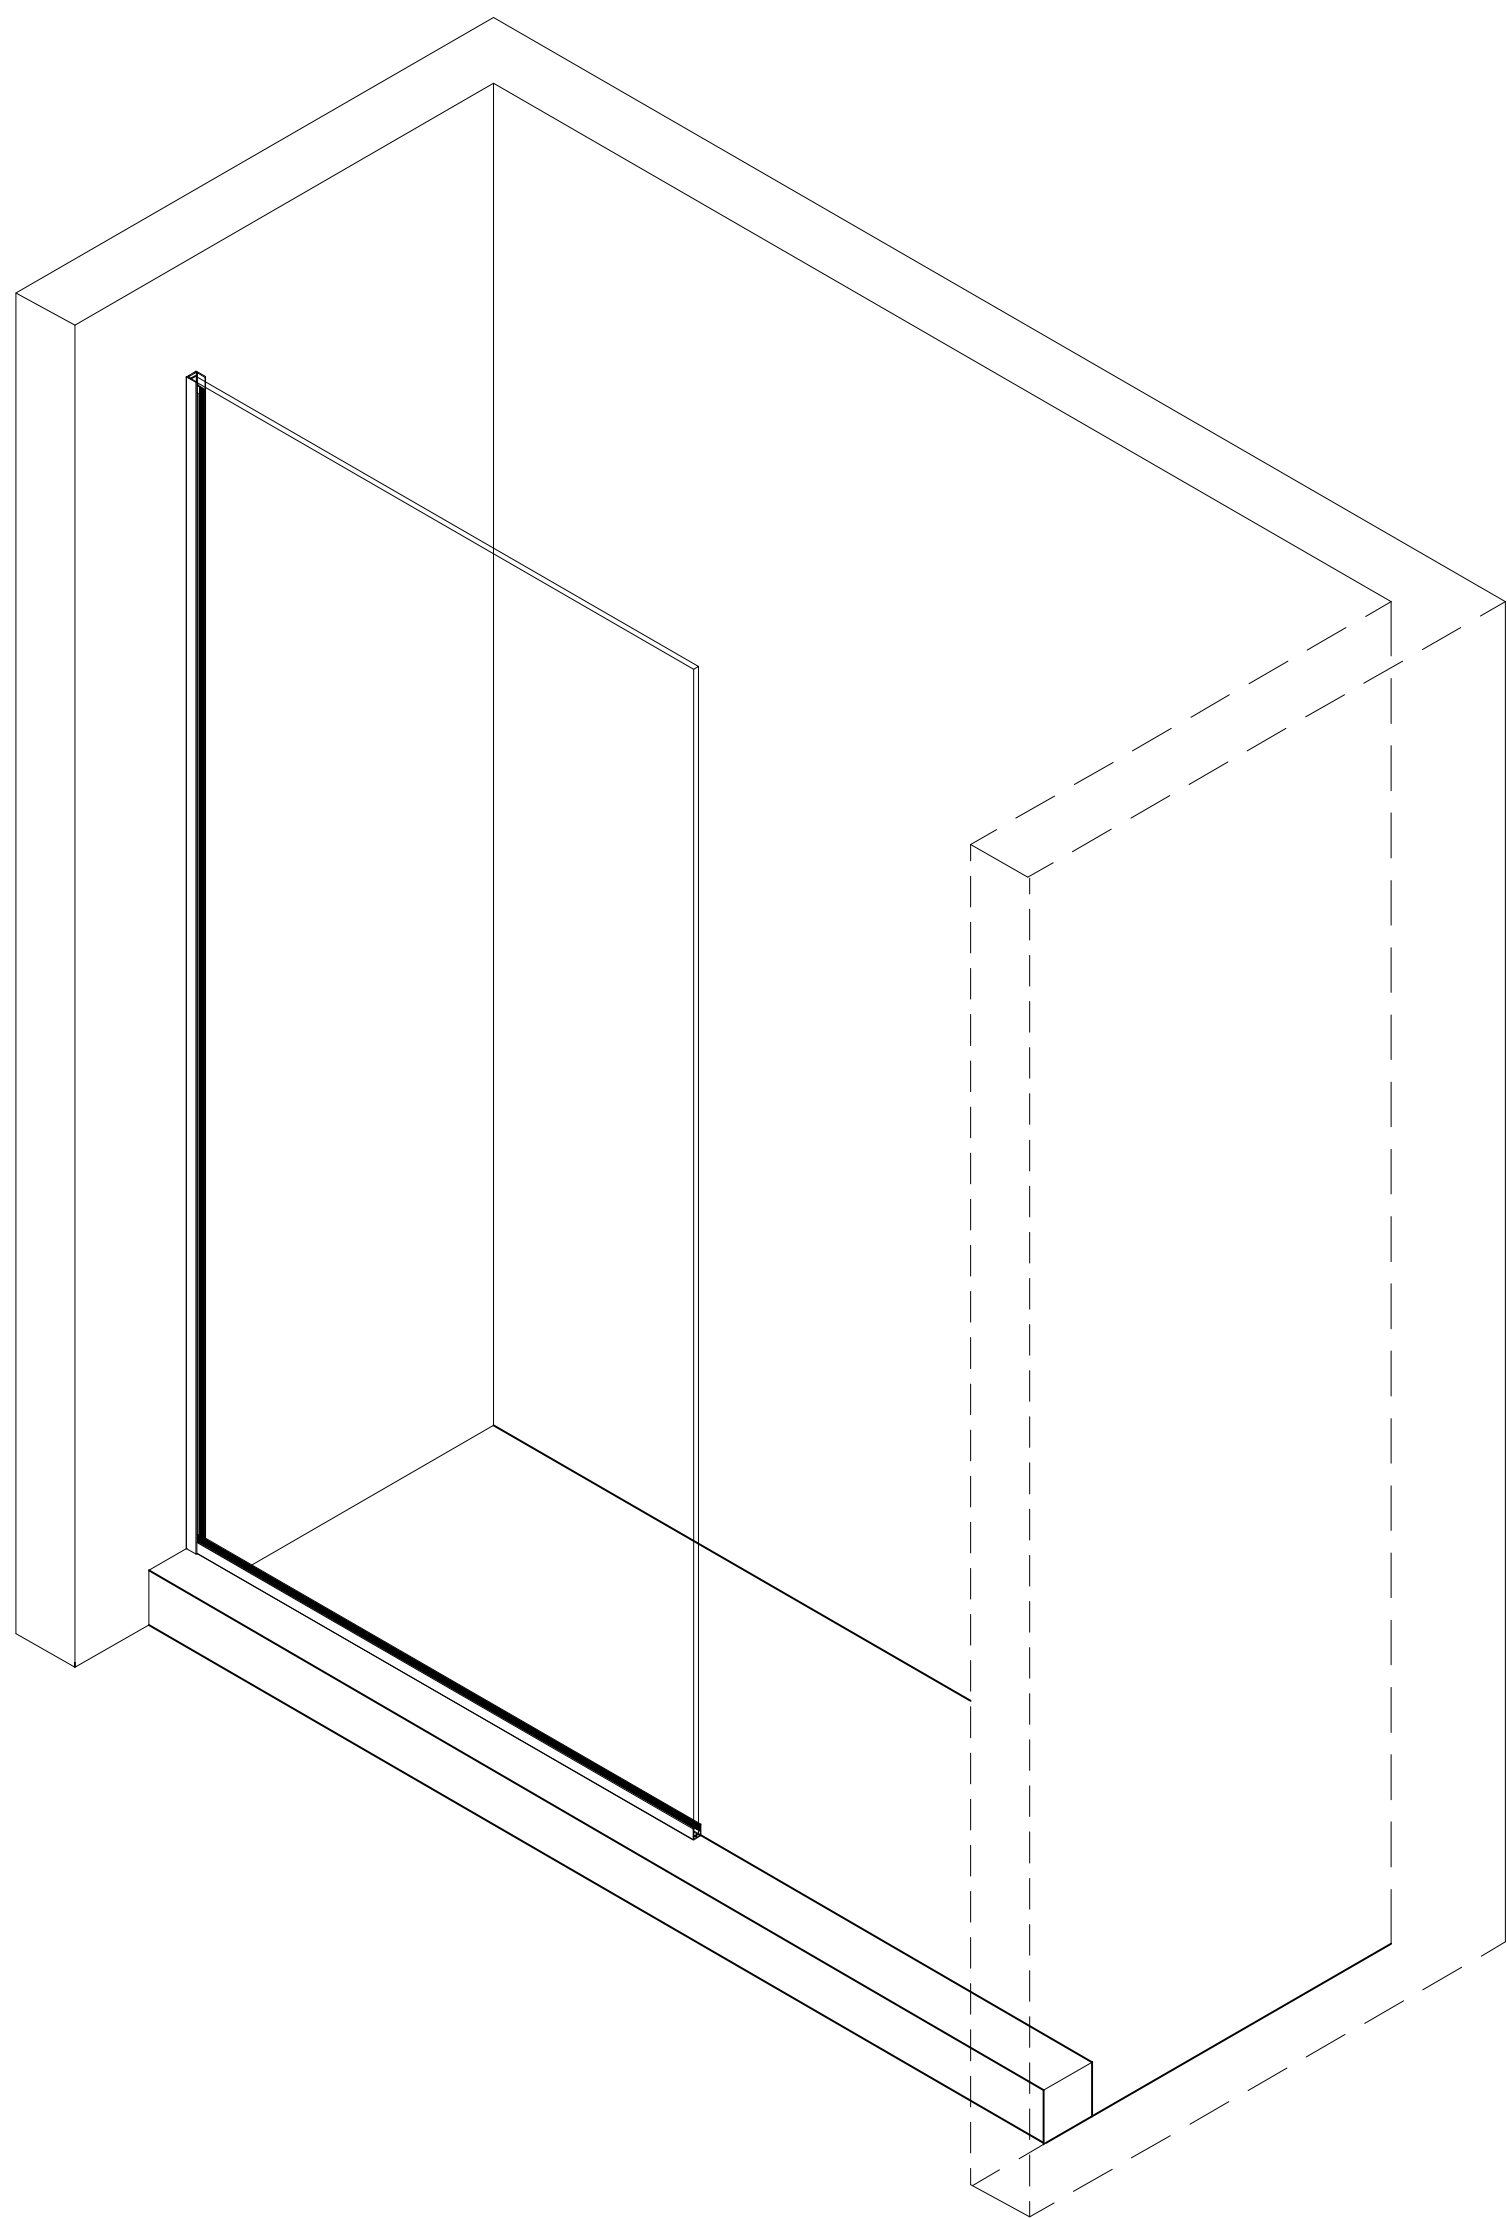

Right Hand Assembly

STEP 3




- 1. Fill the bottom of Bottom aluminum U channel(6) with a small amount of silicone.
- 2. Insert the glass shower screen(5) into Bottom aluminum U channel(6).
- 3. Fill the inner groove of wall bracket A(2) with a small amount of silicone.
- 4. Insert the glass shower screen(5) into wall bracket A(2).

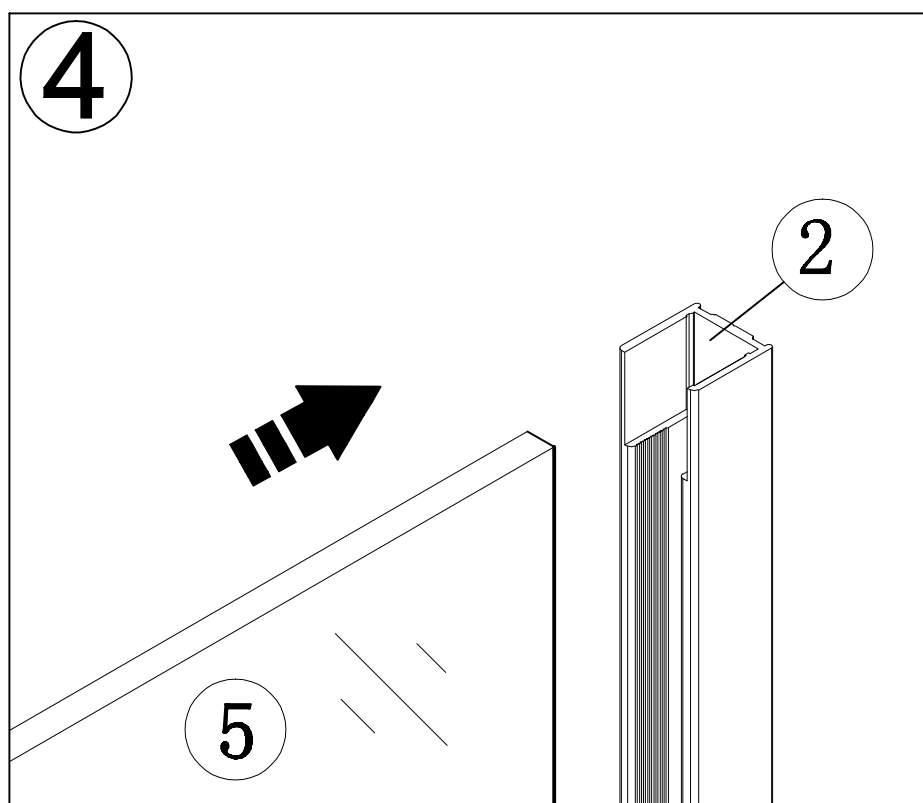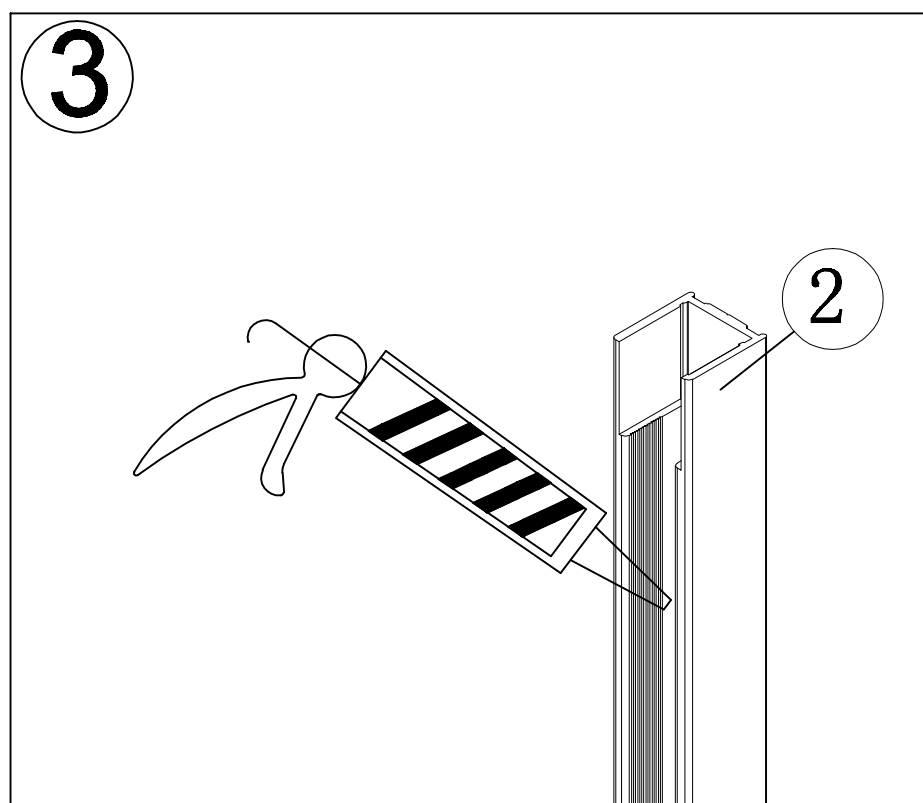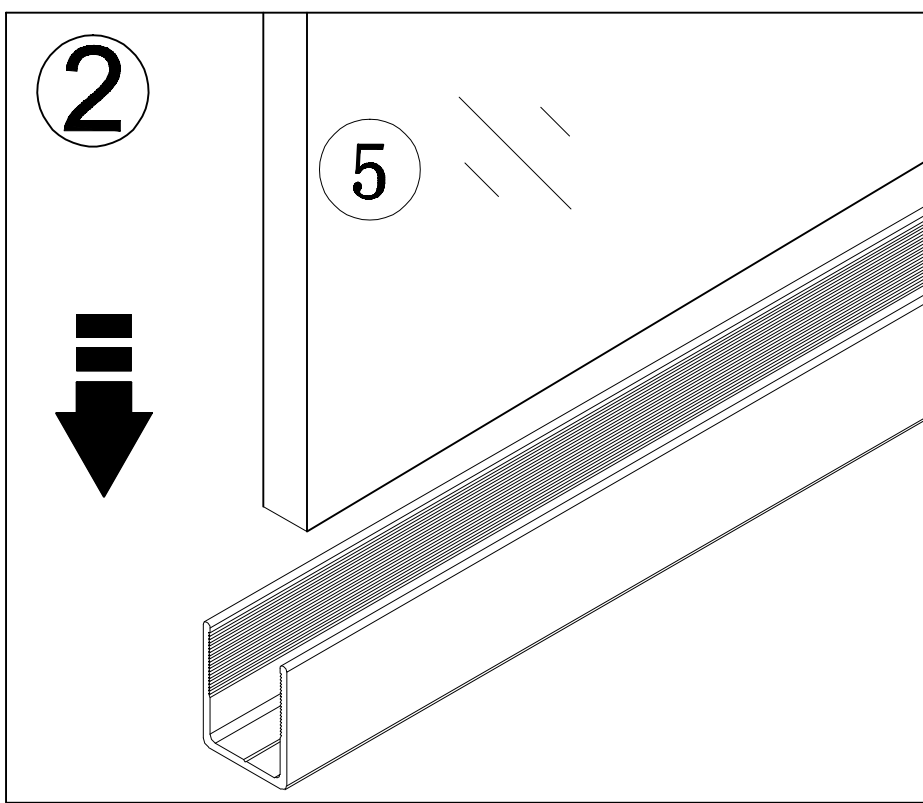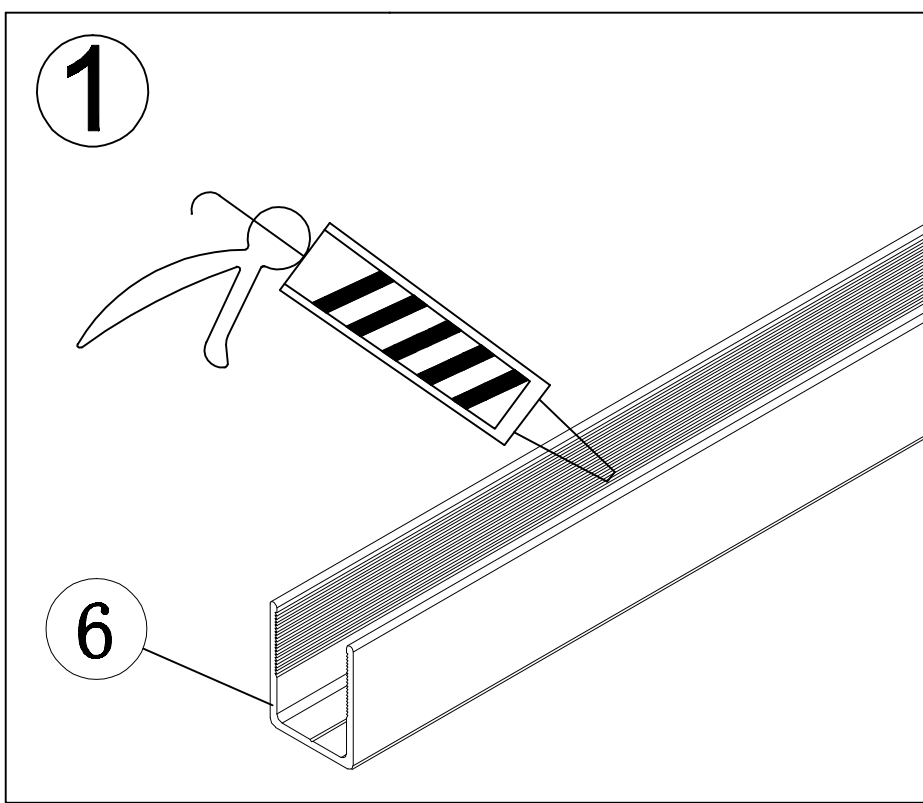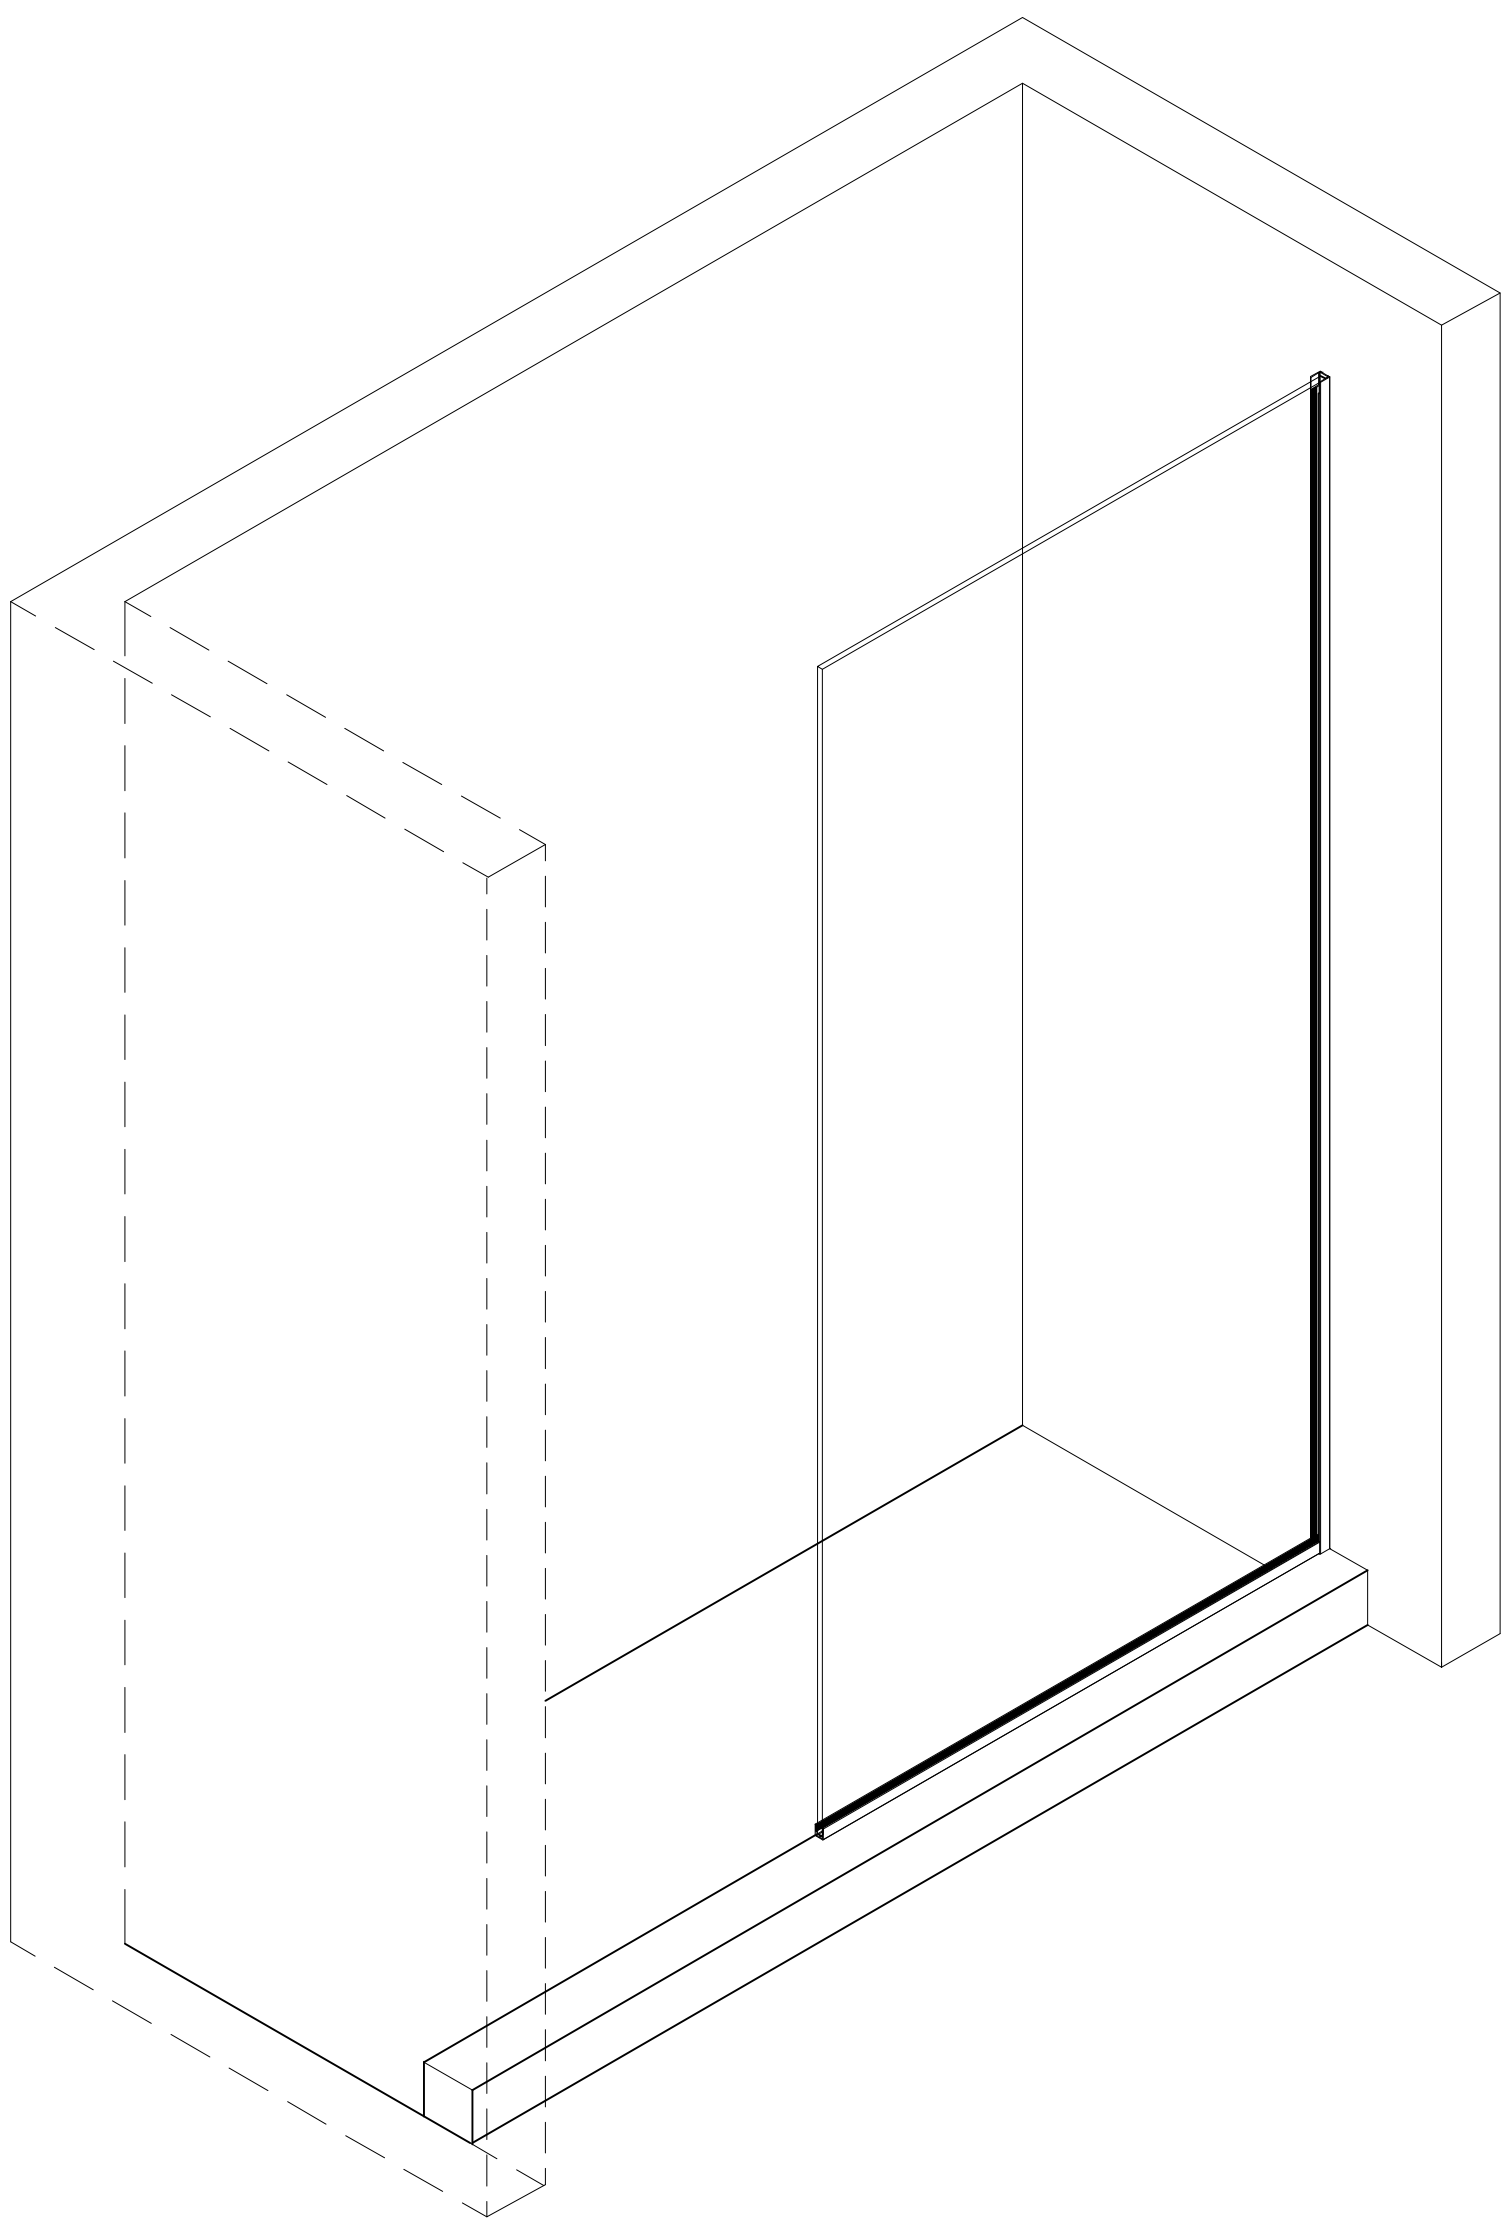

Left Hand Assembly

STEP 4




- 1. Push Top aluminum U channel(1) into Wall bracket A(2).
- 2. Insert wall bracket B(7) into Bottom aluminum U channel(6).

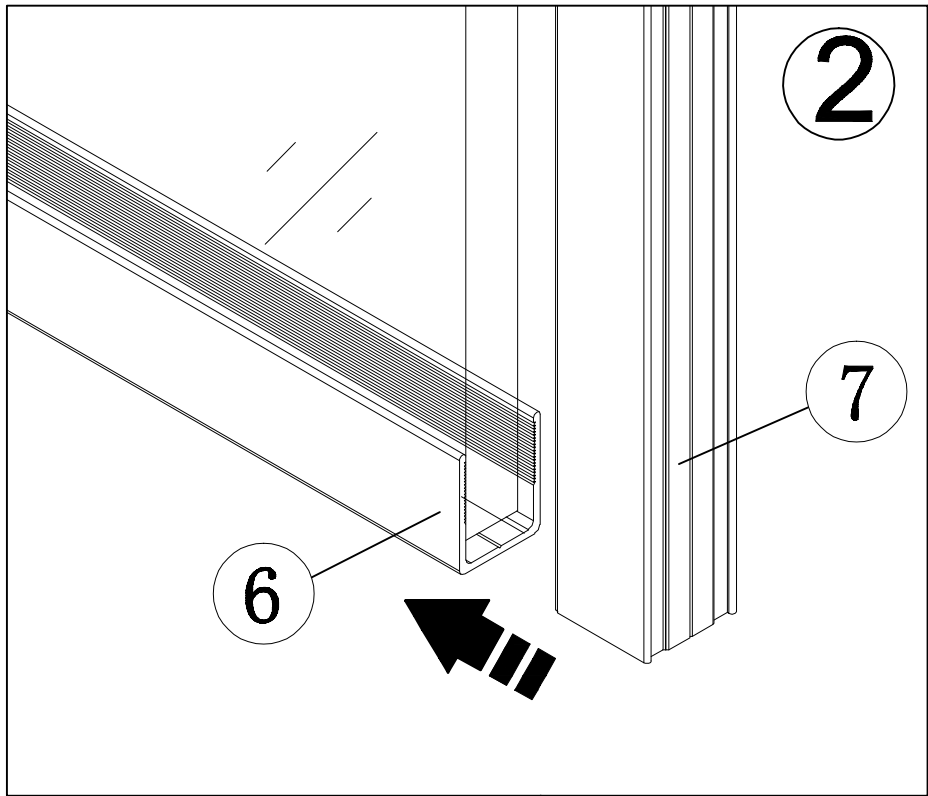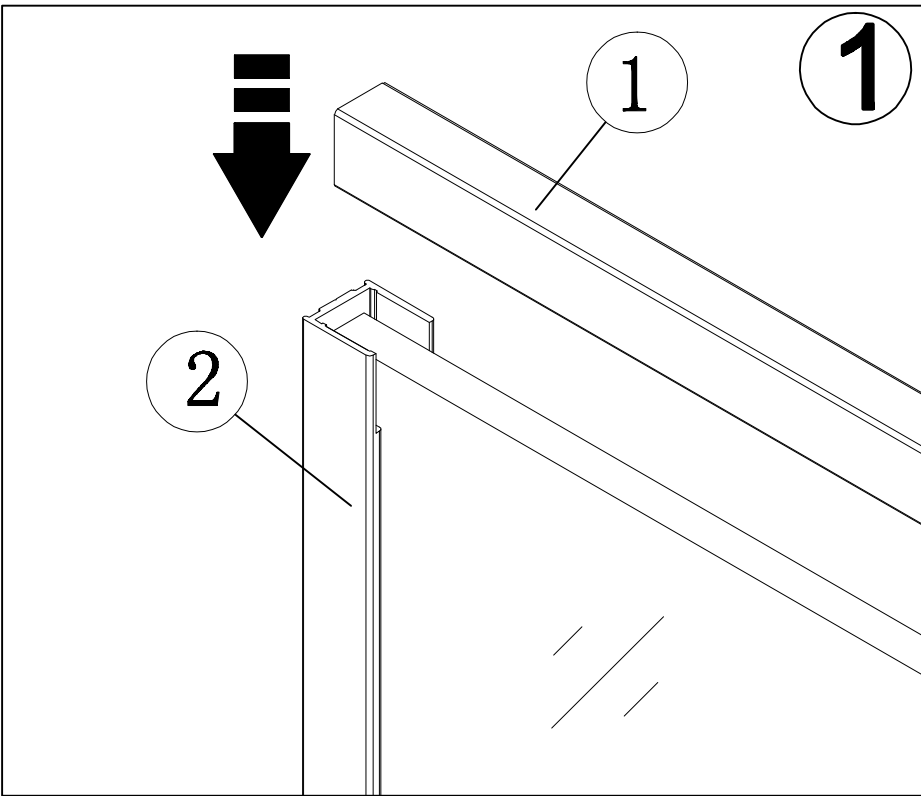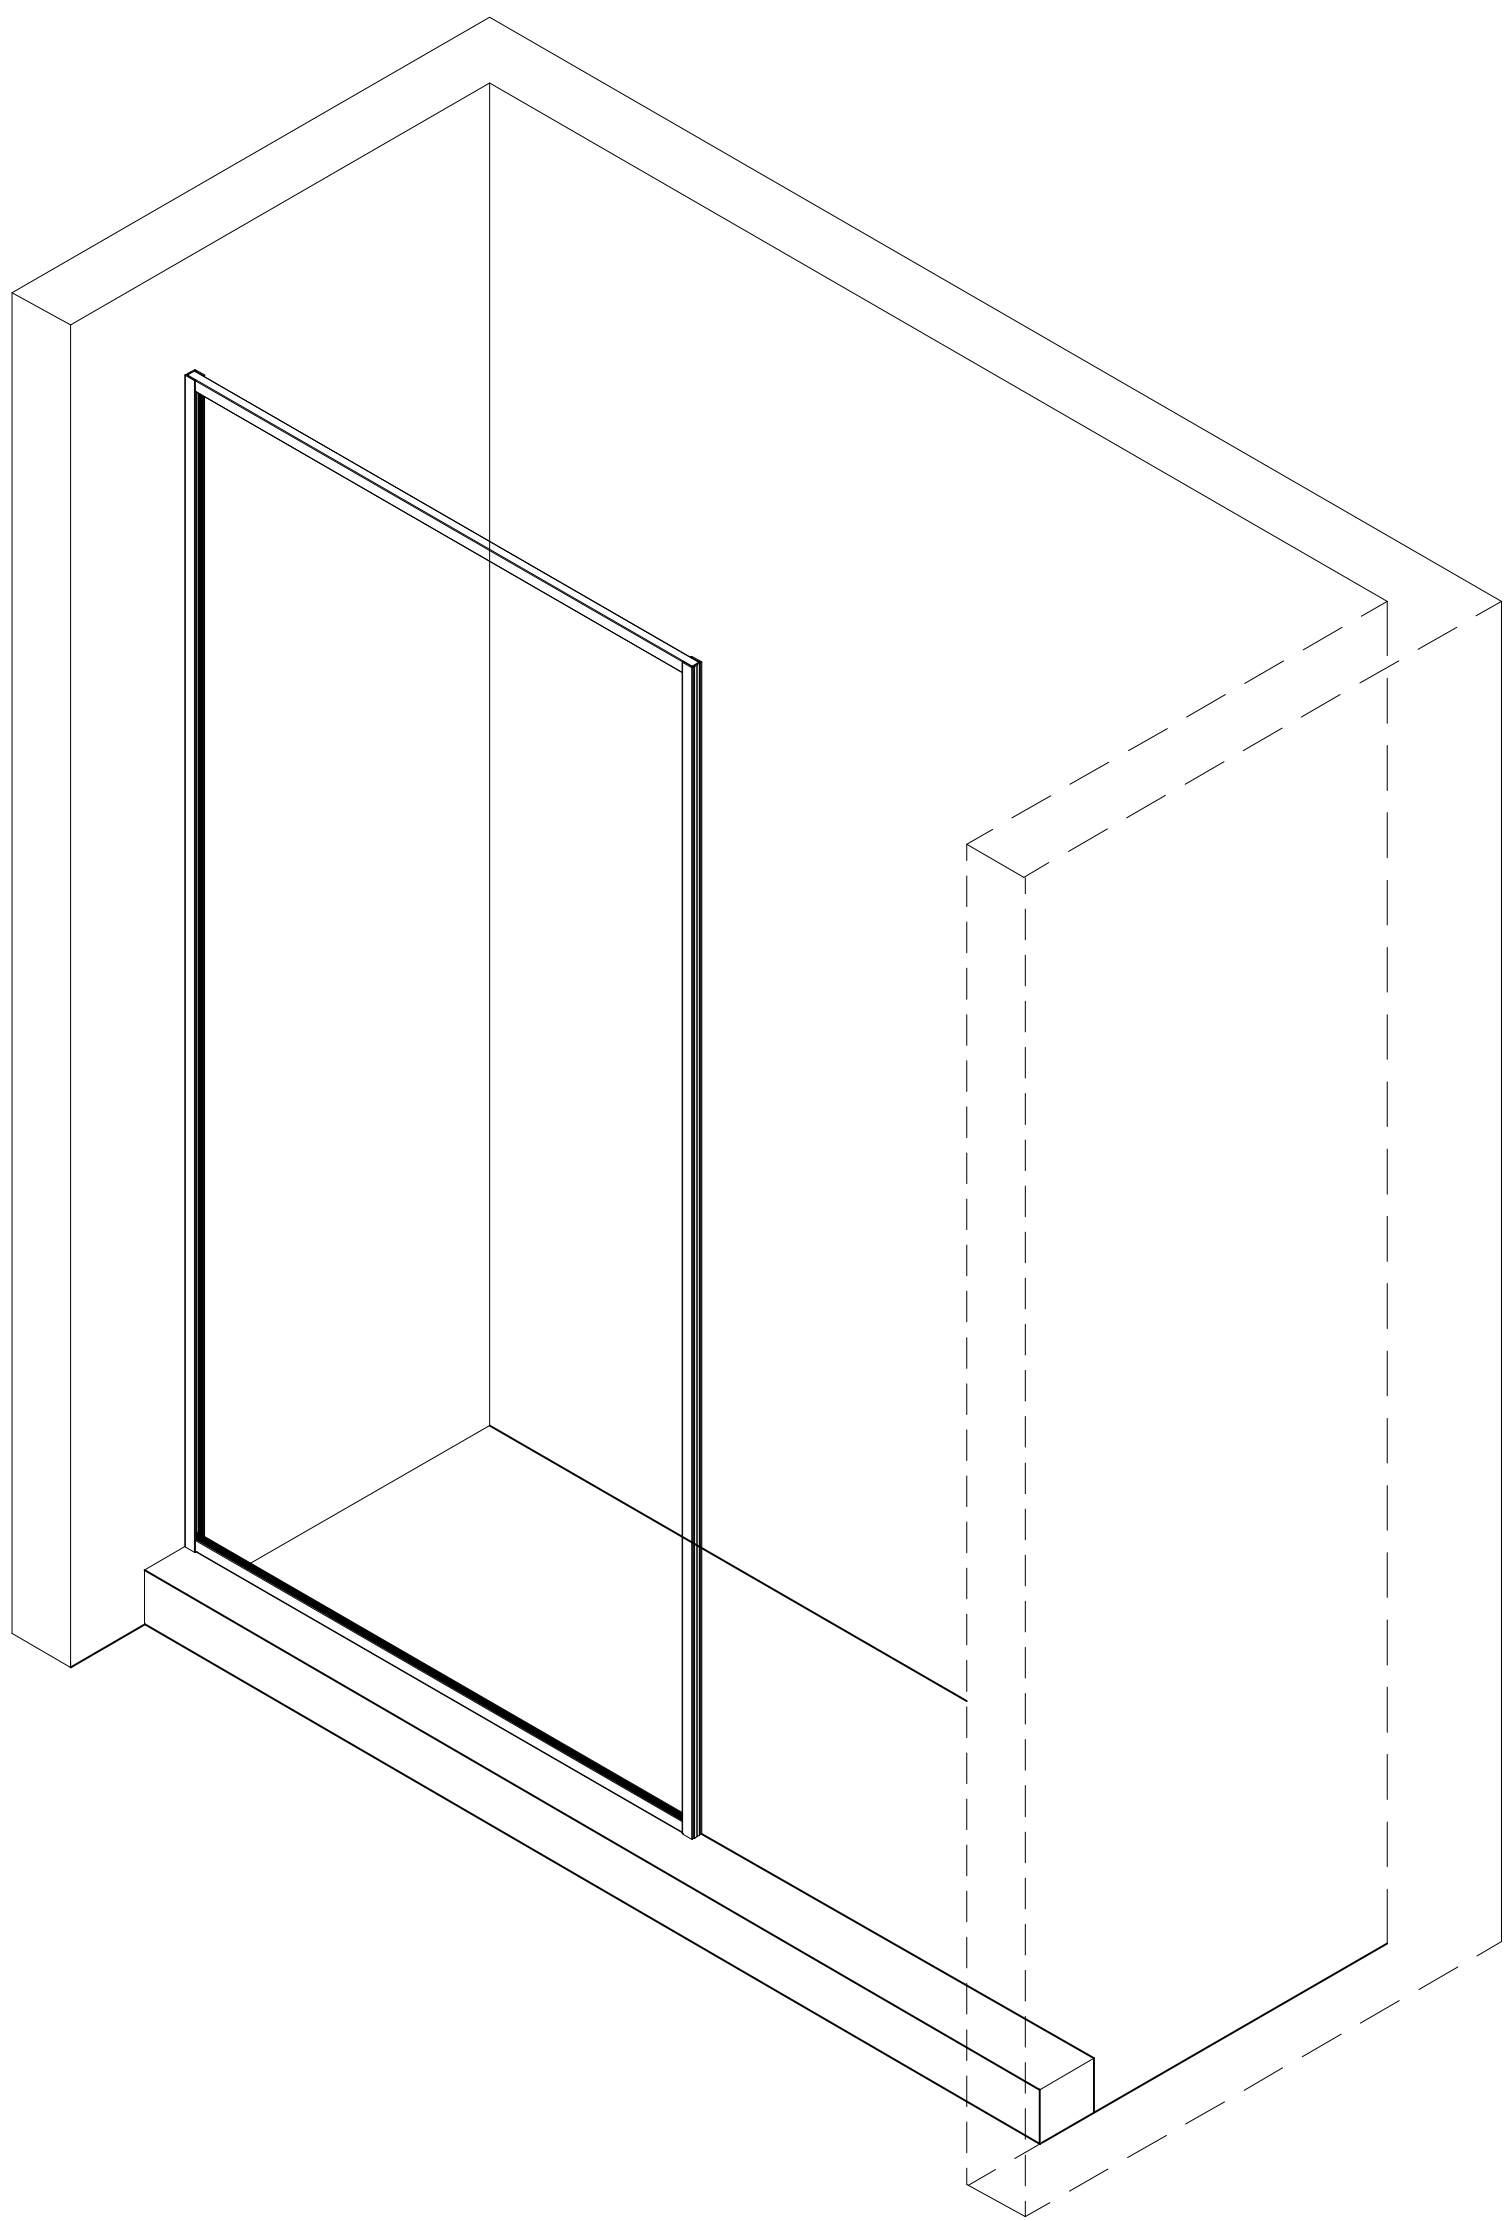

Right Hand Assembly

STEP 4






- 1. Push Top aluminum U channel(1) into Wall bracket A(2).
- 2. Insert wall bracket B(7) into Bottom aluminum U channel(6).

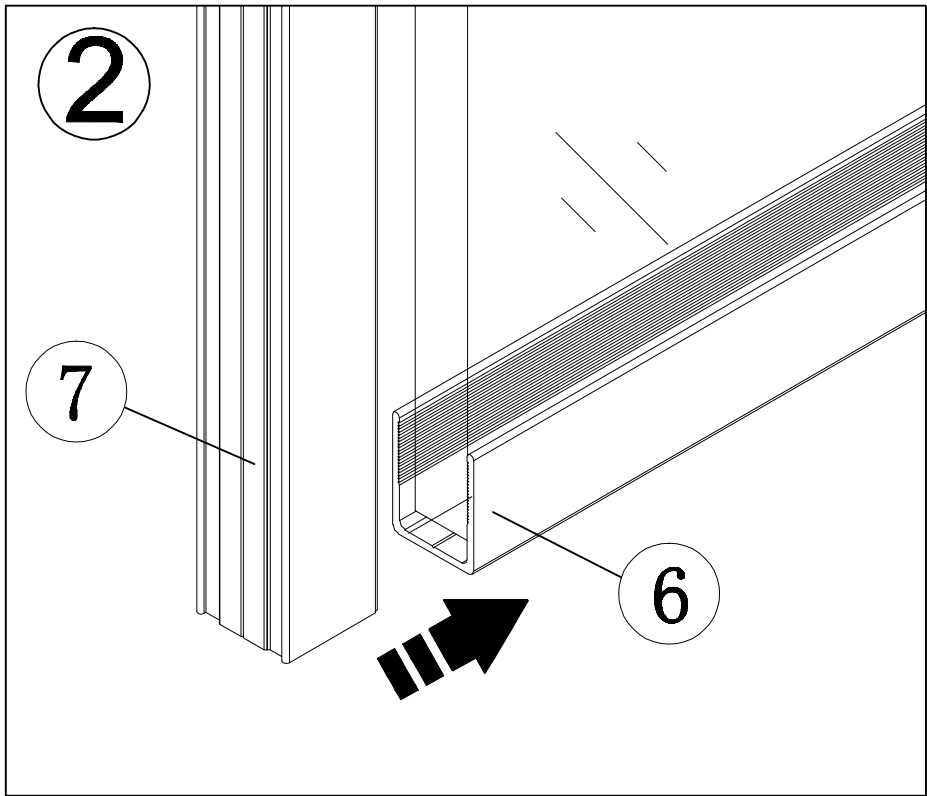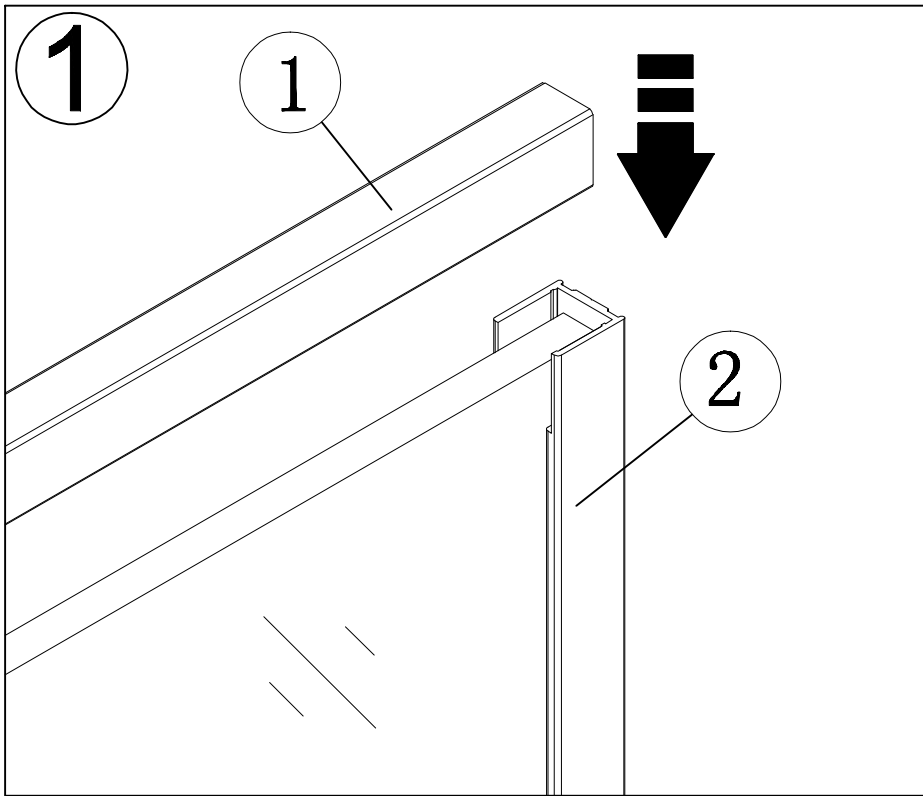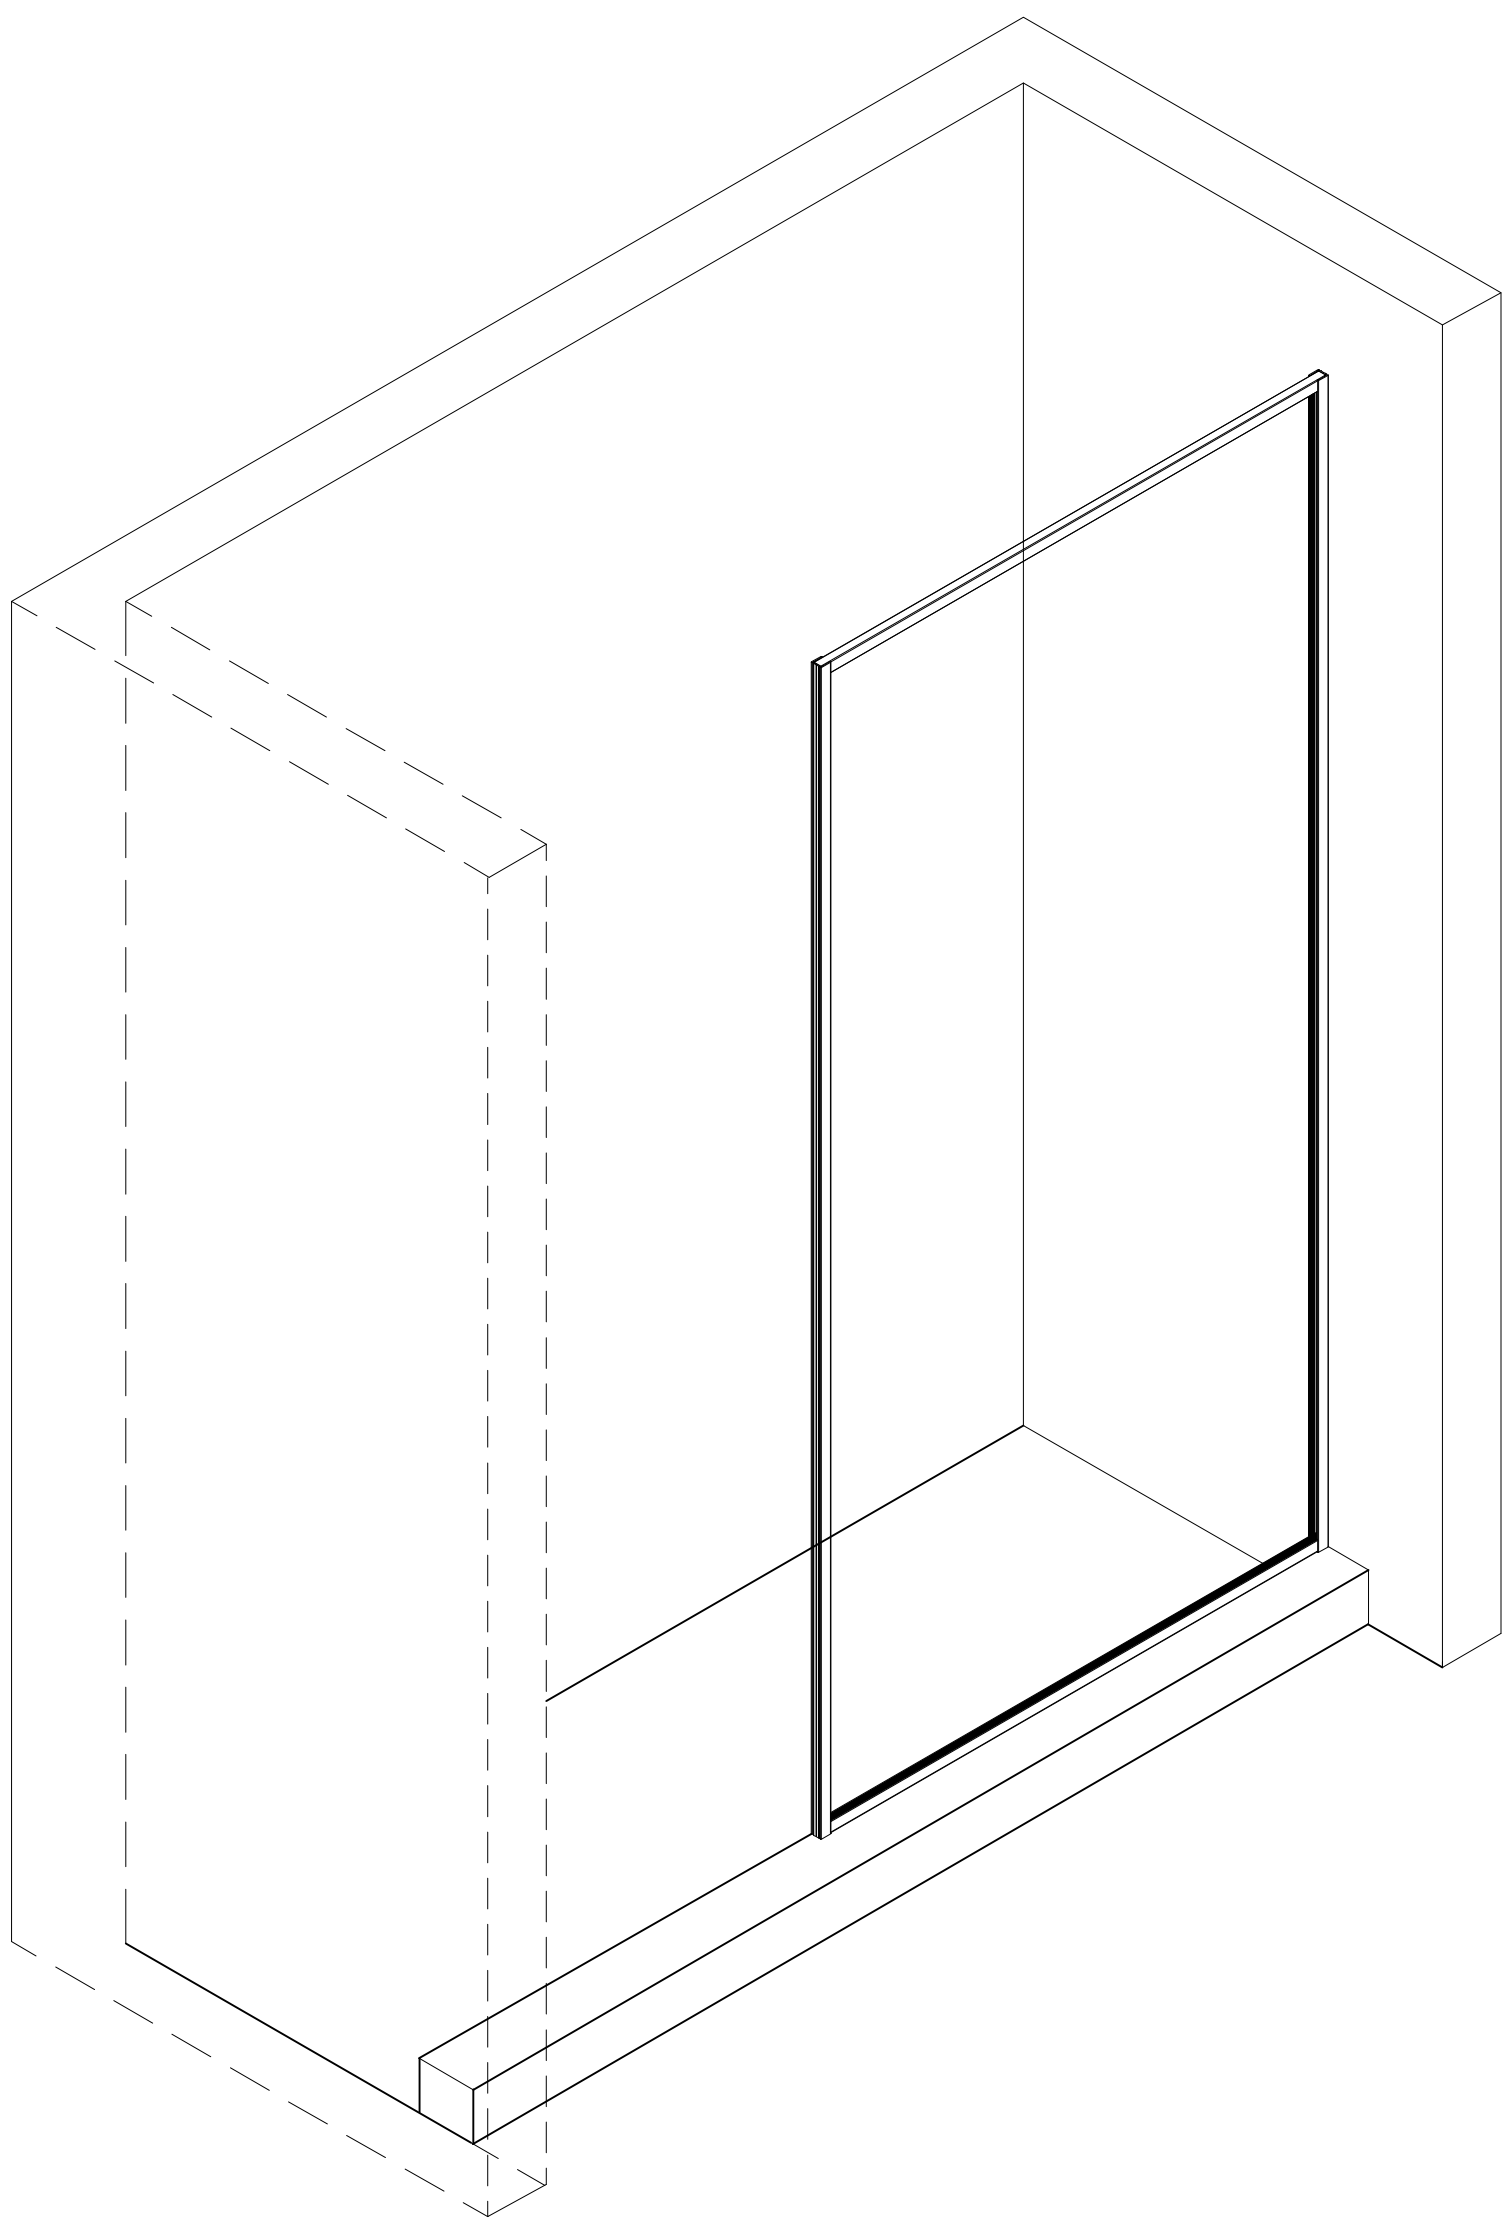

Left Hand Assembly

STEP 5






- 1.Insert One-side strip(10) into glass and SBottom aluminum U channel(6).
- 2.Insert One-side strip(9) into glass and Wall bracket A(2).
- 3.Insert One-side strip(10) into glass and SPush Top aluminum U channel(1).
- 4.Insert One-side strip(9) into glass and Wall bracket B(7).

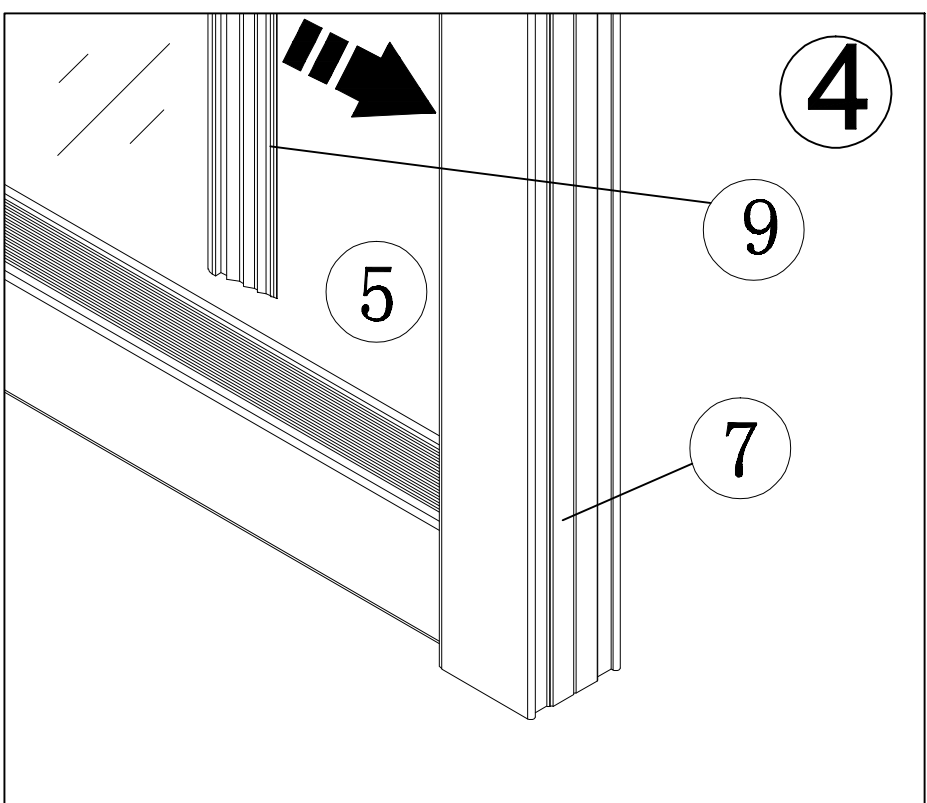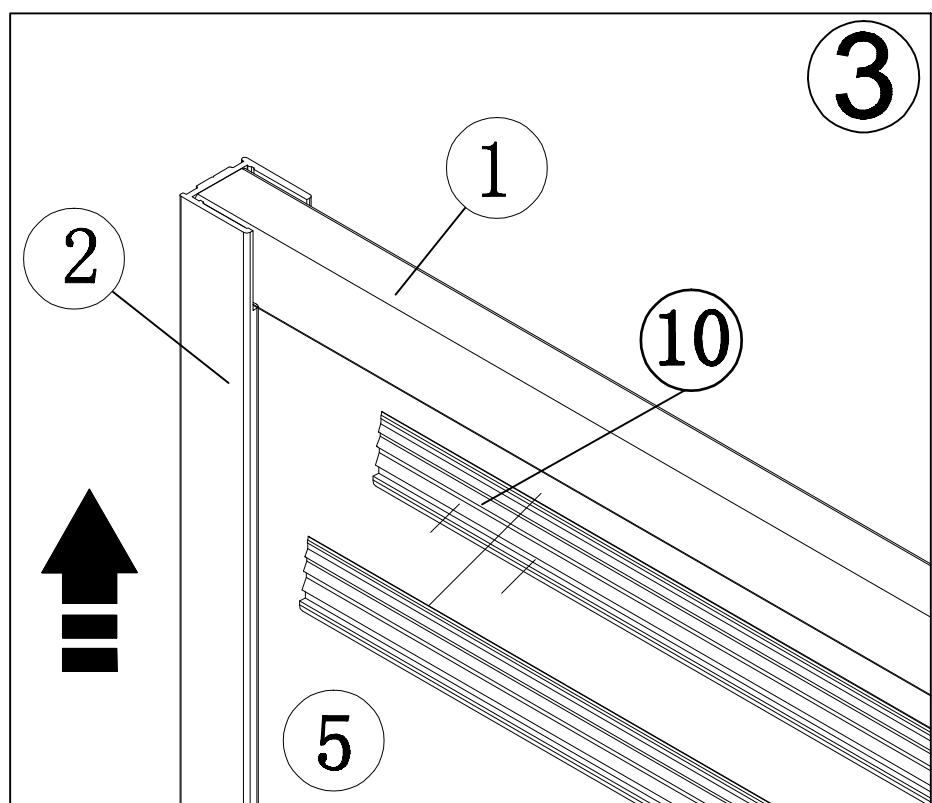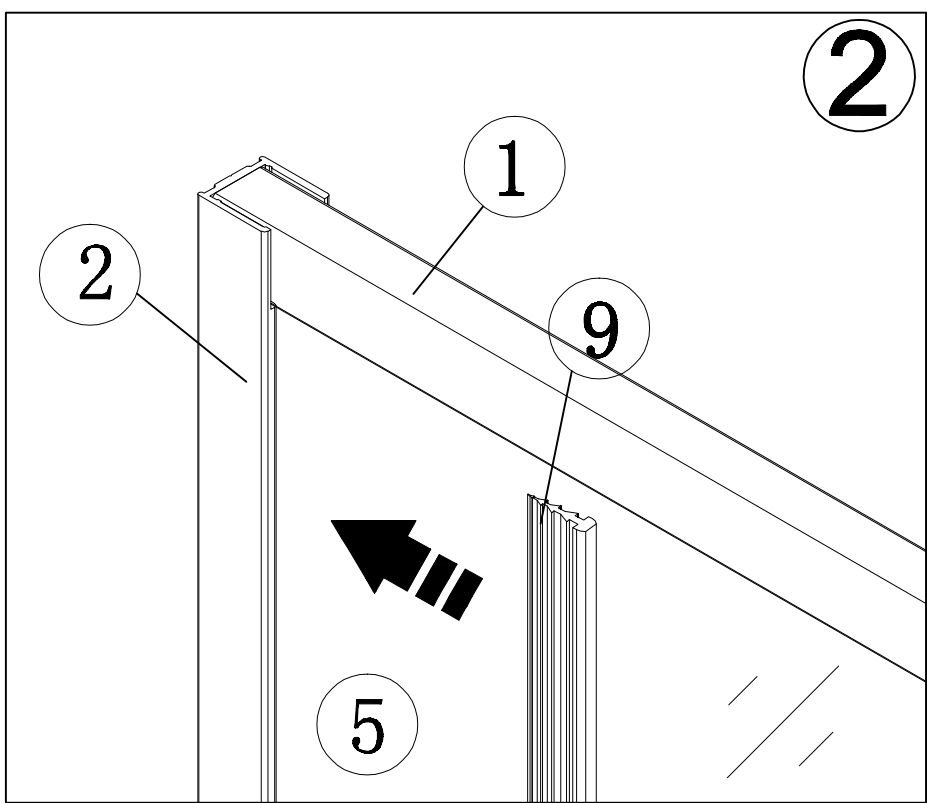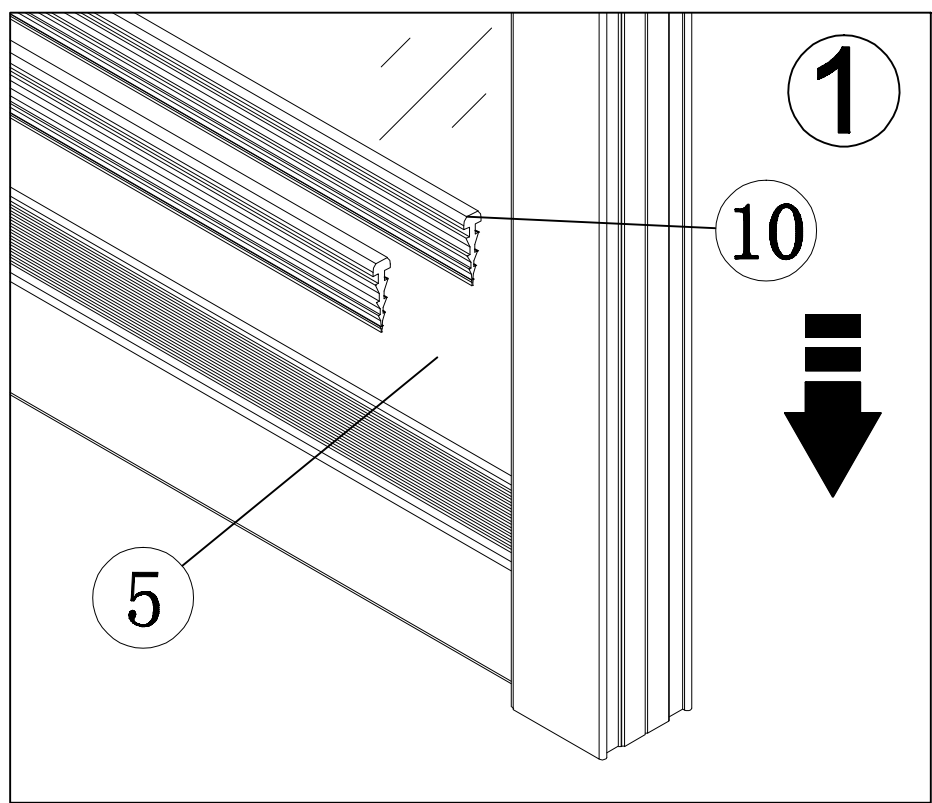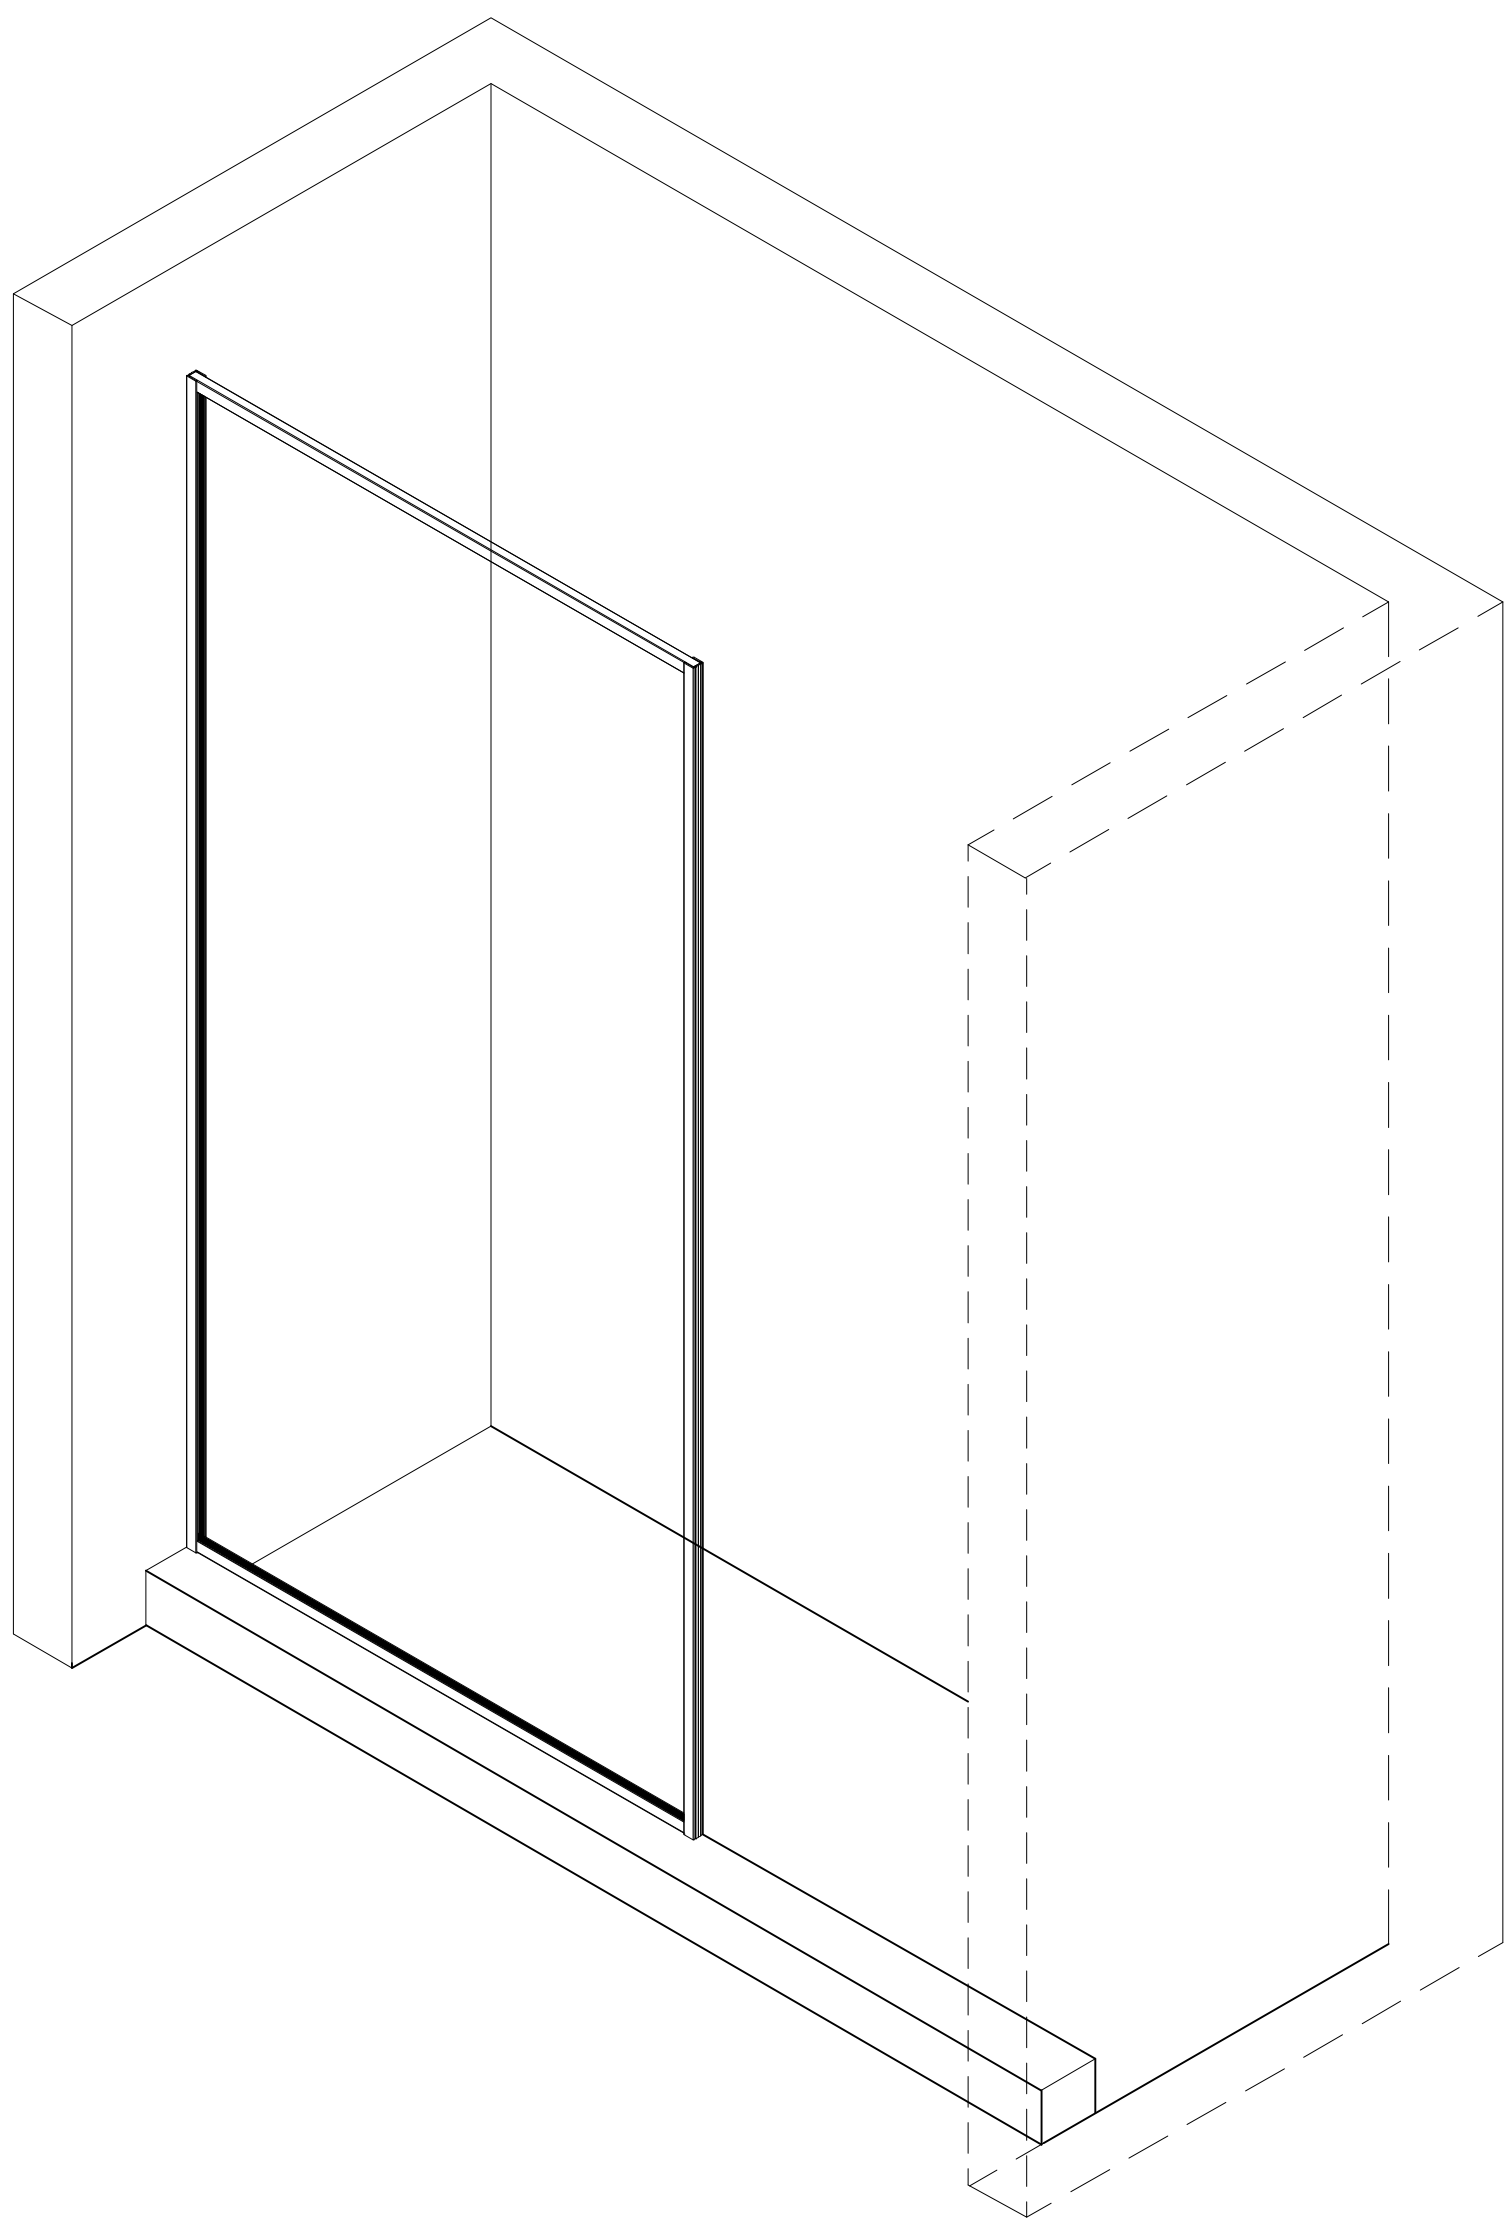

Right Hand Assembly

STEP 5



- 1.Insert One-side strip(10) into glass and Bottom aluminum U channel(6).
- 2.Insert One-side strip(9) into glass and Wall bracket A(2).
- 3.Insert One-side strip(10) into glass and Push Top aluminum U channel(1).
- 4.Insert One-side strip(9) into glass and Wall bracket B(7).

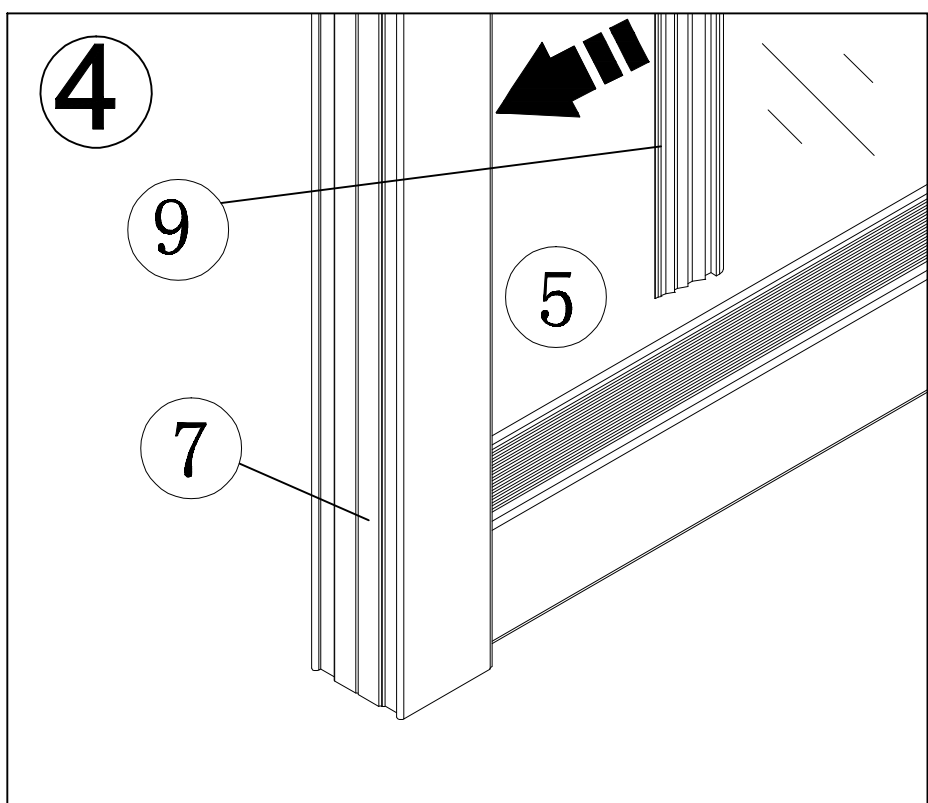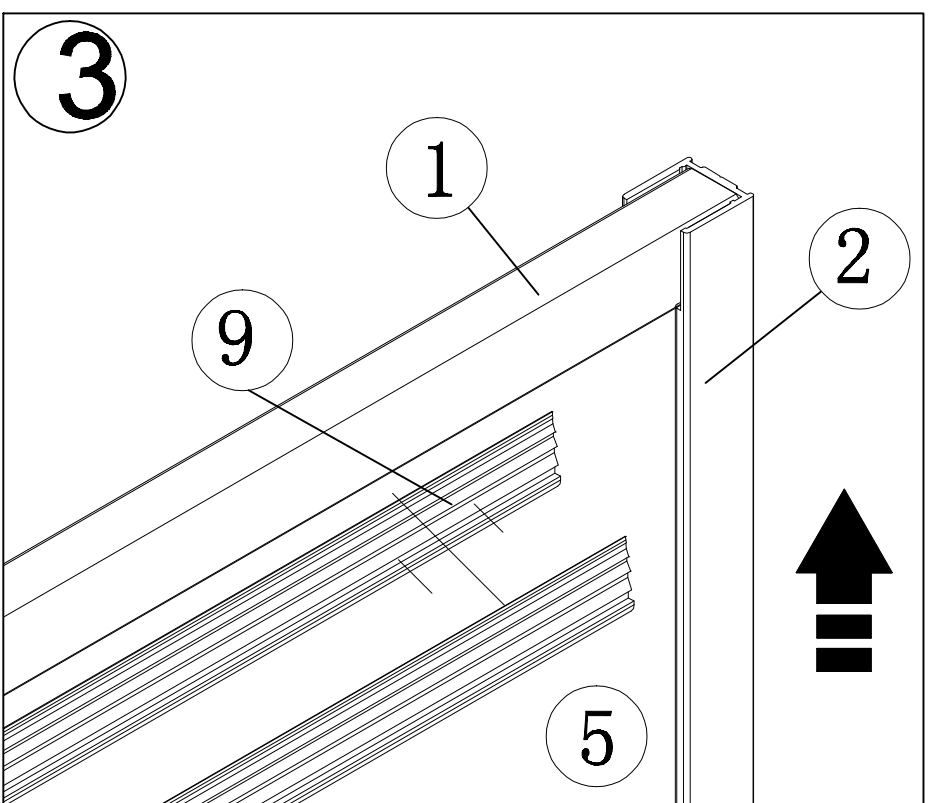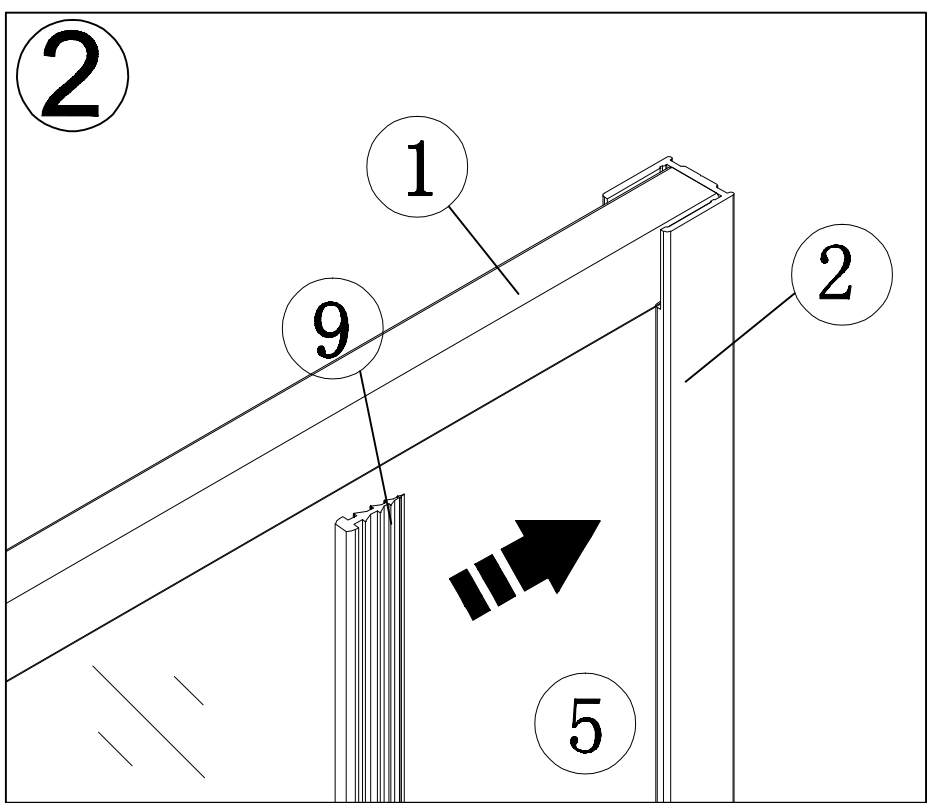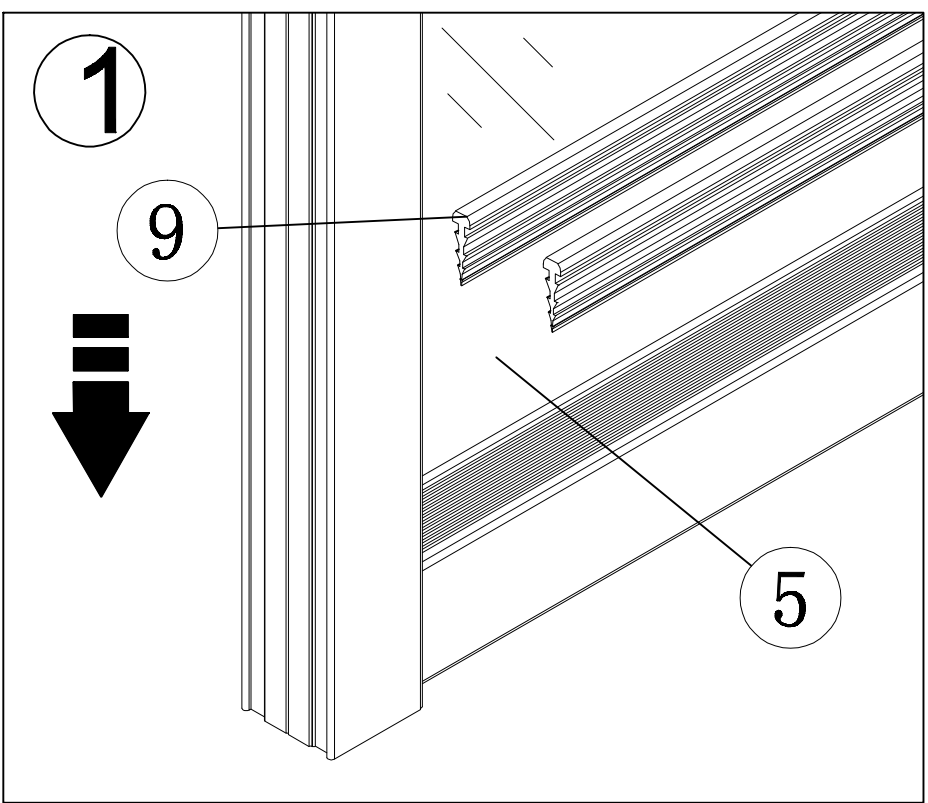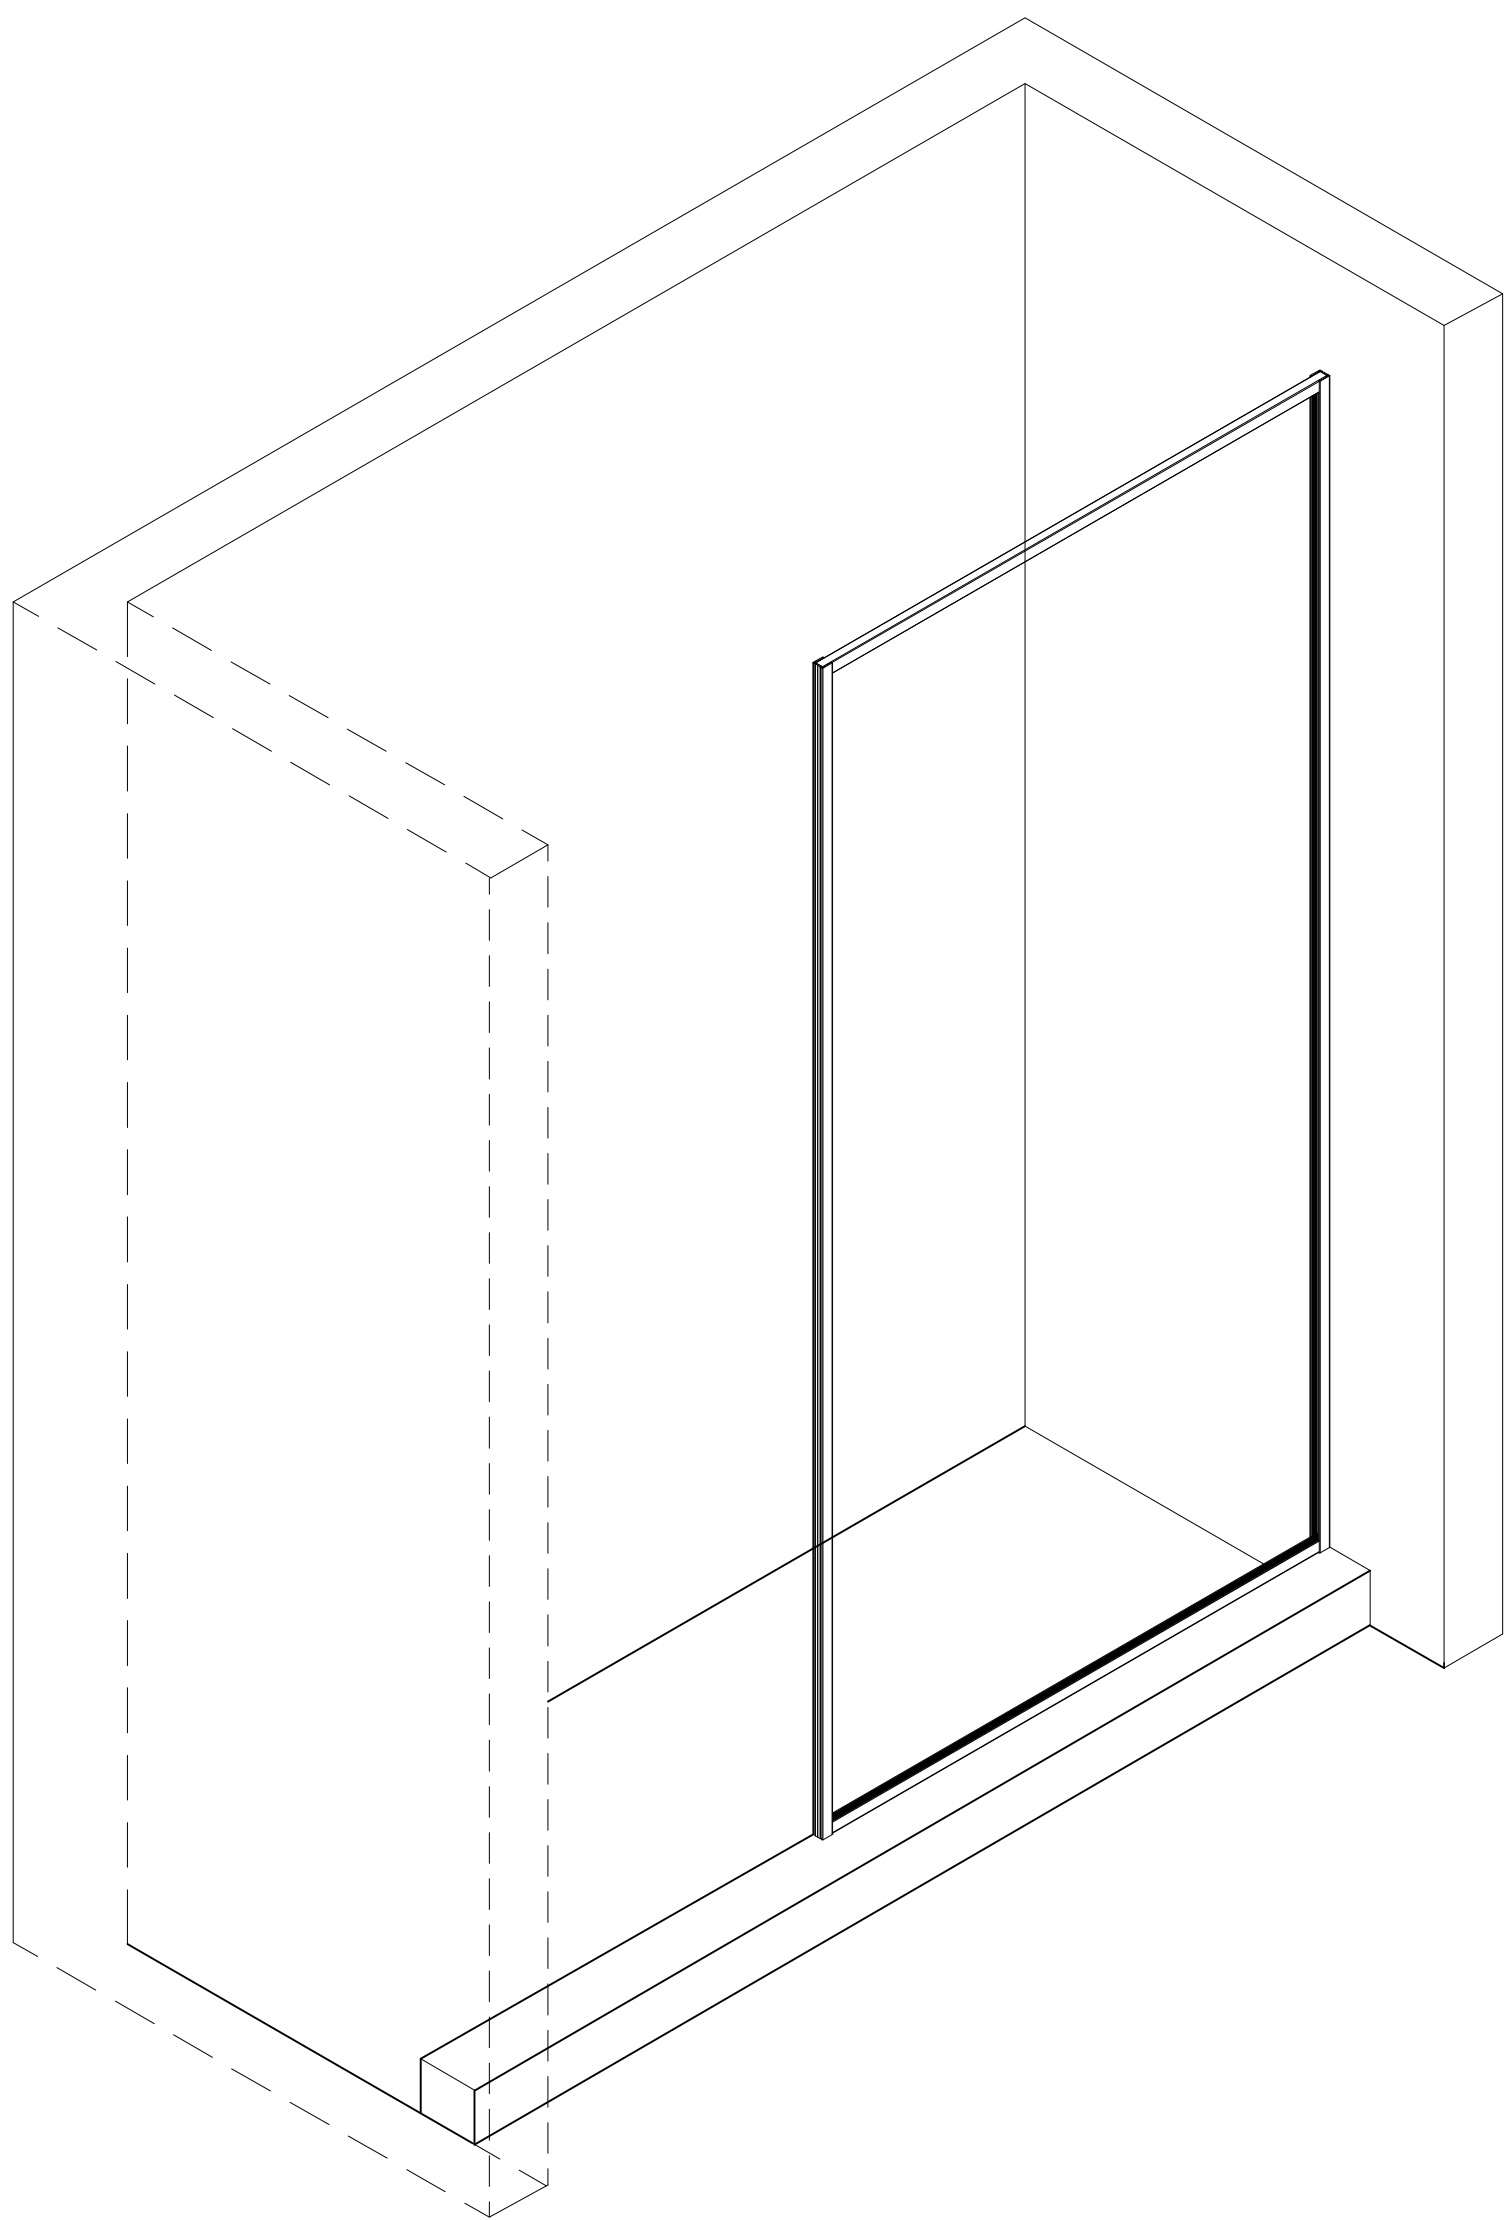

Left Hand Assembly

STEP 6

1. Apply qualified mildew resistant silicone along the sides of wall bracket A(2) and the Bottom aluminum U channel(6).Allow the silicone to dry for 24 hours before using the shower to ensure it’s fully consolidated.

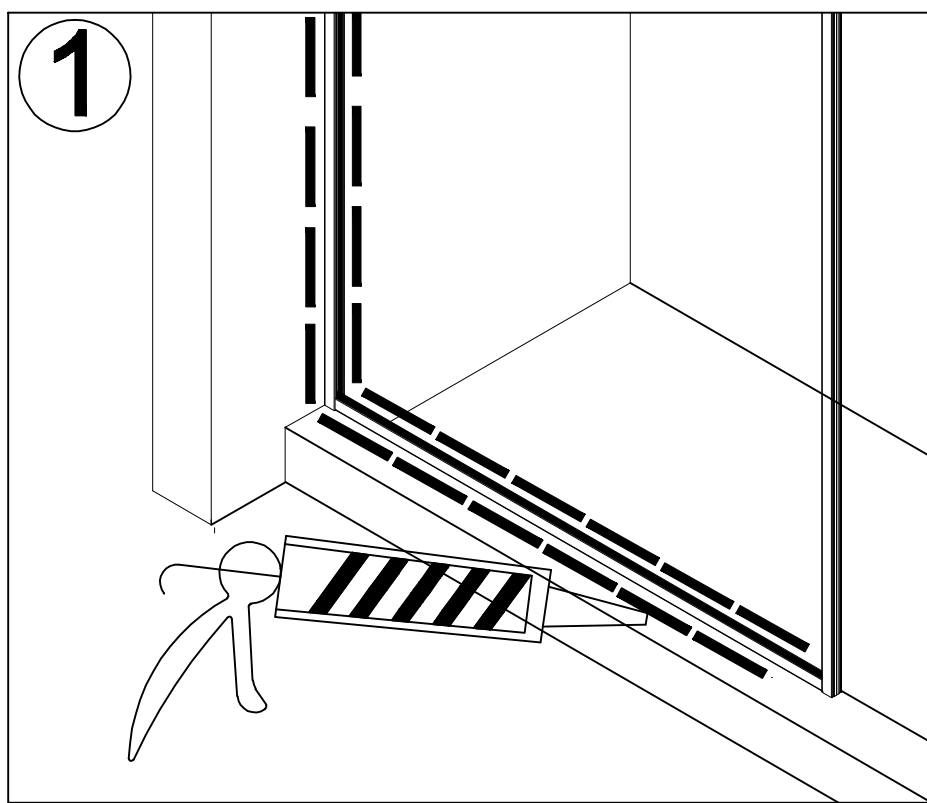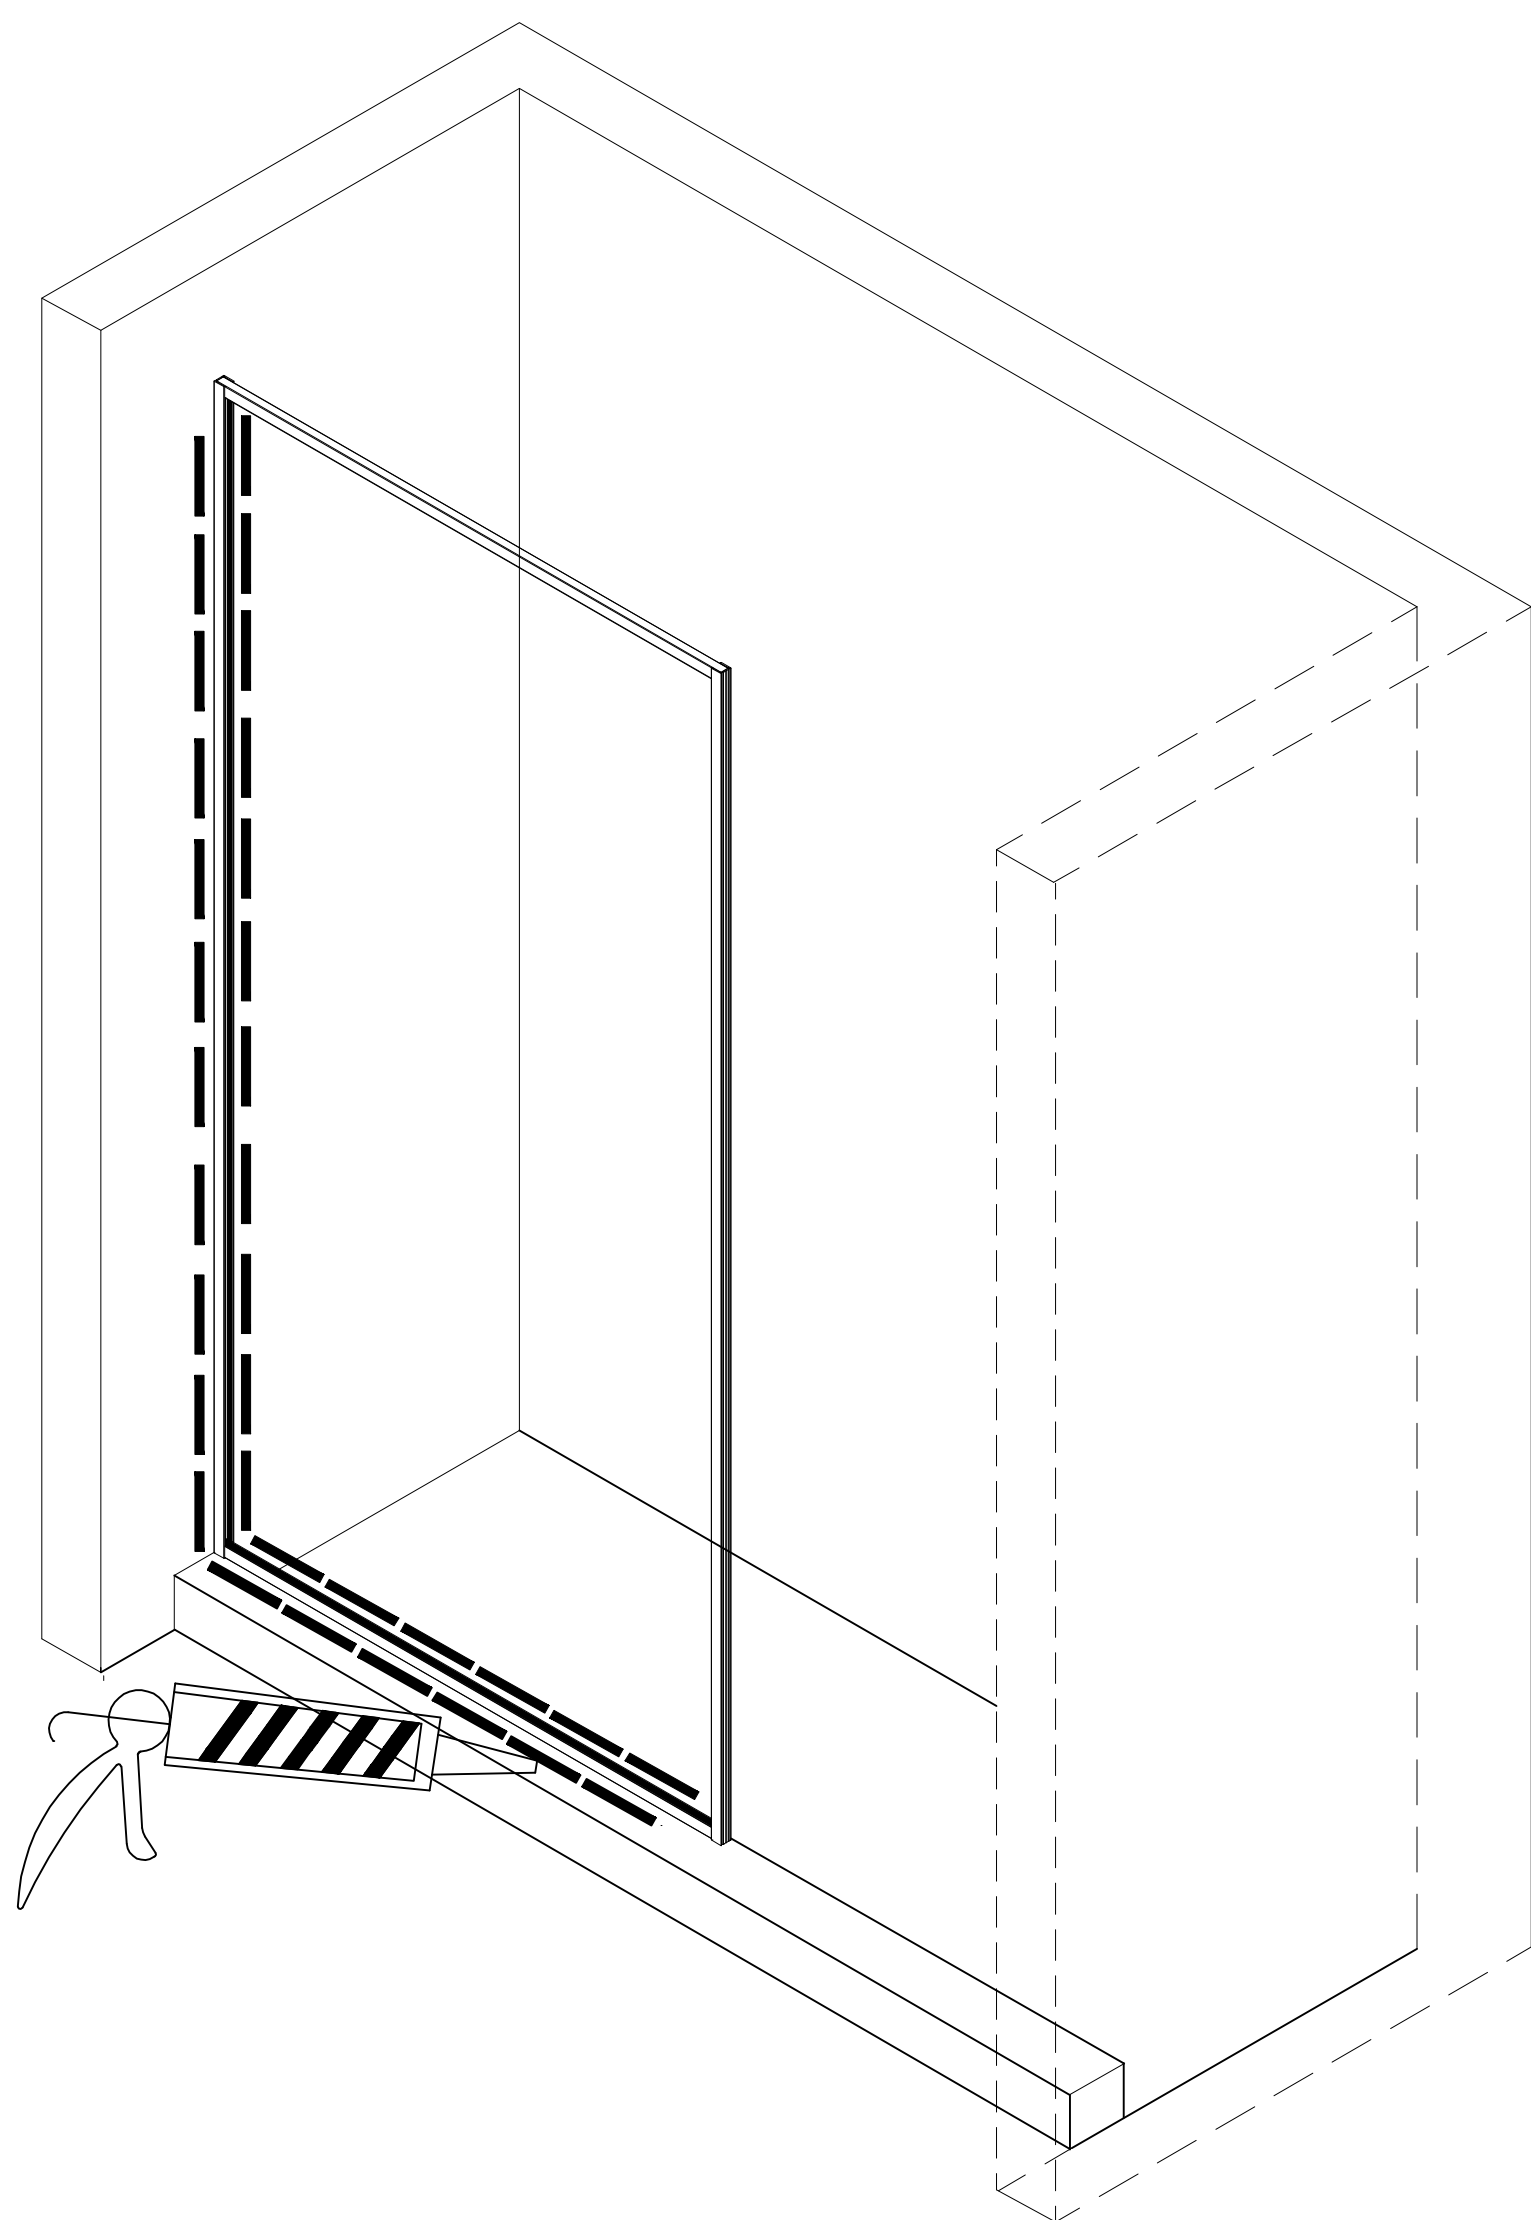

Right Hand Assembly

STEP 6

1. Apply qualified mildew resistant silicone along the sides of wall bracket A(2) and the bottom aluminum U channel(6). Allow the silicone to dry for 24 hours before using the shower to ensure it’s fully consolidated.

