


ASSEMBLY INSTRUCTIONS

Corner Curio Cabinet

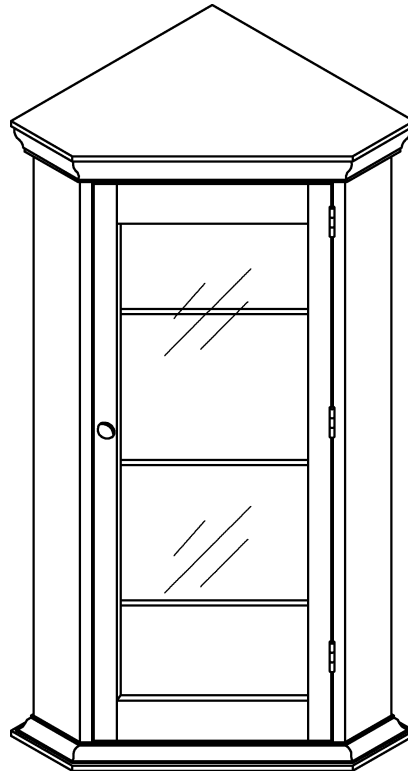

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.

To insert a cam lock: (Please read below instructions before assembling)


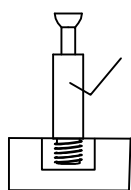


Diagram A

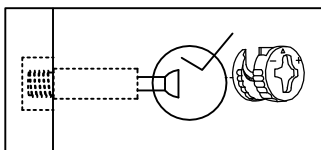

1. Insert cam screw into hole as shown in diagram A .


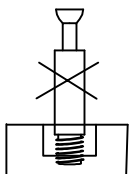


Diagram B

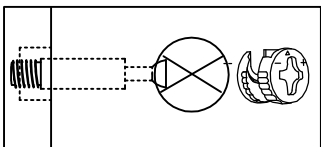

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



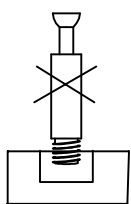



Diagram C

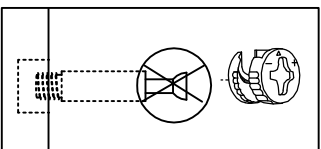

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

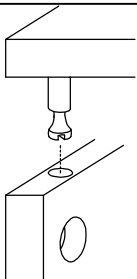


2. Connect the panels together.

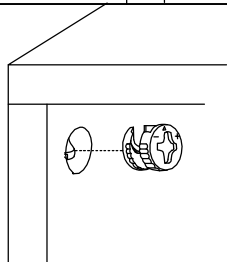

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

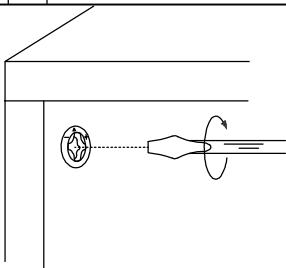









4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**







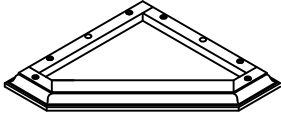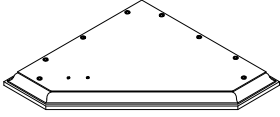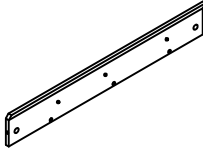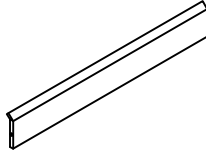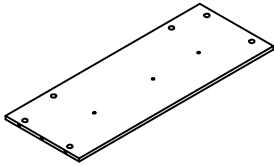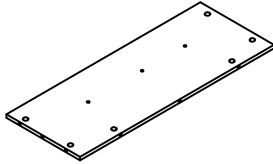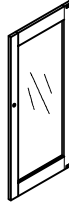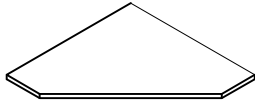


Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

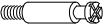Part List
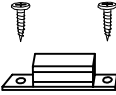
<p>A1 . Quantity of 1</p>  <p>Top Panel</p>	<p>A2 . Quantity of 1</p>  <p>Bottom Panel</p>	<p>A3. Quantity of 1</p>  <p>Front Left Side Panel</p>	<p>A4 Quantity of 1</p>  <p>Front Right Side Panel</p>
<p>A5. Quantity of 1</p>  <p>Back Left Side Panel</p>	<p>A6. Quantity of 1</p>  <p>Back Right Side Panel</p>	<p>A7. Quantity of 1</p>  <p>Door</p>	<p>A8. Quantity of 3</p>  <p>Shelf Panel</p>

Hardware List

<p>B1 Quantity of 16</p>  <p>Camlock-Bolt</p>	<p>B2 Quantity of 16</p>  <p>Camlock</p>	<p>B3 Quantity of 6</p>  <p>Wood Dowel</p>	<p>B4 Quantity of 2</p>  <p>Magnet with Screws</p>	<p>B5 Quantity of 6</p>  <p>Screw</p>
<p>B6 Quantity of 1</p>  <p>Handle with Bolt</p>	<p>B7 Quantity of 12</p>  <p>Shelf Support</p>	<p>B8 Quantity of 1</p>  <p>Anchor with screw</p>	<p>B9 Quantity of 1</p>  <p>Anti-tip kit</p>	




WARNING:



**Serious or fatal crushing injuries can occur from furniture tip-over.
To help prevent tip-over:**

- Place heaviest item in the lowest drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.(OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.


Step 1

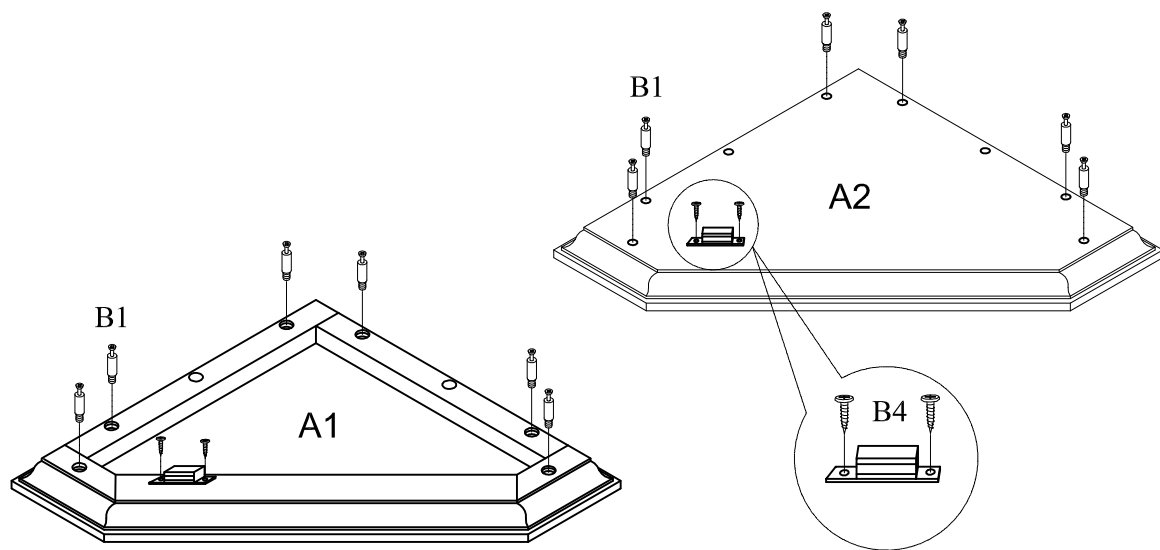




- | | | |
|------|---|-------|
| B1 : |  | 12pcs |
| B4 : |  | 2sets |

Attach Cam-Bolts B1 and Magnet with screws B4 to Top Panel A1 and Bottom Panel A2.

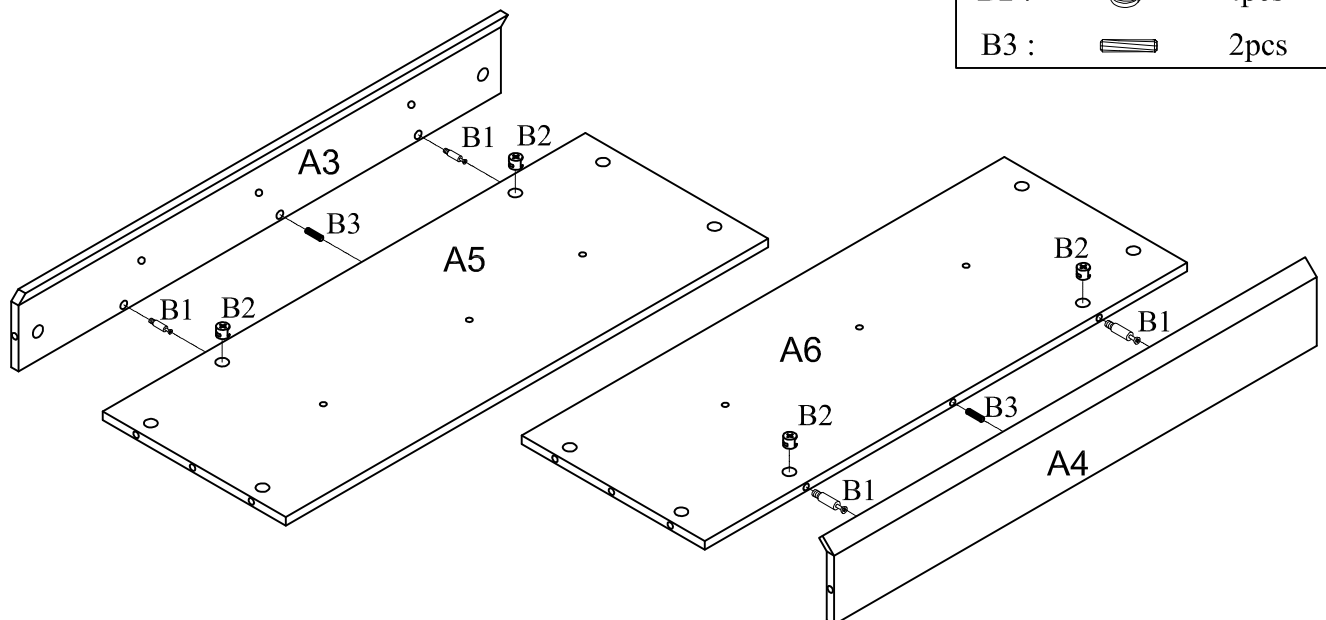
Step 2





- | | | |
|------|---|------|
| B1 : |  | 4pcs |
| B2 : |  | 4pcs |
| B3 : |  | 2pcs |

Assemble Front Side Panels A3&A4(L&R) to Back Side Panels A5&A6 (L&R) using Cambolts B1,Camlocks B2 and Wood Dowels B3.

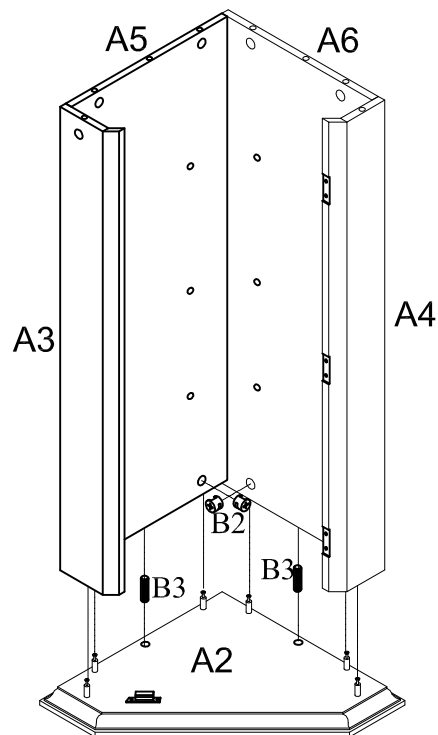
Step 3





B2 :		6pcs
B3 :		2pcs

Assemble Front Side Panels A3&A4, Back Side Panels A5&A6 to Bottom Panel A2 using Camlocks B2 and Wood Dowels B3.

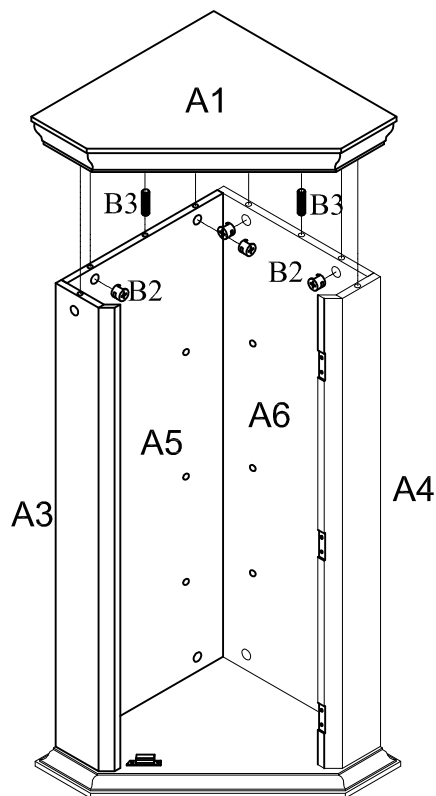
Step 4



B2 :		6pcs
B3 :		2pcs


Assemble Top Panel A1 to Front Side Panels A3&A4, Back Side Panels A5&A6 using Camlocks B2 and Wood Dowels B3.

Step 5

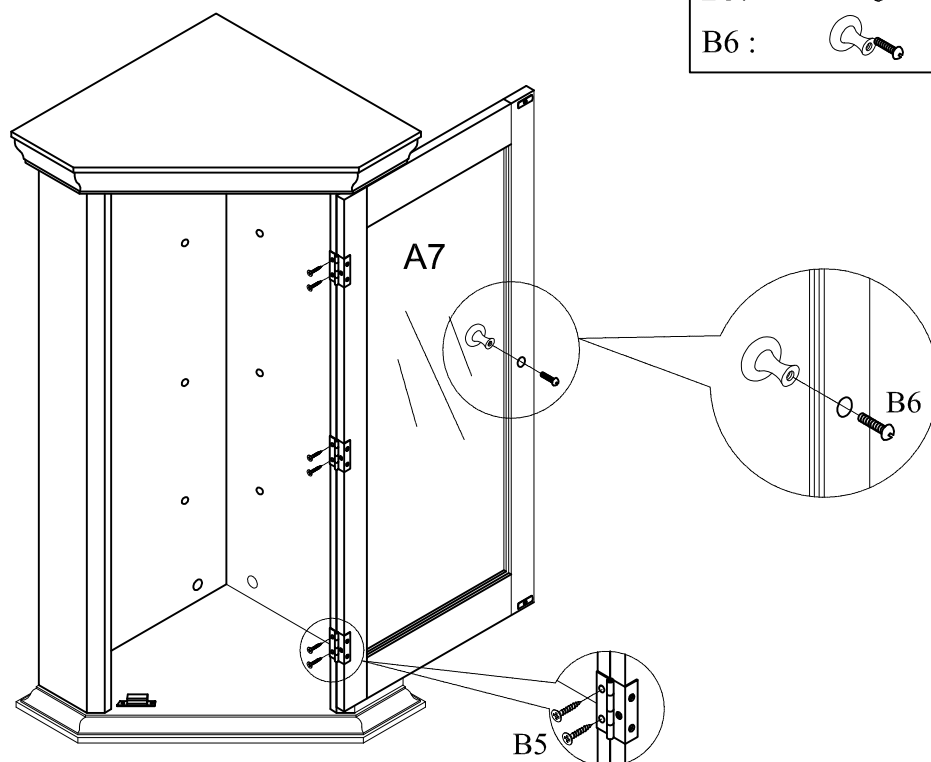



- 1). Assemble Door A7 to Front Right Side Panel A4 using Screws B5.
- 2). Attach Knob B6 to Door A7 using included bolts.


Step 6

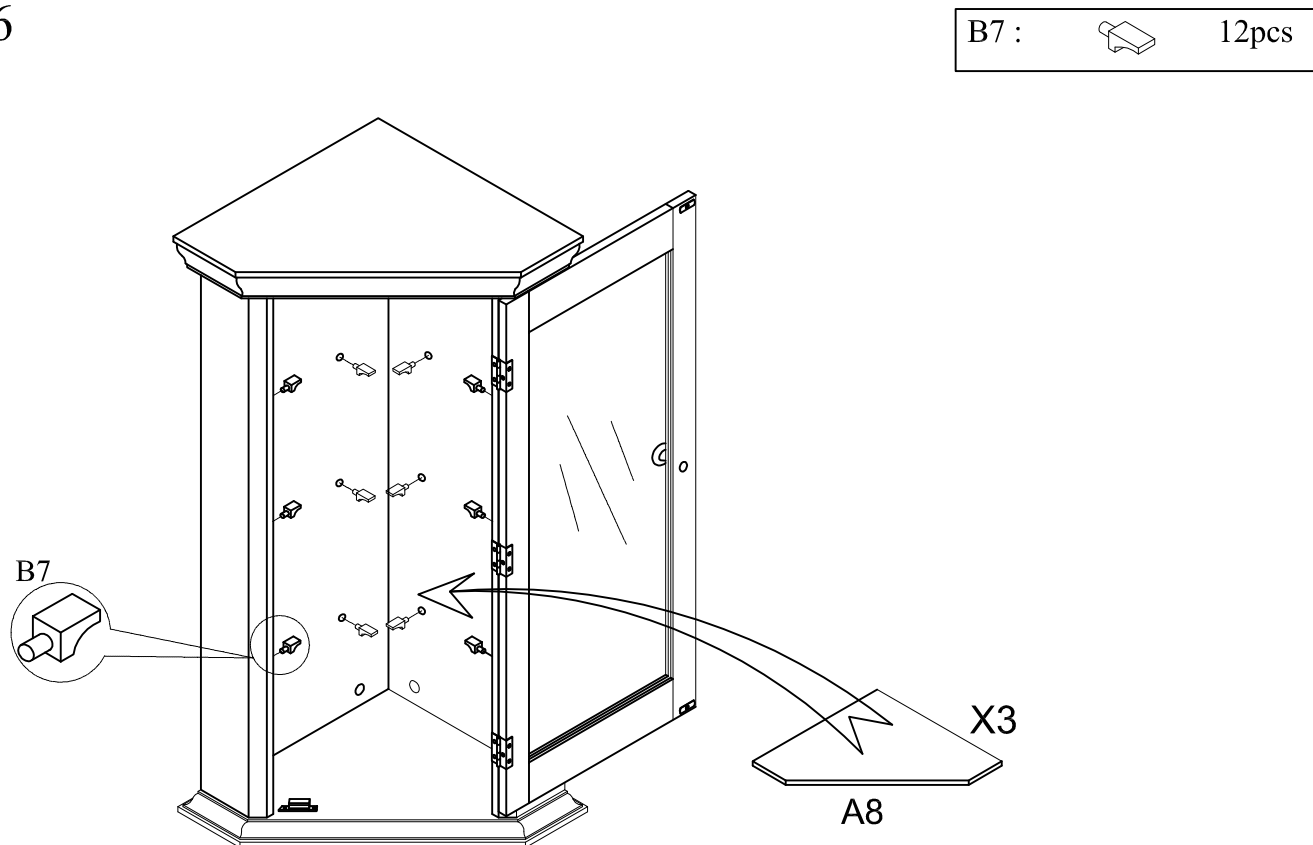

Insert Shelf Supports B7 into the holes on the Front&Back Side Panels (A3&A4&A5&A6), then place Shelf Panels A8 onto Shelf Supports B7.









Step 7

B8:		1set
B9 :		1set

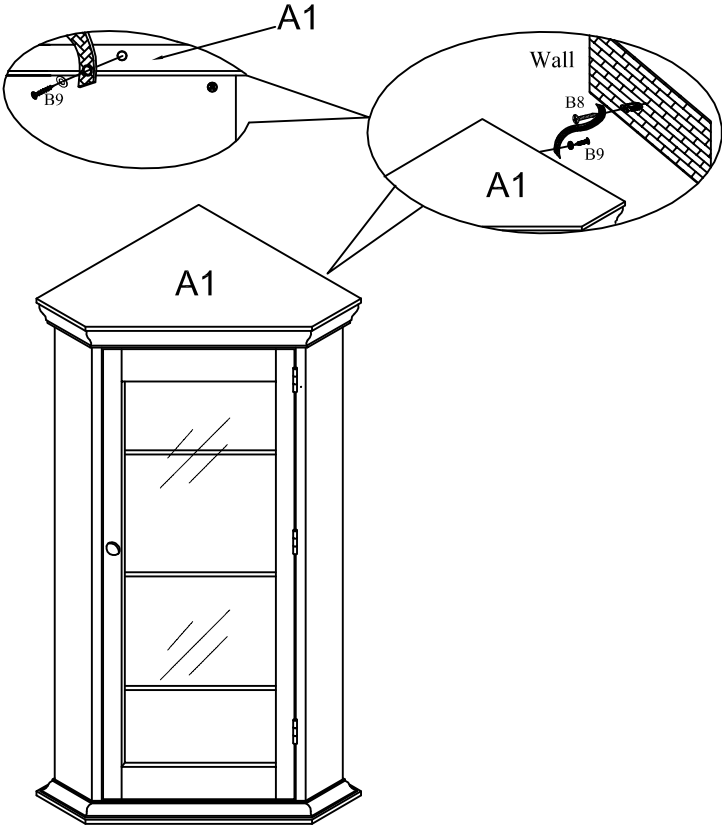

For your safety, please attach the unit to the wall by Anchor with screw B8 and Anti-tip kit B9.

APPENDIX: Dimension of Hardwares in this AI.
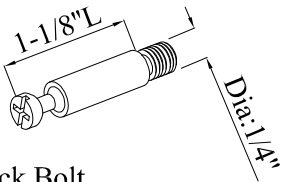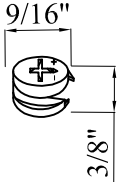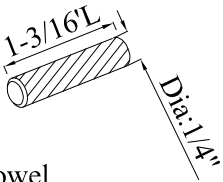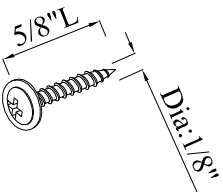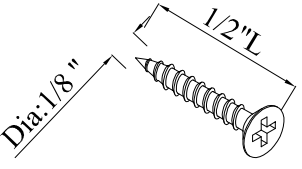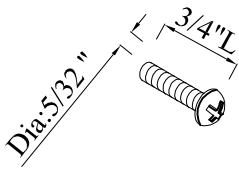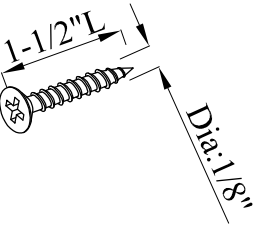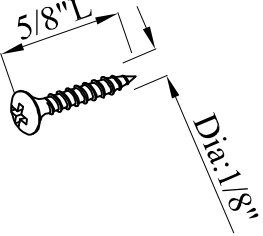
<p>B1.</p>  <p>Camlock Bolt</p>	<p>B2.</p>  <p>Camlock</p>	<p>B2.</p>  <p>Wood Dowel</p>
<p>B4.</p>  <p>Screw</p>	<p>B5.</p>  <p>Screw</p>	<p>B6.</p>  <p>Handle Bolt</p>
<p>B8.</p>  <p>Screw</p>	<p>B9.</p>  <p>Screw</p>	