

CONVENIENCE CONCEPTS

151323/151323CH

E . Hampton

151323



151323CH

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

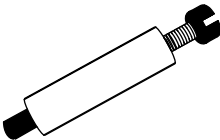



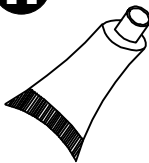

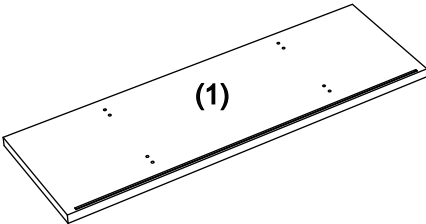

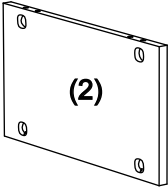
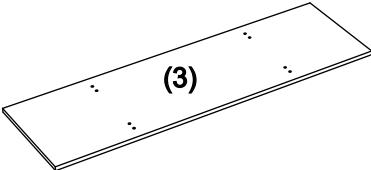

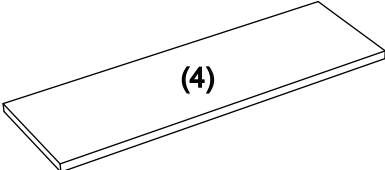
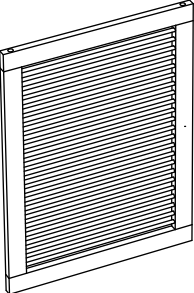
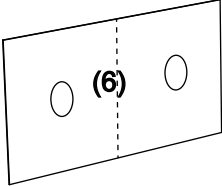


Please do not return to the store






- . Broken or Missing Hardware?
- . Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com


Hardware List

A 	E 	F 	G 	H 
Cam bolt (16pcs)	Knob & Knob screw (2pcs)	Nail (17pcs)	Sticker (16pcs)	Glue (1pc)
B 	Part List			
Cam lock (16pcs)	 Bottom Panel (1pc)			
C 	 Divider Panel (4pcs)			
Dowel (16pcs)	 Middle Panel (1pc)			
D 	 Top Panel (1pc)			
Spring Insert (8pcs)	 Door (2pcs)			
	 Back Panel (1pc)			

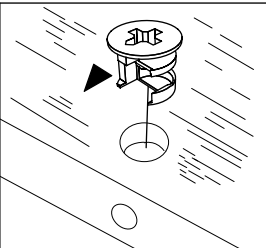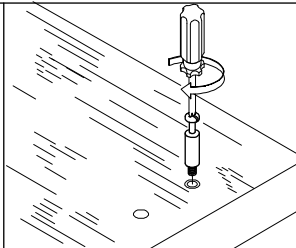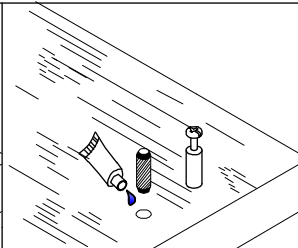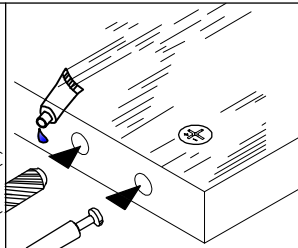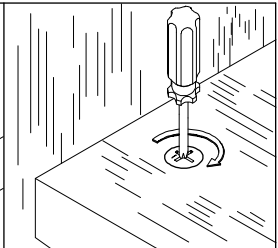Assembling the unit with camlocks and wood dowels.


				
Insert camlock, camlock arrow must face bolt hole	Gently screw cam dowel into the threaded anchor	Lightly glue one end of wood dowel and tap into hole.	Lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

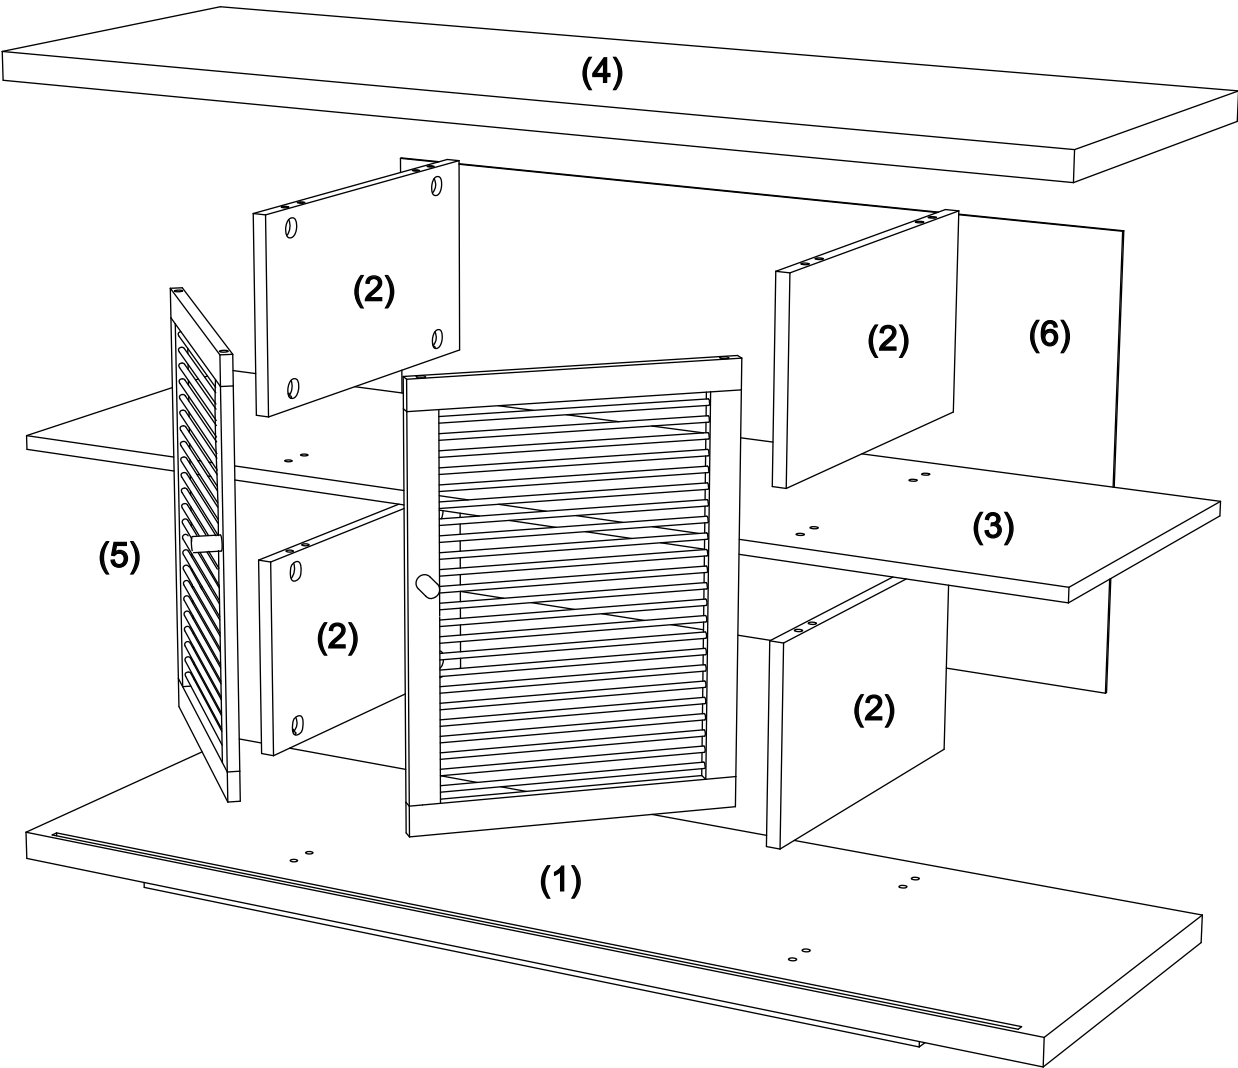Part List




step1

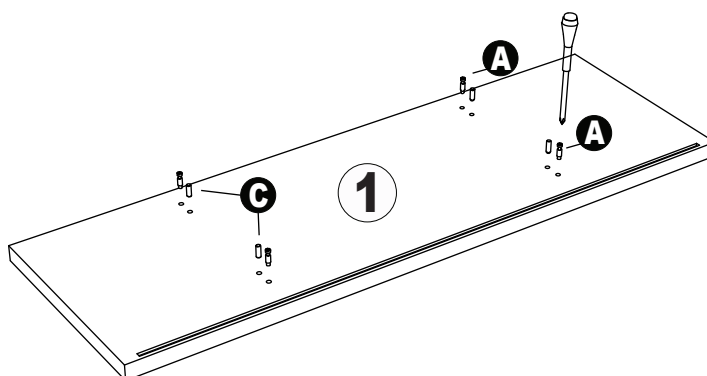Attach cambolts to panels as shown.



step2

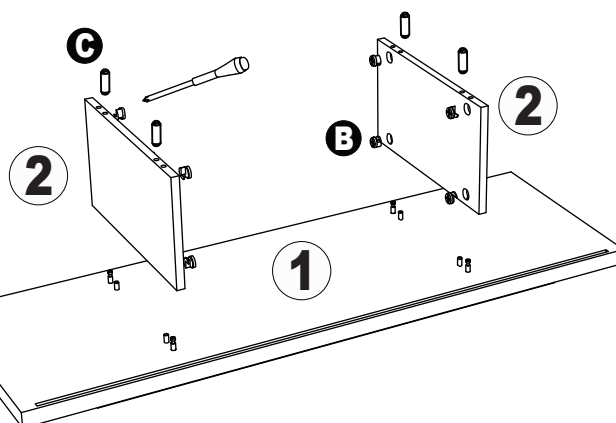
Insert camlocks (B) into divider panels (2) and connect them to bottom panel (1).
Gently tighten camlocks.
Attach wood dowel (C) to divider panels as shown.



*DO NOT OVERTIGHTEN CAMLOCKS.


step3

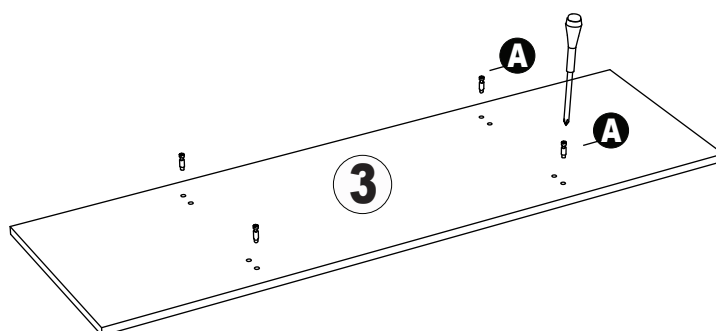Attach cambolts to panels as shown.




step4

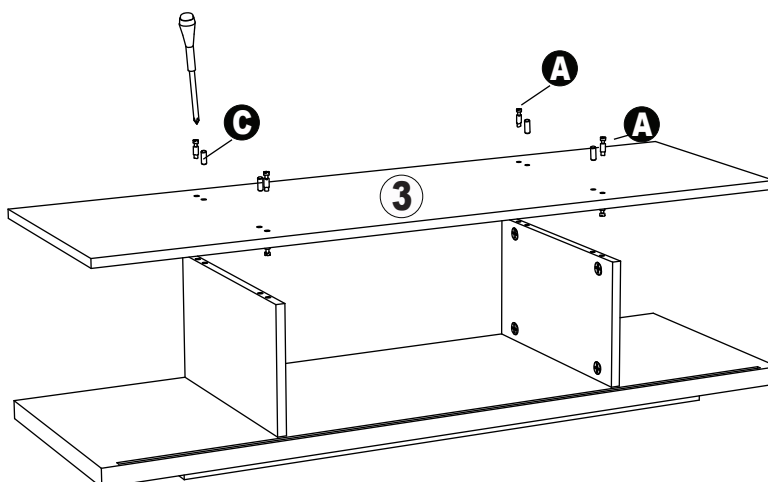Connect middle panel (3) to assembly as shown and gently tighten camlocks. Attach cambolts (A) and wood dowel (C) to middle panel (3) as shown.




step5

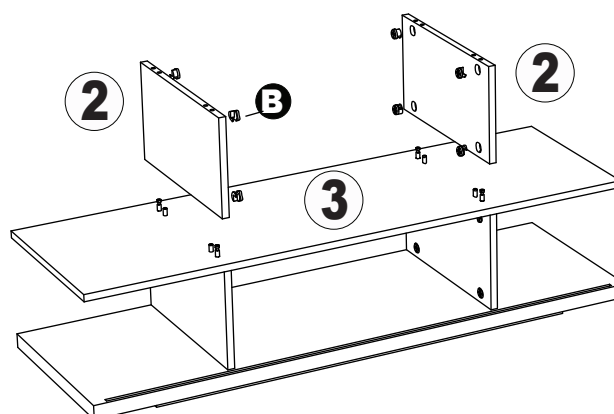Insert camlocks (B) into divider panels (2) and connect them to assembly. Gently tighten camlocks.



step6

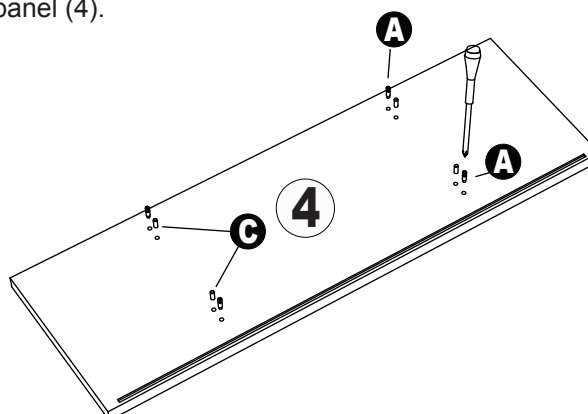
Attach cambolts and dowels to top panel (4).



step7

Connect top panel (4)
to assembly.

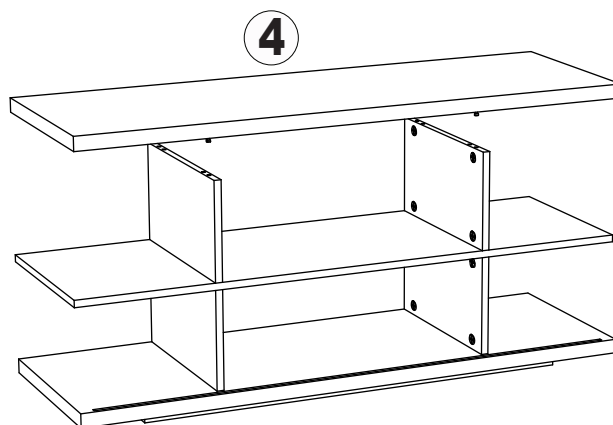*Note: Do not tighten
camlocks until you
attach the doors.




step8

Attach hardware to doors (5) as
shown.

Place doors into slots in top panel (4).
Gently lift top panel and place door
into slots of bottom panel (1).

Gently tighten camlocks
which you left in step7.

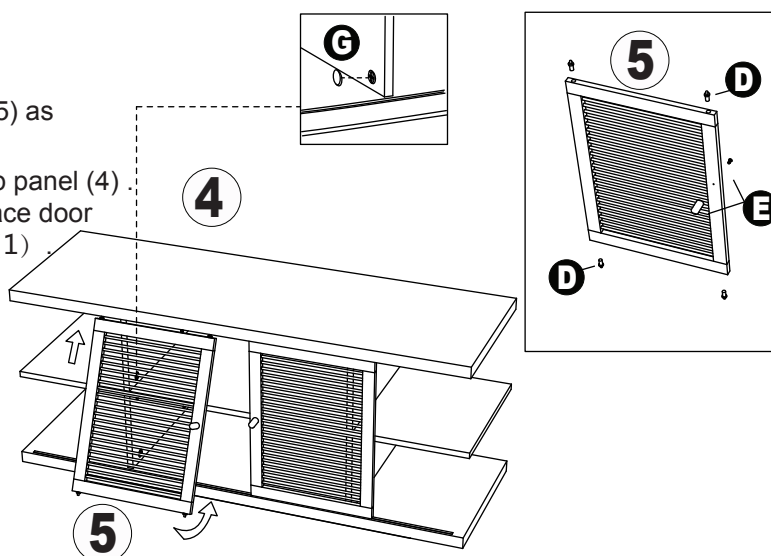Attach stickers(G) to all
camlock holes.



step9

Assemble the back panel using nails (F).

Finish and enjoy!

