


48 INCH PATIO CABINET

INSTRUCTION BOOKLET

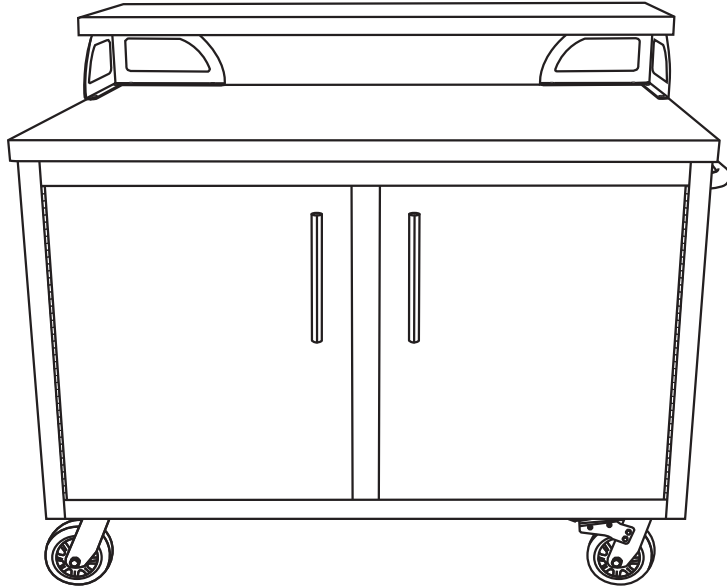

CAUTION

Please take safety precautions when using the patio cabinet.

Gently set parts on a flat, protective surface.

Do not step or climb on the cabinet.

Do not let children near the cabinet.

Set the brake on locking casters unless you are moving the cabinet.

Make sure all doors are closed tightly before moving the cabinet.


THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

GENERAL INFORMATION, TIPS & HELPFUL HINTS

1. Please read instructions prior to assembly.
2. Verify that there are no missing parts.
3. Keep instructions for future reference.
4. Recommend to have 2 people when assembling this cabinet.

Parts and Hardware List

Please read completely through the instructions and verify that all parts listed are included before beginning assembly.

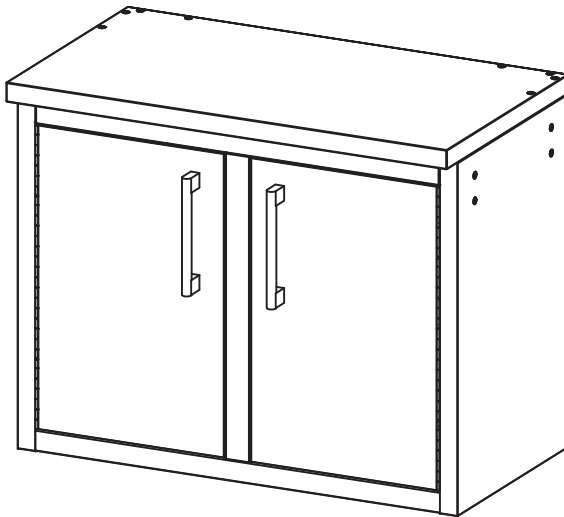

Patio Cabinet (1)



Side Handle (1)



M8 Bolt (18+1)



M5 Bolt (28+1)



Bracket (2)



Big Wrench (1)



Small Wrench (1)



Bar Shelf (1)




Footrest Bracket (2)



Footrest (1)









Swivel Caster (2)



Locking Caster (2)

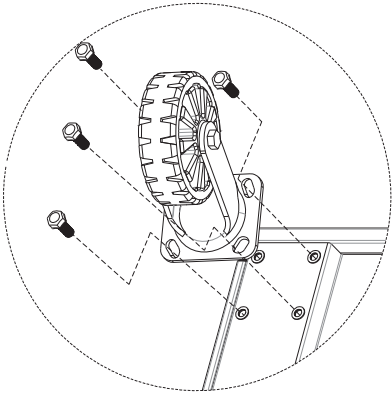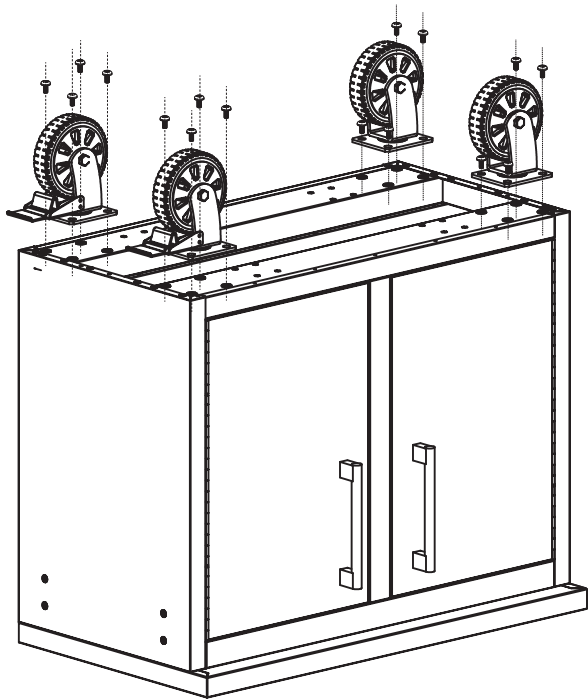
Caster Assembly Instructions







<u>Hardware required</u>	<u>Sketch</u>	<u>QTY</u>
Swivel Caster		(2)
Locking Caster		(2)
M8 Bolt		(16)
Big Wrench		(1)

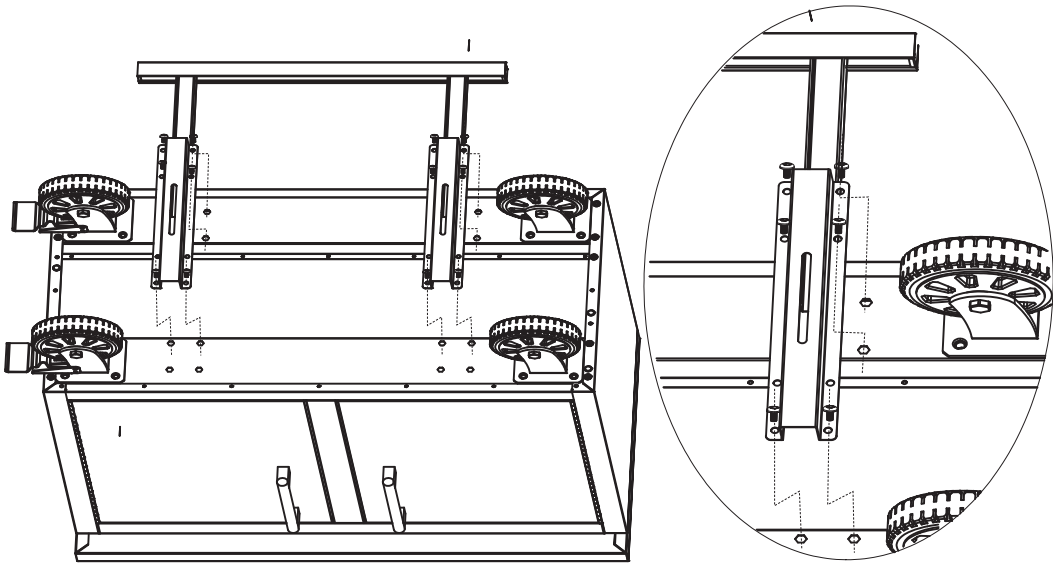Footrest Assembly Instructions


Attach the footrest bracket to the bottom of the cabinet with M5 Bolts. Then insert footrest into the footrest bracket.



<u>Hardware required</u>	<u>Sketch</u>	<u>QTY</u>
Footrest Bracket		(2)
Footrest		(1)
M5 Bolt		(12)
Small Wrench		(1)


Interior Shelf Assembly Instructions

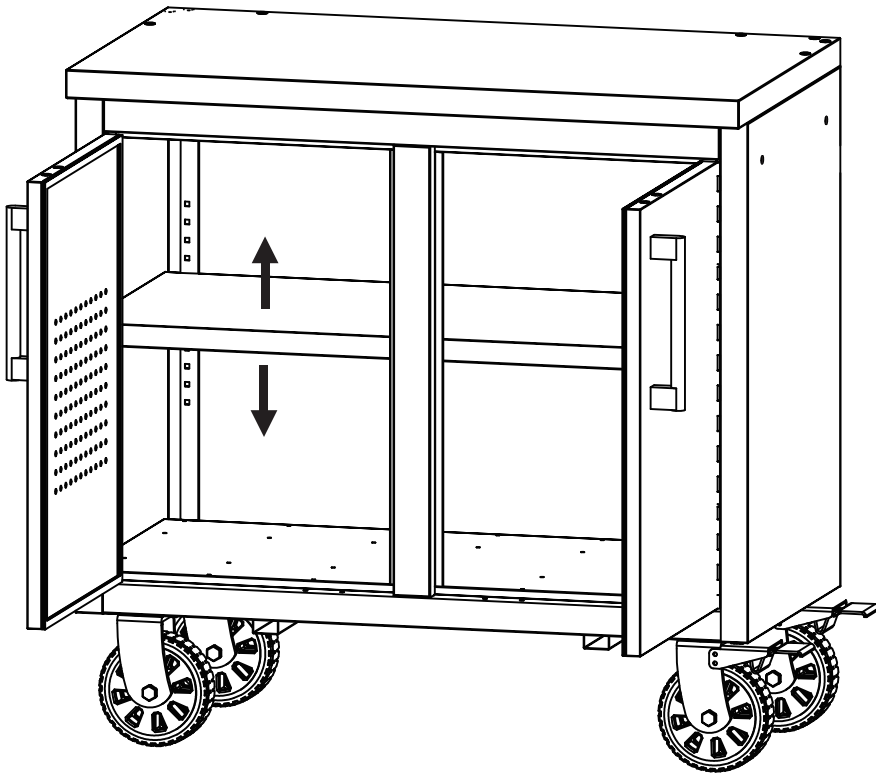


The interior shelf can be adjusted according to your desire according to below figure.



Handle Assembly Instructions

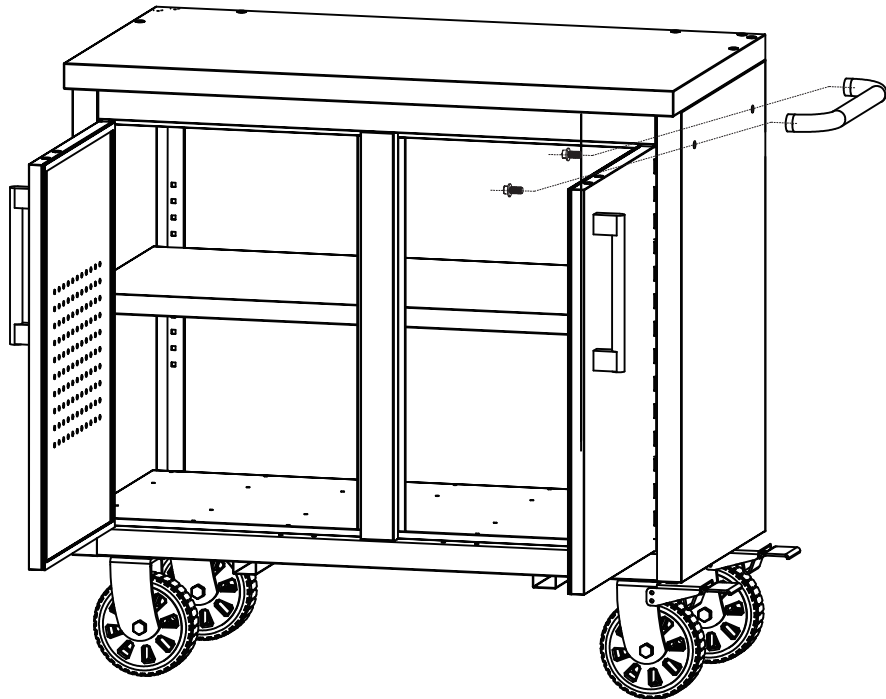
Stand the unit upright and attach Side Handle to Patio Cabinet securing with M8 Bolts as shown in below figure.







<u>Hardware required</u>	<u>Sketch</u>	<u>QTY</u>
Side Handle		(1)
M8 Bolt		(2)
Big Wrench		(1)

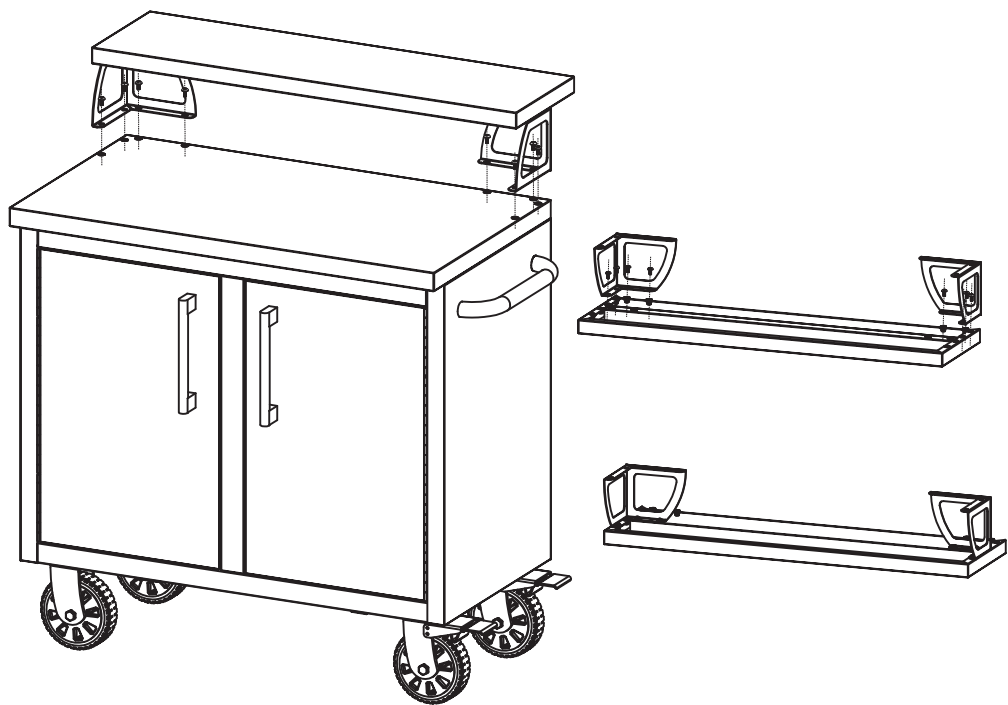Bar Shelf Assembly Instructions

Attach the brackets to the Bar Shelf and then attach the Bar Shelf assembly to the patio cabinet. Bar shelf can be installed to overhang. Position the screw mounts so there is an overhang on the backside of the bracket.



<u>Hardware required</u>	<u>Sketch</u>	<u>QTY</u>
Bracket		(2)
Bar Shelf		(1)
M5 Bolt		(16)
Small Wrench		(1)



Casa Nico Inc.
1831-A West Oak Parkway,
Marietta, GA 30062
Phone: 1-888-880-3267

If a problem cannot be remedied or you are experiencing difficulty in installation, please contact the Service Department: 888-880-3267, we open 24 hours a day, 7 days a week. Please call the Service Department if an electronic copy of this user manual is needed.