



tie Required: Flathead strevolitver, Phillips strewoltver, plans, wire collers, wire etippers, electrical laps, safely glassess. Its Beases: (8): 120V LED -47VV DIMAMBLE (3000V)
Installed Amesiably Tiese: 10-20 minutes
passificit: Identify Tiese: 10-20 minutes
passificit: Identify and Inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are passificity from the parts are minuteg or damaged, do not allerget to assemble, install, or operate the titutes. Confact customer service for applicaments.

## **△Warnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing nume. . Make sure butte are given sufficient time to cool before removal

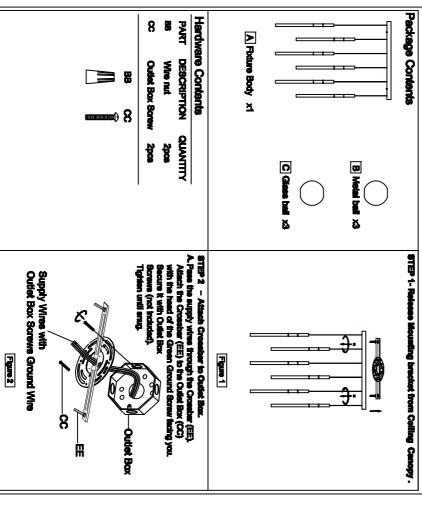

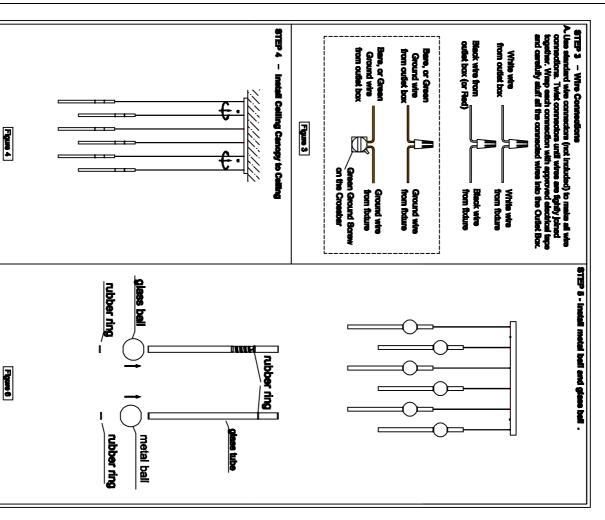

2 of 2